

ARM

ULINKpro User's Guide

KEIL
Tools by ARM

HomeProductsDownloadEventsSupport

Search Keil.com for:

Technical Support

Overview
Search
Contact
Assistance Request
Feedback

On-Line Manuals

Product Manuals
Document Conventions

ULINKpro User's Guide

Introduction
Hardware Description
Target Interfaces
ARM Standard JTAG
Cortex Debug (10-pin)
Cortex Debug+ETM
Board Design Rules
Interface Schematic
Start Sequence
Reset Sequence
5V Adapter Option
Isolation Adapter Option
Setup ULINKpro
Using ULINKpro
Configure Cortex-M Devices for Tracing
µVision Windows
Troubleshooting
Appendix

5V Adapter Option

Home » Hardware Description » 5V Adapter OptionHome » Hardware Description » 5V Adapter Option

The 5V Adapter is an optional accessory for the ULINKpro debug and trace unit. This plug-in attachment extends the ULINKpros capabilities to allow 5V-only devices.

The 5V Adapter enhances the capabilities of the ULINKpro in the following ways:

Expands the I/O Voltage range to 1.5V - 5.5V to accommodate 5V-only devices.
Supports JTAG and SW clock speeds up to 50MHz.
Provides full speed data trace capture (SWO).
Supports target instruction trace capture up to 400 Mbps using 4-pin ETM.



ULINKpro 5V Adapter

The 5V Adapter replaces the 20-pin ribbon cable on ULINKpro, and connects to either the 10-pin (Cortex Debug) or 20-pin (Cortex Debug + ETM) connectors on Keil evaluation boards.



MCBTMPM360 Board w /ULINKpro 5V Adapter

ContactSite MapPressPrivacy

Copyright © 2012 ARM Ltd and ARM Germany GmbH. All rights reserved.

file:///H:/_tmp/ulinkpro_hw_5v_adapter.htm[1/6/2012 11:04:47 AM]