

Photoelectrics Amplifier Type S142A..

CARLO GAVAZZI



- μ -Processor controlled
- Amplifier relay for photoelectric switches
- Automatic or manual emitter power regulation
- Self-diagnostic functions
- Alignment help
- Timer option, S142B..
- Rated operational voltage:
24 VAC/DC, 24 VAC, 115 VAC or 230 VAC
- Output 8 A/250 VAC SPDT relay and 100 mA NPN
- LED indication: Automatic gain, output, level, emitter or receiver fault



Product Description

μ -Processor controlled amplifier for one set of photoelectric sensors, type MOFTR. Utilising an 11-pin circular plug for easy connection. 8 A SPDT relay output, NPN / PNP transistor output or alarm output. Diagnostics

for sensor test during operation. Alignment help via LED or alternation of alarm output. Level indication for dirt accumulation. Manual or automatic emitter power regulation. Two emitter codes available for high neighbour immunity.

Ordering Key

S142 A RNN 924

Type _____
Special function _____
Output type _____
(R-Relay, N-NPN, P-PNP, T-Test)
Power supply _____

Type Selection

Function diameter	Ordering no. Supply: 24 VAC/DC	Ordering no. Supply: 24 VAC	Ordering no. Supply: 115 VAC	Ordering no. Supply: 230 VAC
NPN output & Test input	S142 A RNT 924	S142 A RNT 024	S142 A RNT 115	S142 A RNT 230
NPN output & Alarm output	S142 A RNN 924¹⁾	S142 A RNN 024¹⁾	S142 A RNN 115¹⁾	S142 A RNN 230¹⁾
PNP out., PNP alarm & Test	S142 A PPT 924		S142 A PPT 115	S142 A PPT 230

¹⁾ Amplifier replacement for S1420156xxx

Specifications

Rated operational voltage (U_B)		Output function	
Pins 2 & 10	230	Relay	Make or break on DIP-switch SPDT
	115	Transistor	NPN / PNP, 100 mA, 40 VDC
	024	Alarm	NPN / PNP, 100 mA, 40 VDC
	924		Delay on alarm 10 sec
Rated operational power		Test input (Mute)	
AC supply	3.3 VA	Emitter enabled	NPN > 5.0 VDC
AC/DC supply	1.6 VA / 1.4 W	Emitter disabled	PNP < V_{CC} - 3 VDC
Delay on operate (t_v)		Imax @ 40 VDC	< 3.0 VDC
Outputs			1 mA
Relay Rating (AgCdO)		Protection output	
Resistive loads	μ (micro gap)	transistor	Reverse polarity, short circuit and transients
AC1	8 A / 250 VAC (2500 VA)	Supply to sensors	
DC1	0.2 A / 250 VDC (50 W)	Emitter	
or	2 A 25 VDC (50 W)	Supply voltage (open loop)	Pins 5 & 7
Electrical life (typical)	> 100.000 operations	Current	15 V square wave
Transistor output data		Output resistance	< 450 mA, short circuit protected
Output current (I_o)	< 100 mA @ 40 VDC	Receiver	10 Ω
	(max. load capacity 100 nF)	Supply voltage (open loop)	Pins 6 & 8
Voltage drop (U_d)	< 2,5 VDC @ 100 mA	Short-circuit current	5 VDC
		Input resistance	10 mA
			470 Ω



Specifications

Emitter power Power	Settings on DIP switch no 4, 50 % or 100 % range	Response time OFF-ON (t _{ON}) ON-OFF (t _{OFF})	20 mS 30 mS
Adjustment Manual Automatic /Auto LED ON)	240° Potentiometer Potentiometer settings to minimum	Environment Overvoltage category Degree of protection Pollution degree	III (IEC 60664) IP 20 /IEC 60529, 60947-1) 3 (IEC 60664/60664A, 60947-1)
Sensing distance	Maximum range indicated on photoelectric switch data- sheets in 100 % settings	Temperature Operating Storage	-20° to +50°C (-4° to +122°F) -50° to +85°C (-58° to +185°F)
Rated insulation voltage (U_i)	250 VAC	Housing material	NORYL SE1, light grey
Dielectric voltage	>2.0 KVAC (rms) (contacts / electronics)	Weight AC supply AC/DC supply	200 g 125 g
Rated impulse withstand volt.	4 kV (1.2/50 μS) (contacts / electronics) (IEC 664)	Approvals	UL508, UL325, CSA
Operating frequency (f) Light / Dark ratio Relay output Transistor output	1:1 20 HZ 20 HZ	CE marking	EN12445, EN12453, EN12978

Specifications

Diagnostic

If a fault occurs on either the emitter or receiver the Alarm LED and output will turn ON.

Emitter fault

During normal operation the receiver is monitored for faults.
If the wires are short-circuited the “Code A, Yellow LED” flashes at a rate of 2 Hz.
If the wires are broken the “Code A, Yellow LED” flashes at a rate of 4 Hz.

Receiver fault

During normal operation the emitter is monitored for faults.
If the wires are short-circuited the “Code B, Green LED” flashes at a rate of 2 Hz.
If the wires are broken the “Code B, Green LED” flashes at a rate of 4 Hz.

Alignment

If the alignment DIP switch is set the Yellow Signal LED Flashes according to the signal quality.


Low frequency means weak signal.
Steady indication means maximum signal. On long distance it is not possible to get a steady signal but the alignment is optimal when the led flashes with the highest frequency.
On short distance the emitter power can be reduced using the potentiometer and then get better readings in the alignment LED.
The ALARM output will follow the Signal LED in align-

ment mode, so a Sensor tester (optional) can be connected to serve as a remote induction during alignment of the sensors.
NB! In alignment mode the output is off.

Code A or B


When two sensor pairs are mounted close to each other it is recommended to select one set to Code A and the other to Code B to avoid crosstalk.

Operation Diagram

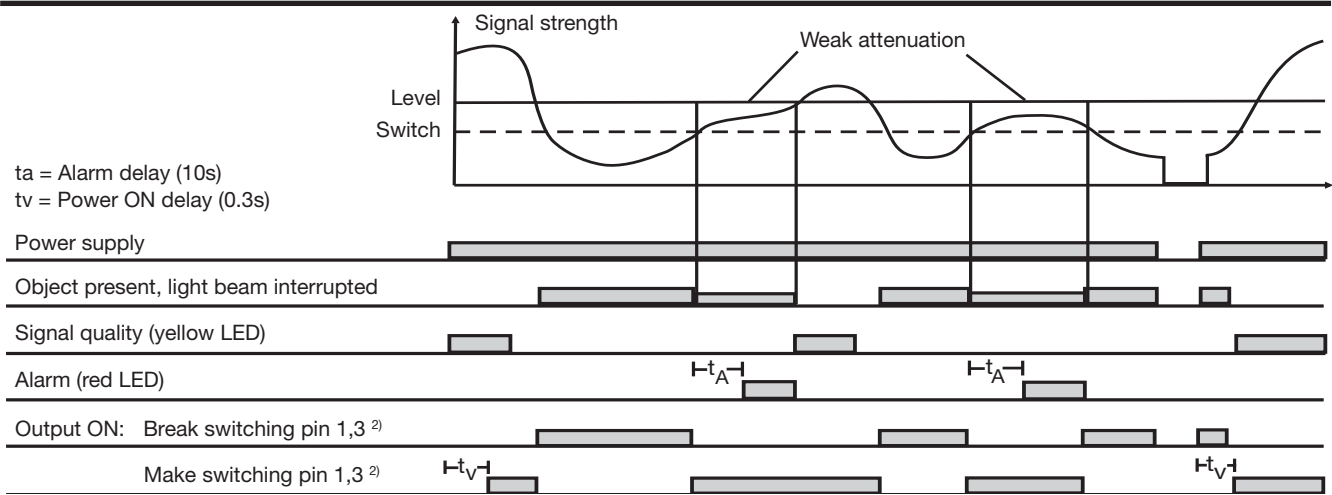


²⁾ Switching function selected by DIP-switch, inverted function on pin 1, 4

Dimensions

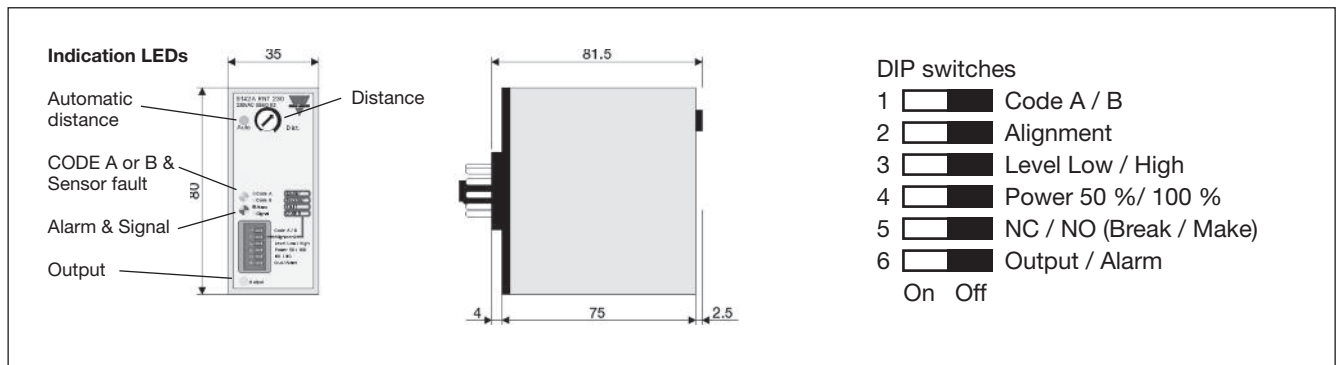

Wiring Diagram

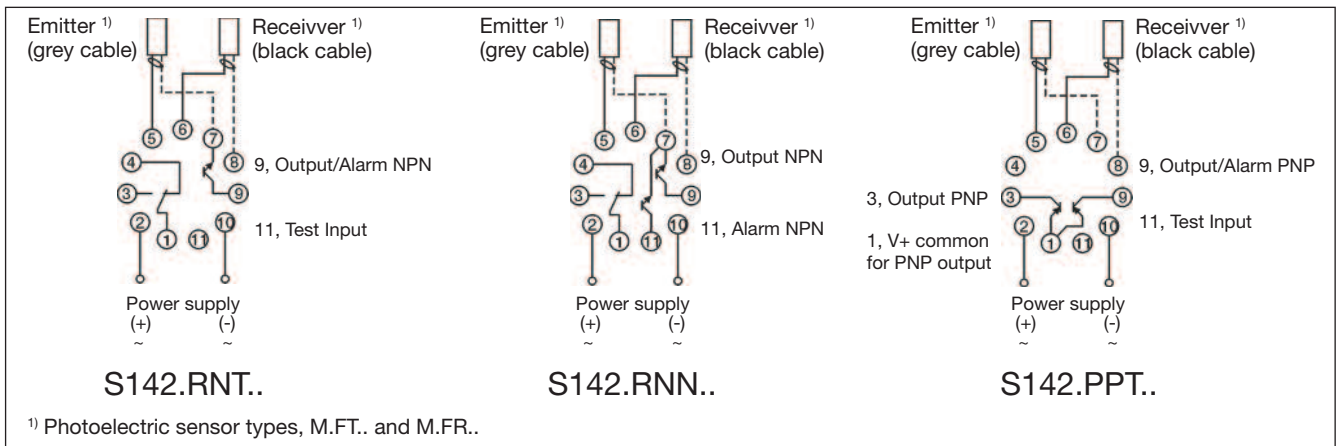

Connection to sortester

Connection to sortester ST-03 for alignment

	Sortester		
	-	Signal	+
RNT Pin no.	10	9	
RNN Pin no.	10	11	
PPT Pin no.		9	2

Accessories

- 11 pole circular socket ZPD11
- Holding down spring HF
- Mounting rack SM13
- Front panel mounting bezel FRS2

Delivery Contents

- Amplifier
- **Packaging:** Carton box