


# Touch Panel Accessories

## Controller Board Interface Cables

- **CABLE/RTP/USB/DT:** USB Host Interface Cable for NC01850-B045RS(Dual Touch, 4-wire)
- **CABLE/RTP/USB:** USB Host Interface Cable for NC01850-B010RS (4-wire) and NC01850-B020RS (7-wire)
- **CABLE/RTP/RS232:** Serial Host Interface Cable for N16B-0558-B270 (4-wire) and N16B-0558-B280 (7-wire)

These cables are offered as a convenience to customers prototyping, testing, and small production lot use.


### ■ CABLE / RTP / USB / DT

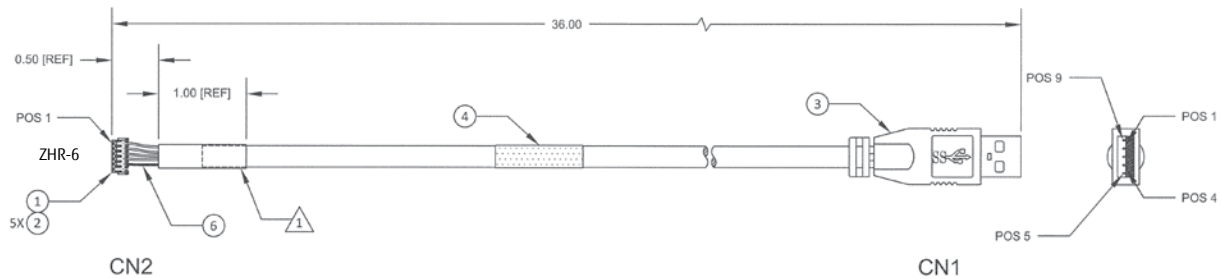

| PIN OUT     |         |        |         |
|-------------|---------|--------|---------|
| Color (ref) | CN2 POS | SIGNAL | CN1 POS |
| Red         | 1       | VCC    | 1       |
| White       | 2       | D-     | 2       |
| Green       | 3       | D+     | 3       |
| Black       | 4       | GND    | 4       |
| Black       | 5       | FR GND | CAN     |
| N/C         | 6       | N/A    | 5-9     |


# Controller Board Interface Cables

## ■ CABLE / RTP / USB

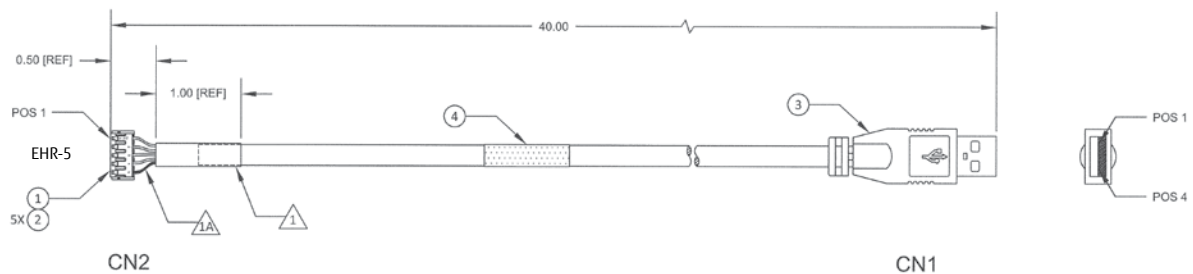

| PIN OUT     |         |        |         |
|-------------|---------|--------|---------|
| Color (ref) | CN2 POS | SIGNAL | CN1 POS |
| Red         | 1       | VCC    | 1       |
| Green       | 2       | D+     | 3       |
| White       | 3       | D-     | 2       |
| Black       | 4       | GND    | 4       |
| Black       | 5       | FR GND | CAN     |

## ■ CABLE / RTP / RS232

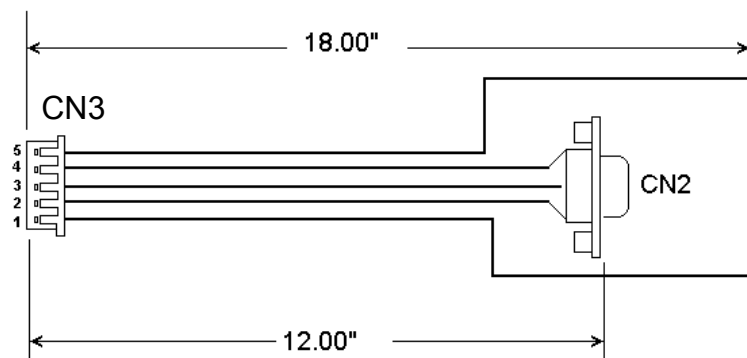

## Fujitsu Components International Headquarter Offices

### Japan

Fujitsu Component Limited  
 Gotanda-Chuo Building  
 3-5, Higashigotanda 2-chome, Shinagawa-ku  
 Tokyo 141, Japan  
 Tel: (81-3) 5449-7010  
 Fax: (81-3) 5449-2626  
 Email: [promothq@ft.ed.fujitsu.com](mailto:promothq@ft.ed.fujitsu.com)  
 Web: [www.fcl.fujitsu.com](http://www.fcl.fujitsu.com)

### North and South America

Fujitsu Components America, Inc.  
 250 E. Caribbean Drive  
 Sunnyvale, CA 94089 U.S.A.  
 Tel: (1-408) 745-4900  
 Fax: (1-408) 745-4970  
 Email: [components@us.fujitsu.com](mailto:components@us.fujitsu.com)  
 Web: <http://us.fujitsu.com/components>

### Europe

Fujitsu Components Europe B.V.  
 Diamantlaan 25  
 2132 WV Hoofddorp  
 Netherlands  
 Tel: (31-23) 5560910  
 Fax: (31-23) 5560950  
 Email: [info@fceu.fujitsu.com](mailto:info@fceu.fujitsu.com)  
 Web: [emea.fujitsu.com/components/](http://emea.fujitsu.com/components/)

### Asia Pacific

Fujitsu Components Asia Ltd.  
 102E Pasir Panjang Road  
 #01-01 Citilink Warehouse Complex  
 Singapore 118529  
 Tel: (65) 6375-8560  
 Fax: (65) 6273-3021  
 Email: [fcal@fcal.fujitsu.com](mailto:fcal@fcal.fujitsu.com)  
 Web: <http://www.fujitsu.com/sg/services/micro/components/>