

 RoHS-Compliant

Brushless DC Motor and Driver Package **BLU Series**

AC Power Input 20W / 40W / 90W

The Brushless DC Motor and Driver Package **BLU** Series enables speed control via easy operation. Choose a model with a parallel shaft gearhead or hollow shaft flat gearhead, both of which achieve a long rated life of 10000 hours.



BLU Series: Easy Speed Control Using the

The **BLU** Series consists of models with an output of 20, 40 or 90 W, all combining motor with a panel-installation type driver. Choose a parallel shaft gearbox, installation space of your equipment.

■ Easy Connection, Easy Operation

The motor can be connected simply by plugging the connector into the driver. There is no need for troublesome wiring. The motor speed can be set using the potentiometer on the front panel easily.



■ External Control Possible

Start/stop, rotation direction switching and instantaneous stop can be controlled using external signals. You can also switch between the source logic and sink logic in accordance with the output type of your controller.

■ Long Life Gearhead Rating of 10000 Hours

The high-strength gearbox is designed to withstand high-speed revolutions. The rated life of the gearbox is 10000 hours, which is twice as long as that of a conventional gearbox.

Features of Brushless DC Motor

■ Excellent Speed Stability


The driver adjusts the current flow to the motor by comparing the feedback signal of motor speed against the set speed, in order to stabilize the motor speed. This mechanism ensures stable driving speeds from low to high, even in situations where the load condition fluctuates.

With the **BLU** Series, the speed regulation is $\pm 0.5\%$.

■ Wide Speed Control Range


In addition to feedback control, the **BLU** Series adopts a unique motor structure design to achieve a wide speed variation range.

The motor in the **BLU** Series can be operated at varying speeds of 100 to 2000 r/min (speed ratio 1:20).

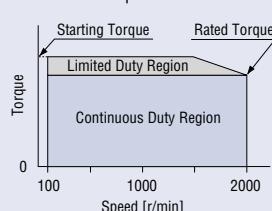

■ Energy-Saving

The brushless DC motor has a permanent magnet assembled into the rotor, so it produces low secondary loss. At an output of 90 W, for example, the power consumption of the **BLU** Series is approx. 50% less than the power consumption of an inverter-controlled AC motor. The **BLU** Series will contribute to the energy-saving operation of your FA equipment.

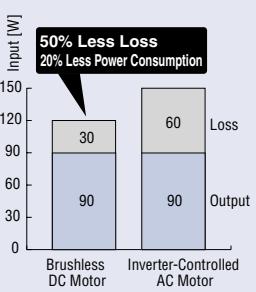

*Comparison of the **BLU** Series and an inverter unit

Potentiometer on the Front Panel

an energy-saving, slim, compact brushless DC or a hollow shaft flat gearhead that saves




■ Features of Hollow Shaft Flat Gearhead

● Space-Saving and Low-Cost


The output shaft can be coupled directly to your drive shaft without using a coupling. The flexible installation modes, such as installation on either the front or rear face or by using the center shaft, allows you to reduce the size and installation space of your equipment.

Since no shaft-coupling parts are needed, the parts cost and assembly man-hours will also decrease.

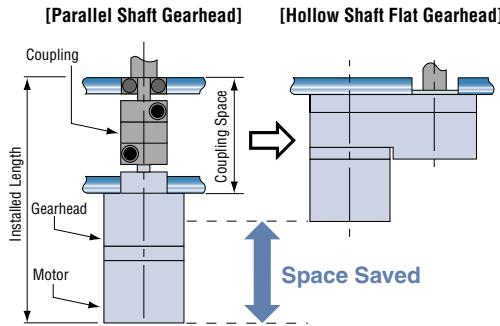

● High Permissible Torque

While the parallel shaft gearhead lets the permissible torque saturate at high gear ratios, the hollow shaft flat gearhead enables the motor torque to be utilized to its maximum capability.

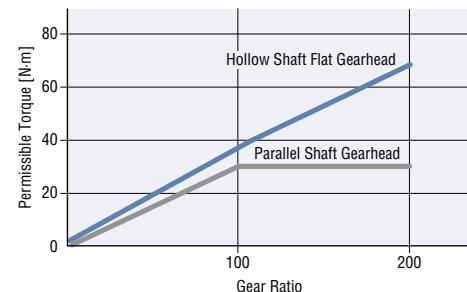

Lineup

● Combination Type – Parallel Shaft Gearhead



● Combination Type – Hollow Shaft Flat Gearhead



● Round Shaft Type



| | | | |
|----------------------|--|--------------------------------|--------------------------------|
| Output | 20 W | 40 W | 90 W |
| Frame Size | <input type="checkbox"/> 60 mm | <input type="checkbox"/> 80 mm | <input type="checkbox"/> 90 mm |
| Power Supply Voltage | Single-Phase 100 to 115 VAC, Single-Phase 200 to 230 VAC, Three-Phase 200 to 230 VAC | | |

● The 90 mm parallel shaft gearhead has a tapped hole at the shaft tip.


● Main Specifications

Speed Control Range: 100 to 2000 r/min (1:20)

Speed Regulation: $\pm 0.5\%$

● Slim, Yet Powerful

A permanent magnet is assembled into the rotor, so the brushless DC motor can produce high power from its slim body. The compact unit fits perfectly in your small equipment.

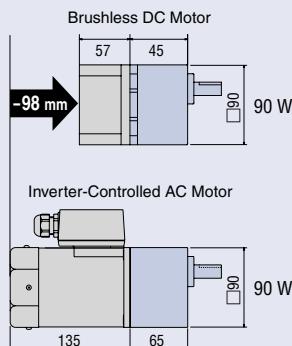

● RoHS RoHS-Compliant

The **BLU** Series conforms to the RoHS Directive that prohibits the use of six chemical substances including lead and cadmium.

RoHS (Restriction of Hazardous Substances) Directive:

Directive on restriction of the use of certain hazardous substances in electrical and electronic equipment (2002/95/EC).

The RoHS Directive prohibits the use of six chemical substances in electrical and electronic products sold in the E.U. member countries on or after July 1, 2006. The six controlled substances are: lead, hexavalent chromium, cadmium, mercury and two specific brominated flame-retardants (PBB and PBDE).

■ System Configuration

● Combination Type – Parallel Shaft Gearhead/Round Shaft Type



Motor/Gearhead Mounting Brackets (Accessories)
(→ Page 23)



Flexible Couplings (Accessories)
(→ Page 22)

Combination Type (Motor/Gearhead)



Extension Cables (Accessories)

Extension cables used between motors and drivers.
(→ Page 22)



Driver



Programmable Controller

AC Power Supply

BLU Series

● Example of System Configuration

(Body)

Combination Type
BLU440C-30

+


(Sold separately)

| Extension Cable (1 m) | Motor/Gearhead Mounting Bracket | Flexible Coupling |
|-----------------------|---------------------------------|-------------------|
| CC01AXU | SOL4M6 | MCL551515 |
| ○ | ○ | ○ |


○: Selectable according to necessity. Oriental Motor provides.

*The system configuration shown above is an example. Other combinations are available.

● Combination Type – Hollow Shaft Flat Gearhead

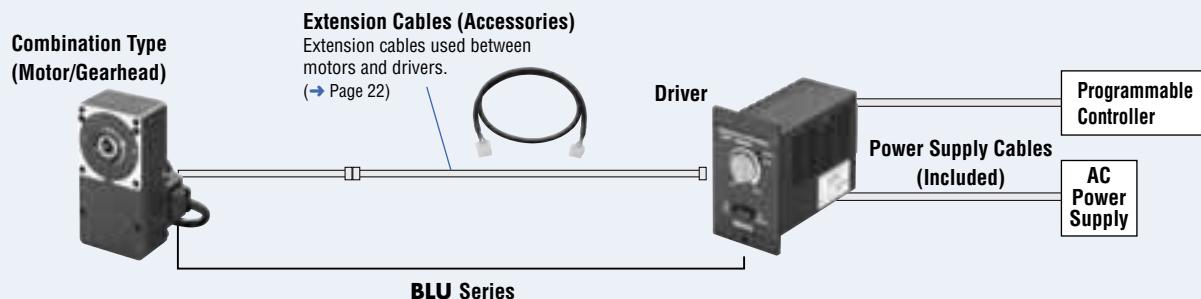

● Example of System Configuration

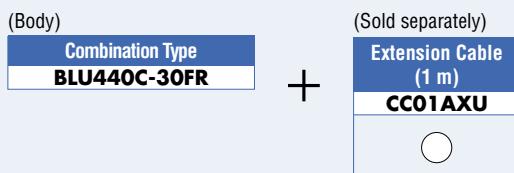

○: Selectable according to necessity. Oriental Motor provides.

*The system configuration shown above is an example. Other combinations are available.

■ Safety Standards and CE Marking

| | Standards | Certification Body | Standards File No. | CE Marking |
|--------|---|--------------------|-----------------------------|--|
| Motor | UL 60950-1 | UL | E208200 | Low Voltage Directives EMC Directives |
| | CSA C22.2 No.60950-1 | | | |
| | EN 60950-1 EN 60034-1 EN 60034-5 IEC 60664-1 | | Conform to EN/IEC Standards | |
| | UL 508C CSA C22.2 No.14 | UL | E171462 | |
| Driver | EN 60950-1 EN 50178 | | Conform to EN Standards | |

● When the system is approved under various safety standards, the model names on the motor and driver nameplates are the approved model names.

List of Motor and Driver Combinations → Page 21

■ Product Number Code

B U 4 40 C - 5 FR

(1) (2) (3) (4) (5) (6)

| | | |
|-----|-----------------------|--|
| (1) | Series | BLU: BLU Series |
| (2) | Motor Frame Size | 2: 60 mm 4: 80 mm 5: 90 mm |
| (3) | Output Power (W) | (Example) 40: 40 W |
| (4) | Power Supply Voltage | A: Single-Phase 100–115 VAC C: Single-Phase 200–230 VAC S: Three-Phase 200–230 VAC |
| (5) | Gear Ratio/Shaft Type | Number: Gear ratio for combination types: 8 types from 5 to 200 A: Round Shaft Type GFS: GFS Type Pinion Shaft |
| (6) | | Blank: Combination Type – Parallel Shaft Gearhead FR: Combination Type – Hollow Shaft Flat Gearhead |

■ Product Line

Combination Type The combination type comes with the motor and its dedicated gearhead already pre-assembled, which simplifies installation in equipment. Motors and gearheads are also available separately to facilitate changes or repairs.

● Combination Type – Parallel Shaft Gearhead

| Output Power | Power Supply Voltage | Package Model | Gear Ratio |
|--------------|--------------------------|------------------|--|
| 20 W | Single-Phase 100–115 VAC | BLU220A-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Single-Phase 200–230 VAC | BLU220C-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Three-Phase 200–230 VAC | BLU220S-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| 40 W | Single-Phase 100–115 VAC | BLU440A-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Single-Phase 200–230 VAC | BLU440C-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Three-Phase 200–230 VAC | BLU440S-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| 90 W | Single-Phase 100–115 VAC | BLU590A-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Single-Phase 200–230 VAC | BLU590C-□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Three-Phase 200–230 VAC | BLU590S-□ | 5, 10, 15, 20, 30, 50, 100, 200 |

● Enter the gear ratio in the box (□) within the model name.

● Combination Type – Hollow Shaft Flat Gearhead

| Output Power | Power Supply Voltage | Package Model | Gear Ratio |
|--------------|--------------------------|--------------------|--|
| 20 W | Single-Phase 100–115 VAC | BLU220A-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Single-Phase 200–230 VAC | BLU220C-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Three-Phase 200–230 VAC | BLU220S-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| 40 W | Single-Phase 100–115 VAC | BLU440A-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Single-Phase 200–230 VAC | BLU440C-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Three-Phase 200–230 VAC | BLU440S-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| 90 W | Single-Phase 100–115 VAC | BLU590A-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Single-Phase 200–230 VAC | BLU590C-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| | Three-Phase 200–230 VAC | BLU590S-□FR | 5, 10, 15, 20, 30, 50, 100, 200 |

● Enter the gear ratio in the box (□) within the model name.

● Round Shaft Type

| Output Power | Power Supply Voltage | Package Model |
|--------------|--------------------------|------------------|
| 20 W | Single-Phase 100–115 VAC | BLU220A-A |
| | Single-Phase 200–230 VAC | BLU220C-A |
| | Three-Phase 200–230 VAC | BLU220S-A |
| 40 W | Single-Phase 100–115 VAC | BLU440A-A |
| | Single-Phase 200–230 VAC | BLU440C-A |
| | Three-Phase 200–230 VAC | BLU440S-A |
| 90 W | Single-Phase 100–115 VAC | BLU590A-A |
| | Single-Phase 200–230 VAC | BLU590C-A |
| | Three-Phase 200–230 VAC | BLU590S-A |

●Pinion Shaft Type

(Gearheads are sold separately)

| Output Power | Power Supply Voltage | Package Model |
|--------------|-----------------------------|--------------------|
| 20 W | Single-Phase 100–115 VAC | BLU220A-GFS |
| | Single-Phase 200–230 VAC | BLU220C-GFS |
| | Three-Phase 200–230 VAC | BLU220S-GFS |
| 40 W | Single-Phase 100–115 VAC | BLU440A-GFS |
| | Single-Phase 200–230 VAC | BLU440C-GFS |
| | Three-Phase 200–230 VAC | BLU440S-GFS |
| 90 W | Single-Phase 100–115 VAC | BLU590A-GFS |
| | Single-Phase 200–230 VAC | BLU590C-GFS |
| | Three-Phase 200–230 VAC | BLU590S-GFS |

●Gearhead

◇Parallel Shaft Gearhead

| Output Power of Applicable Motor (Pinion Shaft Type) | Gearhead Model | Gear Ratio |
|--|----------------|--|
| 20 W | GFS2G□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| 40 W | GFS4G□ | 5, 10, 15, 20, 30, 50, 100, 200 |
| 90 W | GFS5G□ | 5, 10, 15, 20, 30, 50, 100, 200 |

●Enter the gear ratio in the box (□) within the model name.

◇Hollow Shaft Flat Gearhead

| Output Power of Applicable Motor (Pinion Shaft Type) | Gearhead Model | Gear Ratio |
|--|-----------------|--|
| 20 W | GFS2G□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| 40 W | GFS4G□FR | 5, 10, 15, 20, 30, 50, 100, 200 |
| 90 W | GFS5G□FR | 5, 10, 15, 20, 30, 50, 100, 200 |

●Enter the gear ratio in the box (□) within the model name.

■ Specifications

● 20 W (RoHS)

| | | cULus CE | | |
|---------------------------------|---|--|----------------------------------|---------------------------------|
| Package Model | Combination Type – Parallel Shaft Gearhead | BLU220A-□ | BLU220C-□ | BLU220S-□ |
| | Combination Type – Hollow Shaft Flat Gearhead | BLU220A-□FR | BLU220C-□FR | BLU220S-□FR |
| | Round Shaft Type | BLU220A-A | BLU220C-A | BLU220S-A |
| Rated Output Power (Continuous) | W | | 20 | |
| Power Source | Rated Voltage | Single-Phase 100–115 VAC ±10% | Single-Phase 200–230 VAC ±10% | Three-Phase 200–230 VAC ±10% |
| | Rated Frequency | Hz | 50/60 Hz ±5% | |
| | Rated Input Current | A | 0.95 | 0.35 |
| | Maximum Input Current | A | 1.55 | 0.55 |
| Rated Torque | N·m | | 0.1 | |
| Starting Torque* | N·m | | 0.12 | |
| Rated Speed | r/min | | 2000 | |
| Variable Speed Range | r/min | | 100~2000 | |
| Round Shaft Type | | | | |
| Permissible Load Inertia J | ×10 ⁴ kg·m ² | | 1.25 | |
| Rotor Inertia J | ×10 ⁴ kg·m ² | | 0.086 | |
| Speed Regulation | Load | ±0.5% max. (0~Rated torque, at rated speed, at rated voltage, at normal ambient temperature) | | |
| | Voltage | ±0.5% max. (Rated voltage ±10%, at rated speed, with no load, at normal ambient temperature) | | |
| | Temperature | ±0.5% max. (0°C~+40°C, at rated speed, with no load, at rated voltage) | | |

● 40 W (RoHS)

| | | cULus CE | | |
|---------------------------------|---|--|----------------------------------|---------------------------------|
| Package Model | Combination Type – Parallel Shaft Gearhead | BLU440A-□ | BLU440C-□ | BLU440S-□ |
| | Combination Type – Hollow Shaft Flat Gearhead | BLU440A-□FR | BLU440C-□FR | BLU440S-□FR |
| | Round Shaft Type | BLU440A-A | BLU440C-A | BLU440S-A |
| Rated Output Power (Continuous) | W | | 40 | |
| Power Source | Rated Voltage | Single-Phase 100–115 VAC ±10% | Single-Phase 200–230 VAC ±10% | Three-Phase 200–230 VAC ±10% |
| | Rated Frequency | Hz | 50/60 Hz ±5% | |
| | Rated Input Current | A | 1.45 | 0.85 |
| | Maximum Input Current | A | 2.5 | 1.4 |
| Rated Torque | N·m | | 0.2 | |
| Starting Torque* | N·m | | 0.24 | |
| Rated Speed | r/min | | 2000 | |
| Variable Speed Range | r/min | | 100~2000 | |
| Round Shaft Type | | | | |
| Permissible Load Inertia J | ×10 ⁴ kg·m ² | | 2.5 | |
| Rotor Inertia J | ×10 ⁴ kg·m ² | | 0.234 | |
| Speed Regulation | Load | ±0.5% max. (0~Rated torque, at rated speed, at rated voltage, at normal ambient temperature) | | |
| | Voltage | ±0.5% max. (Rated voltage ±10%, at rated speed, with no load, at normal ambient temperature) | | |
| | Temperature | ±0.5% max. (0°C~+40°C, at rated speed, with no load, at rated voltage) | | |

● 90 W (RoHS)

| | | cULus CE | | |
|---------------------------------|---|--|----------------------------------|---------------------------------|
| Package Model | Combination Type – Parallel Shaft Gearhead | BLU590A-□ | BLU590C-□ | BLU590S-□ |
| | Combination Type – Hollow Shaft Flat Gearhead | BLU590A-□FR | BLU590C-□FR | BLU590S-□FR |
| | Round Shaft Type | BLU590A-A | BLU590C-A | BLU590S-A |
| Rated Output Power (Continuous) | W | | 90 | |
| Power Source | Rated Voltage | Single-Phase 100–115 VAC ±10% | Single-Phase 200–230 VAC ±10% | Three-Phase 200–230 VAC ±10% |
| | Rated Frequency | Hz | 50/60 Hz ±5% | |
| | Rated Input Current | A | 2.55 | 1.45 |
| | Maximum Input Current | A | 3.9 | 2.4 |
| Rated Torque | N·m | | 0.45 | |
| Starting Torque* | N·m | | 0.54 | |
| Rated Speed | r/min | | 2000 | |
| Variable Speed Range | r/min | | 100~2000 | |
| Round Shaft Type | | | | |
| Permissible Load Inertia J | ×10 ⁴ kg·m ² | | 5.6 | |
| Rotor Inertia J | ×10 ⁴ kg·m ² | | 0.611 | |
| Speed Regulation | Load | ±0.5% max. (0~Rated torque, at rated speed, at rated voltage, at normal ambient temperature) | | |
| | Voltage | ±0.5% max. (Rated voltage ±10%, at rated speed, with no load, at normal ambient temperature) | | |
| | Temperature | ±0.5% max. (0°C~+40°C, at rated speed, with no load, at rated voltage) | | |

*The time during which the starting torque is effective is no more than 5 seconds and at 1500 r/min or below.

● Enter the gear ratio in the box (□) within the model name.

● The values in the specifications are for the motor only.

Common Specifications

| Item | Specifications |
|--------------------------------|--|
| Speed Setting Method | Speed potentiometer on front panel |
| Acceleration/Deceleration Time | 0.5~10 sec. (at 2000 r/min with no load) (The actual speed may change by load condition.) A common value is set using the acceleration/deceleration time potentiometer provided at the back of the front panel. |
| Input Signal | Photocoupler Input (Reinforced Insulation Photocoupler), Input Impedance 2 kΩ Operated by internal power supply 14 V Common to Clockwise (CW) and Counterclockwise (CCW) Inputs Source Logic or Sink Logic ... Switchable using a selector switch |
| Output Signal | Open Collector Output (Reinforced Insulation Photocoupler), External Use Condition 4.5~26.4 VDC, 0.5~10 mA Common to Alarm Output (ALARM OUT) and Speed Output (SPEED OUT) |
| Protection Functions* | When the following are activated, the ALARM output will be OFF and the motor will come to a stop. When the overload protective function actuates, the alarm LED on the driver will blink. The alarm LED will illuminate steadily in the event of actuation of any other protective function. <ul style="list-style-type: none"> ● Overload Protection: Activated when the motor load exceeds rated torque for a minimum of 5 seconds. ● Overvoltage Protection: Activated when the voltage applied to the driver exceeds 115 VAC or 230 VAC by a minimum of 20%, a gravitational operation was performed or a load exceeding the allowable load inertia was driven. ● Motor Sensor Error: Activated when the sensor wire inside the motor cable is disconnected during motor operation. ● Undervoltage Protection: Activated when the voltage applied to the driver falls below 100 VAC or 200 VAC by a minimum of 30%. ● Overspeed Protection: Activated when the motor speed exceeds 2500 r/min. |
| Maximum Extension Distance | Motor/Driver Distance: 10.5 m (when an optional CC10AXU extension cable is used) |
| Rating | Continuous |

*With the **BLU** Series, the motor speed cannot be controlled in a gravitational operation or other application where the motor shaft is turned by the load. When a load exceeding the allowable load inertia is driven or a gravitational operation is performed, the overvoltage protection function will actuate to cause the motor to decelerate to a stop.

General Specifications

| Item | Motor | Driver |
|---------------------------------|---|--|
| Insulation Resistance | 100 MΩ or more when 500 VDC megger is applied between the windings and the frame after continuous operation at normal temperature and humidity. | 100 MΩ or more when 500 VDC megger is applied between the power supply input terminal and the ground terminal, and between the power supply input terminal and the I/O terminal after continuous operation at normal temperature and humidity. |
| Dielectric Strength | Sufficient to withstand 1.5 kVAC at 50 Hz applied between the windings and the frame for 1 minute after continuous operation at normal temperature and humidity. | Sufficient to withstand 1.8 kVAC at 50 Hz applied between the ground terminal and the power supply input terminal for 1 minute, and 3 kVAC at 50 Hz applied between the ground terminal and the I/O terminal for 1 minute after continuous operation at normal temperature and humidity. |
| Temperature Rise | Rise in the coil temperature and frame surface temperature shall not exceed 60°C and 50°C, respectively when measured by the thermocouple method after continuous operation at normal temperature and humidity with a gearhead or equivalent radiation plate* ¹ insulated. | — |
| Ambient Temperature | UL, CSA: 0°C~+40°C (nonfreezing) EN: 0°C~+50°C (nonfreezing) | 0°C~+40°C (nonfreezing) |
| Operating Environment Condition | Humidity 85% max. (noncondensing) Altitude 1000 m max. Atmosphere No corrosive gases or dust. Cannot be used in a radioactive area, magnetic field, vacuum or other special environment | |
| Vibration | Not subject to continuous vibration or excessive impact In conformance with JIS C 60068-2-6, "Sine-Wave Vibration Test Method" Frequency Range: 10~55 Hz Pulsating Amplitude: 0.15 mm Sweep Direction: 3 directions (X, Y, Z) Number of Sweeps: 20 times | |
| Storage Condition* ² | Ambient Temperature -25°C~+70°C (nonfreezing) Humidity 85% max. (noncondensing) Altitude 3000 m max. | |
| Insulation Class | UL, CSA: Class A (105°C) EN: Class E (120°C) | — |
| Degree of Protection | IP65 (Excluding the round shaft type mounting surface and connectors) | IP10 |

*1 For round shaft types, please attach to the following sizes of heat radiation plate (material: aluminum) to maintain a maximum motor frame temperature of 90°C.

BLU220□-A: 135 mm × 135 mm, 5 mm thick

BLU440□-A: 165 mm × 165 mm, 5 mm thick

BLU590□-A: 200 mm × 200 mm, 5 mm thick

● Enter the power supply voltage **A**, **C** or **S** in the box (□) within the model name.

*2 The storage condition applies to a short period such as a period during transportation.

Note:

● Do not measure insulation resistance or perform the dielectric strength test while the motor and driver are connected.

█ Gearmotor–Torque Table for Combination Type

● Combination Type–Parallel Shaft Gearhead

Unit = N·m

| Package Model | Gear Ratio | 5 | 10 | 15 | 20 | 30 | 50 | 100 | 200 |
|-------------------|------------|--------|-----------|-------|----------|------|------|--------|-----|
| Speed Range r/min | 20~400 | 10~200 | 6.7~133.3 | 5~100 | 3.3~66.7 | 2~40 | 1~20 | 0.5~10 | |
| BLU220 ■-□ | 0.45 | 0.9 | 1.4 | 1.8 | 2.6 | 4.3 | 6 | 6 | |
| BLU440 ■-□ | 0.9 | 1.8 | 2.7 | 3.6 | 5.2 | 8.6 | 16 | 16 | |
| BLU590 ■-□ | 2 | 4.1 | 6.1 | 8.1 | 11.6 | 19.4 | 30 | 30 | |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

● A colored background indicates gear shaft rotation in the same direction as the motor shaft; a white background indicates rotation in the opposite direction.

● Combination Type–Hollow Shaft Flat Gearhead

Unit = N·m

| Package Model | Gear Ratio | 5 | 10 | 15 | 20 | 30 | 50 | 100 | 200 |
|-----------------------------|------------|--------|-----------|-------|----------|------|------|--------|-----|
| Speed Range r/min | 20~400 | 10~200 | 6.7~133.3 | 5~100 | 3.3~66.7 | 2~40 | 1~20 | 0.5~10 | |
| BLU220 ■-□ FR | 0.4 | 0.85 | 1.3 | 1.7 | 2.6 | 4.3 | 8.5 | 17 | |
| BLU440 ■-□ FR | 0.85 | 1.7 | 2.6 | 3.4 | 5.1 | 8.5 | 17 | 34 | |
| BLU590 ■-□ FR | 1.9 | 3.8 | 5.7 | 7.7 | 11.5 | 19.1 | 38.3 | 68 | |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

● The flat gearhead rotates in the opposite direction to the motor when viewed from the front of the gearhead. It rotates in the same direction as the motor when viewed from the rear (motor mounting surface) of the gearhead.

Rotation Direction of Hollow Shaft Flat Gearhead → Page 19

█ Permissible Overhung Load and Permissible Thrust Load

● Combination Type–Parallel Shaft Gearhead

| Package Model | Gear Ratio | Permissible Overhung Load | | Permissible Thrust Load N |
|-------------------|-------------------------|---------------------------|---------------------------|------------------------------|
| | | 10 mm from shaft end N | 20 mm from shaft end N | |
| BLU220 ■-□ | 5 | 100 | 150 | 40 |
| | 10, 15, 20 | 150 | 200 | |
| | 30, 50, 100, 200 | 200 | 300 | |
| BLU440 ■-□ | 5 | 200 | 250 | 100 |
| | 10, 15, 20 | 300 | 350 | |
| | 30, 50, 100, 200 | 450 | 550 | |
| BLU590 ■-□ | 5 | 300 | 400 | 150 |
| | 10, 15, 20 | 400 | 500 | |
| | 30, 50, 100, 200 | 500 | 650 | |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

● Combination Type–Hollow Shaft Flat Gearhead

| Package Model | Gear Ratio | Permissible Overhung Load | | Permissible Thrust Load N |
|-----------------------------|---------------------------------|--|--|------------------------------|
| | | 10 mm from mounting surface of hollow shaft gearhead N | 20 mm from mounting surface of hollow shaft gearhead N | |
| BLU220 ■-□ FR | 5, 10 | 450 | 370 | 200 |
| | 15, 20, 30, 50, 100, 200 | 500 | 400 | |
| BLU440 ■-□ FR | 5, 10 | 800 | 660 | 400 |
| | 15, 20, 30, 50, 100, 200 | 1200 | 1000 | |
| BLU590 ■-□ FR | 5, 10 | 900 | 770 | 500 |
| | 15, 20 | 1300 | 1110 | |
| | 30, 50, 100, 200 | 1500 | 1280 | |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

● Round Shaft Type

| Package Model | Permissible Overhung Load | | Permissible Thrust Load |
|-------------------|---------------------------|---------------------------|---|
| | 10 mm from shaft end N | 20 mm from shaft end N | |
| BLU220 ■-A | 70 | 100 | |
| BLU440 ■-A | 120 | 140 | |
| BLU590 ■-A | 160 | 170 | The permissible thrust load shall be no greater than half the motor mass. |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

■ Permissible Load Inertia J for Combination Type

● Combination Type – Parallel Shaft Gearhead

Unit = $\times 10^4 \text{ kg}\cdot\text{m}^2$

| Package Model \ Gear Ratio | 5 | 10 | 15 | 20 | 30 | 50 | 100 | 200 |
|----------------------------|------|-----|------|------|------|------|------|------|
| BLU220 ■-□ | 1.55 | 6.2 | 14 | 24.8 | 55.8 | 155 | 155 | 155 |
| BLU440 ■-□ | 5.5 | 22 | 49.5 | 88 | 198 | 550 | 550 | 550 |
| BLU590 ■-□ | 25 | 100 | 225 | 400 | 900 | 2500 | 2500 | 2500 |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

● Combination Type – Hollow Shaft Flat Gearhead

Unit = $\times 10^4 \text{ kg}\cdot\text{m}^2$

| Package Model \ Gear Ratio | 5 | 10 | 15 | 20 | 30 | 50 | 100 | 200 |
|-----------------------------|------|-----|------|------|------|------|------|------|
| BLU220 ■-□ FR | 1.55 | 6.2 | 14 | 24.8 | 55.8 | 155 | 155 | 155 |
| BLU440 ■-□ FR | 5.5 | 22 | 49.5 | 88 | 198 | 550 | 550 | 550 |
| BLU590 ■-□ FR | 25 | 100 | 225 | 400 | 900 | 2500 | 2500 | 2500 |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.


Enter the gear ratio in the box (□) within the model name.

■ Speed – Torque Characteristics


Continuous Duty Region: Continuous operation is possible in this region.

Limited Duty Region: This region is used primarily when accelerating. When a load that exceeds the rated torque is applied continuously for approximately 5 seconds, overload protection is activated and the motor comes to a stop.


BLU220 ■-□/**BLU220** ■-□**FR**/**BLU220** ■-□**A**

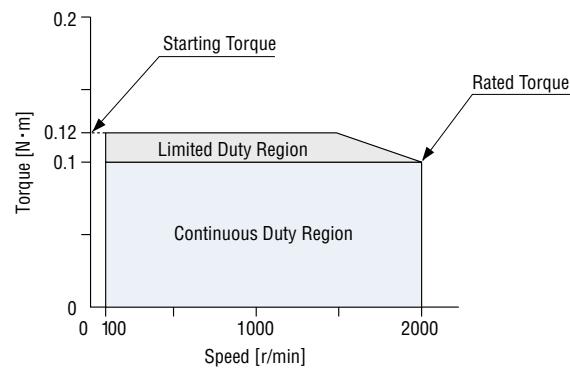

BLU440 ■-□/**BLU440** ■-□**FR**/**BLU440** ■-□**A**

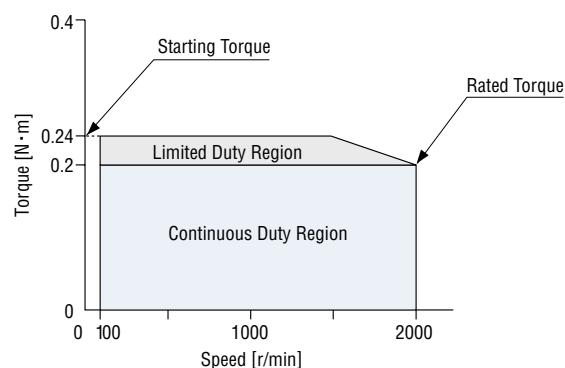

BLU590 ■-□/**BLU590** ■-□**FR**/**BLU590** ■-□**A**

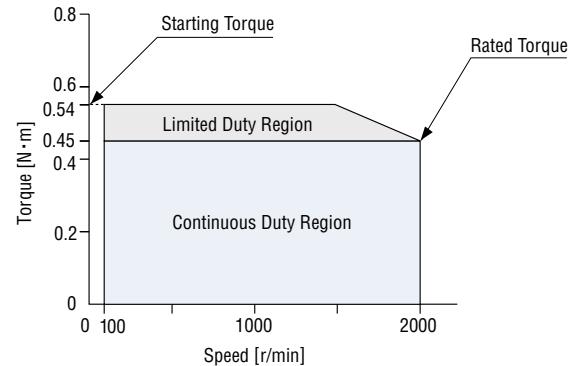

● The characteristics shown above are applicable for the motors only.

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

■ Dimensions (Unit = mm)


● Mounting screws are included with the combination type.

● 20 W

◇ Motor/Parallel Shaft Gearhead

| Package Model | Motor Model | Gearhead Model | Gear Ratio | L |
|-------------------------------------|-------------|----------------|------------|----|
| BLU220A-□ BLU220C-□ BLU220S-□ | BLUM220-GFS | GFS2G□ | 5~20 | 34 |
| | | | 30~100 | 38 |
| | | | 200 | 43 |

Mass: 1.0 kg (Including Gearhead)

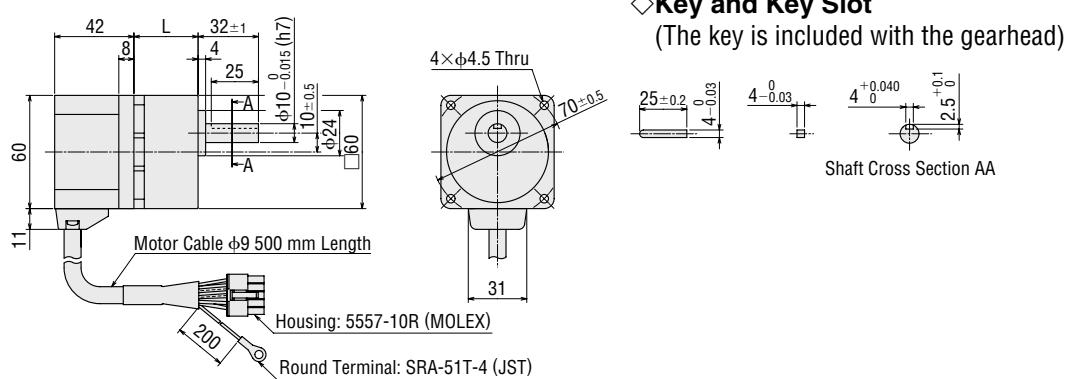


◇ Motor/Hollow Shaft Flat Gearhead

BLU220A-□FR, BLU220C-□FR, BLU220S-□FR


Motor: BLUM220-GFS

Gearhead: GFS2G□FR

Mass: 1.3 kg (Including Gearhead)

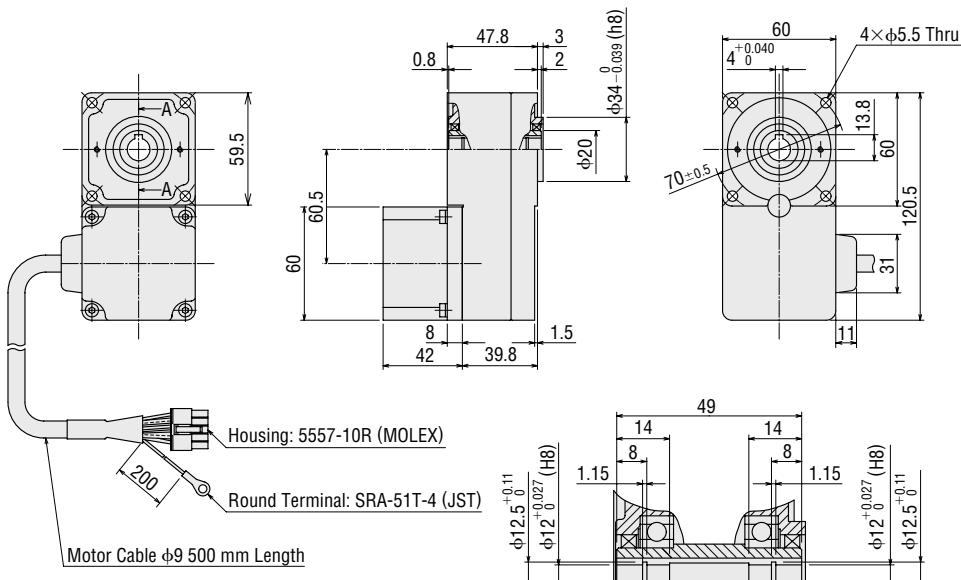

◇ Key (Included)

 


● Enter the gear ratio in the box (□) within the model name.

◇Round Shaft Type

BLU220A-A, BLU220C-A, BLU220S-A

Motor: BLUM220-A

Mass: 0.5 kg

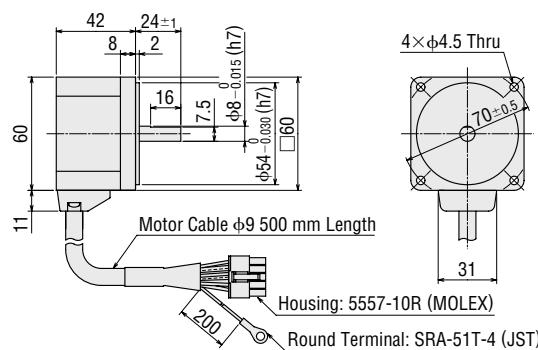


●40 W

◇Motor/Hollow Shaft Flat Gearhead

| Package Model | Motor Model | Gearhead Model | Gear Ratio | L |
|------------------|-------------|----------------|---------------|----|
| BLU440A-□ | | | 5~20 | 41 |
| BLU440C-□ | | | 30~100 | 46 |
| BLU440S-□ | BLUM440-GFS | GFS4G□ | 200 | 51 |

Mass: 1.8 kg (Including Gearhead)

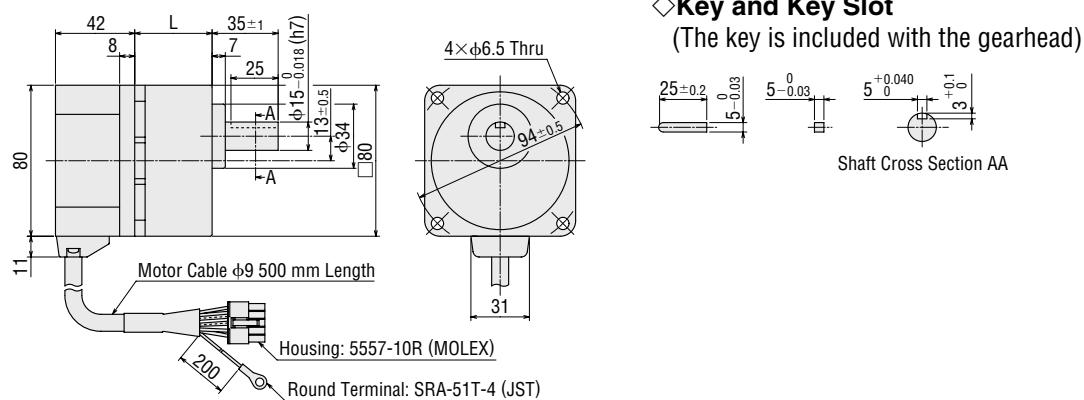

◇Key and Key Slot

(The key is included with the gearhead)

●Enter the gear ratio in the box (□) within the model name.


◇Motor/Hollow Shaft Flat Gearhead

BLU440A-□FR, BLU440C-□FR, BLU440S-□FR

Motor: BLUM440-GFS



Gearhead: GFS4G□FR

Mass: 2.4 kg (Including Gearhead)

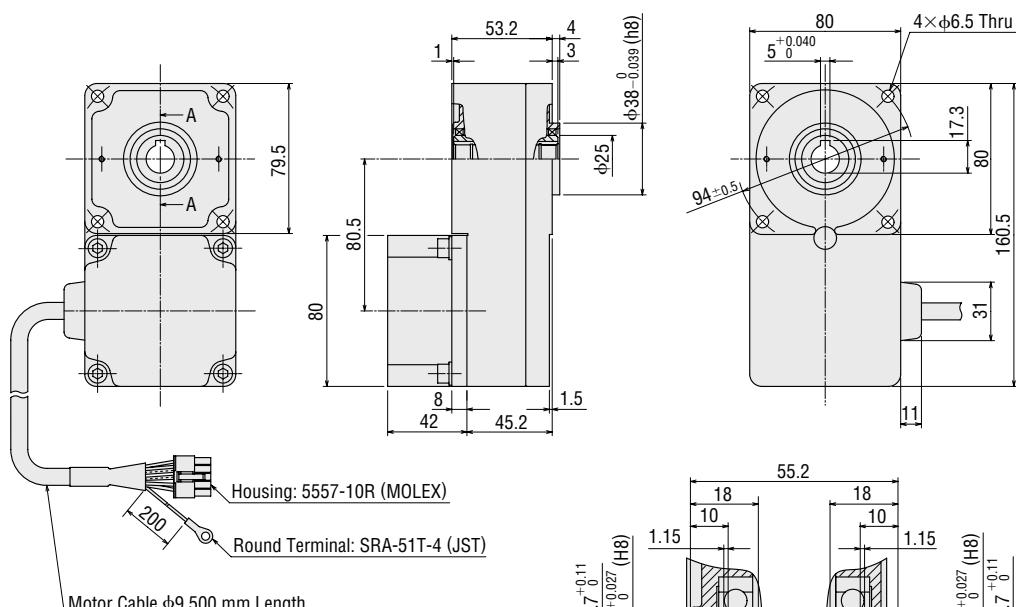

◇Key and Key Slot

 (The key is included with the gearhead)

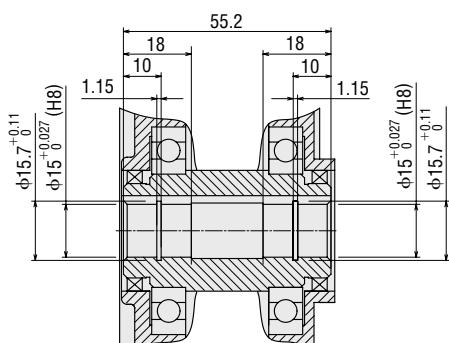


◇Round Shaft Type

BLU440A-A, BLU440C-A, BLU440S-A

Motor: BLUM440-A

Mass: 0.8 kg

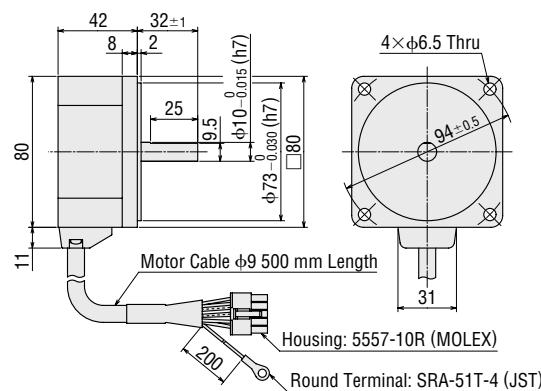


● Enter the gear ratio in the box (□) within the model name.

●90 W

◇Motor/Parallel Shaft Gearhead


| Package Model | Motor Model | Gearhead Model | Gear Ratio | L |
|---------------|-------------|----------------|------------|----|
| BLU590A-□ | | | 5~20 | 45 |
| BLU590C-□ | BLUM590-GFS | GFS5G□ | 30~100 | 58 |
| BLU590S-□ | | | 200 | 64 |

Mass: 2.9 kg (Including Gearhead)

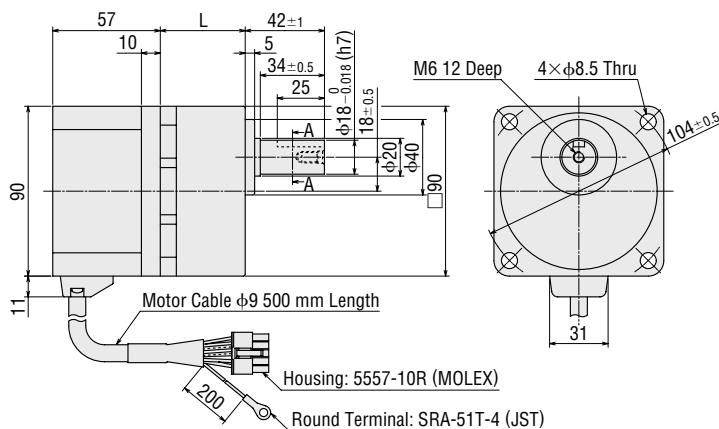

◇Key and Key Slot

(The key is included with the gearhead)

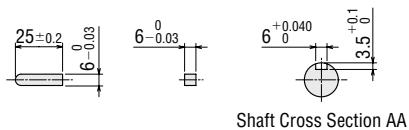


◇Motor/Hollow Shaft Flat Gearhead

BLU590A-□FR, BLU590C-□FR, BLU590S-□FR



Motor: BLUM590-GFS

Gearhead: GFS5G□FR

Mass: 3.6 kg (Including Gearhead)

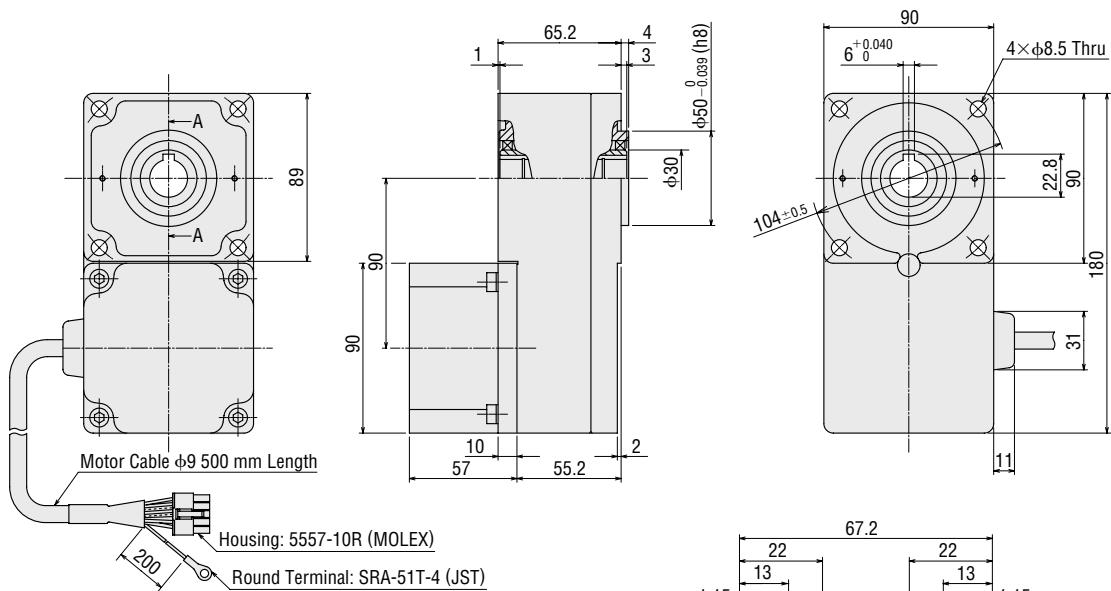

◇Key (Included)

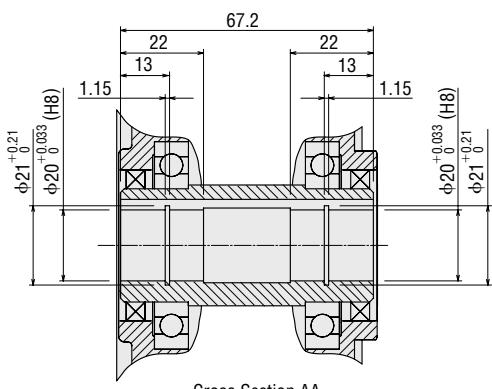 


Cross Section AA

●Enter the gear ratio in the box (□) within the model name.


◇**Round Shaft Type**
BLU590A-A, BLU590C-A, BLU590S-A

Motor: BLUM590-A
 Mass: 1.4 kg

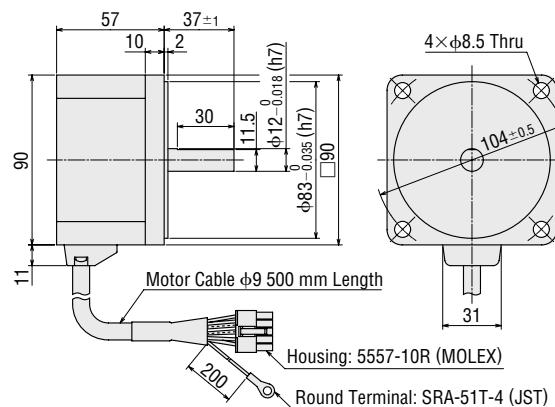


◇**Driver (Common to all models)**


BLUD20A, BLUD20C, BLUD20S
 BLUD40A, BLUD40C, BLUD40S
 BLUD90A, BLUD90C, BLUD90S
 Mass: 0.4 kg

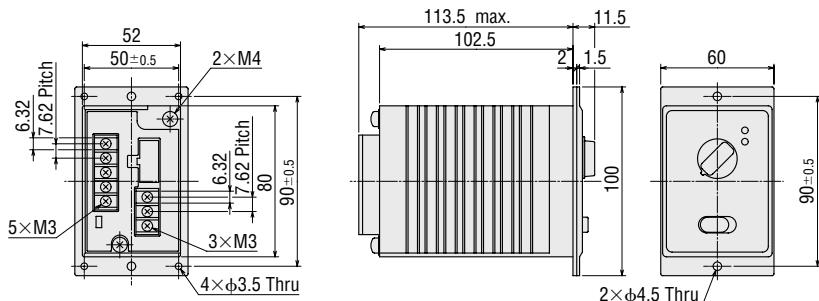

◇**Driver Panel Cut-Out**

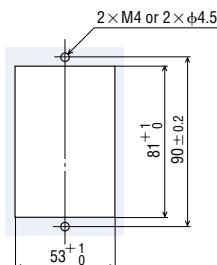


◇**Driver Power Supply Cable (Included, common to all models)**

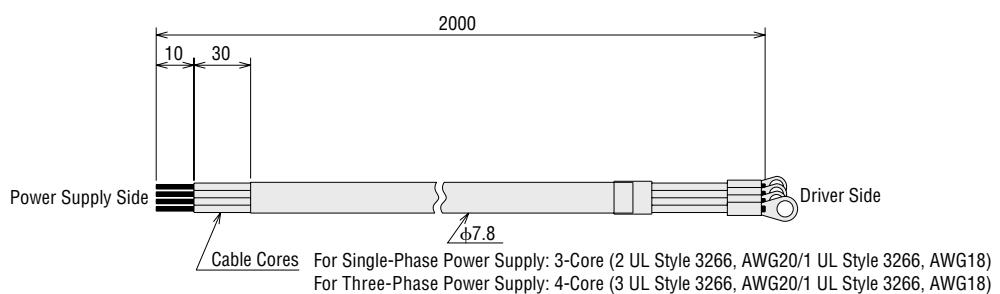

■ Connection and Operation

● Names and Functions of Driver Parts

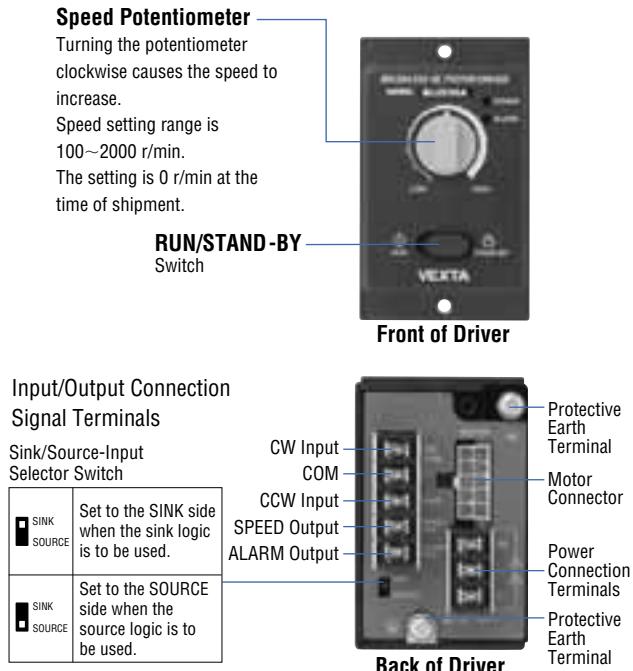


Notes:

- The RUN/STAND-BY switch is not a power ON/OFF switch.
- When you want to stop the motor for an extended period, turn off the driver power.

● Connection Diagrams

◇ Motor and Driver Connection

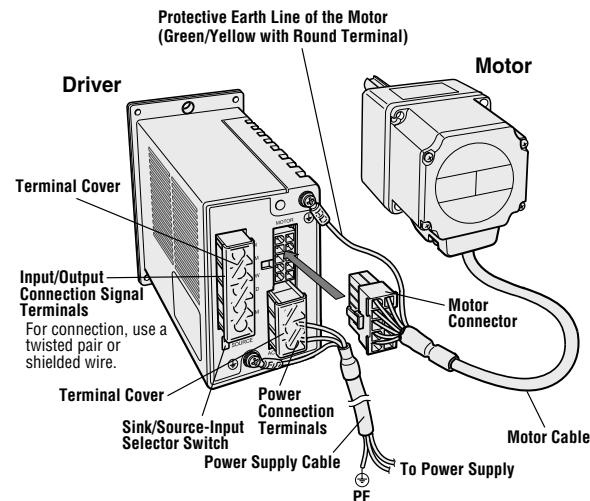

● Motor Connection

Insert the motor cable connector into the motor connector (MOTOR) on the driver. Insert it until a click sound is audible. To expand the distance between the motor and driver, use an optional extension cable. The connection can be extended to a maximum of 10.5 m.

 
Connect the motor's protective earth line (green/yellow) to the driver, as shown in the figure. If you are using an extension cable or the motor can be accessed directly by hands, connect the protective earth wire from the motor directly to ground. If the protective earth line is not long enough, connect a lead wire of AWG18 (0.75 mm²) or larger to the protective earth line of the motor cable and connect it to ground over the shortest distance. The lead wire must be provided by the user. The optional dedicated extension cable does not come with a protective earth line. If you are using the optional dedicated extension cable, provide grounding at a relay point or extend the cable to an appropriate grounding point.

● Power Connection


Connect the included power supply cable to the power supply terminal of the driver. Connect the red and black lead wires to the power connection terminals, and green/yellow lead wire to the protective earth terminal. When the included power supply cable is not used, use a cable with a diameter equivalent to AWG22 (0.3 mm²) or more. For the protective earth cable, use a cable with a diameter equivalent to AWG18 (0.75 mm²) or more.

● Recommended Crimp Terminals

Round Terminal with Insulation (M3)



● Single-Phase 100–115 VAC ● Single-Phase 200–230 VAC ● Three-Phase 200–230 VAC

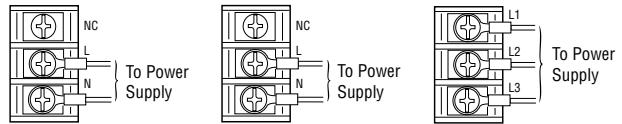


◇ Operation


The direction of motor rotation is as viewed from the output shaft end of the motor. "CW" indicates clockwise direction, while "CCW" indicates counterclockwise direction.

● Stand Alone Operation

 When the RUN/STAND-BY switch is set to the "RUN" position, the motor will run. When it is set to the "STAND-BY" position, the motor will stop.



The direction of rotation depends on how the short circuit bar at the back of driver is connected. Connect the short circuit bar between the CW and COM or CCW and COM. Do not use the short circuit bar for any other purpose.

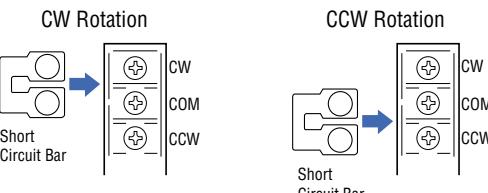

● Operation Using External Signals


Set the RUN/STAND-BY switch to the "RUN" position.



● See "Input Circuit Connection Example" shown on the page 18 for connection.

● Timing Chart

◇ Operation Using External Signals

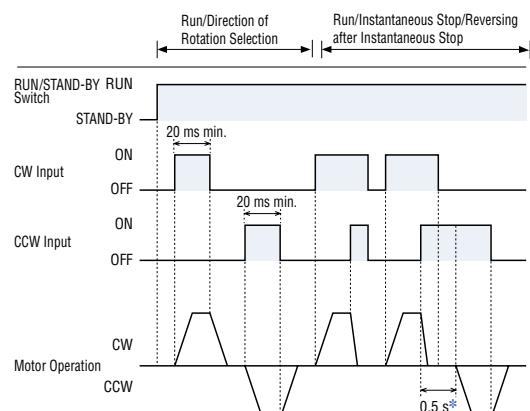

Note:

The CW and CCW input signals must be ON for at least 20 ms.

When both the CW and CCW inputs are turned on, the motor stops instantaneously.


*Motor does not run for 0.5 s after instantaneous stop, if a reversing run signal is input.

● I/O Signal Circuits


The input signal circuit can be switched between the sink mode and source mode using the source/sink-input selector switch on the driver.

◇ Source Logic

· Input Circuit

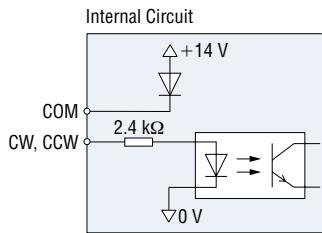


· Output Circuit

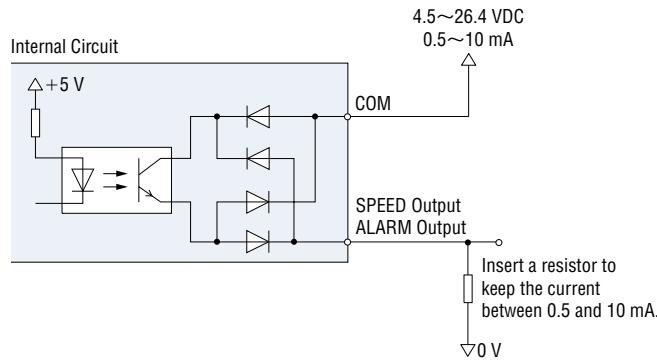


◇ Sink Logic

· Input Circuit

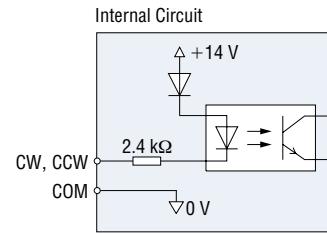


· Output Circuit

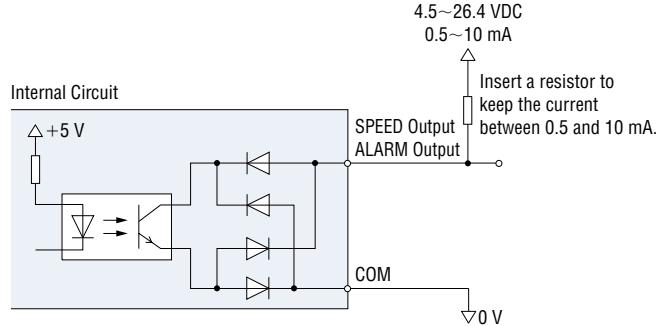


◇ Input Circuit Connection Example

 Set the RUN/STAND-BY switch to the "RUN" position.




· Small-capacity switch and relay

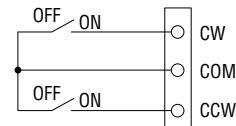

● Use a small-capacity contact type relay capable of opening and closing 14 VDC, 10 mA.

· Transistor output type controller

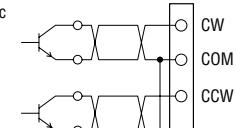

● When in the source mode, do not connect the CW input and CCW input to transistor output type controller.

Rotation Direction of Motor

● CW (clockwise) directional operation

When CW input is turned on, the motor runs in a clockwise direction. When CW input is turned off, the motor stops.

● CCW (counterclockwise) directional operation

When CCW input is turned on, the motor runs in a counterclockwise direction. When CCW input is turned off, the motor stops.

When both the CW and CCW inputs are turned on simultaneously, the motor stops instantly. Instantaneous reversing operation is not possible.

◇ When a Controller with a Built-In Clamp Diode is Used


When you want to use the controller with a built-in clamp diode, pay attention to the sequence of turning on or off the power.

Power ON: Controller ON → Driver ON

Power OFF: Driver OFF → Controller OFF

If the driver power is turned on first when connected as shown below, or the controller power is turned off with the driver power turned on, current will be applied, as indicated by the arrows in the diagram. This may cause the motor to run. When the power is turned on or off simultaneously, the motor may run temporarily due to differences in power capacity. The controller power must be turned on first, and driver power must be turned off first.


· Example of Sink Logic

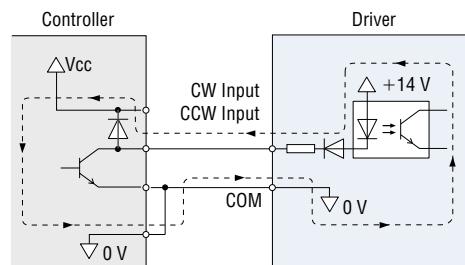

◇Output Circuit Connection Example

The signal output is open collector output. Use the power supply of 4.5 VDC to 26.4 VDC to connect the limit resistor (R) to keep output current between 0.5 mA and 10 mA.

• Signal Output (Source Logic) Connection Example

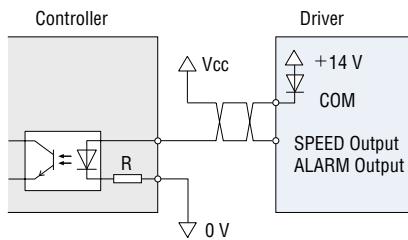

Note:

 
- The ON voltage of the output circuit is approx. 15 V. Remember this specification when driving other element using the output circuit.

◇SPEED Output

The speed output signal is synchronized with the motor speed. The system outputs pulses (with a width of approximately 0.5 ms) at a rate of 30 pulses per rotation of the motor output shaft. You can measure the speed output frequency and calculate motor speed.

$$\text{Motor Speed (r/min)} = \frac{\text{SPEED Output Frequency [Hz]}}{30} \times 60$$

$$\text{SPEED Output Frequency (Hz)} = \frac{1}{T}$$



Notes for Connection:

- When you want to extend the input/output signal cable, the length must not exceed 2 m. The cable should be as short as possible in order to minimize noise.
- Signal wires and motor wires should be kept away from power cables or motor cables.

◇ALARM Output

In the following conditions, the driver's protective function will actuate. The ALARM output will turn OFF and the motor will stop. In this case, the protective function that actuated can be checked based on whether the LED is blinking or illuminating steadily.

- The LED will blink upon actuation of the following protective function:

Overload protective function


- The LED will illuminate steadily upon actuation of the following protective functions:

Overspeed protective function, motor sensor error, undervoltage protective function, overspeed protective function

●Setting the Acceleration/Deceleration Time

The motor accelerates slowly when it starts up and decelerates slowly when it stops. This acceleration/ deceleration time can be set within the range from 0.5 to 10 sec (2000 r/min without load). The time can be set using the acceleration/deceleration potentiometer. Remove the front panel of the driver to access the potentiometer.

*The figure shows the driver with the front panel removed.

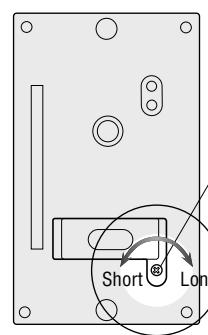


Acceleration/Deceleration Time Potentiometer

Time is increased by turning the switch clockwise. Use an insulated Phillips Screwdriver for this operation. The shortest time is selected at the time of shipment.


■Rotation Direction of the Hollow Shaft Flat Gearhead

The hollow shaft flat gearhead of the combination type rotates in the direction as shown below, with respect to the direction input from the driver.

Front View

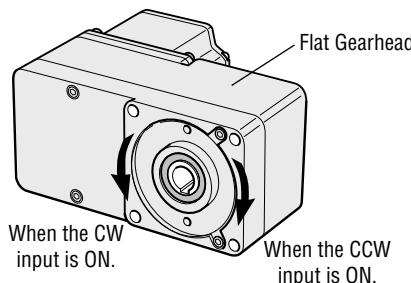

Rear View

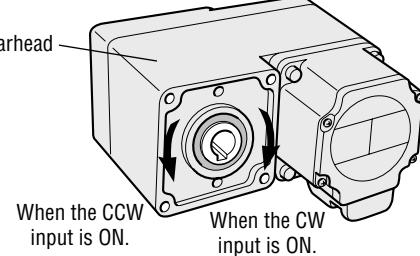

■ Installation of the Hollow Shaft Flat Gearhead

● Installing the Load Shaft


- Install the load shaft to the hollow output shaft by aligning the center of the hollow shaft with that of the load shaft.
- The hollow output shaft has a key slot. Machine a matching key slot on the load shaft and use the supplied key to affix the two shafts across the slots.
- A recommended tolerance of the load shaft is h7.
- If the motor is intended to receive large impacts due to frequent instantaneous stops or carry a large overhung load, use a stepped load shaft.

Notes:

- When installing the load shaft to the hollow output shaft, be careful not to damage the hollow output shaft or bearing.
- To prevent seizure, apply a coat of molybdenum disulfide grease on the exterior surface of the load shaft and interior surface of the hollow output shaft.
- Do not attempt to modify or machine the hollow output shaft. Doing so may damage the bearing and cause the hollow shaft flat gearhead to break.


◇ Stepped Load Shaft

Install a hexagonal socket head bolt over a stopper ring, spacer, flat washer and spring washer, and tighten the bolt to affix the load shaft.

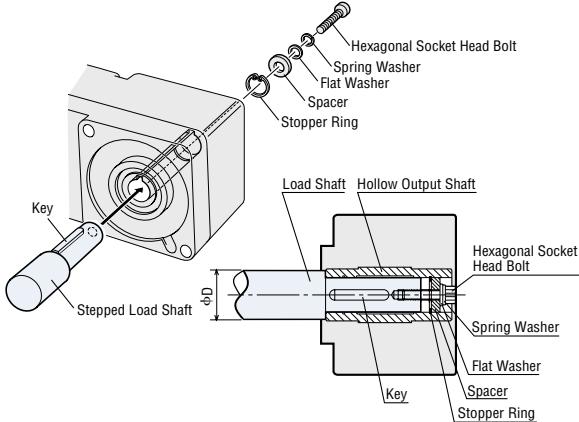

◇ Straight Load Shaft

Install a hexagonal socket head bolt over a stopper ring, spacer, flat washer and spring washer, with a spacer also inserted underneath the load shaft, and tighten the bolt to affix the load shaft.

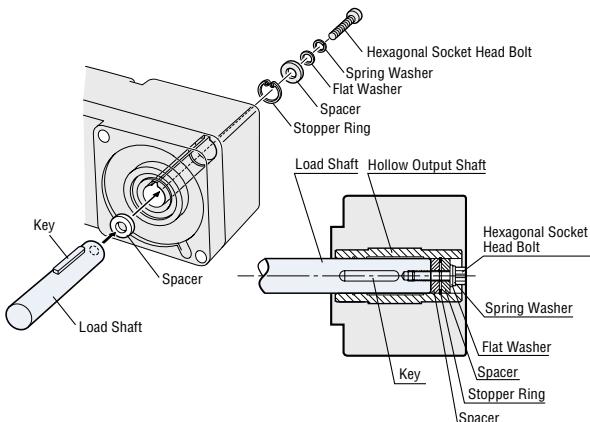

● Recommended Load Shaft Installation Dimensions

Unit = mm


| Model | BLU220 | BLU440 | BLU590 |
|--|-------------------------|-------------------------|-------------------------|
| Inner Diameter of Hollow Shaft (H8) | $\phi 12^{+0.027}_0$ | $\phi 15^{+0.027}_0$ | $\phi 20^{+0.033}_0$ |
| Recommended Tolerance of Load Shaft (h7) | $\phi 12^{+0}_{-0.018}$ | $\phi 15^{+0}_{-0.018}$ | $\phi 20^{+0}_{-0.021}$ |
| Nominal Diameter of Stopper Ring | $\phi 12$, C-shaped | $\phi 15$, C-shaped | $\phi 20$, C-shaped |
| Applicable Bolt | M4 | M5 | M6 |
| Spacer Thickness* | 3 | 4 | 5 |
| Outer Diameter of Step Part ϕD | 20 | 25 | 30 |

*Determine the spacer thickness in conformance with the table. If the spacer is thicker than the specified dimension, the bolt will project from the surface and interfere with the safety cover.


● Installing the Hollow Shaft

◇ Installing from the Front Face

The output shaft boss (h8) can be used to align the shaft.

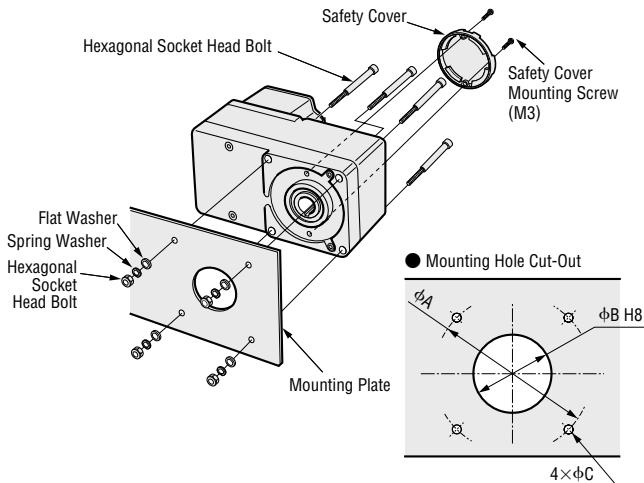

◇ Installing from the Rear Face

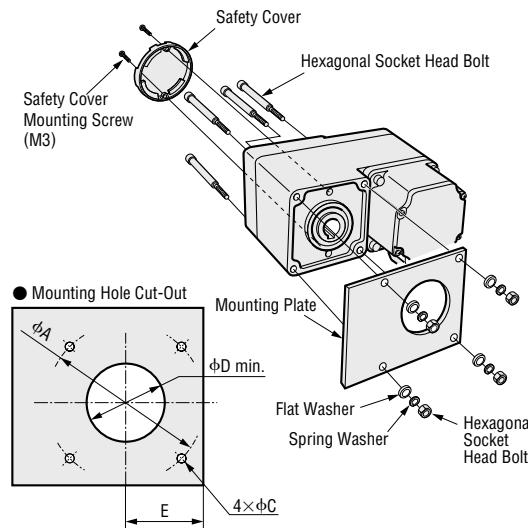

Note:

- When installing the hollow shaft flat gearhead from the rear face, provide dimension E to prevent the mounting plate from contacting the motor.

● Mounting Hole Dimensions

Unit = mm

| Model | BLU220 | BLU440 | BLU590 |
|-------------------|-----------------|-----------------|-----------------|
| Nominal Bolt Size | M5 | M6 | M8 |
| φA | 70 | 94 | 104 |
| φB H8 | $34^{+0.039}_0$ | $38^{+0.039}_0$ | $50^{+0.039}_0$ |
| φC | 5.5 | 6.5 | 8.5 |
| φD | 25 | 30 | 35 |
| E | 29 | 39 | 44 |

■List of Motor and Driver Combinations

● Combination Type—Parallel Shaft Gearhead

The combination type comes with the motor and parallel shaft gearhead already assembled.

| Output Power | Package Model | Motor Model | Gearhead Model | Driver Model |
|--------------|------------------|-------------|----------------|--------------|
| 20 W | BLU220A-□ | BLUM220-GFS | GFS2G□ | BLUD20A |
| | BLU220C-□ | | | BLUD20C |
| | BLU220S-□ | | | BLUD20S |
| 40 W | BLU440A-□ | BLUM440-GFS | GFS4G□ | BLUD40A |
| | BLU440C-□ | | | BLUD40C |
| | BLU440S-□ | | | BLUD40S |
| 90 W | BLU590A-□ | BLUM590-GFS | GFS5G□ | BLUD90A |
| | BLU590C-□ | | | BLUD90C |
| | BLU590S-□ | | | BLUD90S |

● Enter the gear ratio in the box (□) within the model name.

● Combination Type—Hollow Shaft Flat Gearhead

The combination type comes with the motor and hollow shaft flat gearhead already assembled.

| Output Power | Package Model | Motor Model | Gearhead Model | Driver Model |
|--------------|--------------------|-------------|----------------|--------------|
| 20 W | BLU220A-□FR | BLUM220-GFS | GFS2G□FR | BLUD20A |
| | BLU220C-□FR | | | BLUD20C |
| | BLU220S-□FR | | | BLUD20S |
| 40 W | BLU440A-□FR | BLUM440-GFS | GFS4G□FR | BLUD40A |
| | BLU440C-□FR | | | BLUD40C |
| | BLU440S-□FR | | | BLUD40S |
| 90 W | BLU590A-□FR | BLUM590-GFS | GFS5G□FR | BLUD90A |
| | BLU590C-□FR | | | BLUD90C |
| | BLU590S-□FR | | | BLUD90S |

● Enter the gear ratio in the box (□) within the model name.

● Round Shaft Type

| Output Power | Package Model | Motor Model | Driver Model |
|--------------|------------------|-------------|--------------|
| 20 W | BLU220A-A | BLUM220-A | BLUD20A |
| | BLU220C-A | | BLUD20C |
| | BLU220S-A | | BLUD20S |
| 40 W | BLU440A-A | BLUM440-A | BLUD40A |
| | BLU440C-A | | BLUD40C |
| | BLU440S-A | | BLUD40S |
| 90 W | BLU590A-A | BLUM590-A | BLUD90A |
| | BLU590C-A | | BLUD90C |
| | BLU590S-A | | BLUD90S |

● Pinion Shaft Type


| Output Power | Package Model | Motor Model | Driver Model |
|--------------|--------------------|-------------|--------------|
| 20 W | BLU220A-GFS | BLUM220-GFS | BLUD20A |
| | BLU220C-GFS | | BLUD20C |
| | BLU220S-GFS | | BLUD20S |
| 40 W | BLU440A-GFS | BLUM440-GFS | BLUD40A |
| | BLU440C-GFS | | BLUD40C |
| | BLU440S-GFS | | BLUD40S |
| 90 W | BLU590A-GFS | BLUM590-GFS | BLUD90A |
| | BLU590C-GFS | | BLUD90C |
| | BLU590S-GFS | | BLUD90S |

■ Accessories (Sold Separately)

● Extension Cables (RoHS)

These cables are used to connect motor and driver. The maximum extension length is 10.5 meters.

| Model | Length: L (m) |
|----------------|---------------|
| CC01AXU | 1 |
| CC02AXU | 2 |
| CC03AXU | 3 |
| CC05AXU | 5 |
| CC10AXU | 10 |

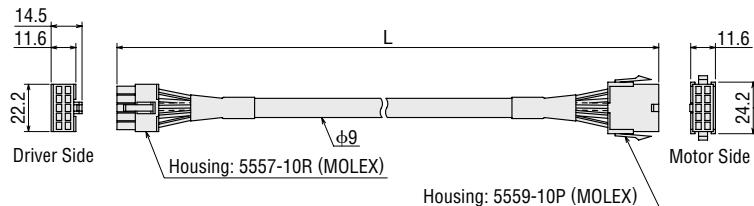

● Flexible Couplings (RoHS)

These products are the clamping type couplings to connect between the shaft of motor/gearhead and the shaft of the equipment to be connected. Couplings come with shaft holes and have standardized combinations for different diameter shaft holes.



| Applicable Product | Shaft Diameter (mm) | Type of Load | Coupling Type |
|--------------------|---------------------|--------------|---------------|
| BLU220■-□ | φ10 | Regular Load | MCL30 |
| | | Shock Load | MCL40 |
| BLU220■-A | φ8 | Regular Load | MCL20 |
| | | Shock Load | MCL30 |
| BLU440■-□ | φ15 | Regular Load | MCL40 |
| | | Shock Load | MCL55 |
| BLU440■-A | φ10 | Regular Load | MCL30 |
| | | Shock Load | MCL40 |
| BLU590■-□ | φ18 | Regular Load | MCL55 |
| | | Shock Load | |
| BLU590■-A | φ12 | Regular Load | MCL30 |
| | | Shock Load | MCL40 |

● Enter the power supply voltage **A**, **C** or **S** in the box (■) within the model name.

Enter the gear ratio in the box (□) within the model name.

● Choose from a range of flexible couplings with various shaft hole diameters. These couplings can also be used with round-shaft motors having the corresponding shaft diameter.

● Motor/Gearhead Mounting Brackets


High-strength installation fittings are available for handling high-output motors and gearheads.




| Model | Applicable Product |
|---------------|--------------------|
| SOL2M4 | BLU220 ■-□ |
| | BLU220 ■-A |
| SOL4M6 | BLU440 ■-□ |
| | BLU440 ■-A |
| SOL5M8 | BLU590 ■-□ |
| | BLU590 ■-A |

- Enter the power supply voltage **A**, **C** or **S** in the box (□) within the model name.
Enter the gear ratio in the box (□) within the model name.
 - These brackets come with tapped holes. To mount the motor and gearbox, simply fasten with the screws provided to the gearbox. To mount the motor alone, mounting screws must be provided separately.
 - Please note that these mounting brackets cannot be used with hollow shaft flat gearbox.


Model: **SOL2M4**
Mass: 135 g Material: Aluminum

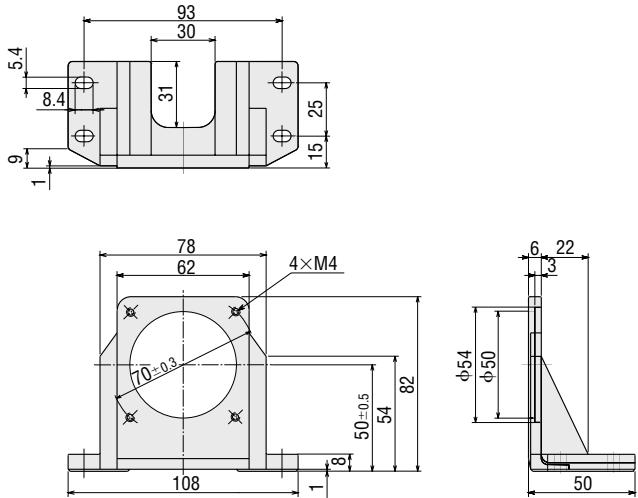

Model: **SOL5M8**
Mass: 270 g Material: Aluminum

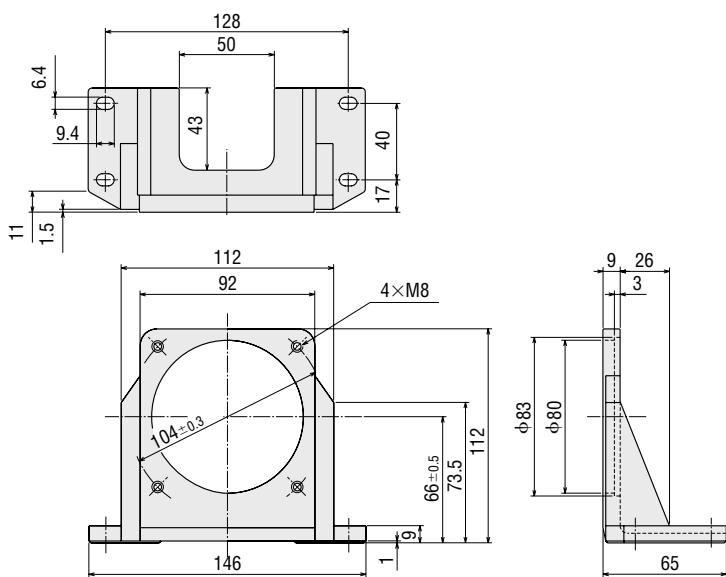

Model: **SOL4M6**
Mass: 210 g Material: Aluminum

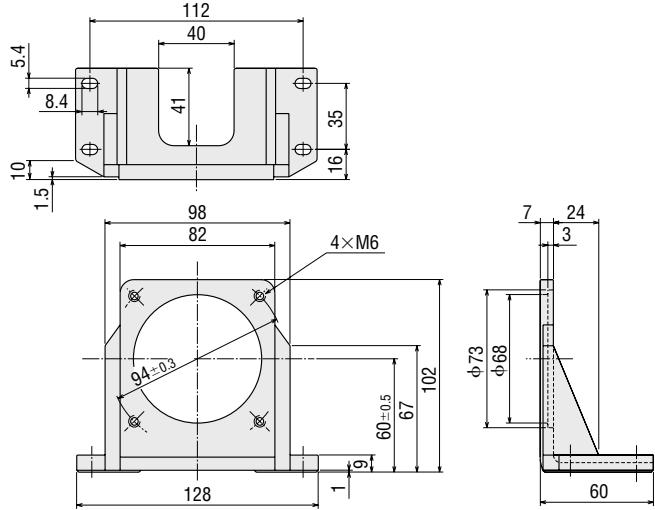

Oriental Motor's Brushless DC Motor and Driver Packages

Meeting All Your Motion Control Needs

Built-In Digital Operator

Brushless DC Motor and Driver Package

BLF Series

This unit combines a brushless DC motor with a maximum speed of 4000 r/min with a driver offering built-in digital setting/display functions.



- Output: 30 to 120 W
- Speed Control Range: 80 to 4000 r/min

24-VDC Input

Brushless DC Motor and Driver Package

BLH Series

Combining a brushless DC motor with a 24-VDC board-type driver, this unit is ideal for equipment that has limited installation space.



- Output: 15 to 100 W
- Speed Control Range: 100 to 3000 r/min

This product is manufactured at a plant certified with the international standards **ISO 9001** (for quality assurance) and **ISO 14001** (for systems of environmental management).

Specifications are subject to change without notice.
This catalogue was published in October, 2006.

Orientalmotor

ORIENTAL MOTOR (EUROPA) GmbH

www.orientalmotor.de

European Headquarters and Düsseldorf Office

Schiessstraße 74
40549 Düsseldorf, Germany
Tel: 0211-5206700 Fax: 0211-52067099

Munich Office

Liebigstraße 14
85757 Karlsfeld, Germany
Tel: 08131-598800 Fax: 08131-598888

Hamburg Office

Meckelfelder Weg 2
21079 Hamburg, Germany
Tel: 040-76910443 Fax: 040-76910445

Stuttgart Office

Tel: 07335-924853 Fax: 07335-924854

ORIENTAL MOTOR (UK) LTD.

www.oriental-motor.co.uk

Unit 5, Faraday Office Park,
Rankine Road, Basingstoke,
Hampshire RG24 8AH U.K.
Tel: 01256-347090 Fax: 01256-347099

ORIENTAL MOTOR (FRANCE) SARL

www.orientalmotor.fr

France Headquarters
32, Avenue de l'île Saint Martin
92737 Nanterre Cedex, France
Tel: 01 47 86 97 50 Fax: 01 47 82 45 16

Lyon Office

10, Allée des Sorbiers
69673 Bron Cedex, France
Tel: 04 78 41 15 02 Fax: 04 78 41 15 90

ORIENTAL MOTOR ITALIA s.r.l.

www.orientalmotor.it

Italy Headquarters

Via A. De Gasperi, 85
20017 Mazzo di Rho (MI), Italy
Tel: 02-93906346 Fax: 02-93906348

Bologna Office

Via mori, 6
40054 Prunaro di Budrio (BO), Italy
Tel: 051-6931249 Fax: 051-6929266

ORIENTAL MOTOR CO., LTD.

www.orientalmotor.co.jp

Headquarters

16-17, Ueno 6-chome
Taito-ku, Tokyo 110-8536, Japan
Tel: (03)3835-0684 Fax: (03)3835-1890

For more information please contact:



This printed material uses recycled paper and soy inks. This combination is environmentally friendly.

Printed in Japan 06X 3K 22333G