

# Telit EVK2 User Guide

1w0300704 Rev.17 - 2013/05/30



**APPLICABILITY LIST:**



Model	Part Number	Engine
EVK2	3990150474	Mother Board
EVK2-M2MAIR	3990150502	Mother Board + m2mAIR SIM
GM862 INTERFACE	3990250670	GM862
GE863-PY INTERFACE	3990250684	GE863-PY
GE863-GPS INTERFACE	3990250696	GE863-GPS
GE863-SIM INTERFACE	3990250703	GE863-SIM
GE864-PY INTERFACE	3990250672	GE864-PY
GE864-QUAD V2 INTERFACE	3990250777	GE864-QUAD V2
GE864-DUAL V2 INTERFACE	3990250778	GE864-DUAL V2
GE864-QUAD AUTOMOTIVE V2 INTERFACE	3990250773	GE864-QUAD AUTOMOTIVE V2
GE864-QUAD ATEX V2 INTERFACE	3990250772	GE864-QUAD ATEX V2
GE864-QUAD SIM V2 INTERFACE	3990250771	GE864-QUAD SIM V2
GE864-GPS INTERFACE	3990250820	GE864-GPS
	3990250821	
	3990250822	
GC864 INTERFACE	3990250680	GC864
GC864-QUAD-C2 INTERFACE	3990250683	GC864-QUAD-C2
GE865-QUAD INTERFACE	3990250766	GE865-QUAD
GE865/SE867-AGPS INTERFACE	3990250814	GE865-QUAD
GE865/JF2 INTERFACE	3990250868	GE865-QUAD
GL865/JN3 INTERFACE	3990250954	GL865-QUAD
GL865-QUAD INTERFACE	3990250812	GL865-QUAD
GL865-DUAL INTERFACE	3990250783	GL865-DUAL
GL868-DUAL INTERFACE	3990250790	GL868-DUAL
UC864 INTERFACE	4990150470	UC864



HE863-EUR INTERFACE	3990250797	HE863
HE863-EUG INTERFACE	3990250798	HE863
HE863-NAD INTERFACE	3990250799	HE863
HE863-NAR INTERFACE	3990250800	HE863
HE863-NAG INTERFACE	3990250801	HE863
HE863-AUR INTERFACE	3990250803	HE863
HE863-AUG INTERFACE	3990250804	HE863
HE910 INTERFACE	3990250845	HE910
UE910-EUR INTERFACE	3990250918	UE910-EUR
UE910-NAR INTERFACE	3990250919	UE910-NAR
GE910 INTERFACE	3990250882	GE910
GE910-GNSS INTERFACE	3990250941	GE910-GNSS
GE910-QUAD V3 INTERFACE	3990251006	GE910-QUAD V3
DE910 INTERFACE	3990250886	DE910
CE910 INTERFACE	3990250887	CE910
GL865-DUAL V3 1.8V INTERFACE	3990250948	GL865-DUAL V3
LE920-EU INTERFACE	3990251000	LE920-EU
LE920-NA INTERFACE	3990250999	LE920-NA







## Contents

<b>1. Introduction.....</b>	<b>15</b>
1.1. Scope.....	15
1.2. Audience.....	15
1.3. Contact Information, Support.....	15
1.4. Text Conventions.....	16
1.5. Related Documents.....	16
1.6. Content of the kit.....	17
<b>2. Description.....</b>	<b>18</b>
2.1. PCB characteristics .....	19
2.2. Mechanical characteristics of the assembled PCBs.....	20
2.2.1. Mother Board CS1139B .....	20
2.2.2. GM862 Interface CS1150B .....	20
2.2.3. GE863 Interface CS1151A .....	20
2.2.4. GE864 Interface CS1152B .....	20
2.2.5. GE864-GPS Interface CS1439B.....	20
2.2.6. GC864 Interface CS1203B .....	21
2.2.7. GC864-C2 Interface CS1231X.....	21
2.2.8. GE865 Interface CS1324A .....	21
2.2.9. GE865/SE867-AGPS Interface CS1433 .....	21
2.2.10. GE865/JF2 Interface CS1521 .....	21
2.2.11. GL865 Interface CS1431A .....	21
2.2.12. UC864-CC864 Interface KS0101C .....	21
2.2.13. HE910 Interface CS1467C .....	22
2.2.14. UE910 Interface CS1467D .....	22
2.2.15. GE910 Interface CS1467D .....	22
2.2.16. GE910-GNSS Interface CS1467F .....	22
2.2.17. GE910-QUAD V3 Interface CS1467F .....	22
2.2.18. DE910 Interface CS1467D .....	22
2.2.19. CE910 Interface CS1467D .....	22
2.2.20. GL865 V3 Interface CS1531B.....	23
2.2.21. LE920 Interface KS0145B.....	23
<b>3. Startup procedure.....</b>	<b>24</b>
<b>4. Insertion of the Interface Boards.....</b>	<b>25</b>
<b>5. Power supply setting .....</b>	<b>26</b>
5.1. Fixed DC source.....	26
5.2. Variable DC source .....	27
5.2.1. Coaxial Plug.....	28
<b>5.3. Li-Ion Battery pack and Charger .....</b>	<b>28</b>
<b>5.4. Application Notes .....</b>	<b>29</b>
5.4.1. Li-Ion Battery Pack.....	29



5.4.2.	About Current Charger .....	29
<b>6.</b>	<b>Serial interface .....</b>	<b>30</b>
<b>6.1.</b>	<b>Serial Port Setup.....</b>	<b>31</b>
<b>7.</b>	<b>Audio Section.....</b>	<b>32</b>
<b>7.1.</b>	<b>Overview .....</b>	<b>32</b>
7.1.1.	History .....	32
<b>7.2.</b>	<b>Actual.....</b>	<b>33</b>
7.2.1.	The choice.....	33
<b>7.3.</b>	<b>Differential and Single Ended .....</b>	<b>33</b>
7.3.1.	Concepts .....	33
7.3.2.	Benefits and disadvantages .....	34
7.3.3.	Settings .....	35
<b>8.</b>	<b>AF Amplifiers Setting .....</b>	<b>36</b>
<b>9.</b>	<b>Audio outputs .....</b>	<b>37</b>
<b>9.1.</b>	<b>Low AF Power Mode .....</b>	<b>37</b>
<b>9.2.</b>	<b>High AF Power Mode.....</b>	<b>38</b>
9.2.1.	Speaker and Stand-alone Microphone .....	39
9.2.2.	Speaker plus Headset .....	40
<b>10.</b>	<b>Audio Accessories .....</b>	<b>41</b>
<b>10.1.</b>	<b>Headset .....</b>	<b>41</b>
<b>10.2.</b>	<b>Stand-alone microphone .....</b>	<b>42</b>
<b>10.3.</b>	<b>Speaker .....</b>	<b>42</b>
<b>11.</b>	<b>Indication and services.....</b>	<b>43</b>
<b>11.1.</b>	<b>Optical Indicators.....</b>	<b>43</b>
11.1.1.	Status Led .....	43
11.1.2.	CHARGE Led.....	44
<b>11.2.</b>	<b>Switches .....</b>	<b>45</b>
11.2.1.	POWER ON Switch.....	45
11.2.2.	RESET Switch .....	45
<b>12.</b>	<b>Connectors pinout .....</b>	<b>46</b>
<b>12.1.</b>	<b>Motherboard to Module .....</b>	<b>46</b>
<b>13.</b>	<b>Module Interface Boards .....</b>	<b>49</b>
<b>13.1.</b>	<b>Generality.....</b>	<b>49</b>
<b>13.2.</b>	<b>Short Description.....</b>	<b>49</b>
<b>13.3.</b>	<b>Further Accessories for GPS version.....</b>	<b>49</b>
<b>14.</b>	<b>GM862 Interface .....</b>	<b>50</b>



- 14.1. Stand-alone setup .....50**
- 14.2. Interface connectors .....51**
- 14.3. Content of the kit.....51**
- 15. GE863 Interface.....52**
- 15.1. Stand-alone setup .....52**
- 15.2. Content of the kits .....53**
  - 15.2.1. GE863-PY/QUAD version .....53
  - 15.2.2. GE863-GPS version.....53
  - 15.2.3. GE863-SIM version.....53
- 15.3. Interface connectors .....53**
- 15.4. Additional components for GPS version .....53**
- 15.5. USB connector .....54**
- 15.6. Serial port configuration.....55**
  - 15.6.1. GE863-PY/QUAD .....55
  - 15.6.2. GE863 – GPS.....56
- 15.7. ANTENNA connectors.....57**
  - 15.7.1. GPS ANTENNA connector .....57
  - 15.7.2. GSM ANTENNA connector.....57
  - 15.7.3. RFU ANTENNA connector.....57
- 16. GE864 Interface.....58**
- 16.1. Stand-alone setup .....58**
- 16.2. Interface connectors .....59**
- 16.3. Content of the kit.....59**
- 17. GE864-GPS Interface .....60**
- 17.1. Part numbering.....60**
- 17.2. Stand-alone setup .....61**
- 17.3. Interface connectors .....61**
- 17.4. Contents of the kit .....61**
- 17.5. Power supply.....62**
- 17.6. GPS external LNA enable signal.....62**
- 17.7. Serial port configuration.....63**
  - 17.7.1. ASC1 to RS-232 .....64
  - 17.7.2. GPS to ASC1 (internal host controlling configuration) .....64
  - 17.7.3. GPS to RS-232 (external host controlling configuration) .....65
  - 17.7.4. GPS to USB .....65
- 17.8. GPIO settings.....66**
  - 17.8.1. Internal host controlling configuration .....66



17.8.2.	External host controlling configuration .....	67
<b>17.9.</b>	<b>Antenna connectors .....</b>	<b>69</b>
17.9.1.	GSM antenna connector .....	69
17.9.2.	GPS antenna connector .....	69
<b>18.</b>	<b>GE865 – SE867 AGPS Interface .....</b>	<b>70</b>
<b>18.1.</b>	<b>Stand-alone setup .....</b>	<b>70</b>
<b>18.2.</b>	<b>Interface connectors .....</b>	<b>71</b>
<b>18.3.</b>	<b>Contents of the kit .....</b>	<b>71</b>
18.3.1.	GSM to GPS (GSM controlling configuration) .....	72
18.3.2.	GSM to Trace .....	73
18.3.3.	GPS to Trace(external host controlling configuration) .....	74
<b>18.4.</b>	<b>Antenna connectors .....</b>	<b>74</b>
18.4.1.	GSM antenna connector .....	74
18.4.2.	GPS antenna connector .....	74
<b>19.</b>	<b>GE865 – JF2 Interface .....</b>	<b>75</b>
<b>19.1.</b>	<b>Stand-alone setup .....</b>	<b>75</b>
<b>19.2.</b>	<b>Interface connectors .....</b>	<b>76</b>
<b>19.3.</b>	<b>Contents of the kit .....</b>	<b>76</b>
<b>19.4.</b>	<b>Power supply .....</b>	<b>76</b>
<b>19.5.</b>	<b>GPS external LNA enable signal .....</b>	<b>77</b>
<b>19.6.</b>	<b>Serial port configuration .....</b>	<b>79</b>
<b>19.7.</b>	<b>GSM to Trace .....</b>	<b>80</b>
<b>19.8.</b>	<b>GPS to Trace .....</b>	<b>80</b>
<b>19.9.</b>	<b>GSM to USB .....</b>	<b>81</b>
<b>19.10.</b>	<b>GPS to USB .....</b>	<b>81</b>
<b>19.11.</b>	<b>GPS to GSM (internal host controlling configuration) .....</b>	<b>82</b>
<b>19.12.</b>	<b>GPIO settings .....</b>	<b>82</b>
19.12.1.	Internal host controlling configuration .....	83
19.12.2.	External host controlling configuration .....	84
<b>19.13.</b>	<b>GPS serial interface setting .....</b>	<b>85</b>
<b>19.14.</b>	<b>MEMS Sensor/EEPROM Interface .....</b>	<b>85</b>
<b>19.15.</b>	<b>GPS power-on management .....</b>	<b>85</b>
<b>19.16.</b>	<b>Antenna connectors .....</b>	<b>86</b>
19.16.1.	GSM antenna connector .....	86
19.16.2.	GPS antenna connector .....	86
<b>20.</b>	<b>GL865 – SL869/JN3 Interface .....</b>	<b>87</b>



<b>20.1.</b>	<b>Stand-alone setup .....</b>	<b>88</b>
<b>20.2.</b>	<b>Interface connectors .....</b>	<b>88</b>
<b>20.3.</b>	<b>Contents of the kit .....</b>	<b>88</b>
<b>20.1.</b>	<b>Power supply .....</b>	<b>89</b>
<b>20.2.</b>	<b>GPS external LNA enable signal.....</b>	<b>90</b>
<b>20.3.</b>	<b>Serial port configuration.....</b>	<b>91</b>
<b>20.4.</b>	<b>GSM to Trace.....</b>	<b>92</b>
<b>20.5.</b>	<b>GPS to Trace.....</b>	<b>92</b>
<b>20.6.</b>	<b>GSM to USB.....</b>	<b>93</b>
<b>20.7.</b>	<b>GPS to USB .....</b>	<b>93</b>
<b>20.8.</b>	<b>GPS to GSM (internal host controlling configuration).....</b>	<b>94</b>
<b>20.9.</b>	<b>GPIO settings.....</b>	<b>95</b>
20.9.1.	Internal host controlling configuration .....	95
20.9.2.	External host controlling configuration .....	96
<b>20.10.</b>	<b>Antenna connectors .....</b>	<b>97</b>
20.10.1.	GSM antenna connector.....	97
20.10.2.	GPS antenna connector .....	97
<b>21.</b>	<b>GC864 Interface .....</b>	<b>98</b>
<b>21.1.</b>	<b>Stand-alone setup .....</b>	<b>98</b>
<b>21.2.</b>	<b>Interface connectors .....</b>	<b>99</b>
<b>21.3.</b>	<b>Content of the kit.....</b>	<b>99</b>
<b>22.</b>	<b>GC864-C2 family Interface .....</b>	<b>100</b>
<b>22.1.</b>	<b>Stand-alone setup .....</b>	<b>100</b>
<b>22.2.</b>	<b>Interface connectors .....</b>	<b>101</b>
<b>22.3.</b>	<b>Content of the kit.....</b>	<b>101</b>
<b>23.</b>	<b>GE865 Interface.....</b>	<b>102</b>
<b>23.1.</b>	<b>Stand-alone setup .....</b>	<b>102</b>
<b>23.2.</b>	<b>Interface connectors .....</b>	<b>103</b>
<b>23.3.</b>	<b>Content of the kit.....</b>	<b>103</b>
<b>24.</b>	<b>GL865 Interface.....</b>	<b>104</b>
<b>24.1.</b>	<b>Stand-alone setup .....</b>	<b>104</b>
<b>24.2.</b>	<b>Interface connectors .....</b>	<b>105</b>
<b>24.3.</b>	<b>Content of the kit.....</b>	<b>105</b>
<b>25.</b>	<b>UC864 family Interface.....</b>	<b>106</b>



- 25.1. Stand-alone setup ..... 106**
- 25.2. Interface connectors ..... 107**
- 25.3. Content of the kit..... 107**
- 26. HE910 family Interface..... 108**
- 26.1. Stand-alone setup ..... 109**
- 26.2. Interface connectors ..... 109**
- 26.3. Antenna connectors ..... 110**
  - 26.3.1. GSM/UMTS Antenna connector ..... 110
  - 26.3.2. Receiver Diversity Antenna connector ..... 110
  - 26.3.3. GPS antenna connector ..... 110
- 26.4. Expansion Connectors ..... 111**
  - 26.4.1. PL301/PL302 ..... 111
  - 26.4.2. PL303/PL304/PL305 ..... 112
  - 26.4.3. PL102..... 113
  - 26.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS ..... 113
- 26.5. Content of the kit..... 113**
- 27. UE910 family Interface..... 114**
- 27.1. Stand-alone setup ..... 115**
- 27.2. Interface connectors ..... 115**
- 27.3. Antenna connectors ..... 116**
  - 27.3.1. GSM/UMTS Antenna connector ..... 116
- 27.4. Expansion Connectors ..... 116**
  - 27.4.1. PL301/PL302 ..... 116
  - 27.4.2. PL303/PL304/PL305 ..... 117
  - 27.4.3. PL102..... 118
  - 27.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS ..... 118
- 27.5. Content of the kit..... 118**
- 28. GE910 Interface..... 119**
- 28.1. Stand-alone setup ..... 120**
- 28.2. Interface connectors ..... 120**
- 28.3. Antenna connectors ..... 121**
  - 28.3.1. GSM/GPRS Antenna connector ..... 121
- 28.4. Expansion Connectors ..... 121**
  - 28.4.1. PL301/PL302 ..... 121
  - 28.4.2. PL303/PL304 ..... 122
  - 28.4.3. PL102..... 122
  - 28.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS ..... 123
- 28.5. Content of the kit..... 123**
- 29. GE910-GNSS Interface..... 124**



<b>29.1. Stand-alone setup .....</b>	<b>125</b>
<b>29.2. Interface connectors .....</b>	<b>125</b>
<b>29.3. Antenna connectors .....</b>	<b>126</b>
29.3.1. GSM/GPRS Antenna connector .....	126
29.3.2. GNSS antenna connector .....	126
<b>29.4. Expansion Connectors .....</b>	<b>127</b>
29.4.1. PL301/PL302 .....	127
29.4.2. PL303/PL304 .....	128
29.4.3. PL102 .....	128
29.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS .....	129
<b>29.5. Content of the kit .....</b>	<b>129</b>
<b>30. GE910-QUAD V3 Interface .....</b>	<b>130</b>
<b>30.1. Stand-alone setup .....</b>	<b>131</b>
<b>30.2. Interface connectors .....</b>	<b>131</b>
<b>30.3. Antenna connectors .....</b>	<b>132</b>
30.3.1. GSM/GPRS Antenna connector .....	132
<b>30.4. Expansion Connectors .....</b>	<b>132</b>
30.4.1. PL301/PL302 .....	132
30.4.2. PL303/PL304 .....	133
30.4.3. PL102 .....	133
30.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS .....	134
<b>30.5. Content of the kit .....</b>	<b>134</b>
<b>31. DE910 family Interface .....</b>	<b>135</b>
<b>31.1. Stand-alone setup .....</b>	<b>136</b>
<b>31.2. Interface connectors .....</b>	<b>136</b>
<b>31.3. Antenna connectors .....</b>	<b>137</b>
31.3.1. CDMA Antenna connector .....	137
31.3.2. Receiver Diversity Antenna connector .....	137
31.3.3. GPS antenna connector .....	137
<b>31.4. Expansion Connectors .....</b>	<b>138</b>
31.4.1. PL301/PL302 .....	138
31.4.2. PL303/PL304/PL305 .....	139
31.4.3. PL102 .....	140
31.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS .....	140
<b>31.5. Content of the kit .....</b>	<b>140</b>
<b>32. CE910 family Interface .....</b>	<b>141</b>
<b>32.1. Stand-alone setup .....</b>	<b>142</b>
<b>32.2. Interface connectors .....</b>	<b>142</b>
<b>32.3. Antenna connectors .....</b>	<b>143</b>



32.3.1.	CDMA Antenna connector .....	143
<b>32.4.</b>	<b>Expansion Connectors .....</b>	<b>143</b>
32.4.1.	PL301/PL302 .....	143
32.4.2.	PL303/PL304 .....	144
32.4.3.	PL102 .....	144
32.4.4.	ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS .....	145
<b>32.5.</b>	<b>Content of the kit .....</b>	<b>145</b>
<b>33.</b>	<b>GL865 V3 Interface .....</b>	<b>146</b>
<b>33.1.</b>	<b>Stand-alone setup .....</b>	<b>146</b>
<b>33.2.</b>	<b>Interface connectors .....</b>	<b>147</b>
<b>33.3.</b>	<b>Antenna connectors .....</b>	<b>148</b>
33.3.1.	GSM Antenna connector .....	148
<b>33.4.</b>	<b>Expansion Connectors .....</b>	<b>148</b>
33.4.1.	PL101 .....	148
33.4.2.	PL106 .....	148
33.4.3.	PL107 .....	149
<b>33.5.</b>	<b>Content of the kit .....</b>	<b>149</b>
<b>34.</b>	<b>LE920 Interface .....</b>	<b>150</b>
<b>34.1.</b>	<b>Stand-alone setup .....</b>	<b>151</b>
<b>34.2.</b>	<b>Interface connectors .....</b>	<b>151</b>
<b>34.3.</b>	<b>Antenna connectors .....</b>	<b>152</b>
34.3.1.	Main Antenna connector .....	152
34.3.2.	Diversity Antenna connector .....	152
34.3.3.	Main Antenna connector .....	152
<b>34.4.</b>	<b>Expansion Connectors .....</b>	<b>152</b>
34.4.1.	PL102/PL104 .....	152
34.4.2.	ON_OFF & UNCONDITIONAL SHUTDOWN, RESET BUTTONS .....	154
<b>34.5.</b>	<b>Content of the kit .....</b>	<b>154</b>
<b>35.</b>	<b>GPIO ports .....</b>	<b>155</b>
<b>35.1.</b>	<b>GPIO location .....</b>	<b>156</b>
35.1.1.	GM862 Interface .....	156
35.1.2.	GE863-GPS Interface .....	158
35.1.3.	GE863 Interfaces (p/n 3990250684 -3990250685-3990250703) .....	160
35.1.4.	GE864 Interface (p/n 3990250672) .....	161
35.1.5.	GE864-GPS Interface (p/n 3990250822) .....	162
35.1.6.	GE865/SE867-AGPS Interface (p/n 3990250814) .....	163
35.1.7.	GC864 Interface .....	164
35.1.8.	GC864-C2 Interface (p/n 3990250683) .....	165
35.1.9.	UC864 Interface .....	166
35.1.10.	HE910 Interface .....	167
35.1.11.	GE910 Interface .....	169
35.1.12.	DE910 Interface .....	171



35.1.13.	CE910 Interface .....	173
35.1.14.	GL865 V3 Interface .....	175
<b>36.</b>	<b>SCHEMATICS .....</b>	<b>177</b>
36.1.	EVK2 Mother Board .....	178
36.2.	GM862 Interface Board .....	183
36.3.	GE863 Interface Board .....	184
36.4.	GE864 Interface board .....	186
36.5.	GE864 Interface board – Automotive.....	187
36.6.	GE864 Interface board – V2.....	188
36.7.	GE864-GPS Interface board .....	189
36.8.	GE865/SE867-AGPS Interface board.....	191
36.9.	GE865 Interface board .....	193
36.10.	GL865 Interface board .....	194
36.11.	GC864 Interface board .....	195
36.12.	GC864-C2 Interface board .....	196
36.13.	UC864 Interface board .....	197
36.14.	HE910/UE910 Interface board.....	199
36.15.	GE910 Interface board .....	203
36.16.	GE910-GNSS Interface board.....	207
36.17.	GE910-QUAD V3 Interface board.....	211
36.18.	GE865 – JF2 Interface board .....	215
36.1.	GL865 – SL869/JN3 Interface board.....	218
36.2.	DE910 Interface board.....	221
36.3.	CE910 Interface board.....	225
36.4.	GL865 V3 Interface board.....	229
36.5.	LE920 Interface board.....	230
<b>37.</b>	<b>Service and firmware update .....</b>	<b>235</b>
<b>38.</b>	<b>SAFETY RECOMMENDATIONS .....</b>	<b>236</b>
38.1.	Disposal of this product in the European Union.....	237
<b>39.</b>	<b>RoHS Certifications .....</b>	<b>239</b>
<b>40.</b>	<b>Disposal of old Electrical &amp; Electronic Equipment (WEEE Mark).....</b>	<b>240</b>
<b>41.</b>	<b>Document History .....</b>	<b>241</b>



## 1. Introduction

### 1.1. Scope

The Aim of this document is the handling description of the *developer's Evaluation KIT* second edition, a laboratory tool named **EVK2**.

### 1.2. Audience

All given information shall be used as a guide and a starting point for properly developing of your product. Obviously this document cannot cover all the hardware solutions and products that may be designed.

### 1.3. Contact Information, Support

For general contact, technical support, to report documentation errors and to order manuals, contact Telit's Technical Support Center (TTSC) at:

[TS-EMEA@telit.com](mailto:TS-EMEA@telit.com)  
[TS-NORTHAMERICA@telit.com](mailto:TS-NORTHAMERICA@telit.com)  
[TS-LATINAMERICA@telit.com](mailto:TS-LATINAMERICA@telit.com)  
[TS-APAC@telit.com](mailto:TS-APAC@telit.com)

Alternatively, use:

<http://www.telit.com/en/products/technical-support-center/contact.php>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit's Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.





## 1.6. Content of the kit

Please check out the content of your *EVK2* kit; if any of the items is missing, please contact your supplier.

Description	Quantity
EVK2 MOTHERBOARD	1
INFORMATION NOTE	1
2 PIN JUMPER FEMALE CONN	18
ASSEMBLED USB A-B CABLE	1
RED & BLACK CABLE WITH PLUGS	1
GSM-UMTS MAGNETIC ANTENNA CABLE RG174 WITH SMA/M	1

Table 1



Figure 1: GE863-PY Interface Board (upper) fitted on EVK2 Motherboard (lower).



## 2. Description

The motherboard *CS1139B* can be split into several functional blocks depending on the implemented function; the following drawings show a block diagram and the displacement of the main blocks on motherboard.

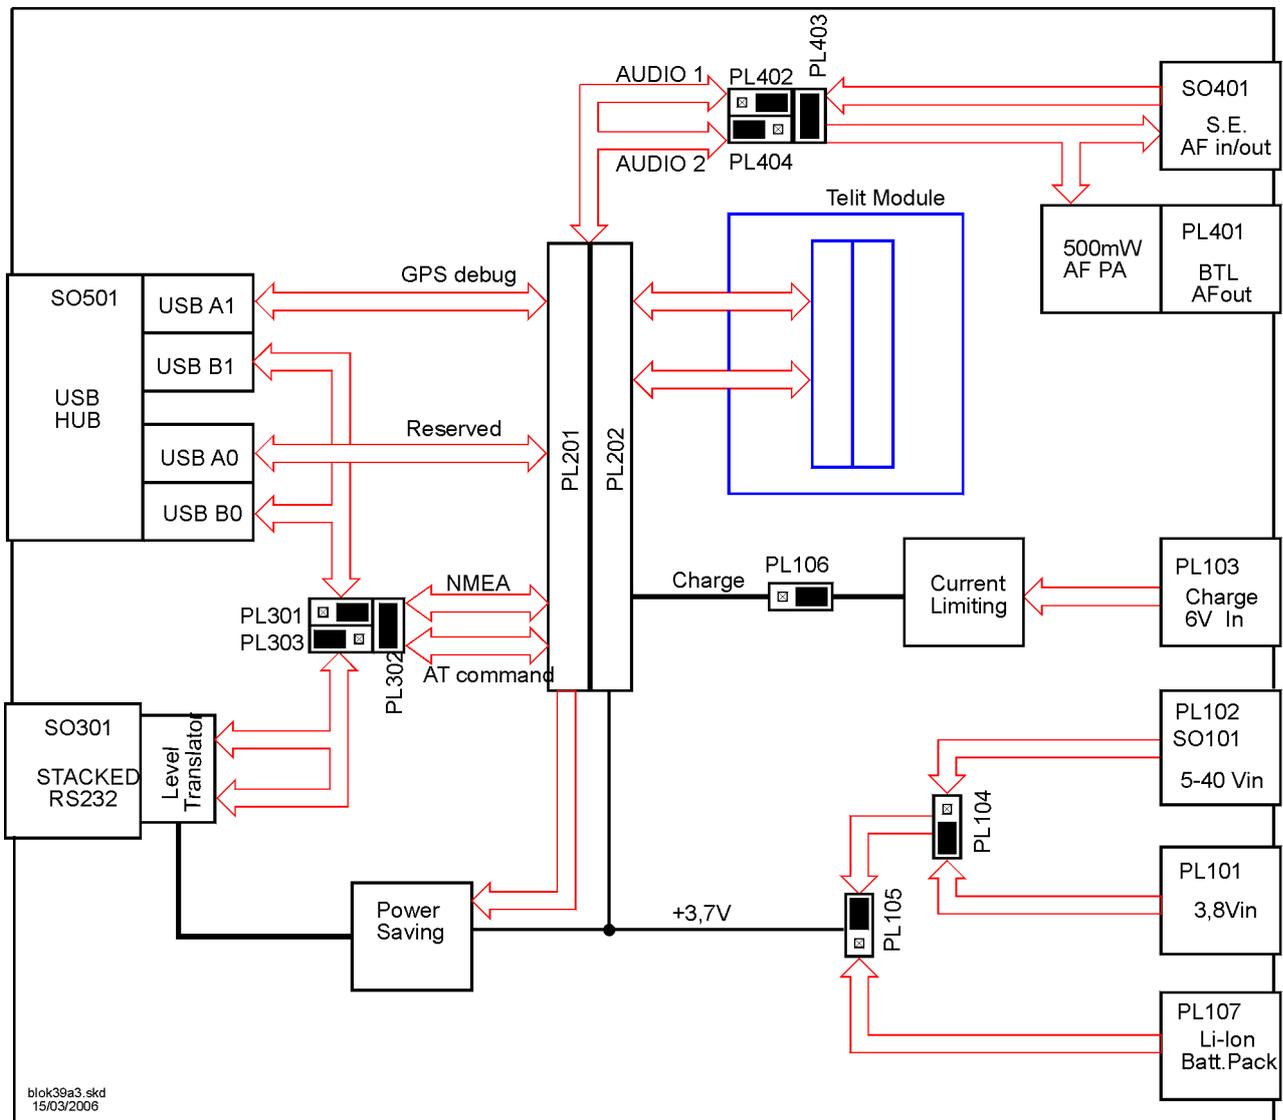


Figure 2: Miscellaneous signals, connections and routing on *CS1139B*.



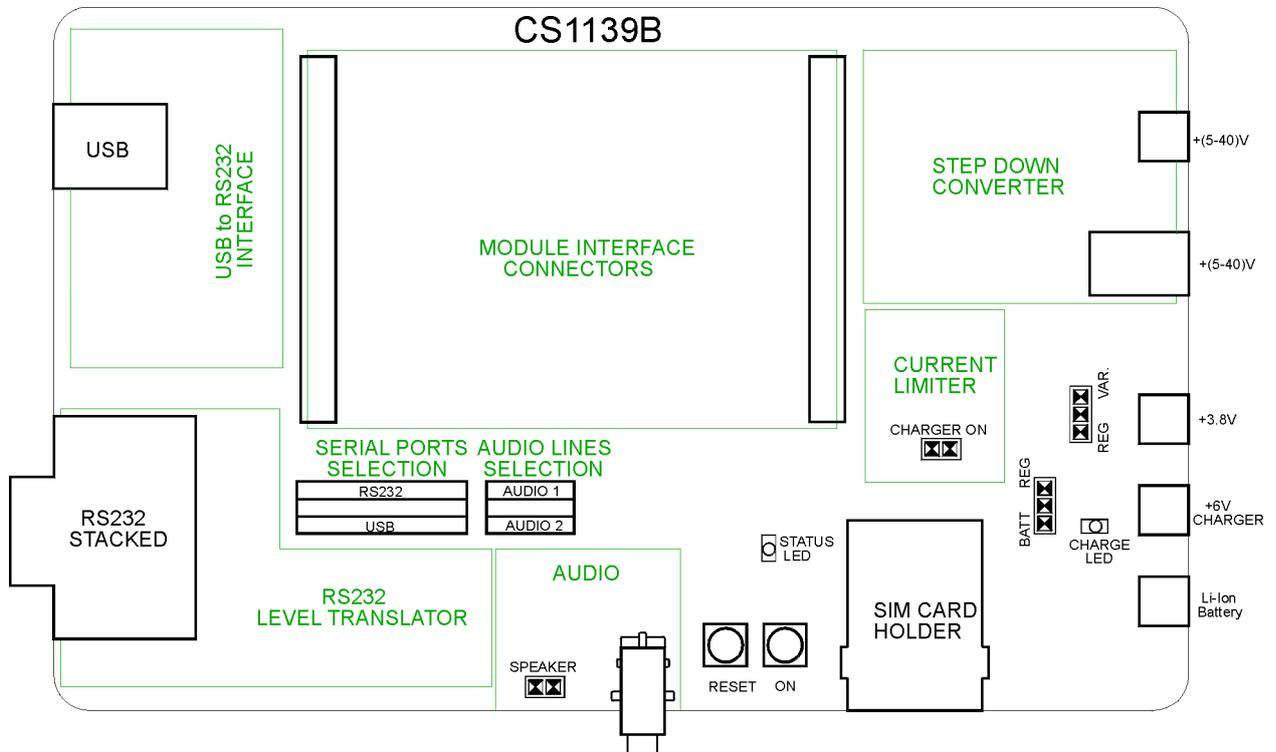


Figure 3: CS1139B circuit displacement

## 2.1. PCB characteristics

Material: FR4  
 Thickness: 0,95 mm  
 Surface finishing: Chemical gold plate Ni 5um/ Au 0,1um



## 2.2. Mechanical characteristics of the assembled PCBs

### 2.2.1. Mother Board CS1139B

Length	100 mm (max 102,6 mm)
Width	160 mm (max 166,10mm)
Height	47,6 mm (included the support with columns)
Weight	200 gr (without any interface)

### 2.2.2. GM862 Interface CS1150B

Length	66,04 mm
Width	78,74 mm
Height	21,00 mm
Weight	27 gr (without the module)

### 2.2.3. GE863 Interface CS1151A

Length	75 mm (max 84,70mm)
Width	78,74 mm
Height	21,00 mm
Weight	40 gr (with module)
Weight	44,3 gr (with module for GPS version)

### 2.2.4. GE864 Interface CS1152B

Length	66,04 mm (max 75,20mm)
Width	78,74 mm
Height	21,00 mm
Weight	36 gr (with module)

### 2.2.5. GE864-GPS Interface CS1439B

Length	78.70 mm (max mm)
Width	83.70 mm
Height	21 mm



**2.2.6. GC864 Interface CS1203B**

Length	66,04 mm
Width	78,74 mm
Height	21,00 mm
Weight	27 gr (without the module)

**2.2.7. GC864-C2 Interface CS1231X**

Length	50,00 mm
Width	33,00 mm
Height	5,60 mm
Weight	13,8 gr (with module)

**2.2.8. GE865 Interface CS1324A**

Length	66,04 mm (max 75,20mm)
Width	78,74 mm
Height	21,00 mm
Weight	34 gr (with module)

**2.2.9. GE865/SE867-AGPS Interface CS1433**

Length	101.00 mm
Width	78.74 mm
Height	mm

**2.2.10. GE865/JF2 Interface CS1521**

Length	101,00 mm
Width	78,74 mm
Height	mm

**2.2.11. GL865 Interface CS1431A**

Length	66,04 mm (max 75,20mm)
Width	78,74 mm
Height	21,00 mm
Weight	34 gr (with module)

**2.2.12. UC864-CC864 Interface KS0101C**

Length	102,00 mm
--------	-----------



Width 67,50 mm  
Height 20,80 mm  
Weight 55 gr (without module)

### 2.2.13. HE910 Interface CS1467C

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm

### 2.2.14. UE910 Interface CS1467D

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm

### 2.2.15. GE910 Interface CS1467D

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm

### 2.2.16. GE910-GNSS Interface CS1467F

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm

### 2.2.17. GE910-QUAD V3 Interface CS1467F

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm

### 2.2.18. DE910 Interface CS1467D

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm

### 2.2.19. CE910 Interface CS1467D

Length 107,00 mm  
Width 102,00 mm  
Height 25,00 mm



### 2.2.20. GL865 V3 Interface CS1531B

Length	92,00 mm
Width	89,00 mm
Height	25,00 mm

### 2.2.21. LE920 Interface KS0145B

Length	92,00 mm
Width	107,00 mm
Height	25,00 mm



---

**NOTE:**

The overall height for every combination (mother board + interface board) is still the height of the mother board

---



### 3. Startup procedure

The motherboard factory setup is:

Serial port	<b>RS232</b>
DC source	<b>+ (5÷40) V / ≥ 1A</b>
Batt.Charger connector (PL106)	<b>On</b>
RX Amplifier	<b>Audio 1</b>

Respect the following order to use the EVK2:

- insert your SIM card
- set properly all jumpers in the desired position
- plug the module Interface board into PL201 and PL202
- connect the antenna to RF connector (on module or on Interface Board)
- connect the audio accessories if required
- plug the external power supply into the right socket, depending from DC source
- switch ON the power supply
- connect the serial cable between your PC and UART (RS232 or USB 1.1)
- push ON/OFF button on EVK Board for at least 5 seconds, on the XX910 form factor products, push ON/OFF button on Interface Board for at least 5 seconds until the STATUS LED is on

Your EVK2 should now be operational and ready to receive AT Commands.




---

**NOTE:**

When you use USB port, it is very important to respect the following sequences:

Start: first turning ON the EVK2 and then connecting it to the PC

Stop: first disconnecting the PC and then turning OFF the EVK2

---



## 4. Insertion of the Interface Boards

Every *Interface Board* must be inserted on *CS1139B* paying great attention to match the position of the main connectors; this has been made easy:

optically by a triangle drawn on both printed circuits (except CS1231X) ;  
mechanically shifting a column out of regular square cross position.

Both guide systems are highlighted by orange color as shown on the next figure.

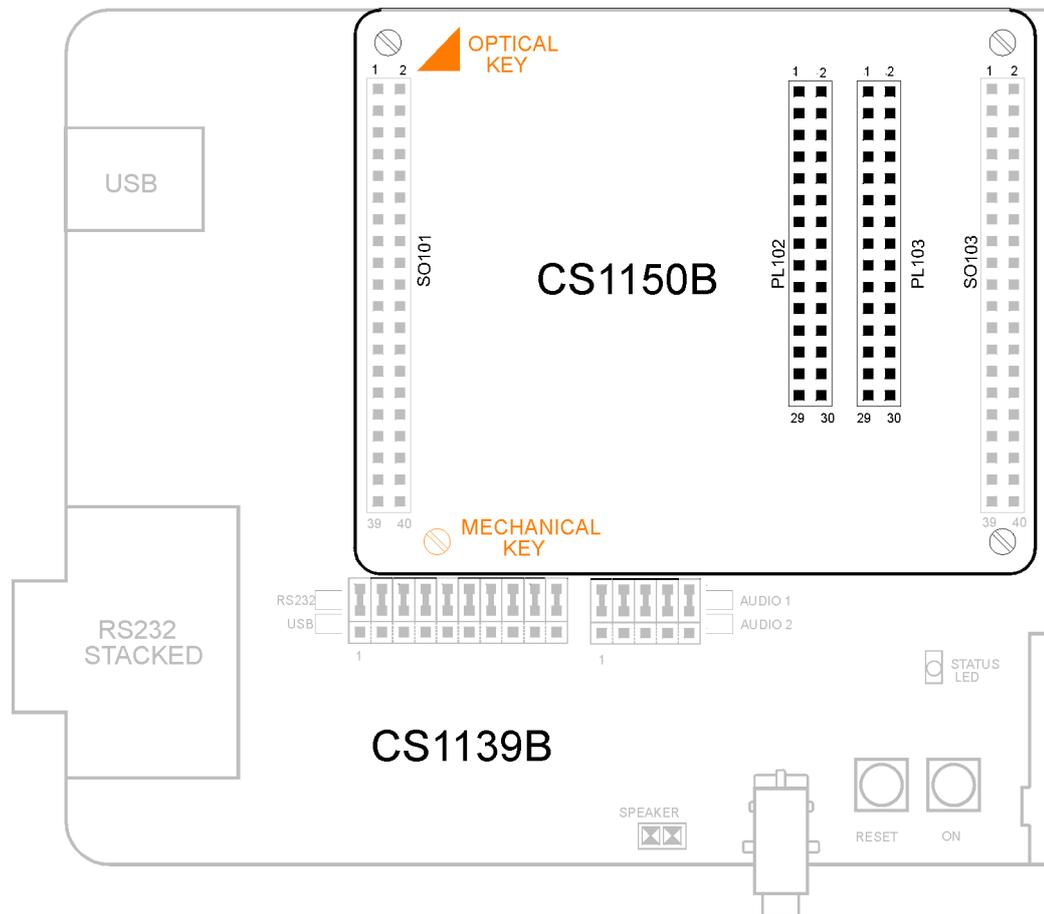


Figure 4: Positioning Guide Systems of *GM862 Interface Board* on CS1139B.







### 5.2.1. Coaxial Plug

The figure 7 shows the connections of the Power Plug of left part of figure 6.

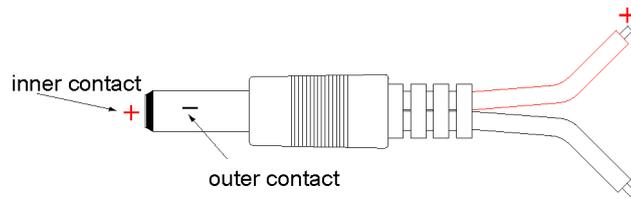


Figure 7: Coaxial “Power Plug” connection.

### 5.3. Li-Ion Battery pack and Charger

Connect a *Li-Ion battery pack* to PL107 with care to the polarity then short pin 2 & pin 3- PL105 by inserting the 2 contacts jumper connector.

If the battery pack needs to be recharged, connect a **+6V /  $\geq 0,5A$**  fixed DC source to PL103, with care to the polarity; short PL106 inserting a 2 contacts jumper connector as shown in figure 8: the yellow CHARGE LED will be on during the initial phase of charge. If you remove the battery pack when the charge stops (no current flows), immediately **REMOVE** also the jumper of PL106.

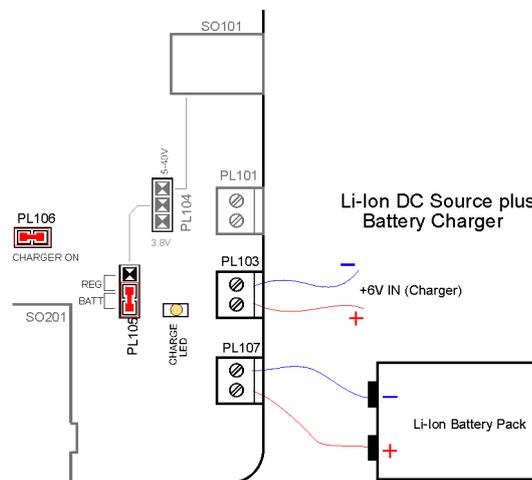


Figure 8: Battery Pack and Battery Charger wired connections and setting.



**WARNING:**

**NEVER CONNECT** any Battery Charging source to PL102 without connected Battery!!





## 6. Serial interface

The following figure shows the architecture of the serial ports.

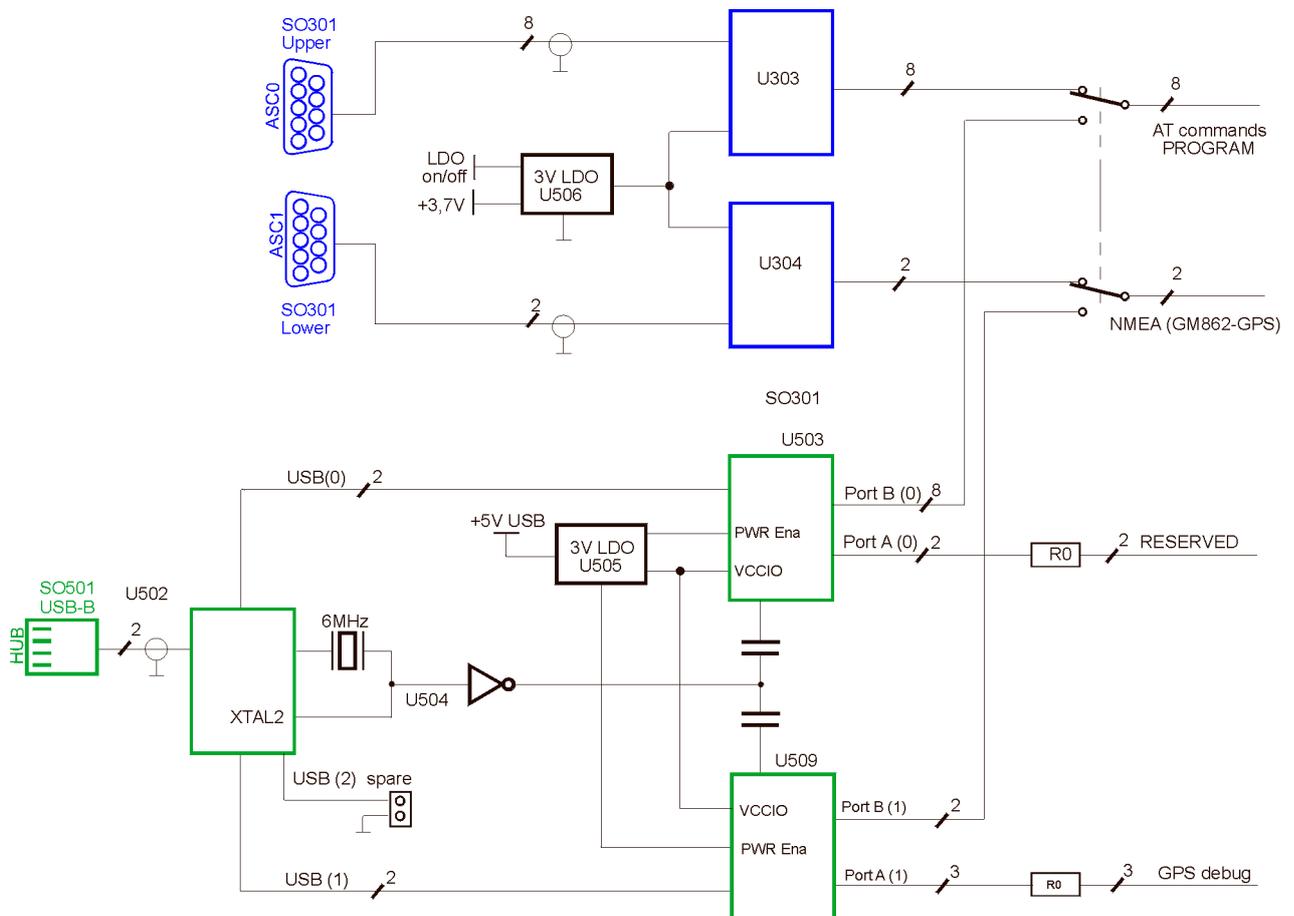


Figure 9: Serial ports block diagram.



## 6.1. Serial Port Setup

Communications between your application and the Telit modules are allowed connecting the DTE to the *Asynchronous Serial Interfaces* of Base-Band Chip, ASC0 and ASC1, through the *stacked standard RS232 communications port (double 9 way D-socket connector at slow data rates of RS232 protocol)* or a *standard USB-B Series receptacle (at higher data rates of USB 1.1 specification through a CMOS HUB that realizes a multiple attachment point device)*.

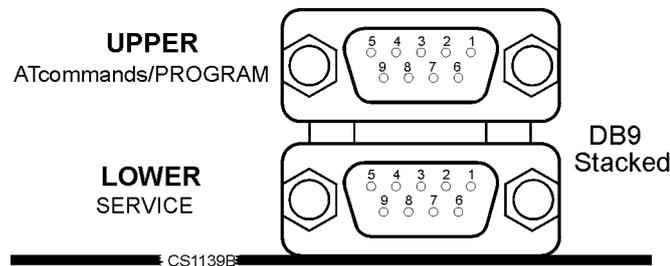


Figure 10: Double 9 way D-Socket Connector

The selection is made short circuiting *PL302&PL303 (RS232 mode)* or *PL302&PL301 (USB 1.1 mode)* by 10 pieces of 2 contacts jumpers. This solution has been implemented because you can isolate every single line during the development.

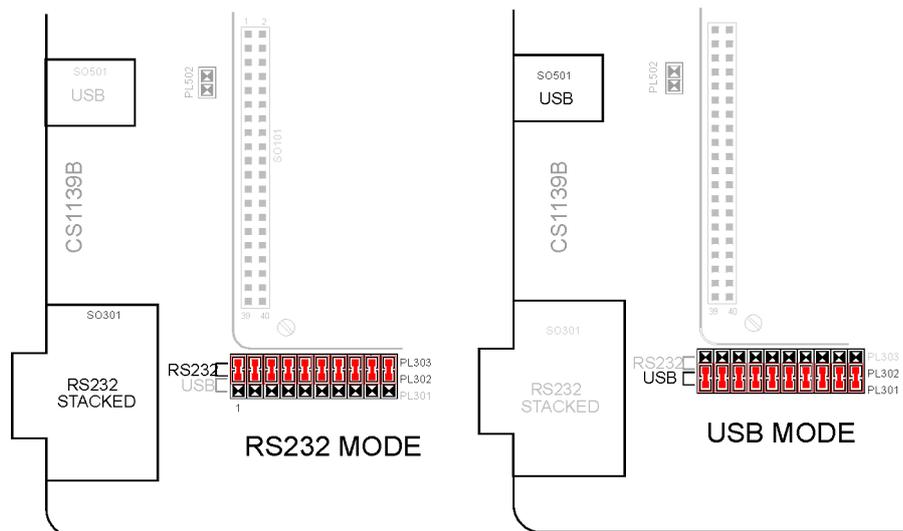


Figure 11: Serial Ports selection









### 7.3.3. Settings

Connecting your accessories to *SO401 in/out connector*, you will implement Single Ended Input/Output configurations.

Removing all 2 *contacts jumpers* inserted between *PL402&PL403* or *PL403&PL404*, the *in/out lines* of our modules will be directly available on *PL402* and *PL404* connectors.

In such a way, you will be able to implement fully Differential Input/Output configurations. Only with GC864-QUAD/PY-C2 modules the *Ear output* lines are AC coupled.

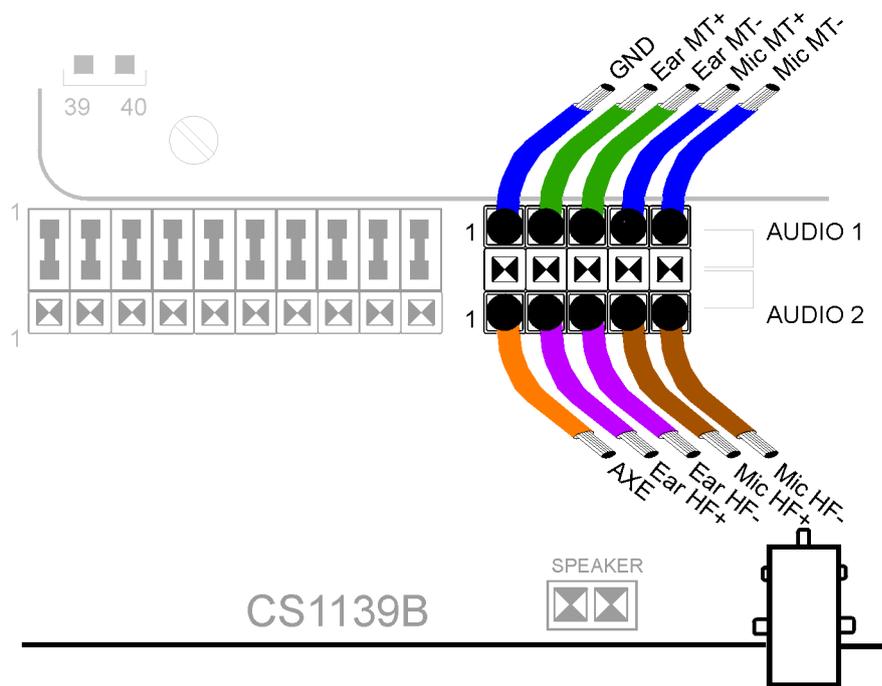


Figure 12: PL402 and PL404 Fully Differential audio lines.



## 8. AF Amplifiers Setting

The *Base Band Processor Audio Amplifiers* selection is made short-circuiting *PL403&PL402* (*RX Amplifier 1*) or *PL403&PL404* (*RX Amplifier 2*). In such a way you could verify the complete performance of both audio paths.

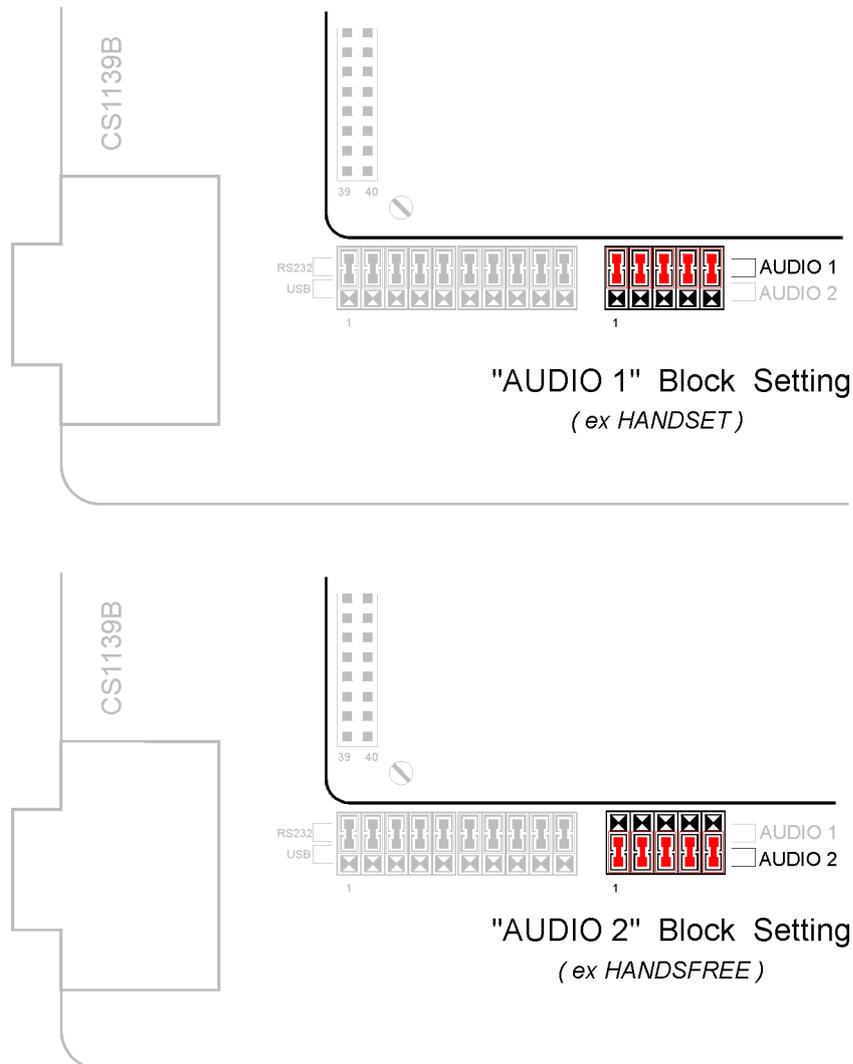


Figure 13: Base Band Audio Amplifiers selection





## 9.2. High AF Power Mode

Connecting an **8 ohm** Speaker to PL401 by a 2 contacts female connector, you could drive it through the 500mW Power Amplifier.

In this case the Speaker will be driven in fully differential configuration, with no side connected to ground and without any output coupling capacitor. Therefore care must be taken because there is DC voltage on both sides of the Speaker.

The overall gain of this amplifier can be modified varying the ratios R406/R404 and R407/R410:

$$A_v = 2 \cdot \frac{R404}{R406} = 2 \cdot \frac{R407}{R410} \quad \text{if } R404=R407 \text{ and } R406=R410$$



### NOTE:

The coil impedance of the Speaker should be higher than 8 ohm @ 1KHz .

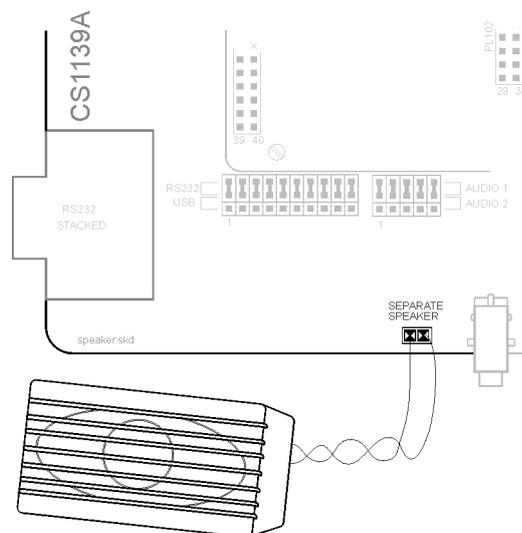


Figure 16: Speaker insertion



### 9.2.1. Speaker and Stand-alone Microphone

If you are using a Speaker, you can connect a *stand-alone electrete microphone* by a coaxial 2,5mm plug to SO401, respecting the following pin-out.

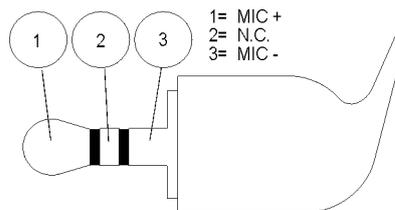


Figure 17: Microphone Plug Connection

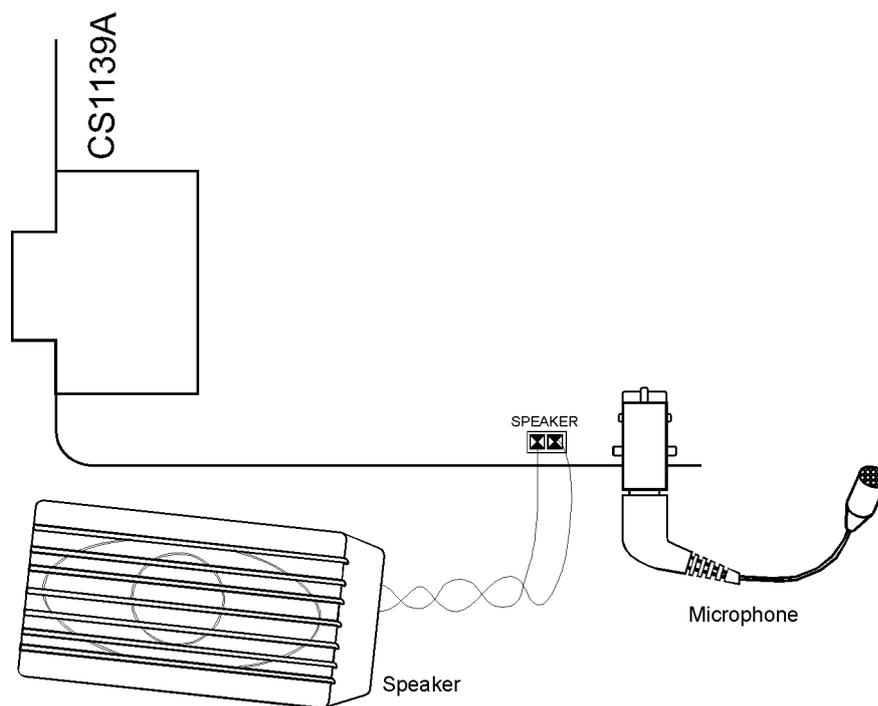


Figure 18: Speaker & Microphone case insertion







## 10.2. Stand-alone microphone

Nominal sensitivity	-45dBV <sub>rms</sub> /1Pa (+/- 3dB)
Line coupling	AC
Nominal Voltage	2V
Range of Using Voltage	(1÷10)V
Consumption Current	(150÷500 ) μA
Impedance	2,2KΩ
Signal to Noise Ratio	56dB /1KHz/1Pa /A curve
EMI capacitor between terminals	10pF, 33pF

Table 4: Microphone electrical characteristics

## 10.3. Speaker

Rated Input Power	500 mW
Maximum Input Power	1W
Coil Impedance	≥ 8Ω
SPL	≥ 85±3 dB @ 1KHz
Resonance frequency (Fo)	< 350Hz
Useful Bandwidth	Fo ÷ 8000 Hz @ -3dB

Table 5: Speaker electrical characteristics



## 11. Indication and services

### 11.1. Optical Indicators

#### 11.1.1. Status Led

It is a debug aid that shows information on the network service availability and Call status.

LED status	Device Status
Permanently off	Device off
Fast blinking (period 1s, Ton 0,5s)	Net search / Not registered / turning off
Slow blinking (period 3s, Ton 0,3s)	Registered: full service
Permanently on	A call is active

Table 6: STAT\_LED indications

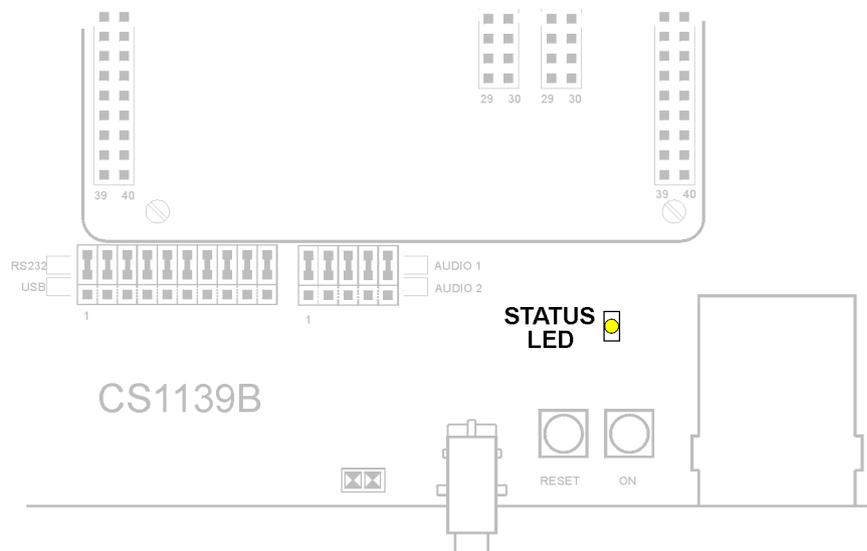


Figure 20: STAT\_LED position







## 12. Connectors pinout

### 12.1. Motherboard to Module

The connections between CS1139B and every Telit module Interface Board are made through two *40 pin male* connectors. Theirs pin functions are listed in the following tables.

Pin	Signal	Type	Function
1	NC <sup>1</sup>		
2	TX_Trace	Digital Output	to RS232 or USB level translators
3	RX_Trace	Digital Input	from RS232 or USB level translators
4	IIC_SDA_HW	Digital In/Out	from/to USB level translators
5	GND	DC voltage	Power
6	IIC_SCL_HW	Digital Input	from USB level translators
7	SSC0_CLK	Digital Output	to USB level translators
8	SSC0_MTSR	Digital In/Out	from/to USB level translators
9	SSC0_MRST	Digital In/Out	from/to USB level translators
10	NC		
11	GND	DC voltage	Power
12	GND	DC voltage	Power
13	GND	DC voltage	Power
14	GND	DC voltage	Power
15	C109/DCD	Digital Output	to RS232 or USB level translator
16	C104/RXD	Digital Output	to RS232 or USB level translator
17	C103/TXD	Digital Input	from RS232 or USB level translator
18	C108/DTR	Digital Input	from RS232 or USB level translator
19	GND	DC voltage	Power
20	C107/DSR	Digital Output	to RS232 or USB level translator
21	C105/RTS	Digital Input	from RS232 or USB level translator
22	C106/CTS	Digital Output	to RS232 or USB level translator
23	C125/RING	Digital Output	to RS232 or USB level translator
24	NC		
25	GND	DC voltage	Power
26	GND	DC voltage	Power
27	GND	DC voltage	Power
28	GND	DC voltage	Power
29	EAR_HF+	AC Out Voltage	Audio
30	EAR_MT-	AC Out Voltage	Audio
31	EAR_HF-	AC Out Voltage	Audio

<sup>1</sup> DO NOT CONNECT





34	SIMVCC	DC voltage	SIM Power
35	SIMIN	DC voltage	SIM inside detector
36	NC		
37	NC		
38	GND	DC voltage	Power
39	GND	DC voltage	Power
40	GND	DC voltage	Power

Table 9: PL202-CS1139B



## 13. Module Interface Boards

### 13.1. Generality

You can use your **EVK2** with see **APPLICABILITY LIST** Telit modules fitted on its own *Interface Board*; all connections are made through *2x40 contacts* connectors.

It's possible to use these *Interface Boards* also in stand-alone mode, inserting the “*not mounted*” components (*related to RESET BUTTON, ON BUTTON, SIM HOLDER and STATUS LED functions*) plus the use of an external *level translator* circuit.

For more information refer to Telit Product Description.

### 13.2. Short Description

The interface boards convert the module connection technology (*board-to-board or BGA soldering*) into a PTH pin connector. The part of the basic interfaces is served by the motherboard, whereas specific interfaces according to the type of the module (*antenna, general purpose inputs/outputs GPIO, ADC/DAC, UART*) are available on the adapter board to connect it to the user applications, extension boards, measurements equipment or other tools.

### 13.3. Further Accessories for GPS version

When test the GPS products, besides the content of the single kits you need the accessories listed in below table.

SMA/MMCX cable adapter	Module under test	Interface Board	GPS Antenna
1ff1400073tlb		P/N	1rr0100071tlb
1	GM862-GPS	3990250670	1
-	GE863-GPS	3990250671	1
-	GE864-GPS	TBD	1
-	SE867-AGPS	TBD	1
-	HE910	3990250845	1

Table 11. GPS versions further accessories.



## 14. GM862 Interface

This board allows easily interfacing the module with the EVK2 and testing its functionalities; any version of GM862 can be insert.  
No settings are needed.



Figure 23: GM862 Interface Board

### 14.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- RESET Button
- ON Button;
- STATUS LED and its load resistance.





## 15. GE863 Interface

This board allows easily interfacing the GE863 modules with the EVK2 and testing their functionalities;



Figure 24: GE863 Interface Boards: GE863-QUAD or GE863-SIM (at left) and GE863-GPS (at right)

### 15.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount also:

- the SIMCARD Holder;
- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.



## 15.2. Content of the kits

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

### 15.2.1. GE863-PY/QUAD version

Description	Quantity
GE863 INTERFACE BOARD	1
2 PIN JUMPER FEMALE CONN	2

Table 13

### 15.2.2. GE863-GPS version

Description	Quantity
GE863-GPS INTERFACE BOARD	1
2 PIN JUMPER FEMALE CONN	2

Table 14

### 15.2.3. GE863-SIM version

Description	Quantity
GE863-SIM INTERFACE BOARD	1
2 PIN JUMPER FEMALE CONN	2

Table 15

## 15.3. Interface connectors

The following connectors are available in any version:

GSM RF connector (*SMA Female*)

2 male connectors (4 pins each one: PL101, PL102) to select the Serial port configuration

2 female connectors (40 pins each one: SO101, SO106) to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines)

2 male connectors (*30 pins each one: PL103, PL104*), on which it is possible to connect external devices like user's application, Telit extension boards, measurements equipment or other tools

## 15.4. Additional components for GPS version

The following components are available only in GPS version (P/N 3990250671):





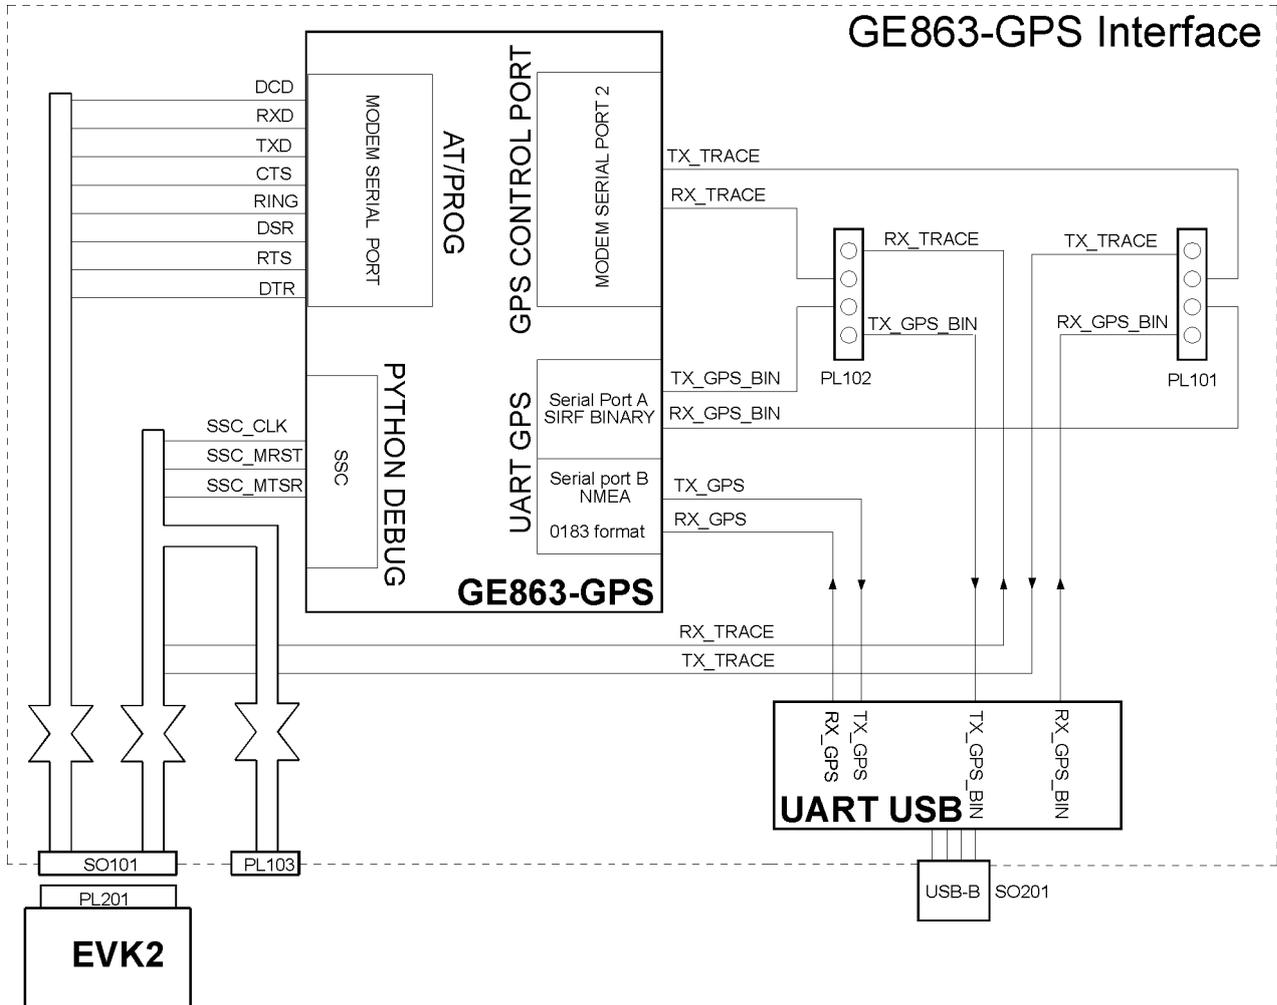


Figure 26: GE863-GPS Serial ports block diagram

## 15.6. Serial port configuration

To switch the serial lines you must short-circuit the PL101-PL102 connectors by 2 contacts jumpers.

### 15.6.1. GE863-PY/QUAD

The 2 contacts jumpers have to be fitted between *pin1* & *pin2* of PL101-PL102 connectors. This carries out the *Python Debug Port* on Trace Port of EVK2.



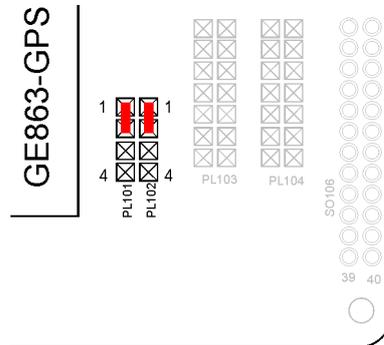


Figure 27: Jumpers setting for GE863-PY/QUAD

### 15.6.2. GE863 – GPS

The 2 contacts jumpers have to be fitted between *pin2&pin3* or *pin3&pin4* of PL101-PL102 connectors.

#### “CONTROLLED MODE”

This set the *SIRF Binary* to serial port of the modem. (*Typical application Design*)

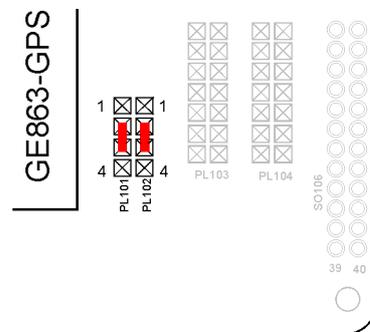


Figure 28: Jumpers setting for SIRF BINARY port connected to MODEM port 2



**NOTE:** All AT GPS commands are available in this configuration



**“SEPARATED SERIAL PORT”**

This set the *SIRF Binary* available on the USB connector.

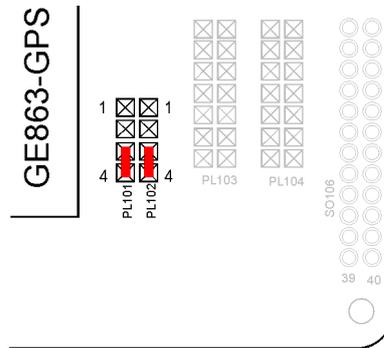


Figure 29: Jumpers setting for SIRF BINARY port available on USB connector



**NOTE:**

In this configuration some AT GPS commands are not available. Refer to AT Commands Reference User Guide.

## 15.7. ANTENNA connectors

### 15.7.1. GPS ANTENNA connector

An active GPS antenna should be connected to SO104; the GPS section provides the DC feeding.



**WARNING:**

Don't connect a *GSM* antenna on this connector

### 15.7.2. GSM ANTENNA connector

A GSM antenna should be connected to SO103.

### 15.7.3. RFU ANTENNA connector

On PCB there is the mounting possibility of a further RF connector (*SO105*): it is related to future implementation.



## 16. GE864 Interface

This board allows easily interfacing the GE864 modules with the EVK2 and testing their functionalities.

No settings are needed.



Figure 30: GE864 Interface Board

### 16.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the SIMCARD Holder;
- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.





## 17. GE864-GPS Interface

This board allows testing the functionalities and performance of the GE864-GPS module.



Figure 31: GE864-GPS Interface Board

### 17.1. Part numbering

This board comes in three different configurations, each characterized by its own part number, depending on the module it contains. In the following paragraphs we will refer to them using an identifier according to the table below:

Part number	Identifier	Module mounted
3990250820	cs1439b	cs1479
3990250821	cs1439b-A	cs1446
3990250822	cs1439b-B	cs1485a

Table 17



## 17.2. Stand-alone setup

The interface can be used without the EVK2, in this case the following components have to be soldered on the board:  
 the GSM-RESET button  
 the GSM-ON button  
 the STATUS led and its load resistor.

## 17.3. Interface connectors

The following connectors are available:

- 2 male connectors (30 PTH pins each: PL101 and PL102), to connect external devices, user's applications, Telit extension boards, measurement equipment or other tools; PL102 can also be used to select particular configurations between the GSM module's GPIOs and the GPS module
- 2 female connectors (40 PTH pins each one: SO101 and SO104), to connect the interface to the EVK2 mother board (power supply lines, serial in/out lines, audio in/out lines)
- 1 male connector (3 PTH pins: PL104), to select an enable signal for the external GPS LNA
- 1 male connector (2 PTH pins: PL105), in order to allow inserting an ammeter in series with the supply, in order to monitor the module's current consumption
- 1 GSM RF connector (SMA Female: SO105)
- 1 GPS RF connector (SMA Female: SO103)
- 1 JTAG connector (PL103, not mounted)
- 1 male connector (12 PTH pins: PL201), to select one of the available configurations for the Serial and USB ports.

## 17.4. Contents of the kit

Please check out the contents of your interface kit. If any of the following items is missing, contact your Telit supplier.

Description	Quantity
GE864-GPS INTERFACE	1
JUMPERS	13

Table 18











**WARNING:**

Other than the ASCII UART, the user must also connect the host module's GPIOs to the corresponding signals of the GPS receiver (as explained in the next paragraphs).

### 17.7.3. GPS to RS-232 (external host controlling configuration)

This configuration allows sending the GPS output to the Trace serial connector of the EVK2.

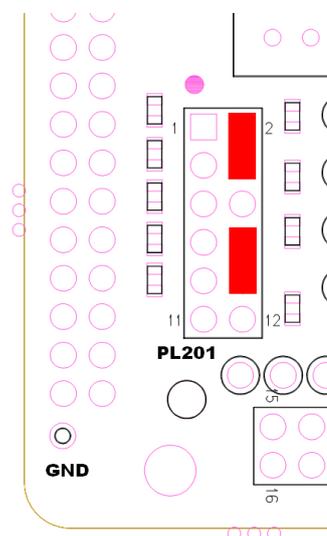


Figure 37: GPS to RS-232 (Trace) configuration

### 17.7.4. GPS to USB

The NMEA sentences can be redirected to EVK2's USB port by setting PL201 as explained in the Figure 37, i.e. connecting the NMEA line with the RS-232, and at the same time setting the EVK2 serial line on USB Mode, as shown in Paragraph 7.1 of this document.



## 17.8. GPIO settings

The interface allows choosing among different options for driving the GPS control signals:  
Using the GPIOs of the GSM module

Using an external host

Manually controlling the signals by plugging a jumper.

The last option is not available for every signal and every configuration; please refer to the schematics of the interface for more details.

The choice among the options can be made by PL102, as detailed below.

### 17.8.1. Internal host controlling configuration

The following settings on PL101 and PL102 allow selecting the internal host configuration.  
Two different cases have to be considered:

cs1439b-A

cs1439b and cs1439b-B

Refer to the beginning of this chapter for the correspondence between board part number and mounting options.

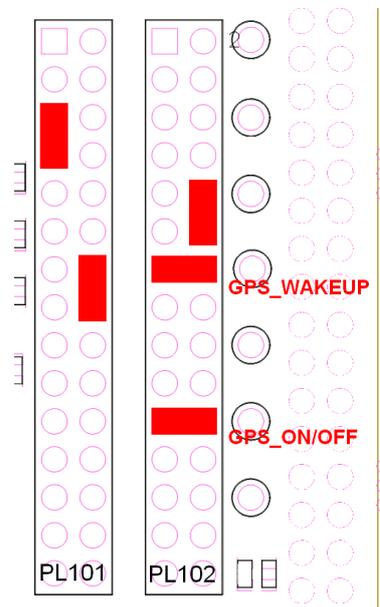


Figure 38: Settings for PL101 and PL102: internal host,cs1439b-A



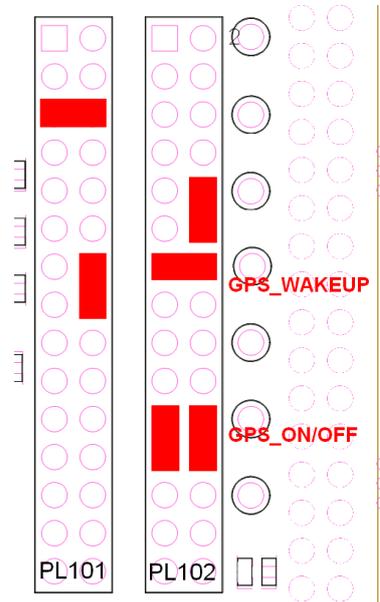


Figure 39: Settings for PL101 and PL102: internal host, **cs1439b** and **cs1439b-B**

Note that jumper settings are detailed in the pictures above.

The signal connected to **pin10** of PL102 is no longer available, and it is recommended to tie it to ground by plugging a jumper between **pin10 & pin12** of PL102.

## 17.8.2. External host controlling configuration

When an external host is used to drive the GPS module, two different cases have to be considered:

**cs1439b-A**

**cs1439b** and **cs1439b-B**

Refer to the beginning of this chapter for the correspondence between board part number and mounting options.

Two jumpers must be plugged, between **pin14 & pin16** of PL101 and **pin10 & pin12** of PL102. Additionally, the host GPIOs must be connected to PL102 as shown in the pictures below.

Note that in this configuration the signal on **pin10** of PL102 is no longer available and it must be connected to ground by plugging a jumper on **pin10 & pin12** of PL102.



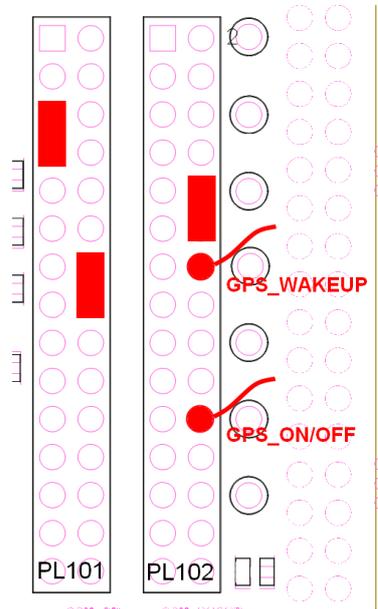


Figure 40: Settings for PL101 and PL102: external host, **cs1439b-A**.

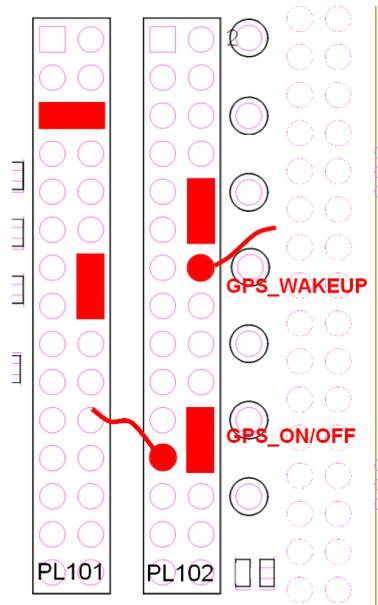


Figure 41: Settings for PL101 and PL102: external host, **cs1439b and cs1439b-B**.



## 17.9. Antenna connectors

### 17.9.1. GSM antenna connector

A GSM antenna must be connected to SO105.

### 17.9.2. GPS antenna connector

A GPS antenna must be connected to SO103.



---

**WARNING:**

Don't connect a *GSM* antenna on this connector

---



## 18. GE865 – SE867 AGPS Interface

This board allows testing the functionalities and performance of the GE865 and SE867 modules interconnected according to Telit guidelines.

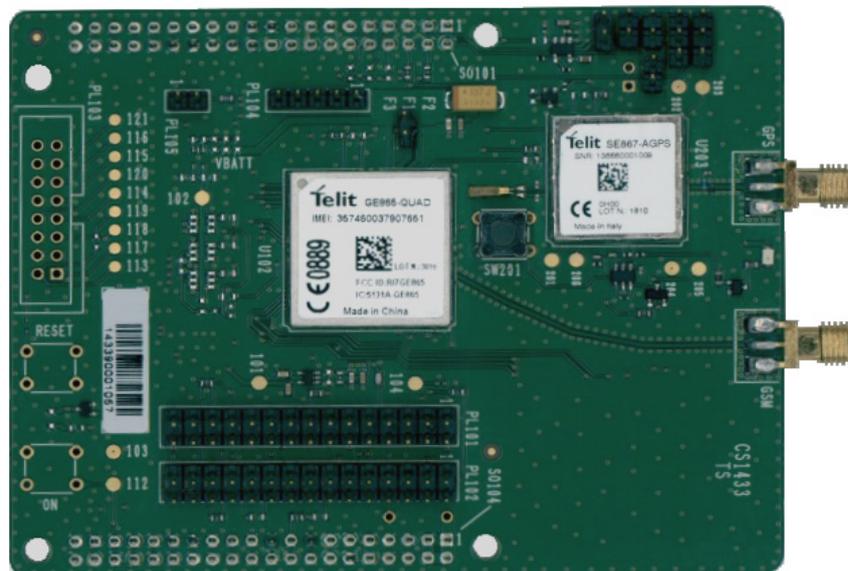


Figure 42: GE865/SE867-AGPS Interface Board

### 18.1. Stand-alone setup

The interface can be used without the EVK2, in this case the following components have to be soldered on the board:

- the RESET button
- the ON button
- the STATUS led and its load resistor.





Serial connections

By means of proper jumper connections on PL201, PL202, PL206, and PL207, three different configurations for serial outputs can be selected.

**18.3.1. GSM to GPS (GSM controlling configuration)**

This configuration is achieved by plugging a female jumper connector on **pin1 & pin2** of both PL201 and PL206. It allows to connect the GE865 UART with SE867-AGPS UART, thereby putting the board in the so-called controlled mode. No connection with the EVK2 RS-232 Trace is present.

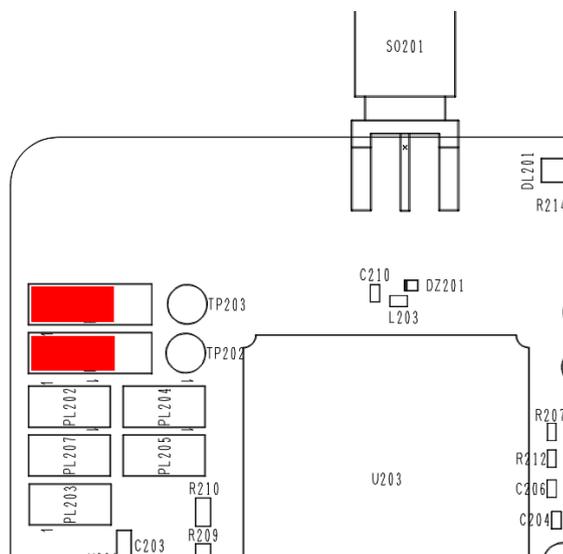


Figure 43: Jumpers in controlled mode configuration.



### 18.3.2. GSM to Trace

This configuration is realized by plugging a female jumper connector on **pin2 & pin3** of both PL201 and PL206. It allows redirecting the GE865 UART to the EVK2 RS-232 Trace. No connection with the SE867 UART is present.

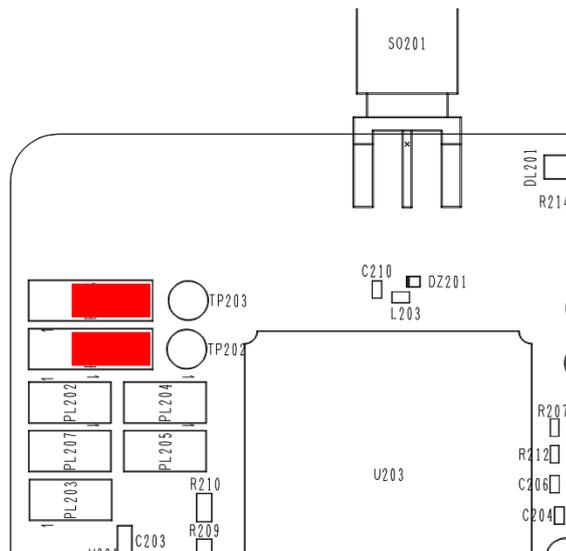


Figure 44: Jumpers in GSM to Trace configuration.



### 18.3.3. GPS to Trace(external host controlling configuration)

This configuration is achieved by plugging two female jumper connectors on PL202 and PL207. It allows redirecting the SE867 UART to the EVK2 RS-232 Trace. No connection with the GE865 UART is present.

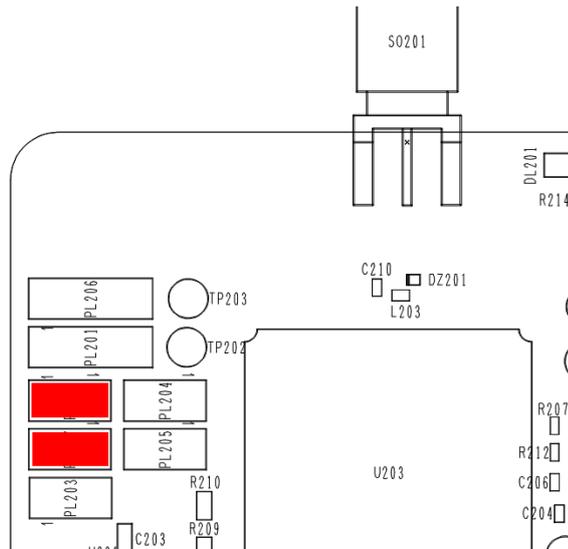


Figure 45: Jumpers in GPS to Trace configuration.

## 18.4. Antenna connectors

### 18.4.1. GSM antenna connector

A GSM antenna must be connected to SO103.

### 18.4.2. GPS antenna connector

A GPS antenna must be connected to SO201.



**WARNING:**

Don't connect a *GSM* antenna on this connector



## 19. GE865 – JF2 Interface

This board allows testing the functionalities and performance of the GE865 and JF2 modules interconnected according to Telit guidelines.

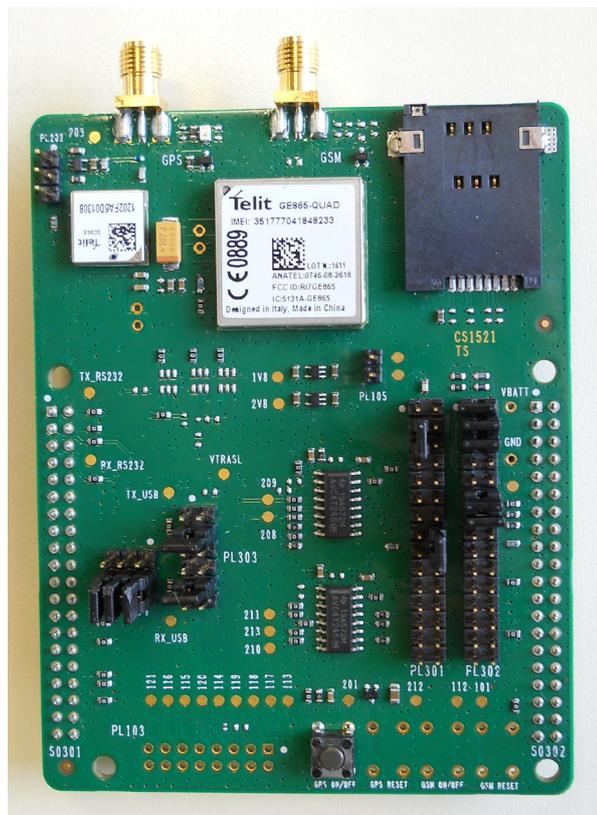


Figure 46: GE865/JF2 Interface Board.

### 19.1. Stand-alone setup

The interface can be used without EVK2 and in this case the following components have to be soldered to the board:

- RESET button
- GSM ON/OFF button
- GSM STATUS led and its load resistor







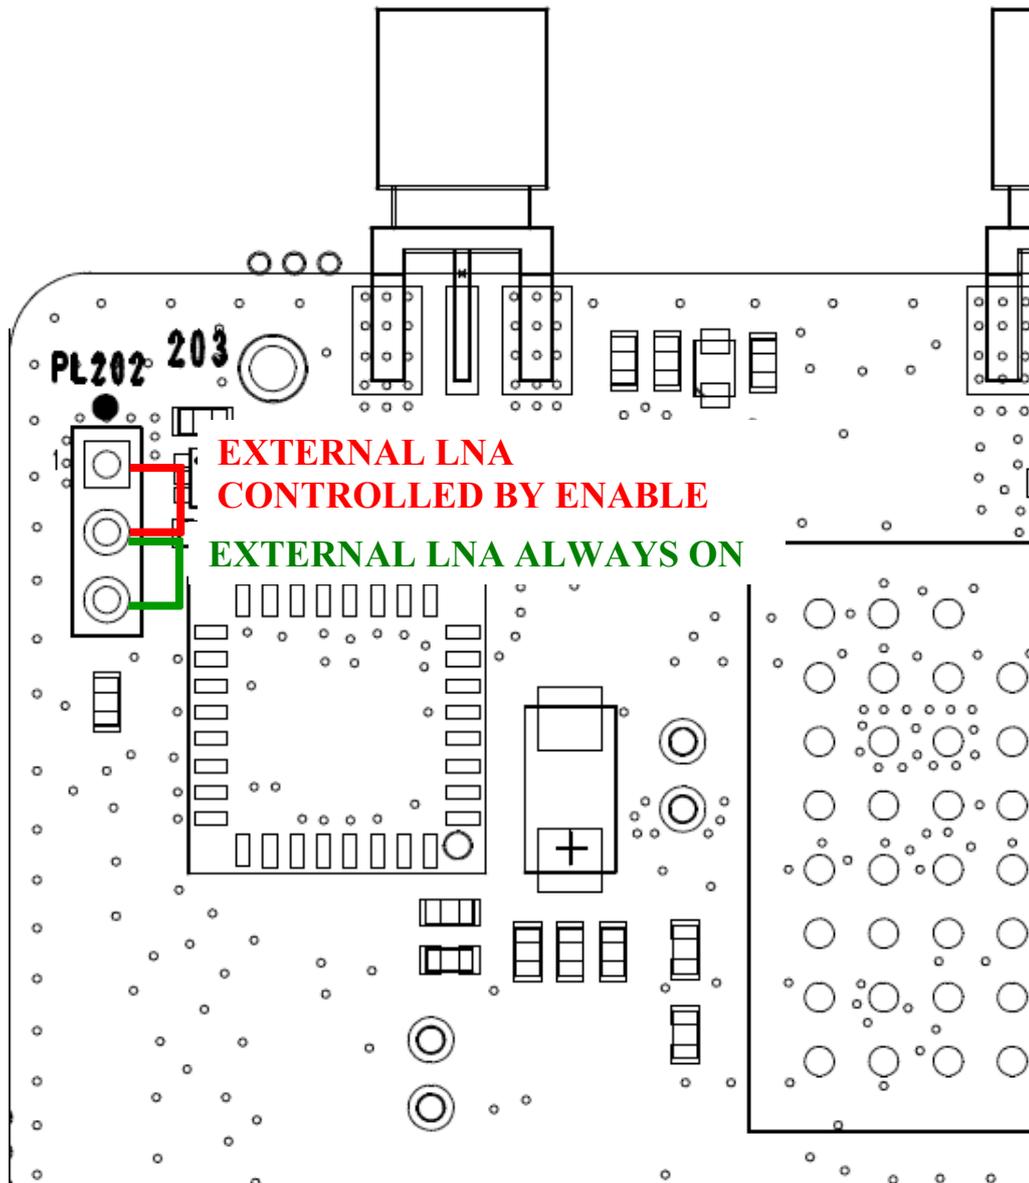


Figure 47: Jumper selection on PL202.

In order to use the External LNA controlled by the GE865 signal the user must insert a jumper in pins 14-16 of PL301.



## 19.6. Serial port configuration

By means of proper jumper connections on PL303, it is possible to choose different configurations for serial or USB outputs. These configurations are mutually exclusive.

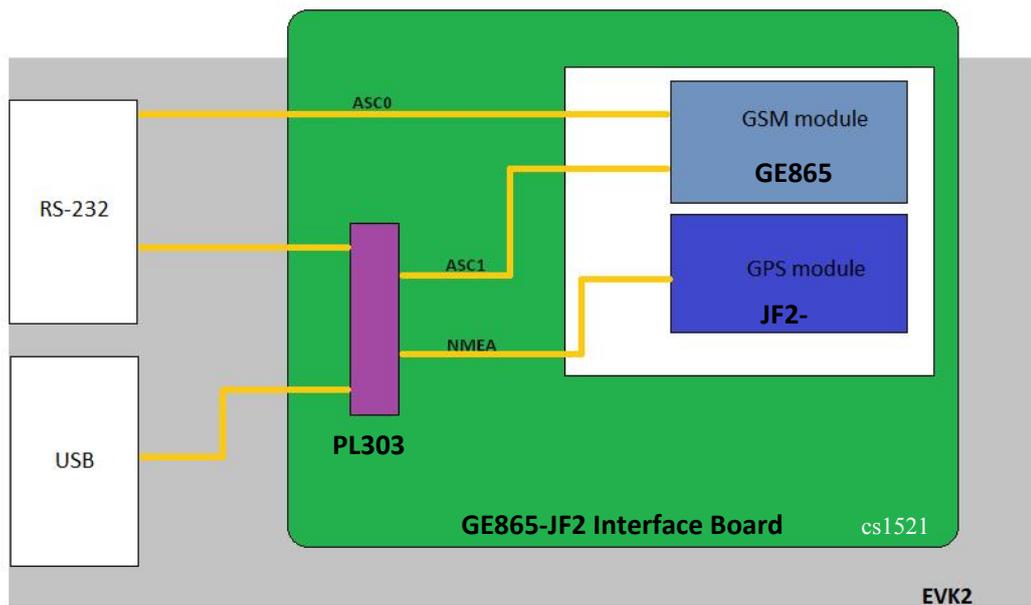


Figure 48: GE865-JF2 Interface Board serial connections



## 19.7. GSM to Trace

This configuration connects the GSM to the RS232 serial connector of the EVK2.

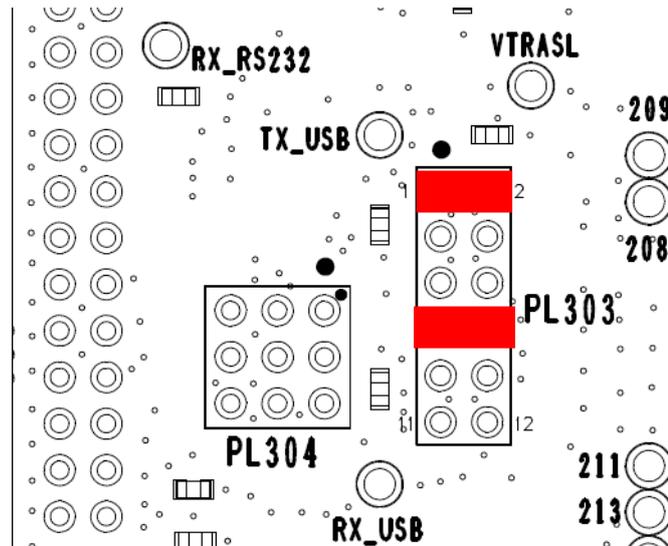


Figure 49: GSM to RS-232 (Trace) configuration

## 19.8. GPS to Trace

This configuration allows sending the GPS output to the Trace serial connector of EVK2 by means of transceivers.

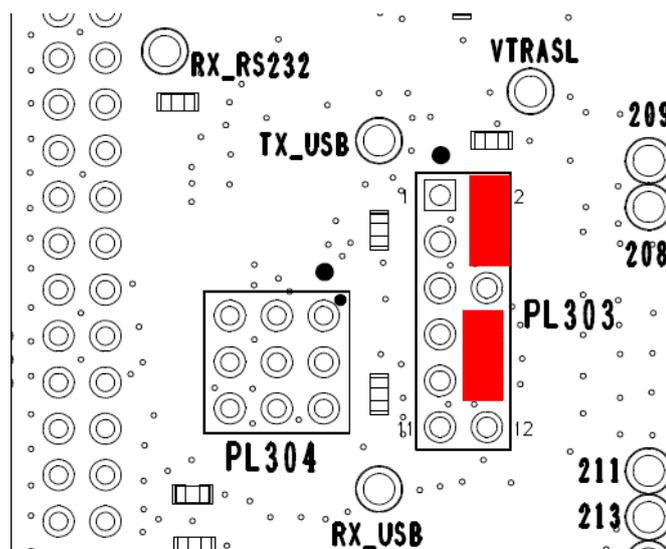


Figure 50. GPS to RS232 (Trace)



## 19.9. GSM to USB

This configuration connects the GSM to the USB connector of the EVK2.

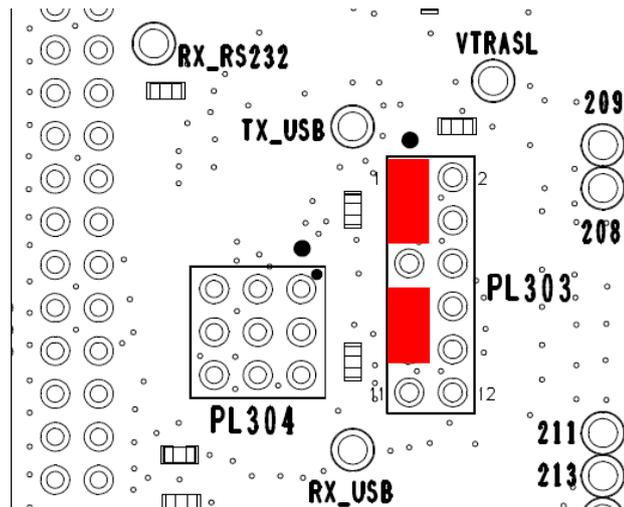


Figure 51: GSM to USB

## 19.10. GPS to USB

The NMEA sentences can be redirected to the EVK2's USB port by setting the PL303 as explained in the Figure 53, i.e. connecting the NMEA line with the RS-232, and at the same time setting the EVK2 serial line on USB mode, as showed in Paragraph 7.1 of this document.

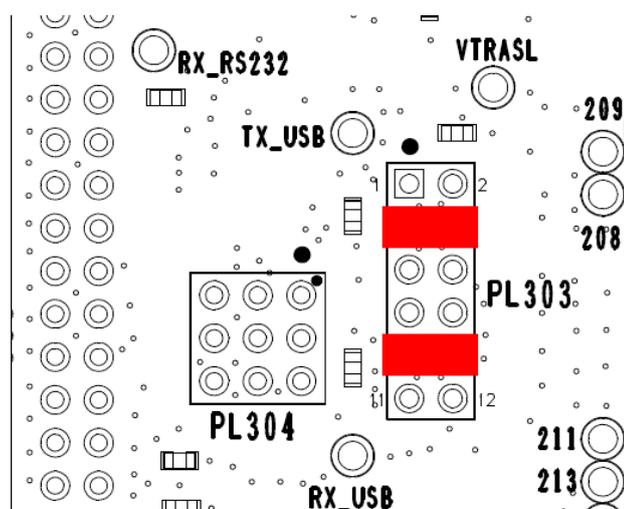


Figure 52: GPS to USB





### 19.12.1. Internal host controlling configuration

The following settings on PL301 and PL302 allow selecting the internal host configuration.

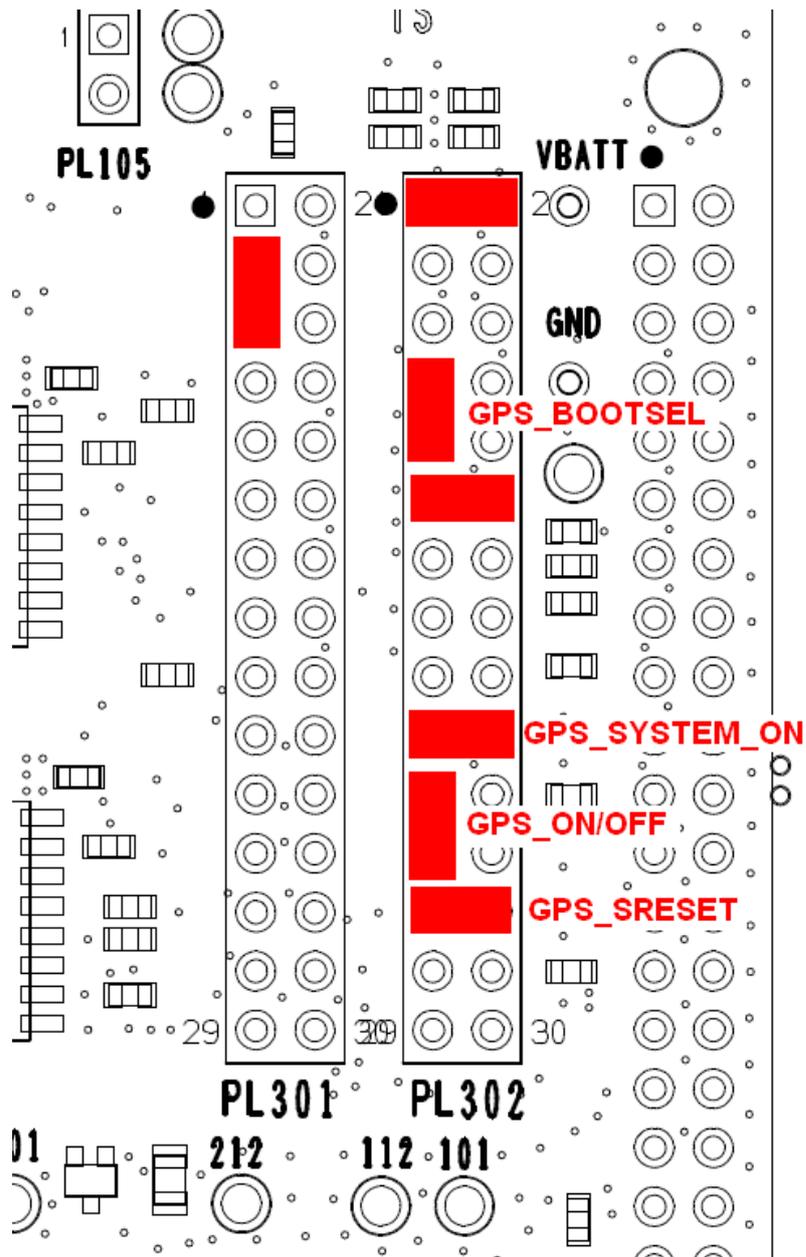


Figure 54: Settings for PL301 and PL302: internal host controlling



### 19.12.2. External host controlling configuration

The following settings on PL301 and PL302 allow selecting the external host configuration.

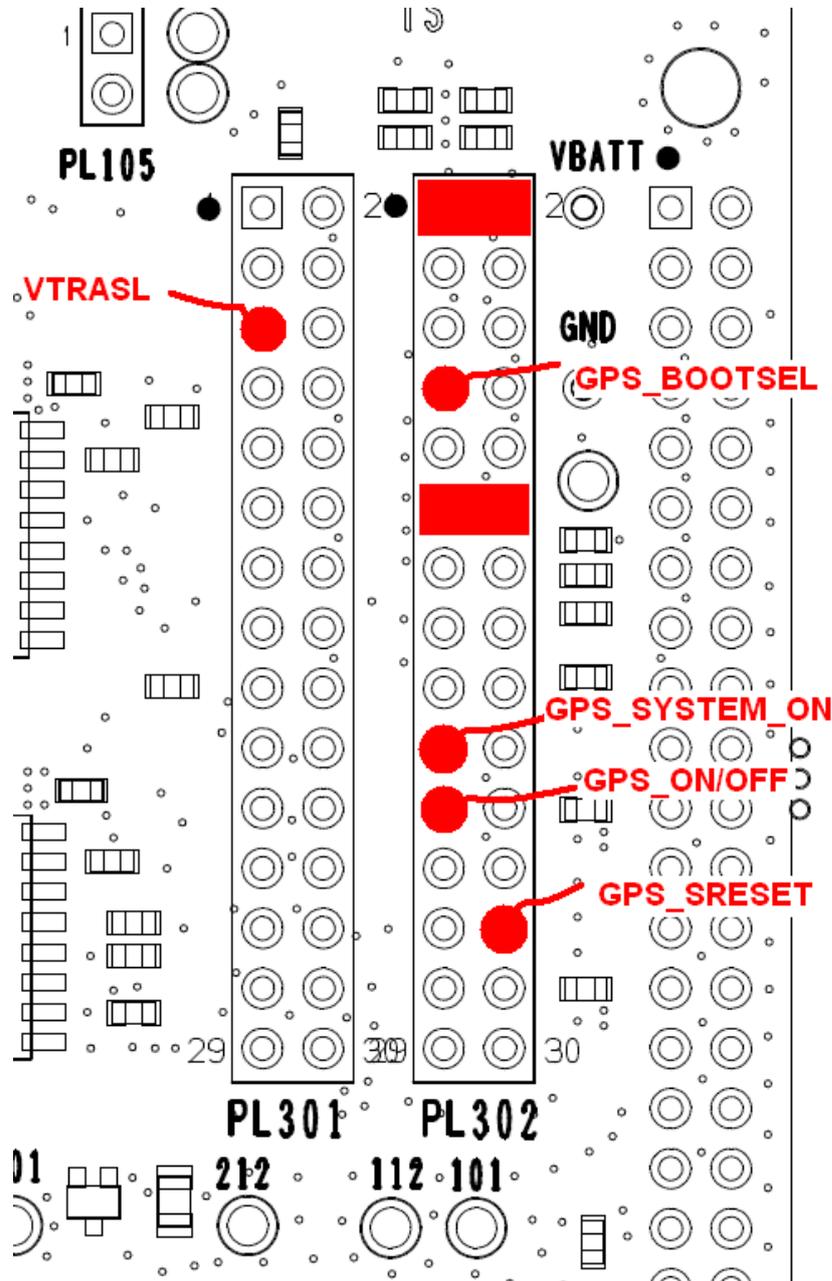


Figure 55: Settings for PL301 and PL302: external host.



## 19.13. GPS serial interface setting

GPS module has the capability to operate in serial UART mode, SPI mode or I2C mode depending upon how the JF2 GPIO6 and GPIO7 pins are strapped at power up. In the table below is shown the configuration set in PL302 to select the type of serial interface:

MODE	GPS GPIO n.6	GPS GPIO n.7
UART	1-2 pins shorted in PL302	Float
I2C	Float	15-16 pins shorted in PL302
SPI	Float	Float

Table 21

If you connect JF2 module with GE865 module you must use UART configuration. Using an external host, if you want use I2C configuration, you need to plugging on PL302 two jumpers in positions 3-4 and 5-6 in order to connect pull-ups in SDA and SCL lines.

## 19.14. MEMS Sensor/EEPROM Interface

The DR I2C port of JF2 is used for connecting to MEMS sensors, such as accelerometer or magnetometer.

	GPS GPIO n.4	GPS GPIO n.0	GPS GPIO n.1
With sensor	Float	3-4 pins shorted in PL302	5-6 pins shorted in PL302
Without sensor	13-14 pins shorted in PL302	Float	Float

Table 22

## 19.15. GPS power-on management

JF2 module power on/off can be controlled by an external host signal or it is possible to have the automatic module transition to the full power state by tying the SYSTEM-ON output to the ON-OFF input. The table below shows how to set these two options:

	Power Mode
10-12 and 19-21 pins shorted in PL302	Full power mode
11-12 pins shorted in PL302	ON/OFF controlled by an external host signal

Table 23



## 19.16. Antenna connectors

### 19.16.1. GSM antenna connector

A GSM antenna must be connected to SO105.

### 19.16.2. GPS antenna connector

A GPS antenna must be connected to SO201.



---

**WARNING:**

Don't connect a *GSM* antenna on the GPS antenna connector

---



## 20. GL865 – SL869/JN3 Interface

This board allows testing the functionalities and performance of the GL865-V3 and SL869/JN3 modules interconnected according to Telit guidelines.



Figure 56: GL865 – SL869/JN3 Interface Board.





## 20.1. Power supply

The GL865 module (but not the whole interface) receives its power supply from PL101: this jumper must always be plugged on except when a series measurement instrument is needed. The SL869/JN3 module receives its power supply from PL201: this jumper must always be plugged on except when a series measurement instrument is needed.

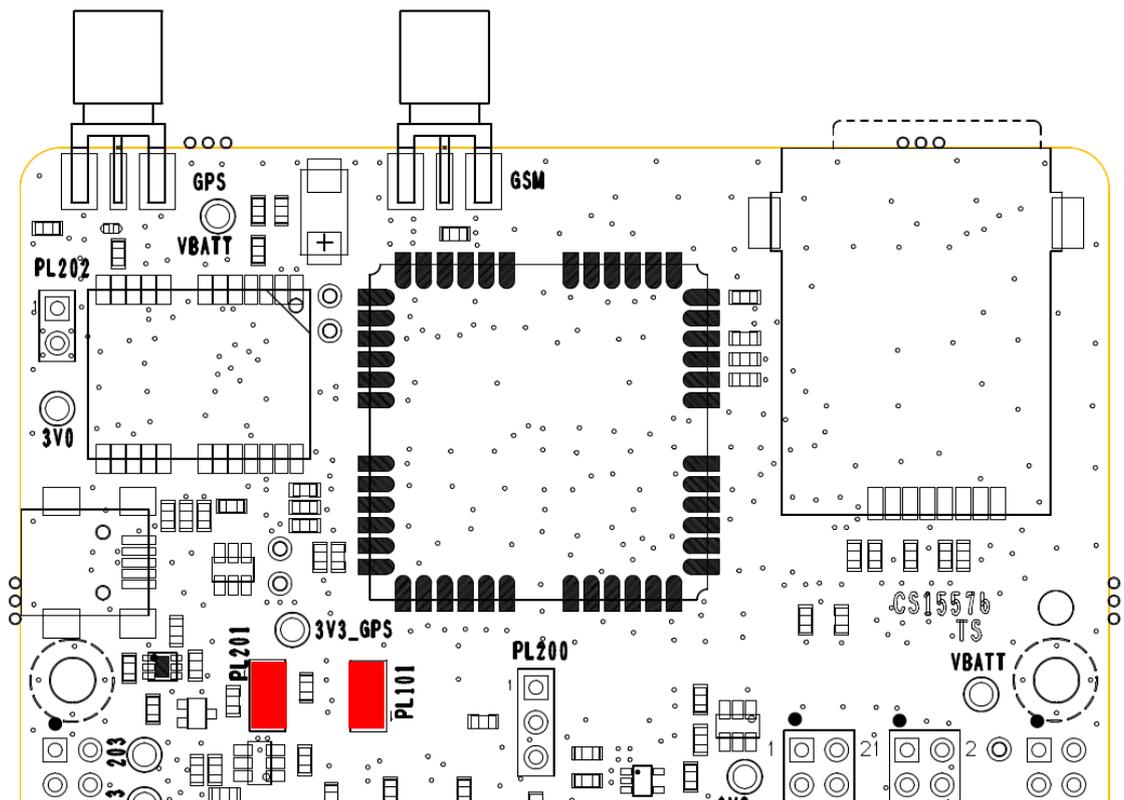


Figure 57: Jumper for VBATT.



## 20.2. GPS external LNA enable signal

The module contains an internal LNA for the GPS antenna. The user can though decide to use an external LNA: this option is selected by means of a software command, which puts the internal LNA in a low gain mode and provides an additional signal to enable the external LNA. The interface can provide a bias for the external LNA by means of a jumper on PL202, and the user can choose whether to enable it by this signal or to leave it always enabled, by means of a jumper on PL200, as shown in the picture below.

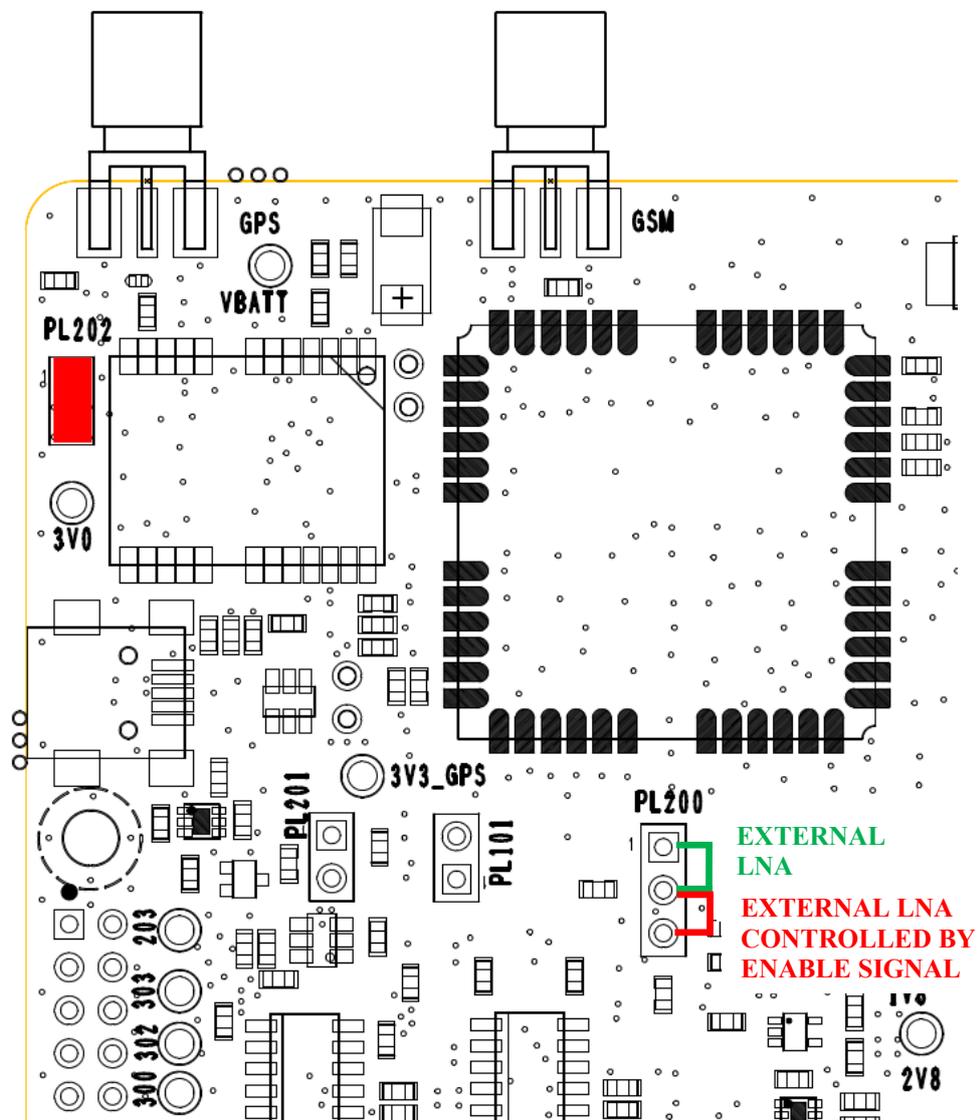


Figure 58: Jumper selection on PL200, PL202 for antenna bias.







## 20.6. GSM to USB

This configuration connects the GSM to the USB connector of the EVK2.

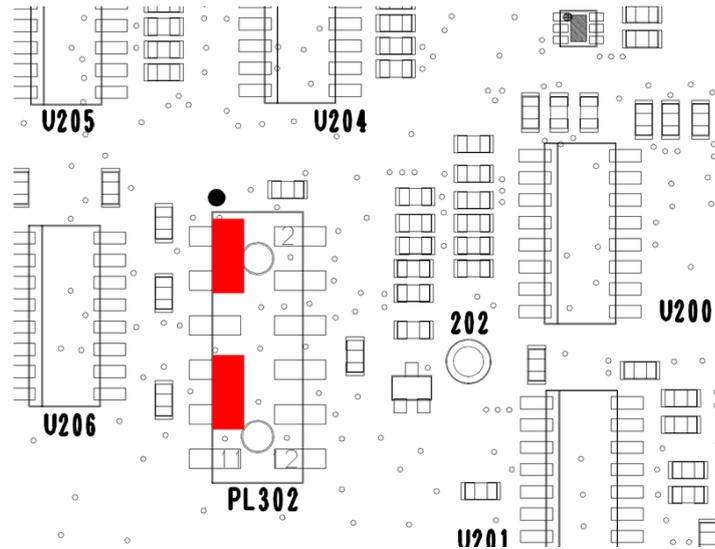


Figure 62: GSM to USB configuration

## 20.7. GPS to USB

This configuration connects the GPS to the USB connector of the EVK2.

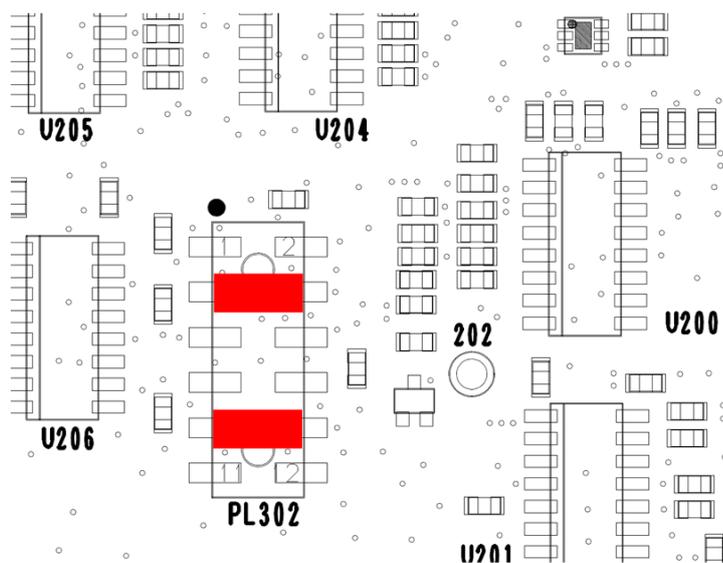


Figure 63: GPS to USB configuration





## 20.9. GPIO settings

The interface allows choosing among different options for driving the GPS control signals:

- Using the GPIOs of the GSM module
- Using an external host
- Manually controlling the signals by plugging jumpers.

The last option is not available for every signal and every configuration; please refer to the schematics of the interface for more details.

The choice among the options can be made by PL300, PL301 and as detailed below.

### 20.9.1. Internal host controlling configuration

The following settings on PL300 and PL301 allow selecting the internal host configuration.

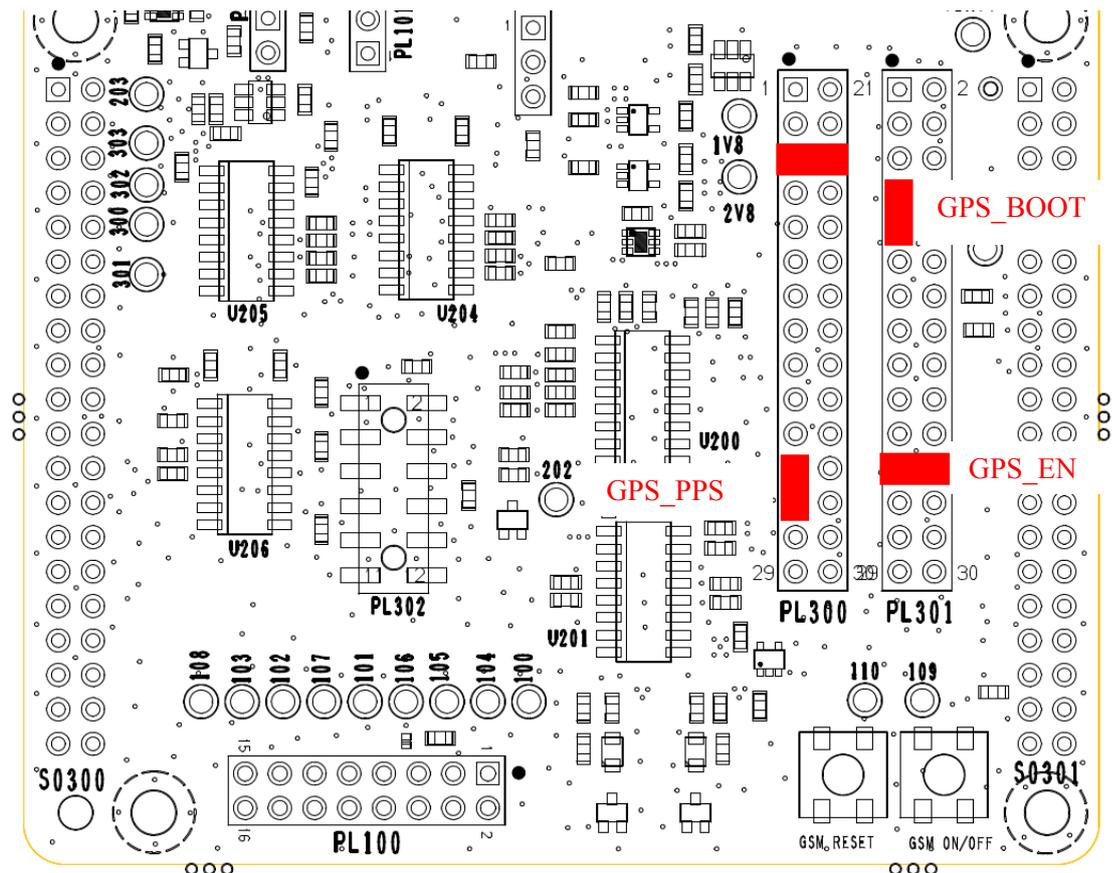


Figure 65: Settings for PL300 and PL301: internal host controlling



## 20.9.2. External host controlling configuration

The following settings on PL300 and PL301 allow selecting the external host configuration.

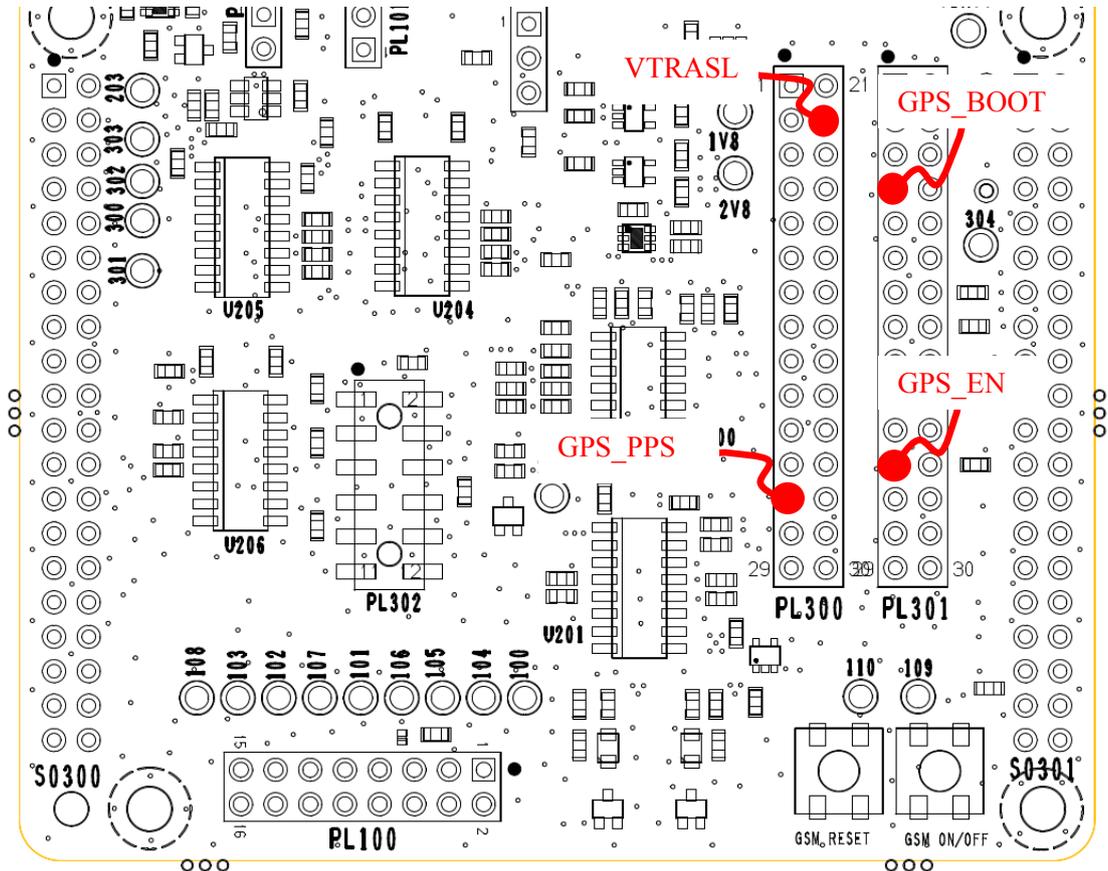


Figure 66: Settings for PL300 and PL301: external host.





## 21. GC864 Interface

This board allows easily interfacing the module with the EVK2 and testing its functionalities; any version of GC864 can be inserted.  
No settings are needed.

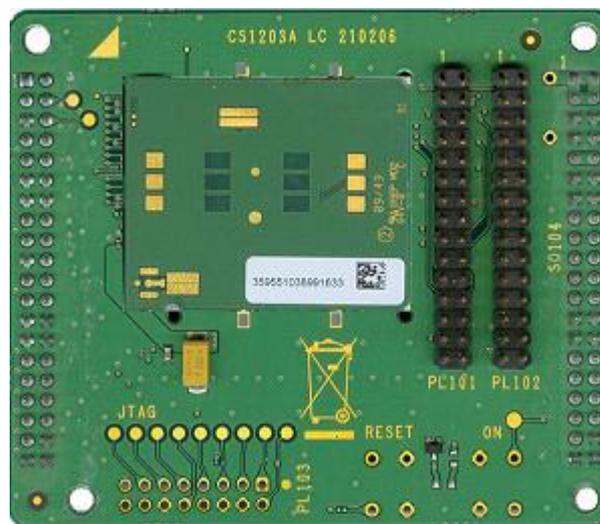


Figure 67: GC864 Interface Board

### 21.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount also:

- the SIMCARD Holder;
- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.





## 22. GC864-C2 family Interface

This board allows easily interfacing the module with the EVK2 and testing its functionalities; any version of GC864-C2 can be inserted.  
No settings are needed.



Figure 68: GC864-C2 Interface Board

### 22.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the SIMCARD Holder ;
- the ON Button ;
- the STATUS LED and its load resistance.





## 23. GE865 Interface

This board allows easily interfacing the GE865 modules with the EVK2 and testing their functionalities;  
No settings are needed.



Figure 69: GE864 Interface Board

### 23.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.









## 25. UC864 family Interface

This board allows easily interfacing the UC864/CC864 modules with the EVK2 and testing their functionalities;

No settings are needed.

For more information please refer to 1vv0300771 (UC864/CC864 Interface Board User Guide)



Figure 71: UC864 Interface Board

### 25.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the RESET Button
- the ON Button;





## 26. HE910 family Interface

This board allows easily interfacing the HE910 modules with the EVK2 and testing their functionalities;  
No settings are needed.



Figure 72: HE910 Interface Board



## 26.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 26.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 USB connector (SO202) related to the HE910 USB 2.0 port.

3 RF connectors for GSM/UMTS Antenna (SO103), Receiver Diversity Antenna (SO105) and GPS Antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL102, PL203, PL204) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

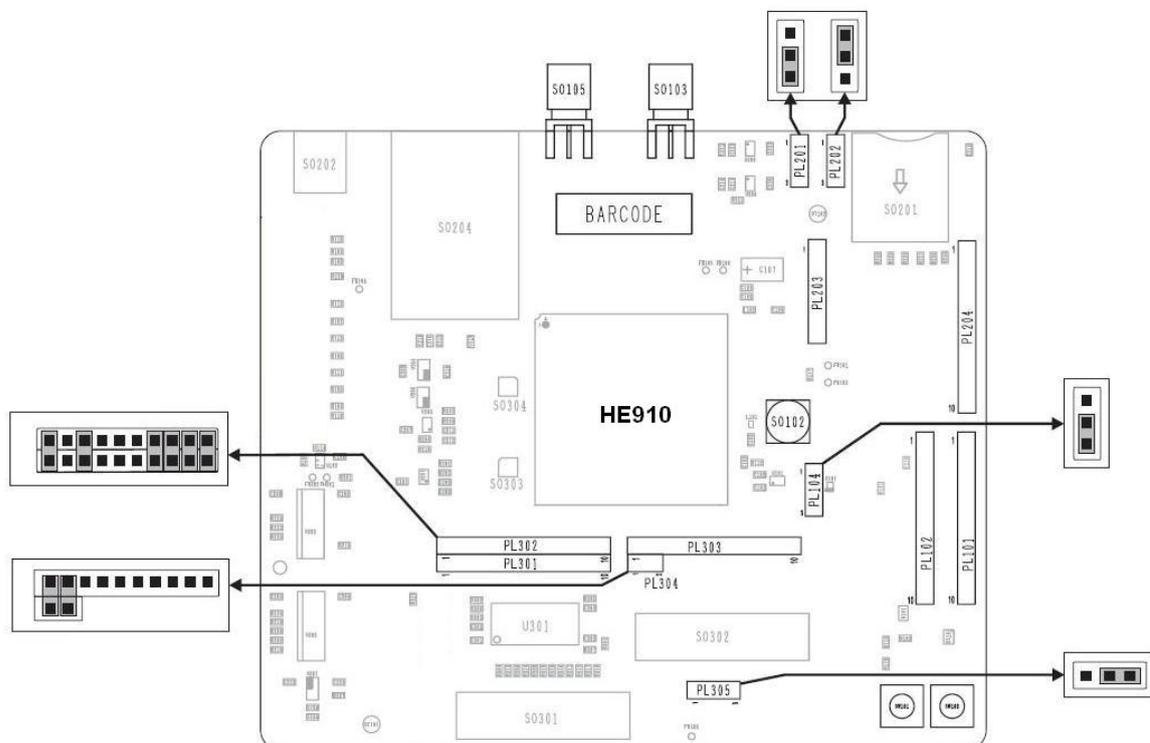


Figure 73



## 26.3. Antenna connectors

### 26.3.1. GSM/UMTS Antenna connector

A GSM/UMTS compatible antenna (Refer to the product’s HW user guide) antenna must be connected to SO103.

### 26.3.2. Receiver Diversity Antenna connector

A GSM/UMTS compatible antenna (Refer to the product’s HW user guide) antenna could be connected to SO105.

### 26.3.3. GPS antenna connector

A GPS antenna could be connected to SO102. Please refer to the product’s HW user guide for the proper type.

The GPS Antenna (if an active type) could be supplied with a dedicated LDO (3V DC) that could be set in the following way using the Jumpers on PL104.

LDO Enabled by the HE910 Module.

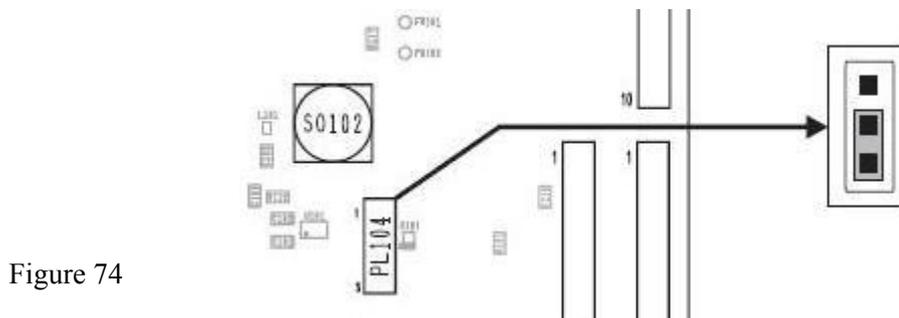


Figure 74

LDO Always Enabled

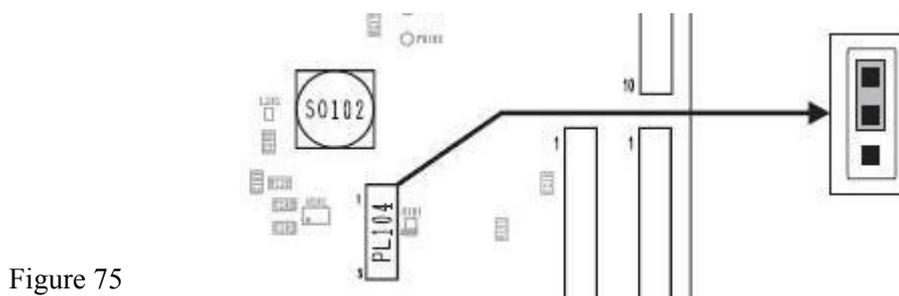


Figure 75



#### WARNING:

Don't connect a *GSM/UMTS* antenna on this connector





## 26.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	SPI_CLK	SPI
4	SPI_MRDY	SPI
5	SPI_SRDY	SPI
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



### 26.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	

### 26.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the HE910 Interface.

## 26.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
HE910 INTERFACE	1
MINI USB CABLE	1



## 27. UE910 family Interface

This board allows easily interfacing the UE910 modules with the EVK2 and testing their functionalities;  
No settings are needed.



Figure 76: UE910 Interface Board





## 27.3. Antenna connectors

### 27.3.1. GSM/UMTS Antenna connector

A GSM/UMTS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

## 27.4. Expansion Connectors

### 27.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2



## 27.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	SPI_CLK	SPI
4	SPI_MRDY	SPI
5	SPI_SRDY	SPI
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



### 27.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	

### 27.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the UE910 Interface.

## 27.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
UE910 INTERFACE	1
MINI USB CABLE	1





## 28.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 28.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 USB connector (SO202) related to the GE910 USB 2.0 port.

1 RF connectors for GSM/GPRS Antenna (SO103),

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

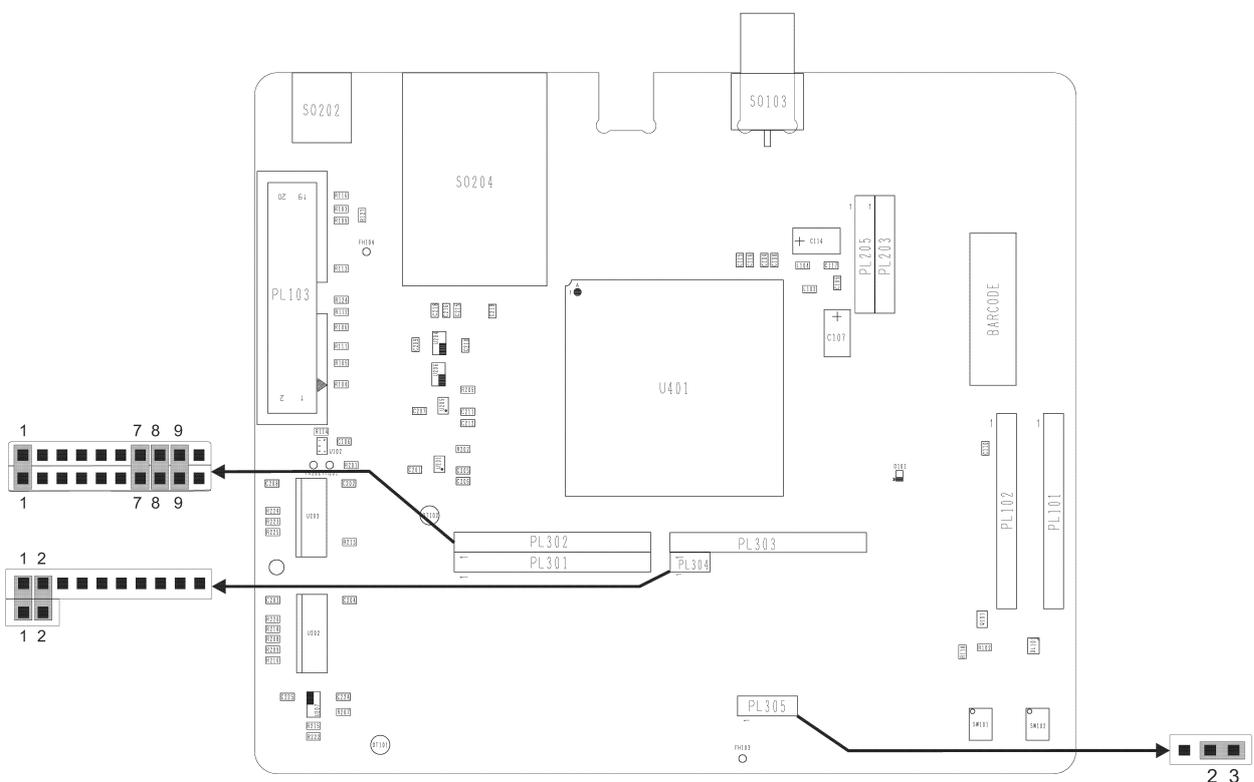


Figure 79



## 28.3. Antenna connectors

### 28.3.1. GSM/GPRS Antenna connector

A GSM/GPRS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

## 28.4. Expansion Connectors

### 28.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Jumper to EVK2 Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	



## 28.4.2. PL303/PL304

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

## 28.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	



#### 28.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the GE910 Interface.

#### 28.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GE910 INTERFACE	1
MINI USB CABLE	1



## 29. GE910-GNSS Interface

This board allows easily interfacing the GE910-GNSS module with the EVK2 and testing their functionalities;  
No settings are needed.

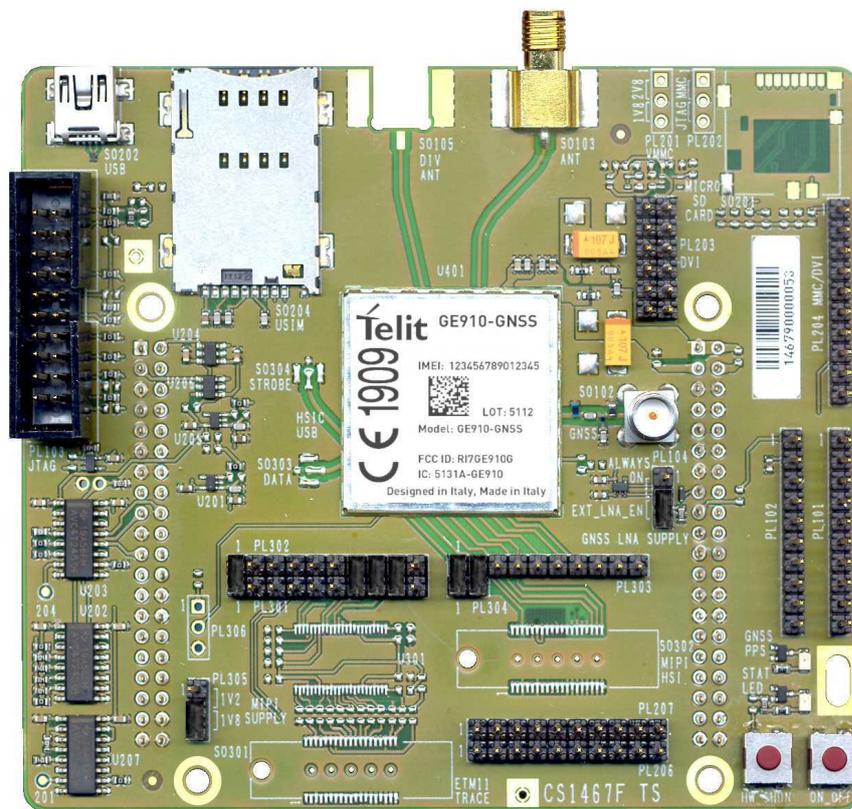


Figure 80: GE910-GNSS Interface Board



## 29.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 29.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 USB connector (SO202) related to the GE910-GNSS USB 2.0 port.

2 RF connectors for GSM/GPRS Antenna (SO103) and GNSS antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL104, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

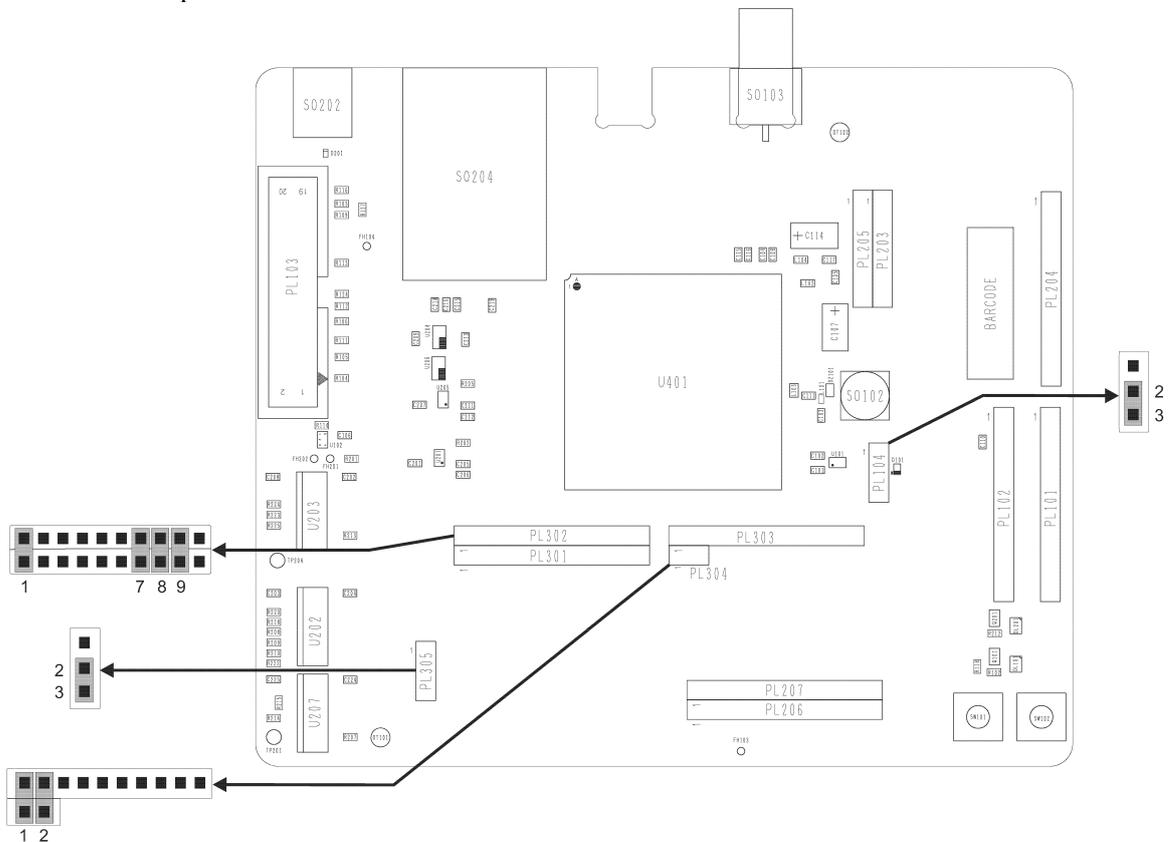


Figure 81





## 29.4. Expansion Connectors

### 29.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Jumper to EVK2 Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	







## 30. GE910-QUAD V3 Interface

This board allows easily interfacing the GE910-QUAD V3 module with the EVK2 and testing their functionalities.

No settings are needed.

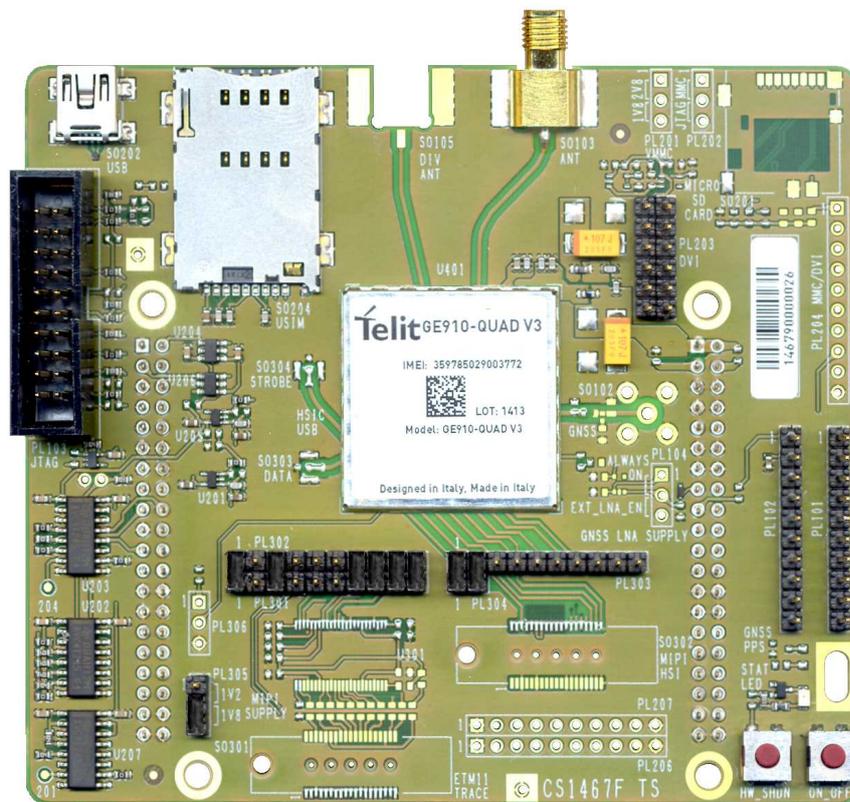


Figure 84: GE910 Interface Board



## 30.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 30.2. Interface connectors

The following connectors are available:

- 2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);
- 1 USB connector (SO202) related to the GE910 USB 2.0 port.
- 1 RF connectors for GSM/GPRS Antenna (SO103),
- 1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

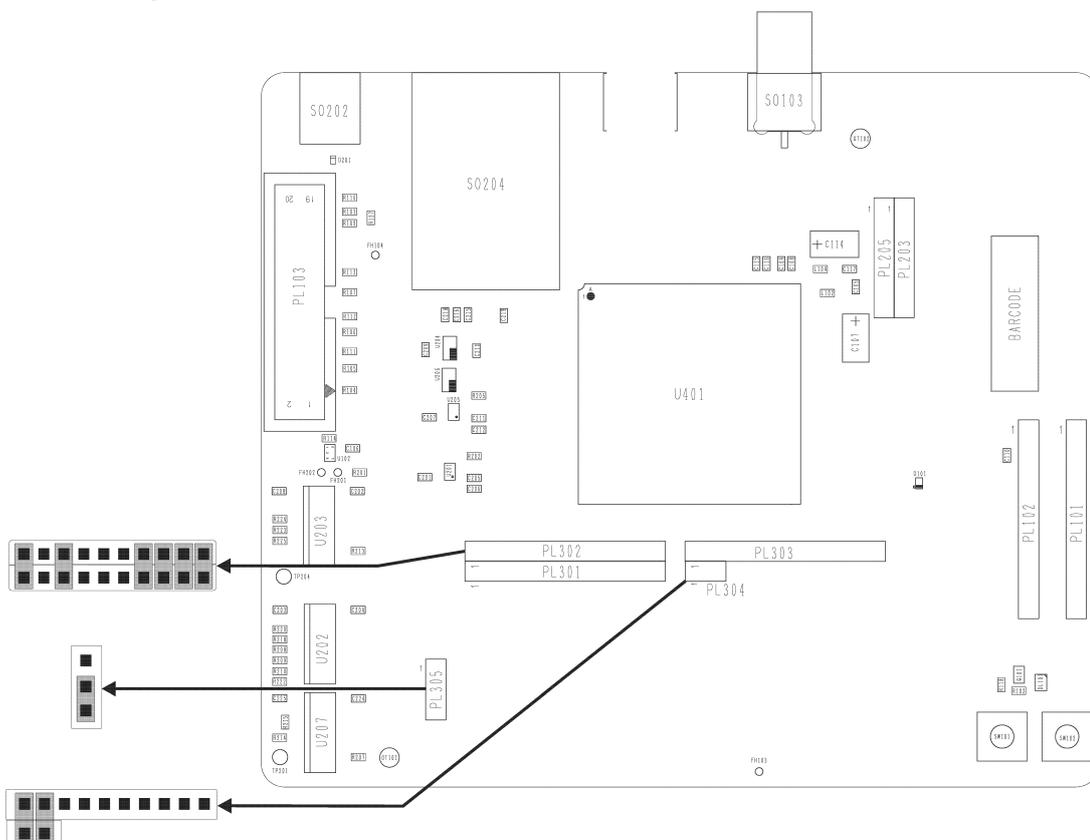


Figure 85



### 30.3. Antenna connectors

#### 30.3.1. GSM/GPRS Antenna connector

A GSM/GPRS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

### 30.4. Expansion Connectors

#### 30.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Jumper to EVK2 Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	



### 30.4.2. PL303/PL304

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

### 30.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	



### 30.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the GE910 Interface.

### 30.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GE910 INTERFACE	1
MINI USB CABLE	1



## 31. DE910 family Interface

This board allows easily interfacing the DE910 modules with the EVK2 and testing their functionalities;  
No settings are needed.



Figure 86: DE910 Interface Board



## 31.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 31.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 USB connector (SO202) related to the DE910 USB 2.0 port.

3 RF connectors for CDMA Antenna (SO103), Receiver Diversity Antenna (SO105) and GPS Antenna (SO102)

1 RUIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL102, PL203, PL204) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

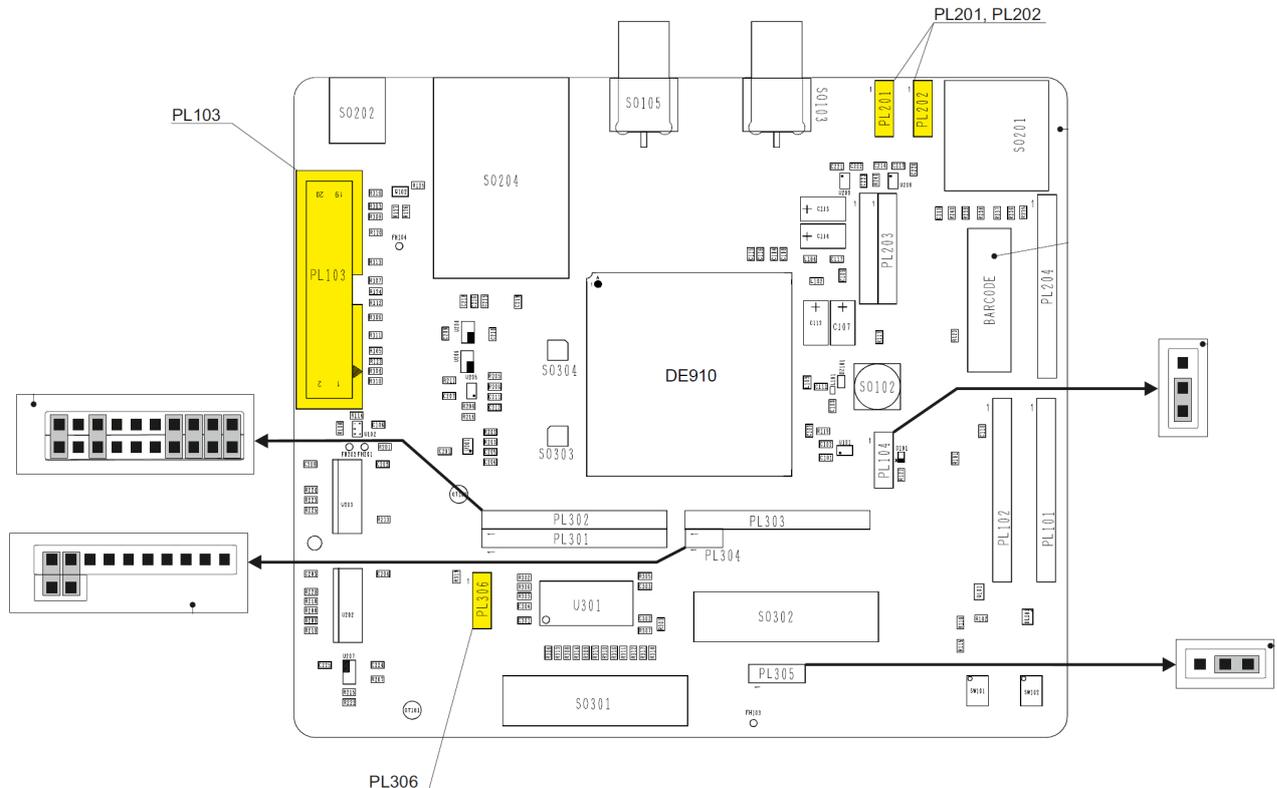


Figure 87



### 31.3. Antenna connectors

#### 31.3.1. CDMA Antenna connector

A CDMA compatible antenna (Refer to the product’s HW user guide) must be connected to SO103.

#### 31.3.2. Receiver Diversity Antenna connector

A CDMA compatible antenna (Refer to the product’s HW user guide) could be connected to SO105.


#### 31.3.3. GPS antenna connector

A GPS antenna could be connected to SO102. Please refer to the product’s HW user guide for the proper type.

The GPS Antenna (if an active type) could be supplied with a dedicated LDO (3V DC) that could be set in the following way using the Jumpers on PL104.


LDO Enabled by the DE910 Module.

Figure 88

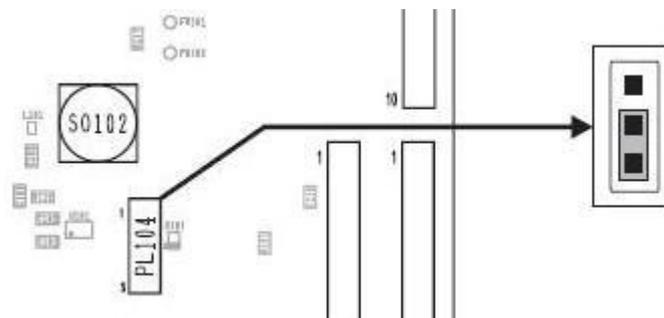

LDO Always Enabled

Figure 89

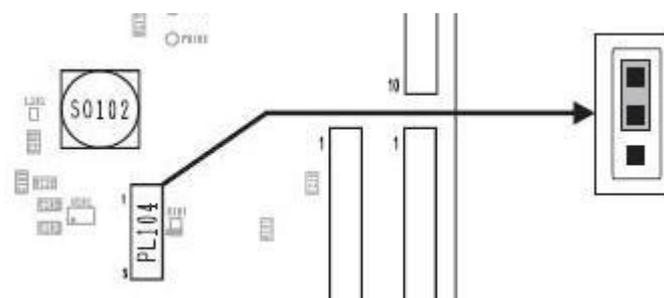

**WARNING:**

Don't connect a CDMA antenna on this connector





### 31.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



### 31.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	

### 31.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the DE910 Interface.

## 31.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
DE910 INTERFACE	1
MINI USB CABLE	1



## 32. CE910 family Interface

This board allows easily interfacing the CE910 modules with the EVK2 and testing their functionalities.

No settings are needed.



Figure 90: CE910 Interface Board



## 32.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 32.2. Interface connectors

The following connectors are available:

- 2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);
- 1 USB connector (SO202) related to the CE910 USB 2.0 port.
- 1 RF connectors for CDMA Antenna (SO103)
- 1 RUIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL102, PL203, PL204) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

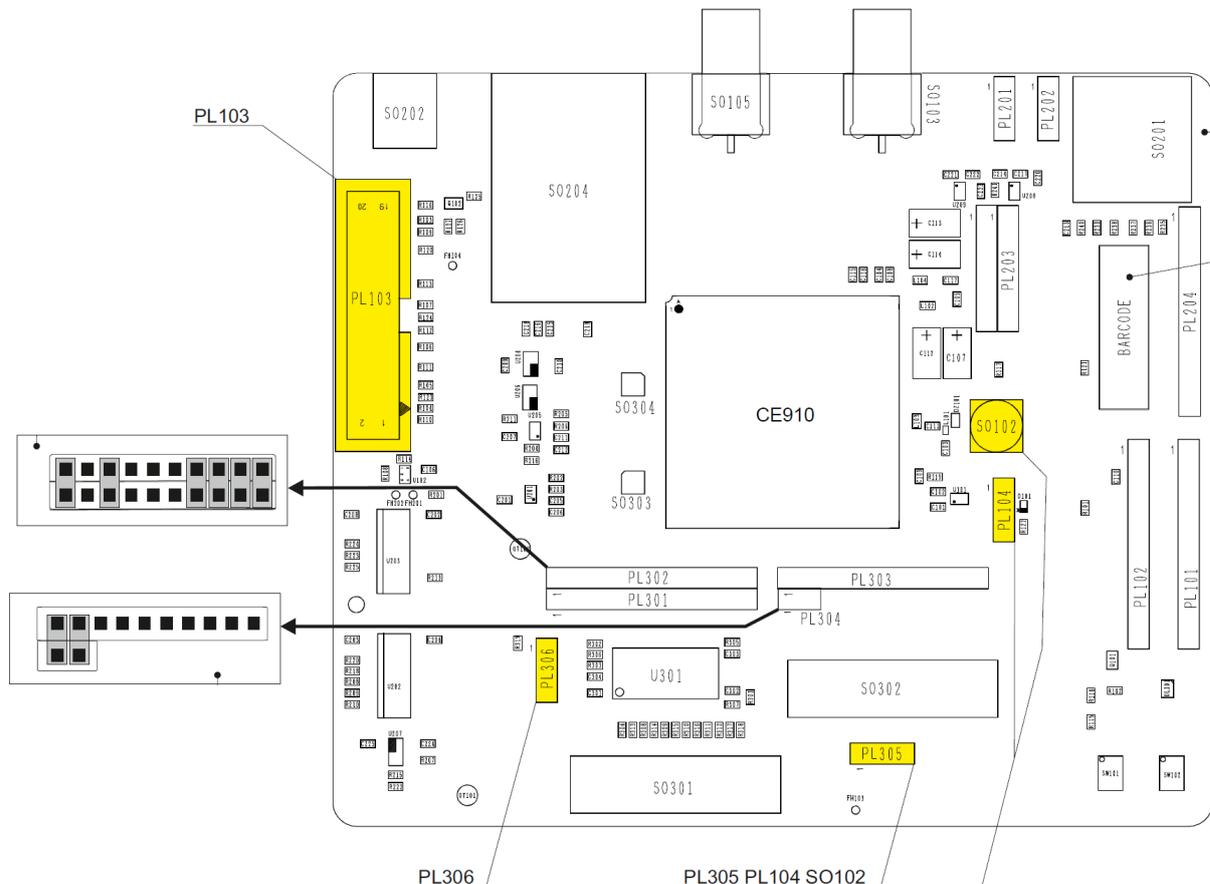


Figure 91



## 32.3. Antenna connectors

### 32.3.1. CDMA Antenna connector

A CDMA compatible antenna (Refer to the product’s HW user guide) must be connected to SO103.

## 32.4. Expansion Connectors

### 32.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2





### 32.4.4. ON\_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the CE910 Interface.

### 32.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
CE910 INTERFACE	1
MINI USB CABLE	1



### 33. GL865 V3 Interface

This board allows easily interfacing the GL865-DUAL V3 modules with the EVK2 and testing their functionalities.

No settings are needed.

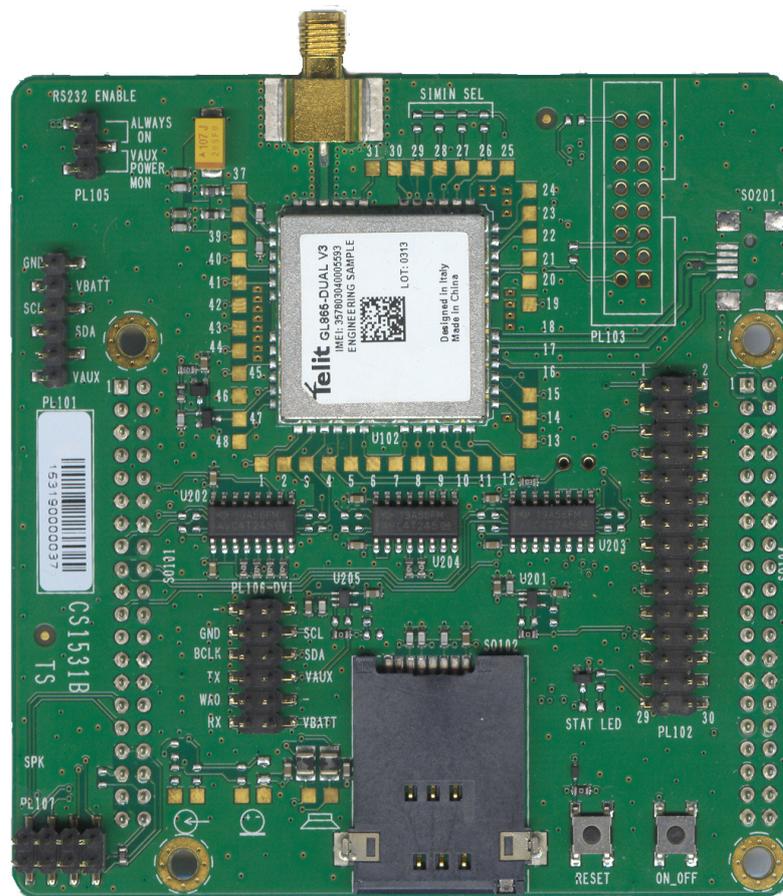


Figure 92: GL865 V3 Interface Board

#### 33.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.



## 33.2. Interface connectors

The following connectors are available:

1 male connector (30 SMT pins each one: PL102), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;  
2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 RF connectors for GSM Antenna (SO103)

1 SIM Holder (SO102)

A group of Male connectors (PL101, PL105, PL106, PL107) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

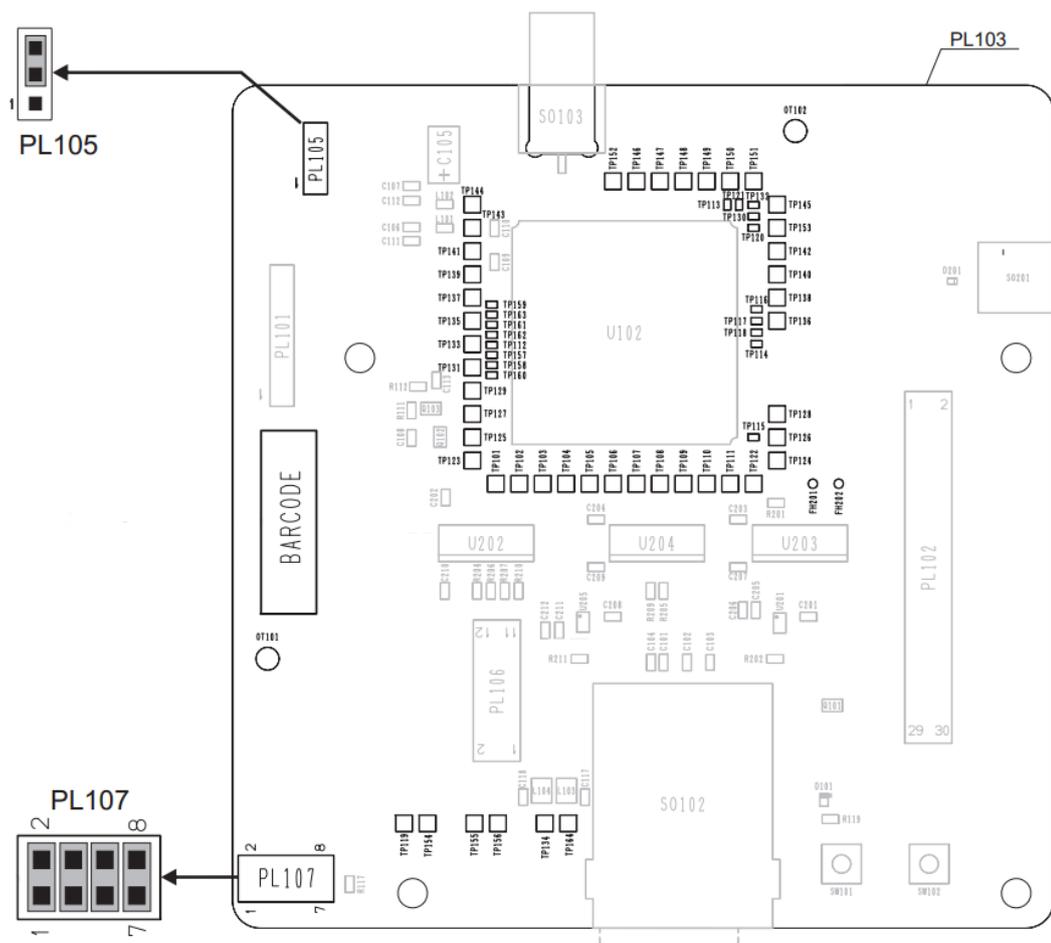


Figure 93



### 33.3. Antenna connectors

#### 33.3.1. GSM Antenna connector

A GSM compatible antenna (Refer to the product’s HW user guide) antenna must be connected to SO103.

### 33.4. Expansion Connectors

#### 33.4.1. PL101

The connector is carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	VAUX	VAUX/PWRMON
2	NC	
3	SDA	GPIO07 Configurable GPIO (I2C SDA)
4	SCL	GPIO08 Configurable GPIO (I2C SCL)
5	VBATT	
6	GND	

#### 33.4.2. PL106

The connector is carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	VBATT	
2	DVI_RX	Digital Audio Interface (RX)
3	NC	
4	DVI_WA0	Digital Audio Interface (WA0)
5	VAUX	VAUX/PWRMON
6	DVI_TX	Digital Audio Interface (TX)
7	BUZZER	GPIO07 Configurable GPIO
8	DVI_CLK	Digital Audio Interface (CLK)
9	STAT_LED	GPIO08 Configurable GPIO
10	GND	
11	NC	
12	NC	







## 34.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

## 34.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 USB connector (SO202) related to the LE920 USB 2.0 port.

3 RF connectors for Main, Diversity, and GPS Antenna (SO105, SO107, SO108),

1 SIM Holder (SO204)

A group of Male connectors (PL102, PL104), that provide the additional signals

The following picture is showing the connector's positions and the default settings for the Jumpers.

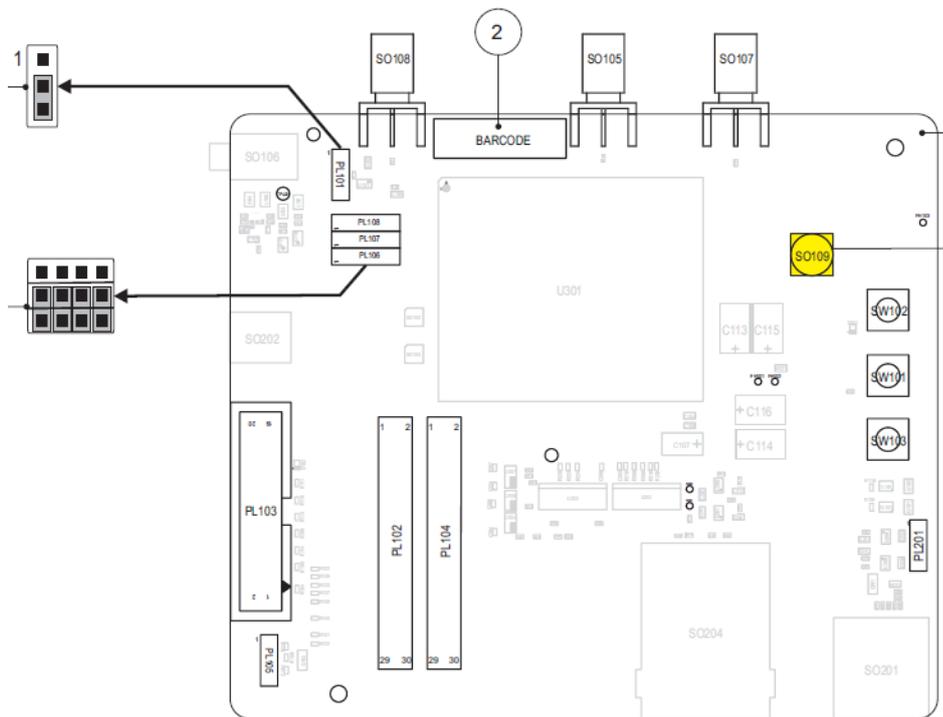


Figure 95







26	GND	
27	RESERVED	
28	RESERVED	
29	VBAT	
30	VBAT	

### 34.4.2. ON\_OFF & UNCONDITIONAL SHUTDOWN, RESET BUTTONS

The 3 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN, and RESET lines of the module.

### 34.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
LE920 INTERFACE	1
MINI USB CABLE	1



## 35. GPIO ports

A certain number of GPIO ports (General Purpose Input/Output) are available on every Telit Module Interface Board, giving you the possibility to drive digital devices and report their own status.

Some of these ports are dedicated. *Refer to Telit Product Description and Telit Hardware User Guide* to have all information about characteristics of every GPIO port.

You can consult the following paragraphs to see the displacement of GPIO on every Interface Board.







### 35.1.2. GE863-GPS Interface

(Refer to schematic diagram 30276SE11151A)

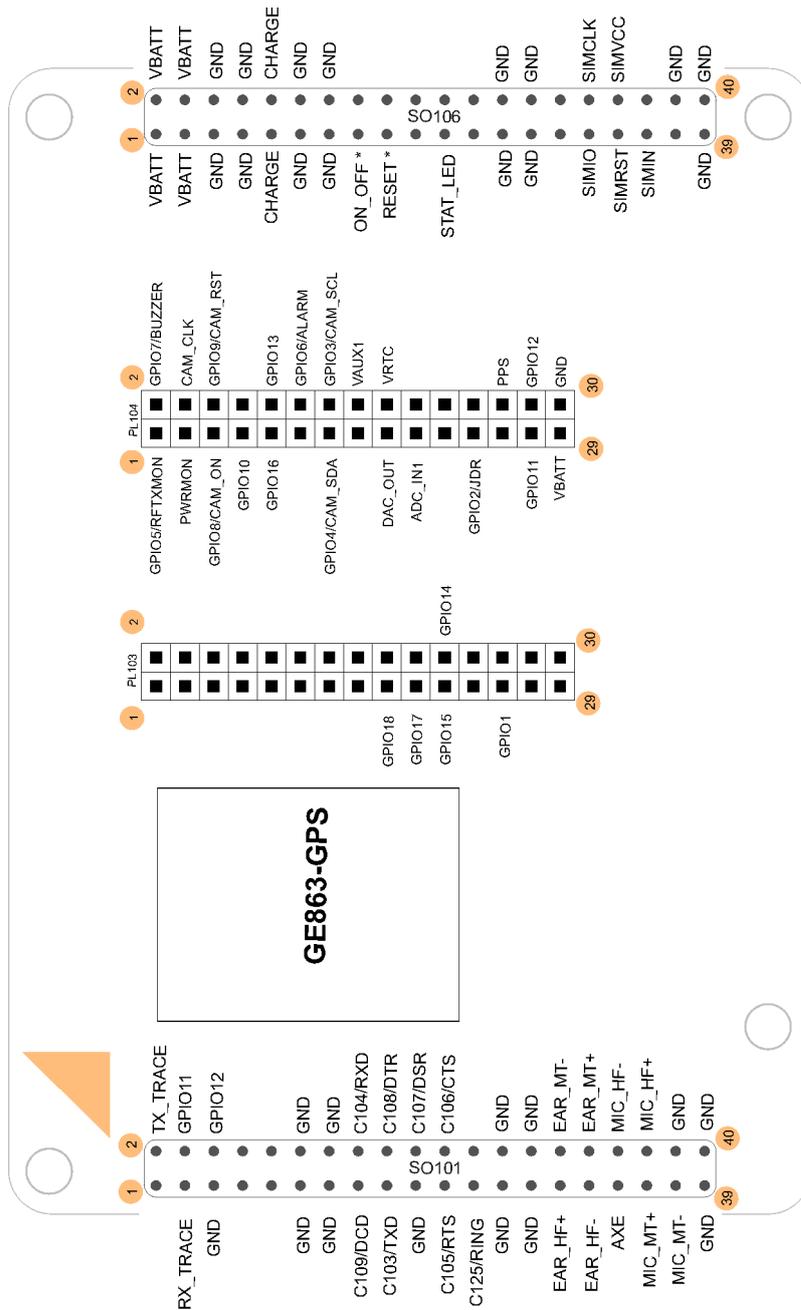


Figure 97: Position of GPIO ports on GE863-GPS interface



**Note on p/n 3990250684 and p/n 3990250685 GE863**  
(Refer to schematic diagrams *30276SE11151A-C*, *30276SE11151A-D*)

If you use these interfaces the following two pins of PL104 connector assume different functions, and precisely:

Pin 20 = ADC\_IN2  
Pin 21 = ADC\_IN3  
Pin 26 = N.C



### 35.1.3. GE863 Interfaces (p/n 3990250684 -3990250685-3990250703)

Refer to schematic diagrams 3\0276SE11151A-C; 30276SE11151A-D; 30276SE11151A-G

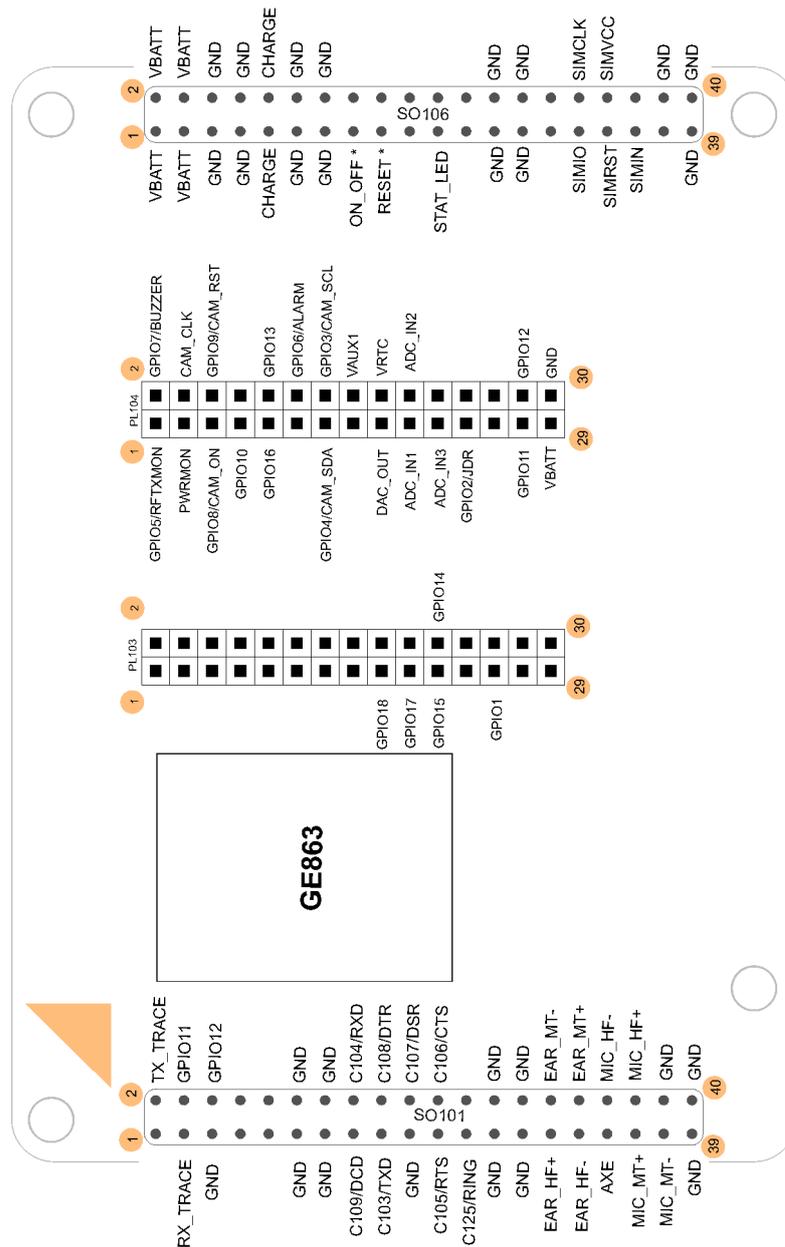


Figure 98: Position of GPIO ports on GE863 interfaces



### 35.1.4. GE864 Interface (p/n 3990250672)

(Refer to schematic diagram 30276SE1152B)

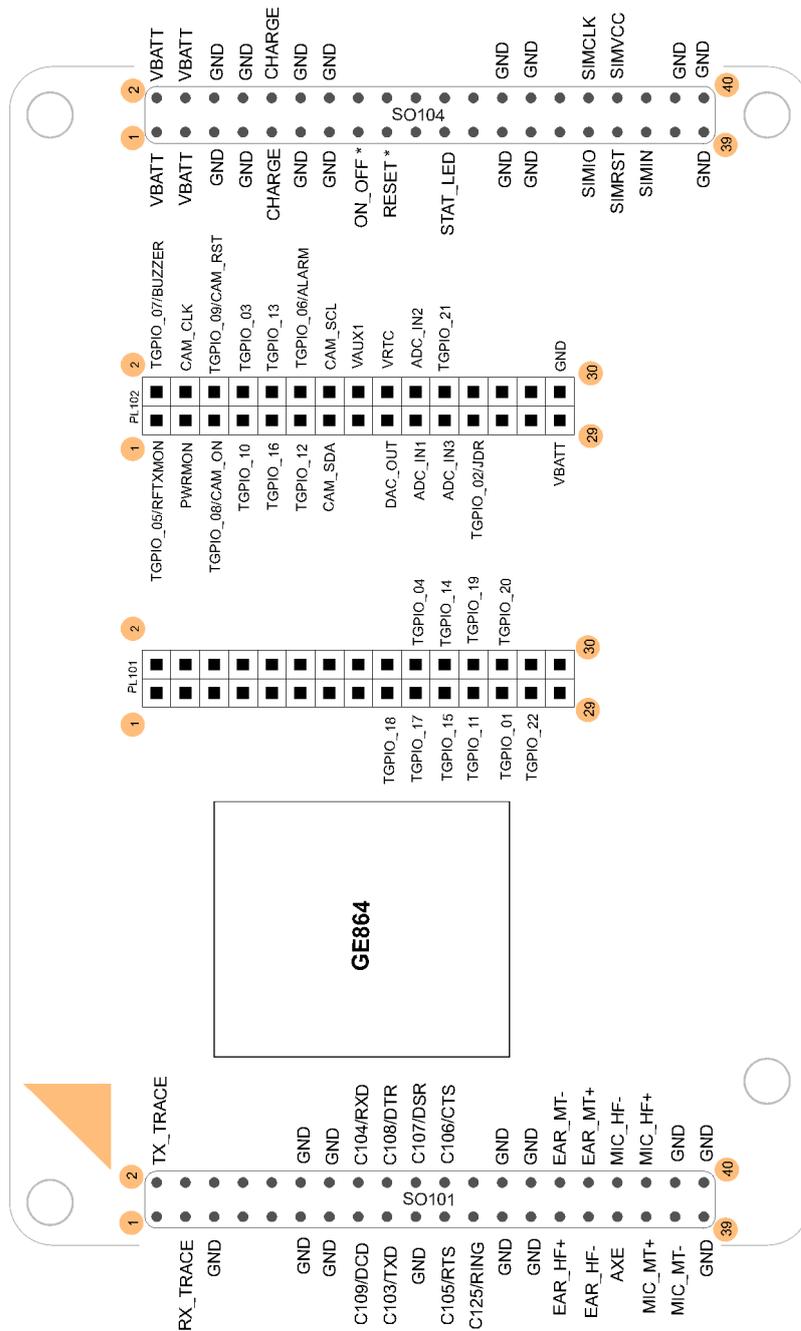


Figure 99: Position of GPIO ports on GE864 interface



### 35.1.5. GE864-GPS Interface (p/n 3990250822)

(Refer to schematic diagram 30373SE11439b)

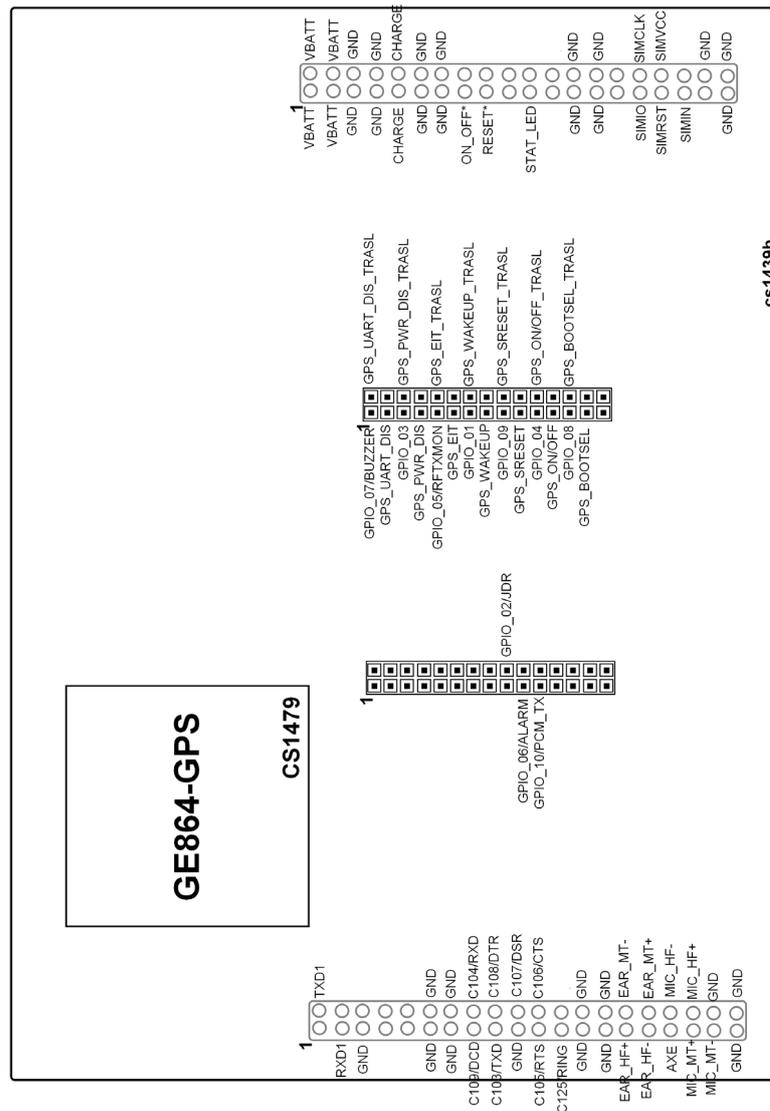


Figure 100: Position of GPIO ports on GE864-GPS interface





### 35.1.7. GC864 Interface

(Refer to schematic diagram 30276SE111203B)

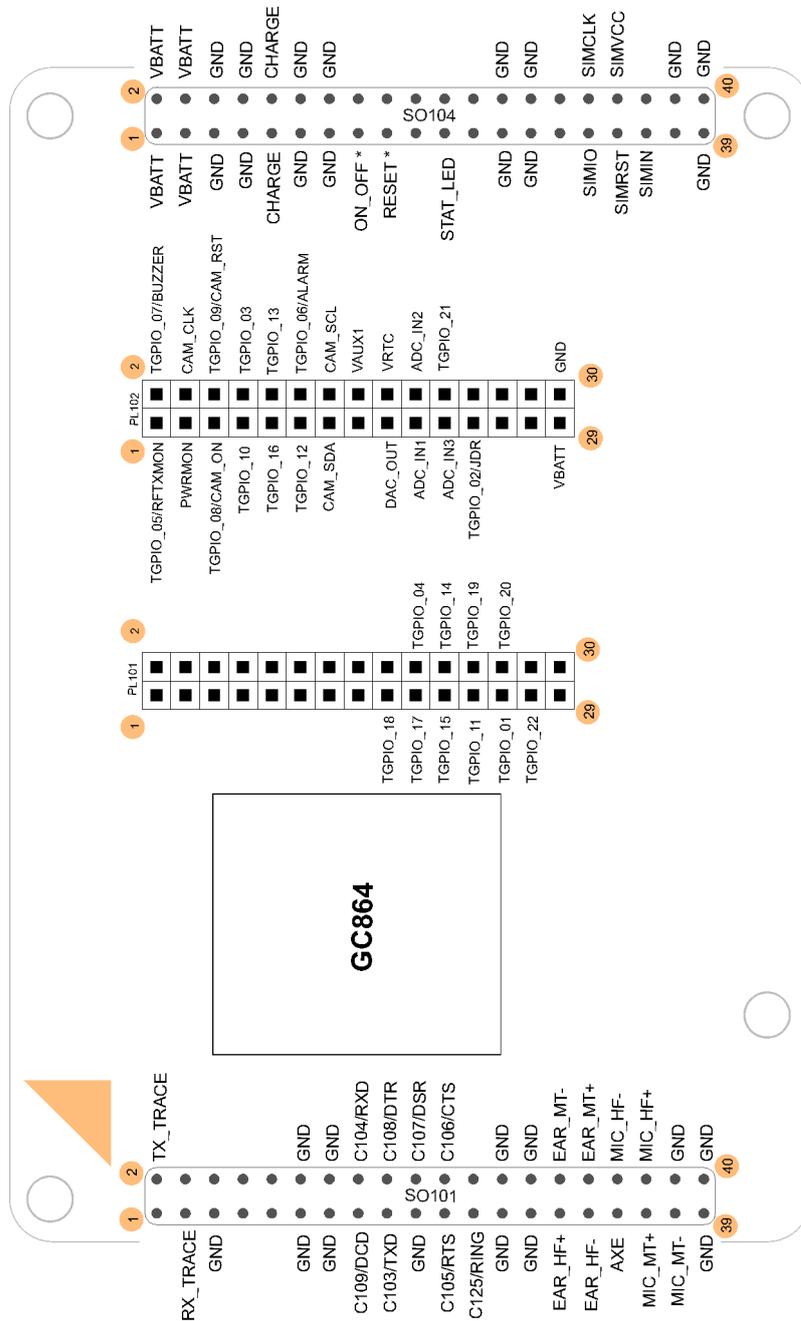


Figure 102. Position of GPIO ports on GC864 interface





### 35.1.9. UC864 Interface

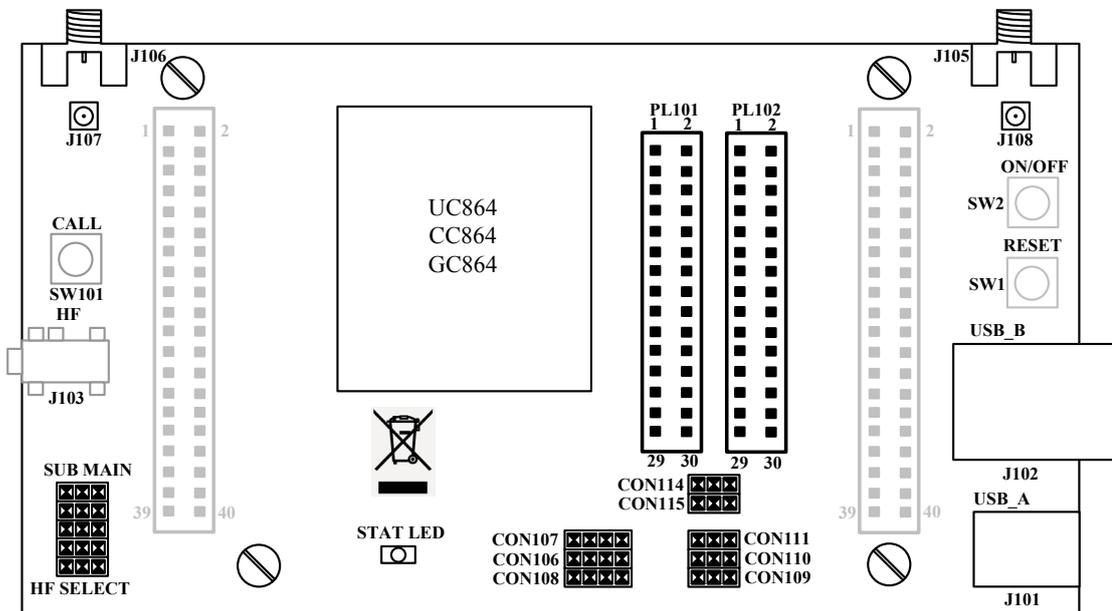


Figure 104: Position of GPIO on connectors of UC864 interface

PL101				PL102			
N.C	1	2	N.C	TGPIO_05/ RTXMON	1	2	TGPIO_07/ BUZZER
N.C	3	4	N.C	PWRMON	3	4	RESERVED
N.C	5	6	N.C	TGPIO_08	5	6	TGPIO_09
N.C	7	8	N.C	TGPIO_10/ PCM_TX	7	8	TGPIO_03
N.C	9	10	N.C	TGPIO_16	9	10	TGPIO_13
N.C	11	12	N.C	TGPIO_12	11	12	TGPIO_06/ ALARM
N.C	13	14	N.C	PCM_CLOCK	13	14	USB_ID
N.C	15	16	N.C	N.C.	15	16	VAUX1
TGPIO_18/ PCM_RX	17	18	N.C	DAC_OUT	17	18	VRTC
TGPIO_17/ PCM_SYNC	19	20	TGPIO_04	ADC_IN1	19	20	ADC_IN2
TGPIO_15	21	22	TGPIO_14	ADC_IN3	21	22	TGPIO_21
TGPIO_11	23	24	TGPIO_19	TGPIO_02/JDR	23	24	N.C
TGPIO_01	25	26	TGPIO_20	N.C	25	26	N.C
TGPIO_22	27	28	N.C	RESERVED	27	28	RESERVED
N.C	29	30	N.C	VBATT	29	30	GND

Table 30 GPIO pin positioning



### 35.1.10. HE910 Interface

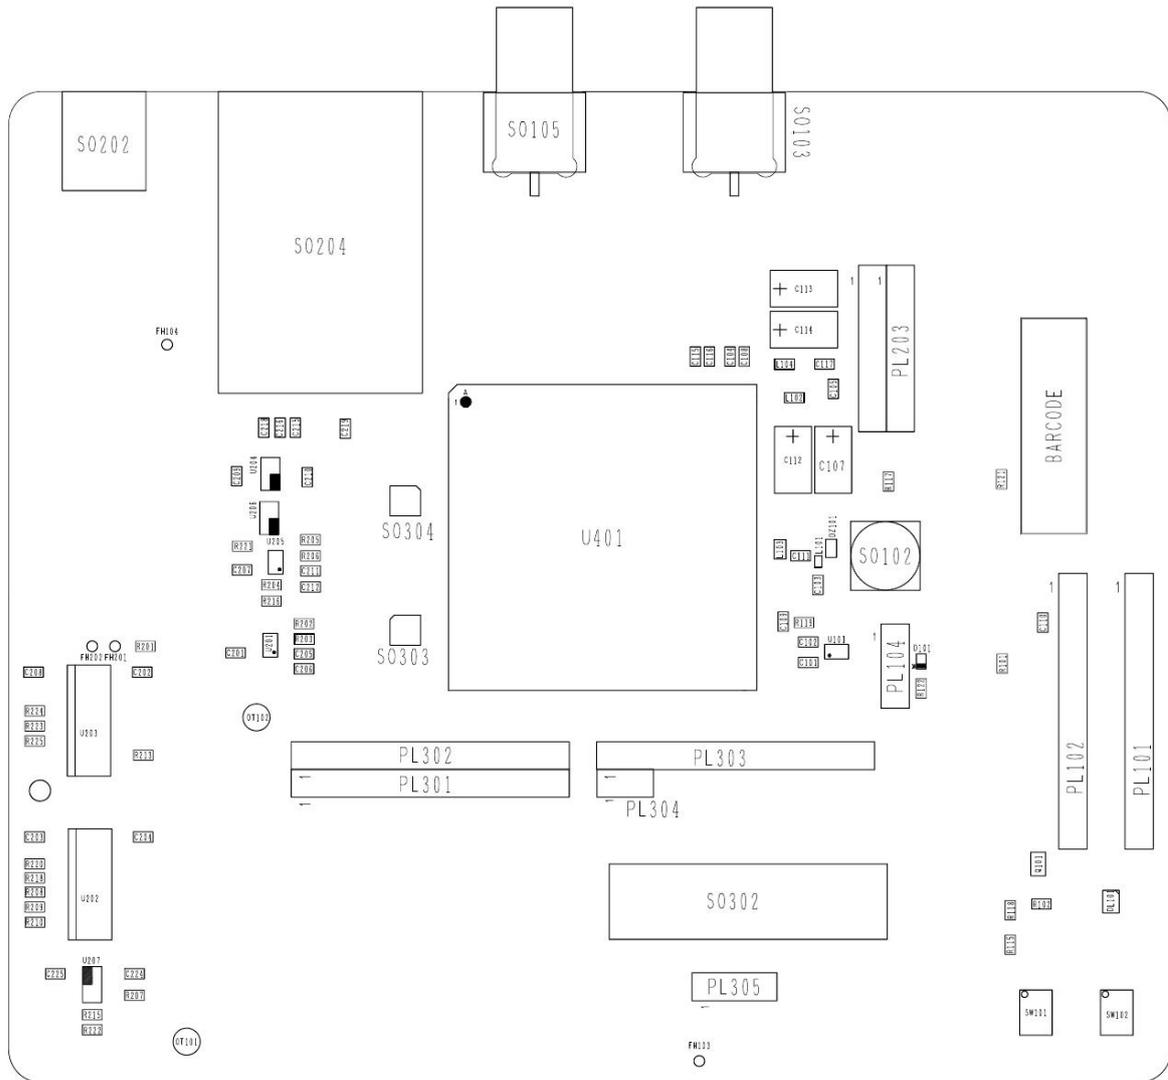


Figure 105: Position of GPIO on connectors of HE910 interface





### 35.1.11. GE910 Interface

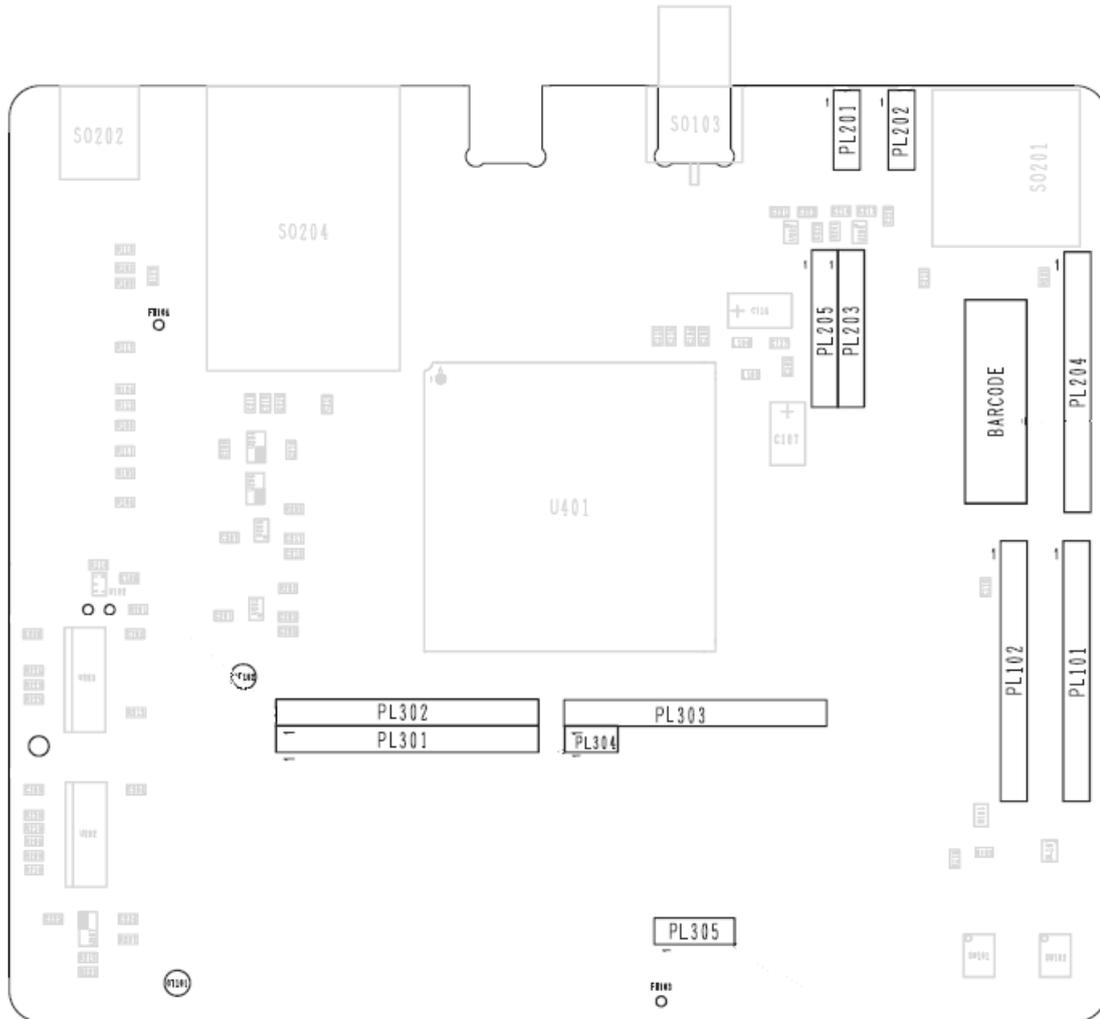


Figure 106: Position of GPIO on connectors of GE910 interface





### 35.1.12. DE910 Interface

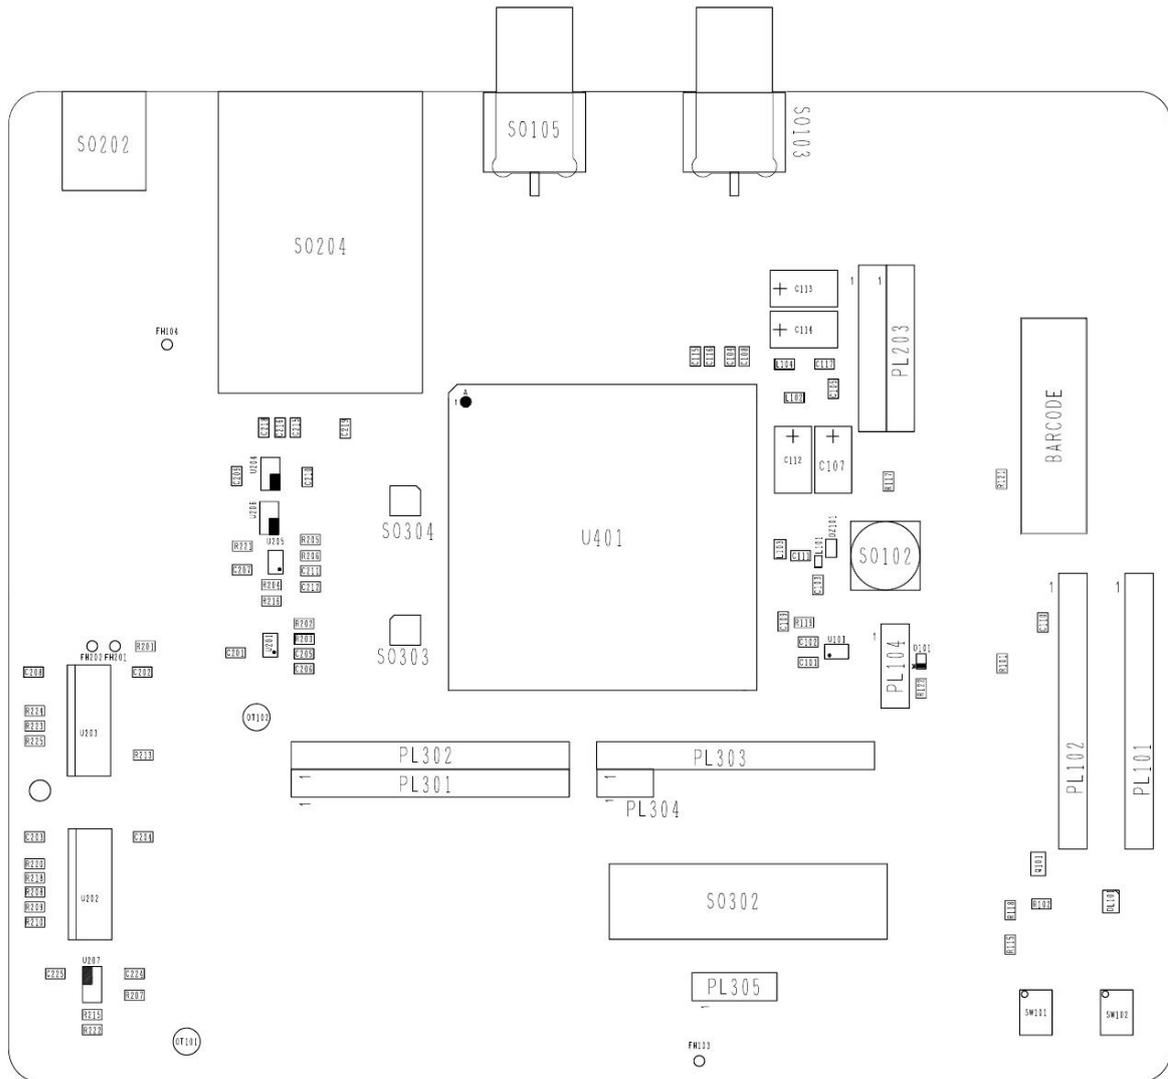


Figure 107: Position of GPIO on connectors of DE910 interface



The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)

PL305		
Pin#	Pin Name	Description
1	-	Reserved
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



### 35.1.13. CE910 Interface

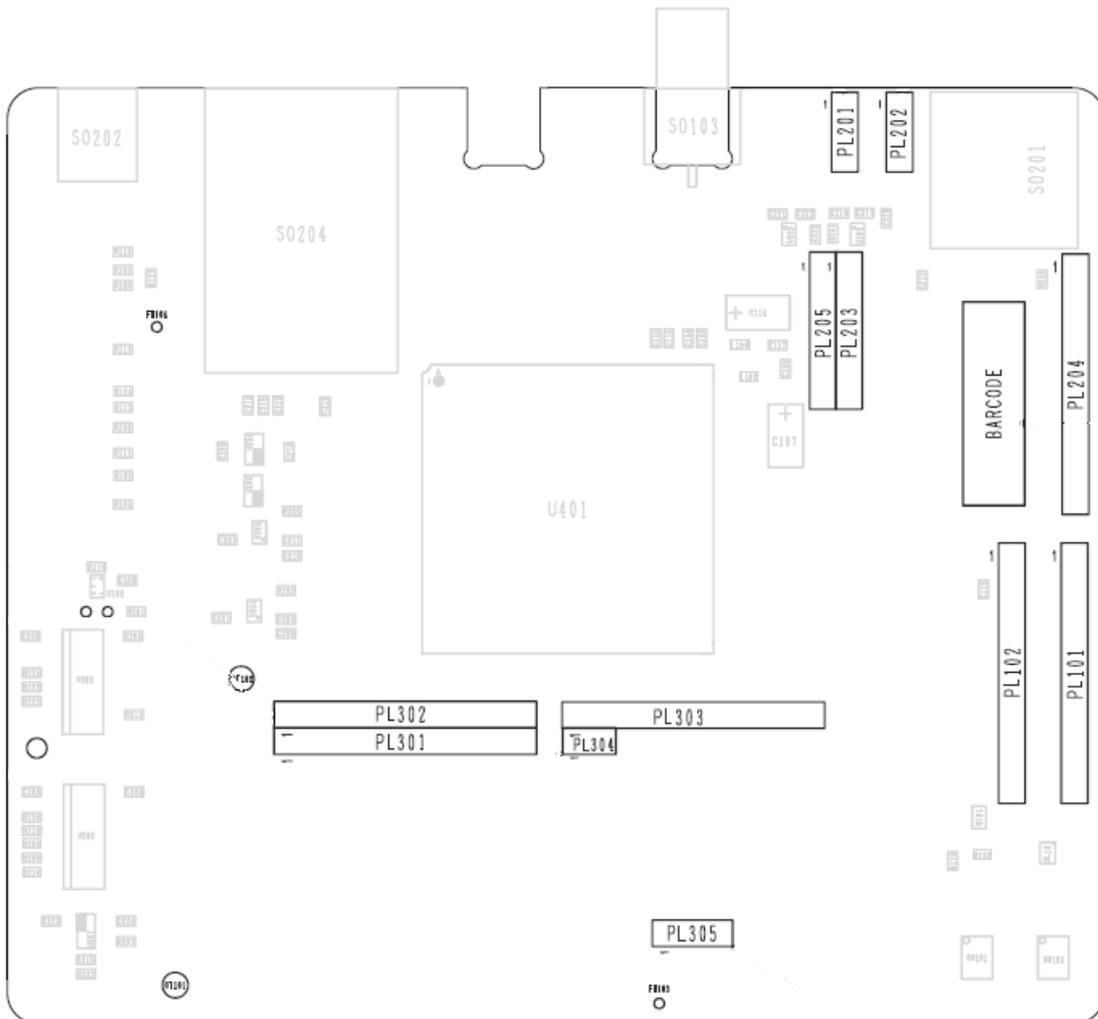


Figure 108: Position of GPIO on connectors of CE910 interface



The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)



### 35.1.14. GL865 V3 Interface

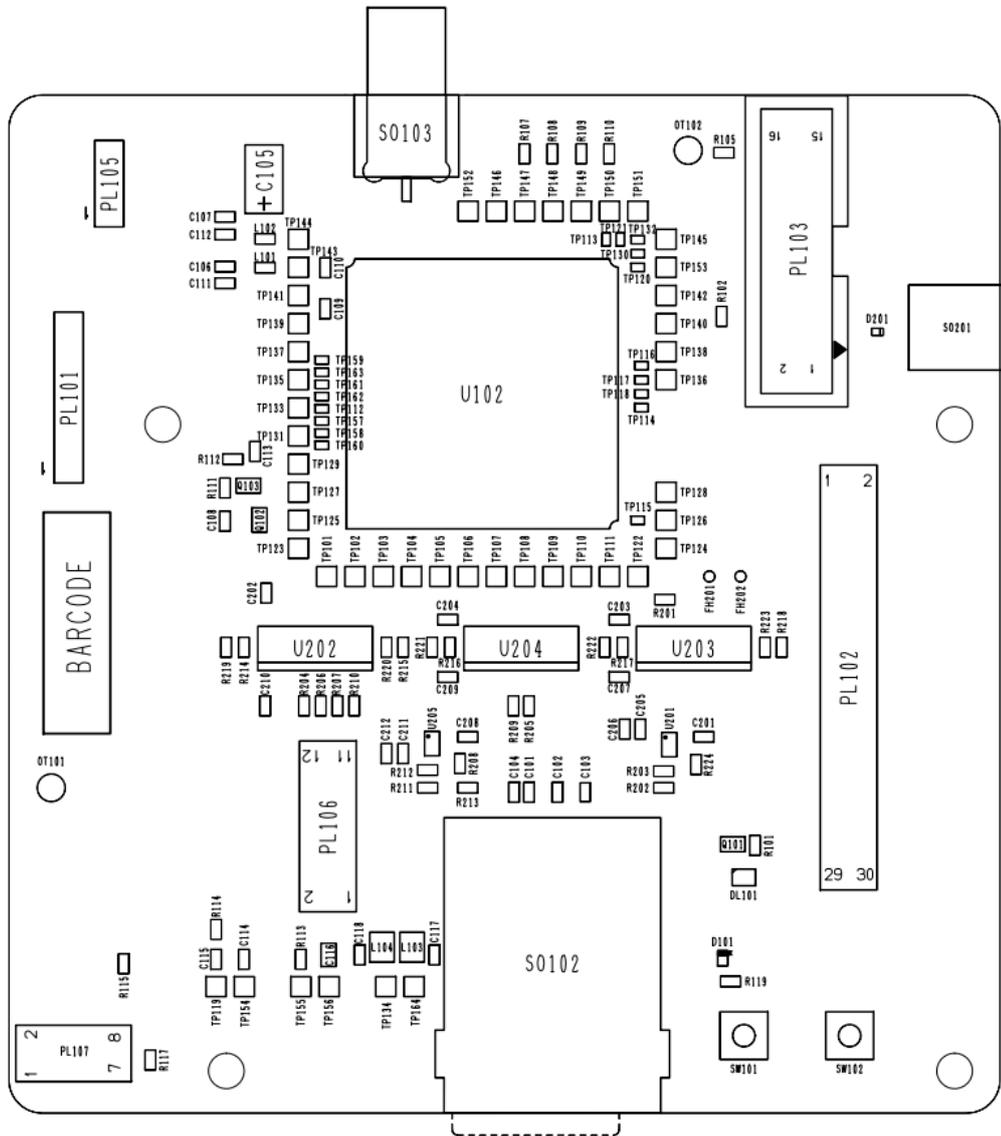


Figure 109: Position of GPIO on connectors of GL865 V3 interface



The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 6 (PL102) / Pin 4 (PL106)
GPIO_02	Pin 23 (PL102) / Pin 2 (PL106)
GPIO_03	Pin 8 (PL102) / Pin 6 (PL106)
GPIO_04	Pin 7 (PL102) / Pin 8 (PL106)
GPIO_05	Pin 1 (PL102)
GPIO_06	Pin 12 (PL102)
GPIO_07	Pin 2 (PL102) / Pin 7 (PL106) / Pin 3 (PL101)
GPIO_08	Pin 5 (PL102) / Pin 9 (PL106) / Pin 4 (PL101)




## 36. SCHEMATICS


In the following paragraphs the user can find the schematics related to all EVK2 boards, therefore to the Mother Board, to the Interface Boards and to the Extension Boards.





### 36.1. EVK2 Mother Board

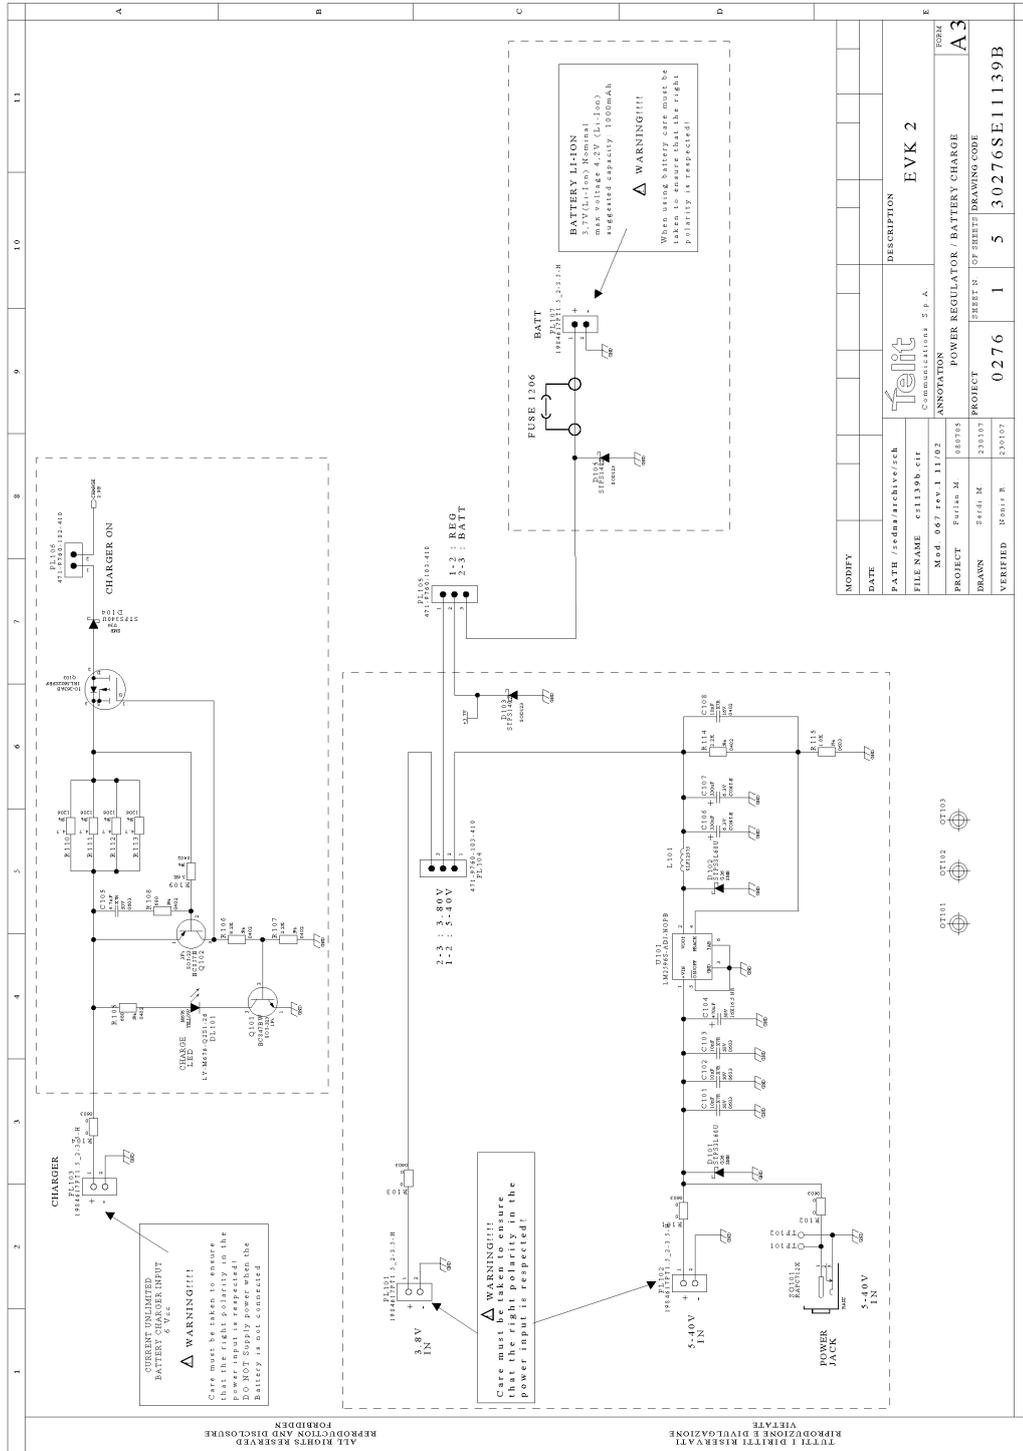



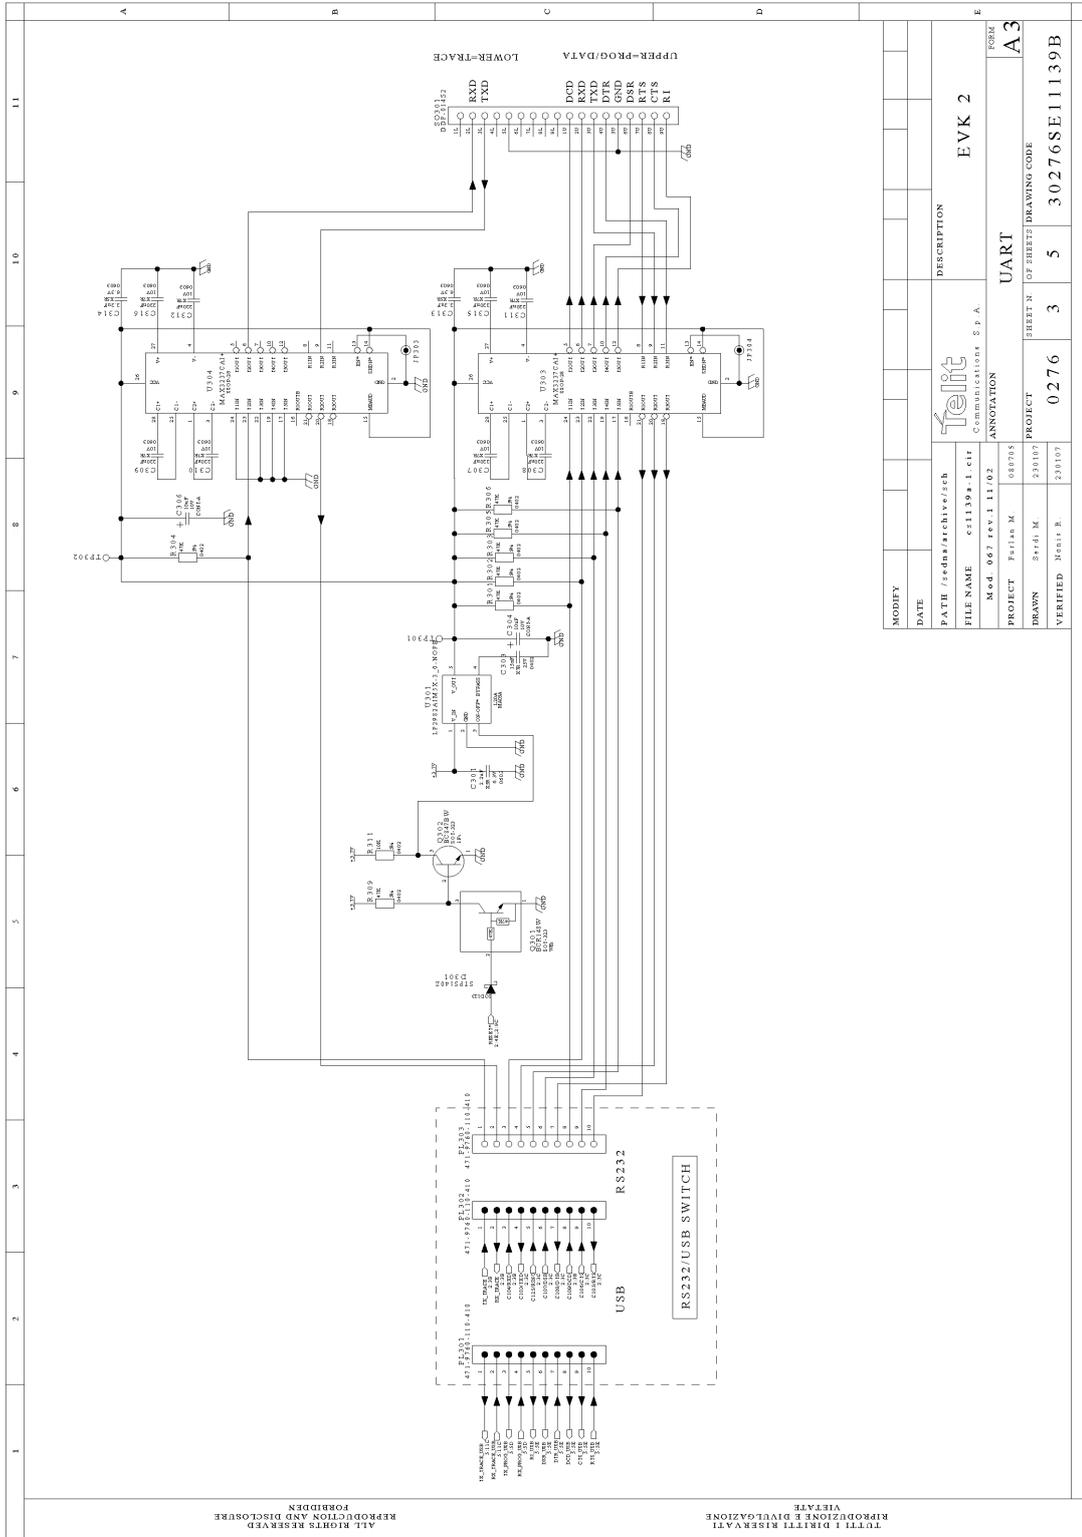

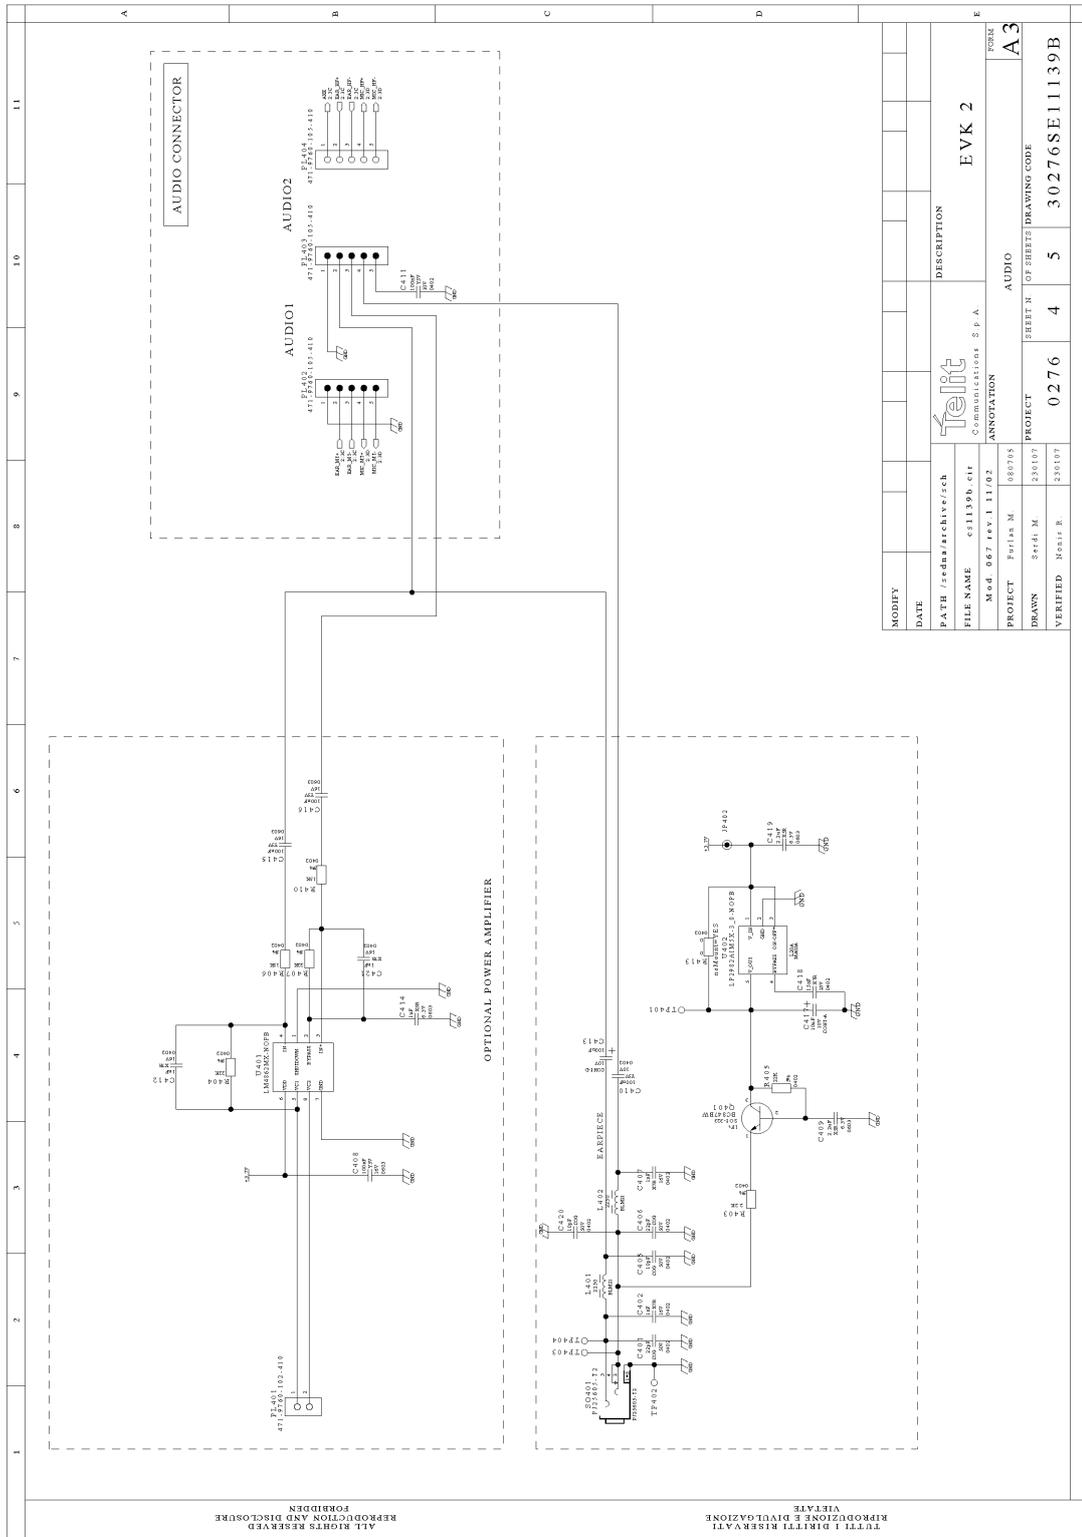

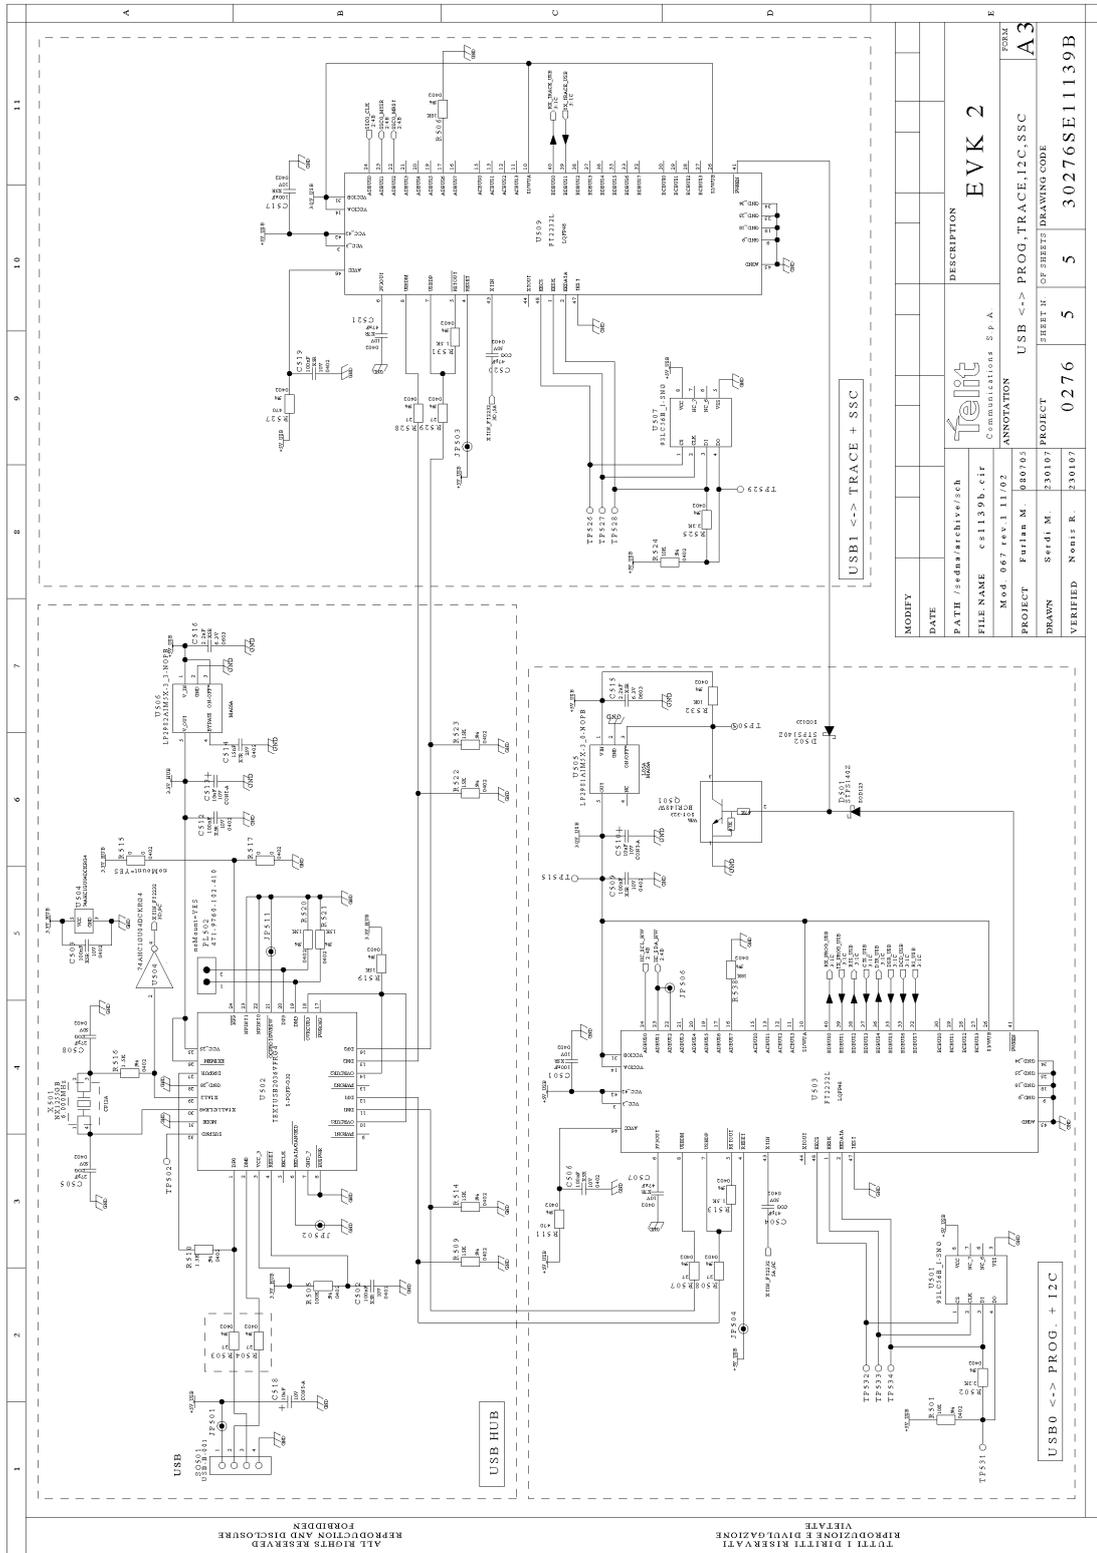













### 36.6. GE864 Interface board – V2

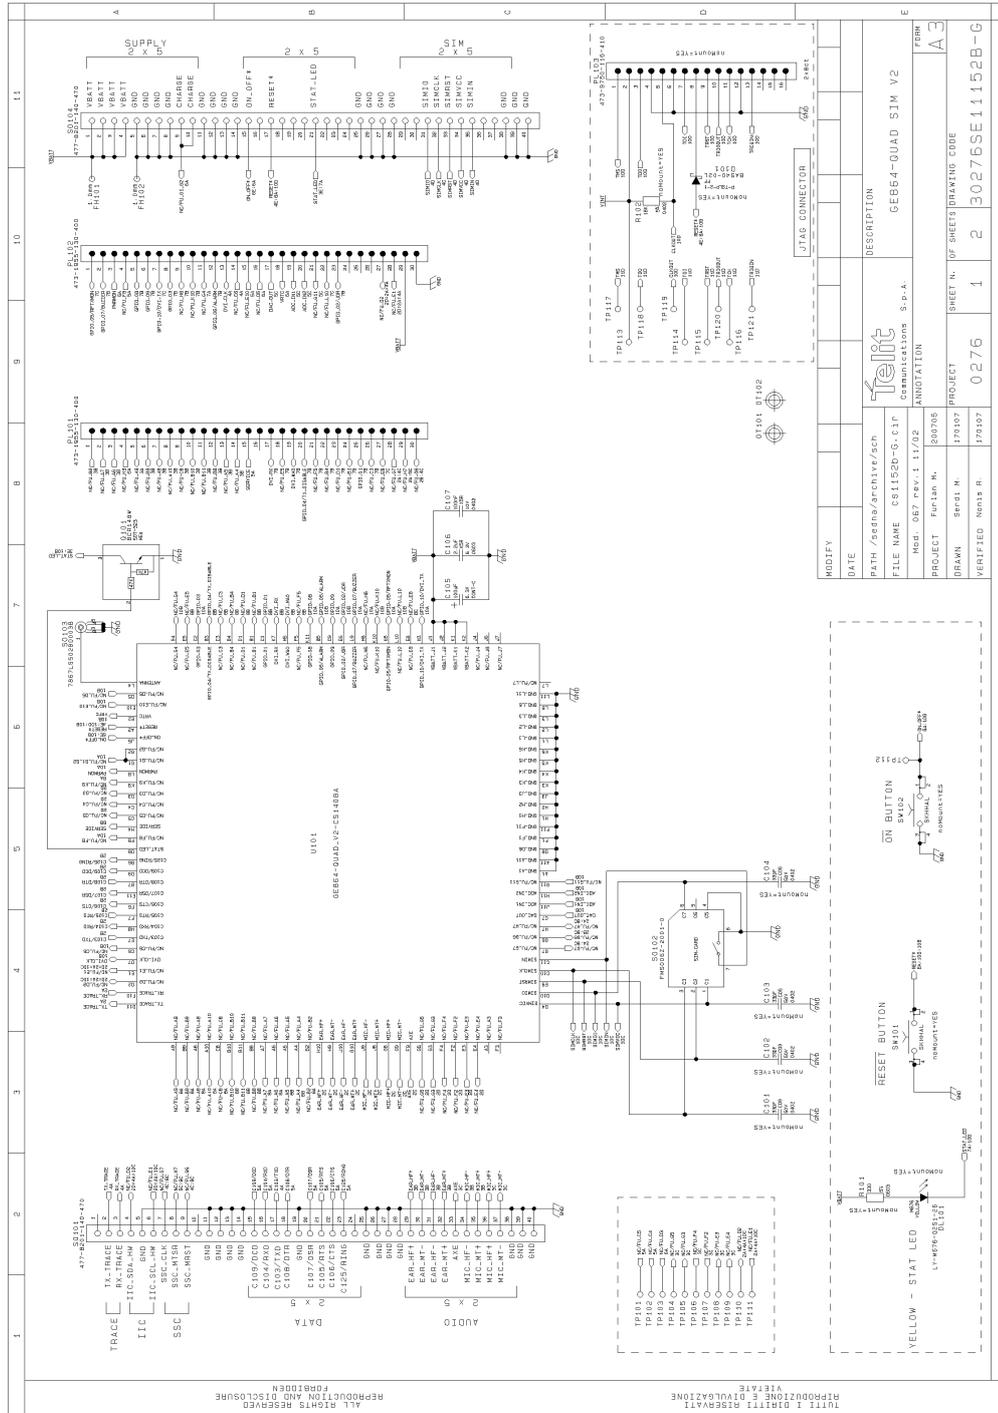





# 36.8. GE865/SE867-AGPS Interface board

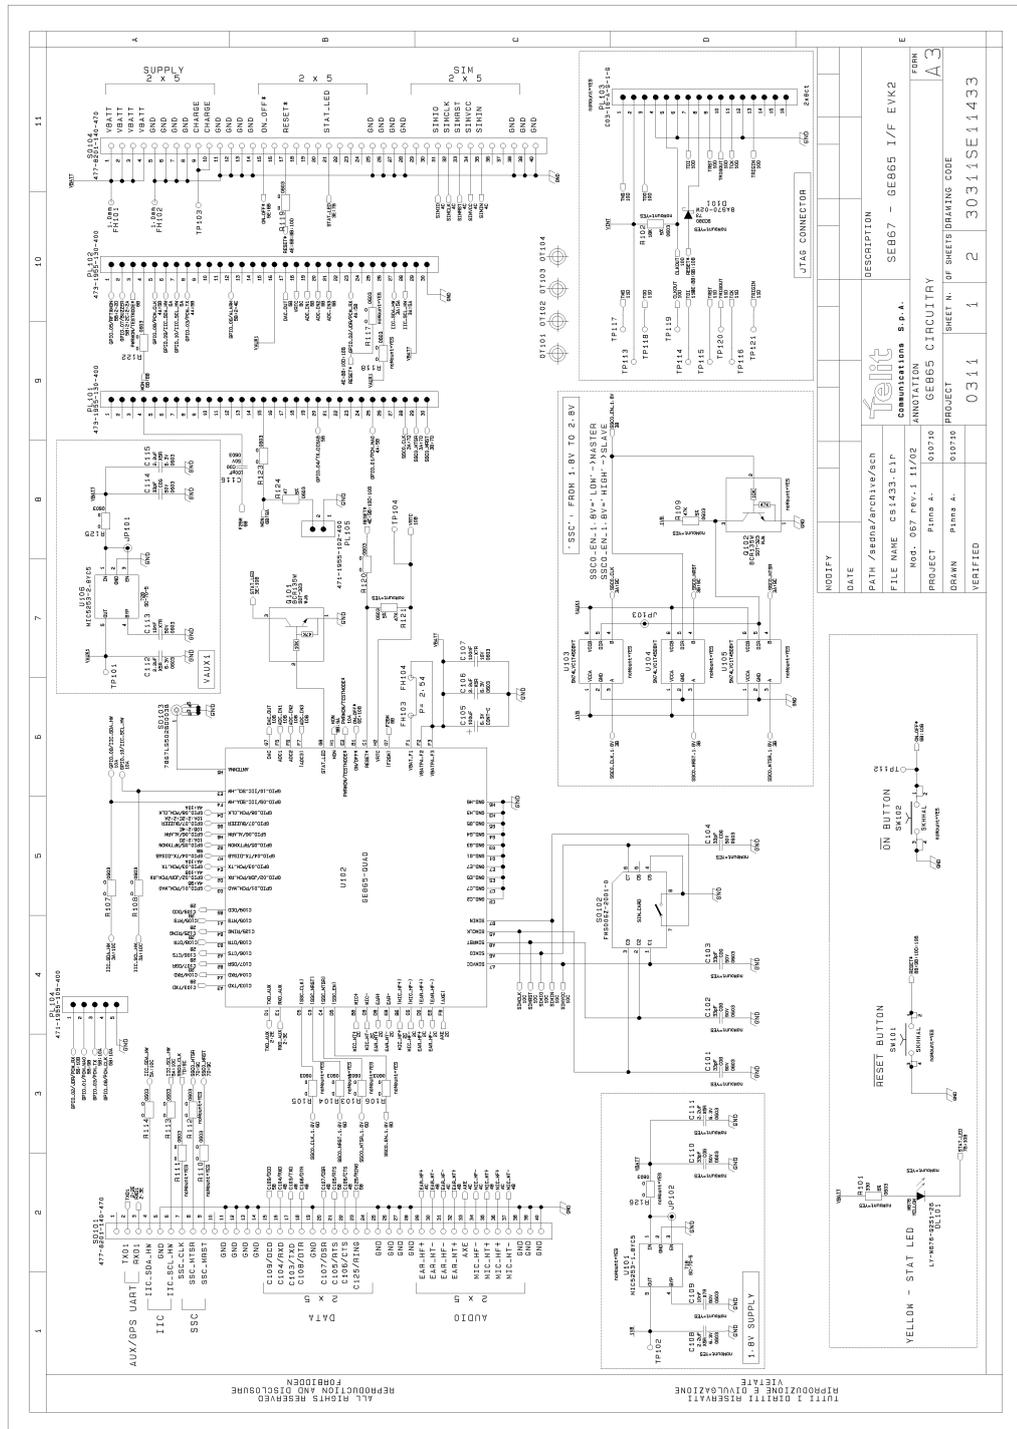










### 36.11. GC864 Interface board

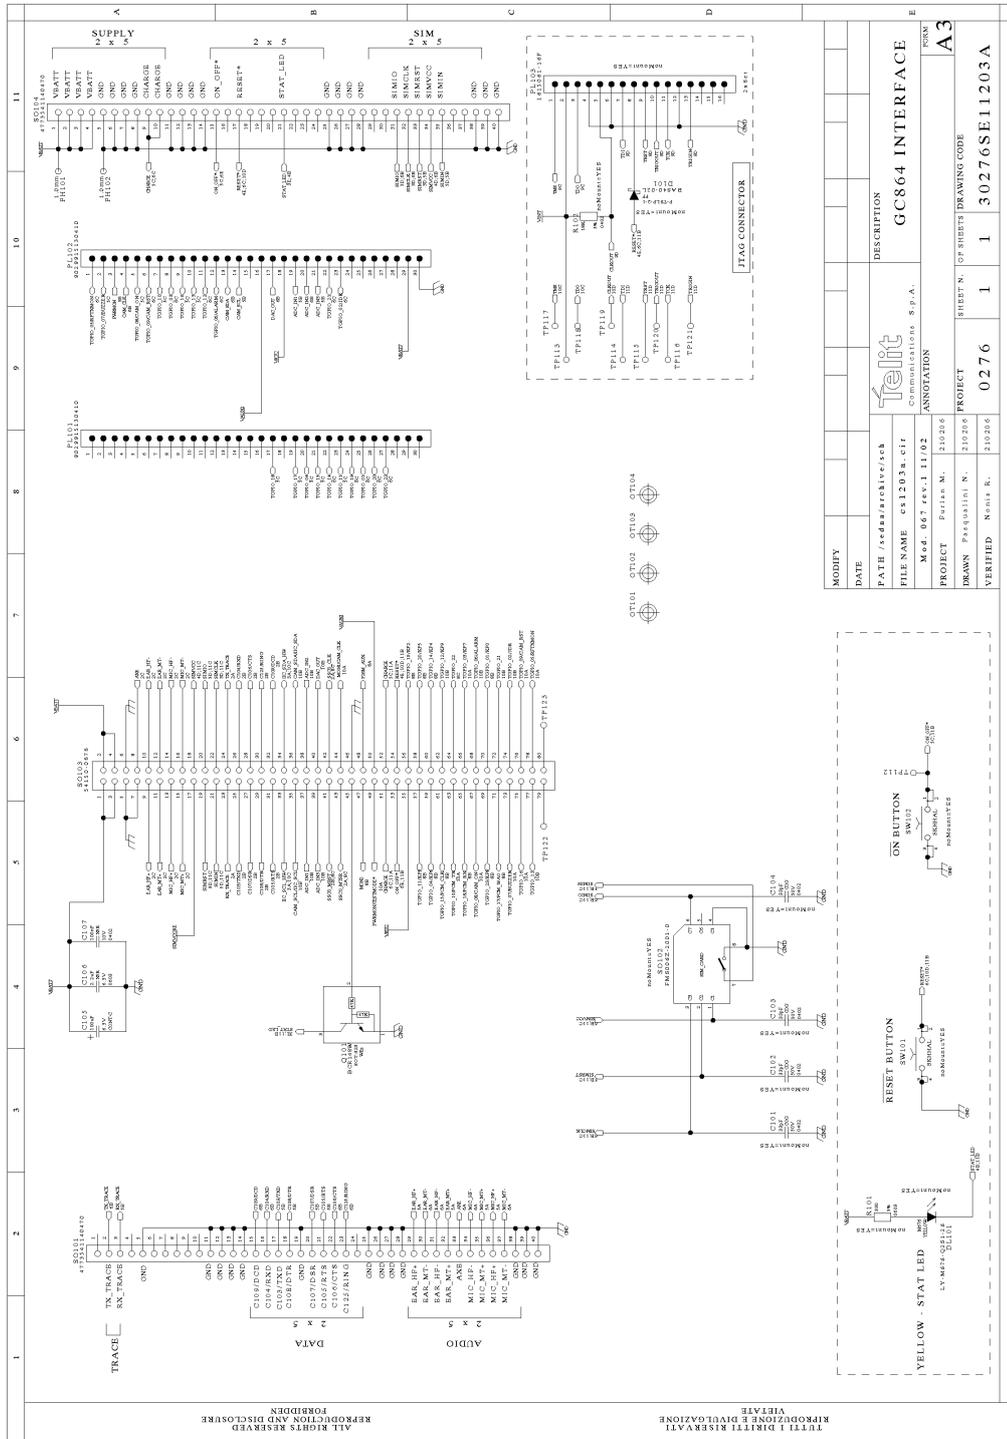




### 36.13. UC864 Interface board

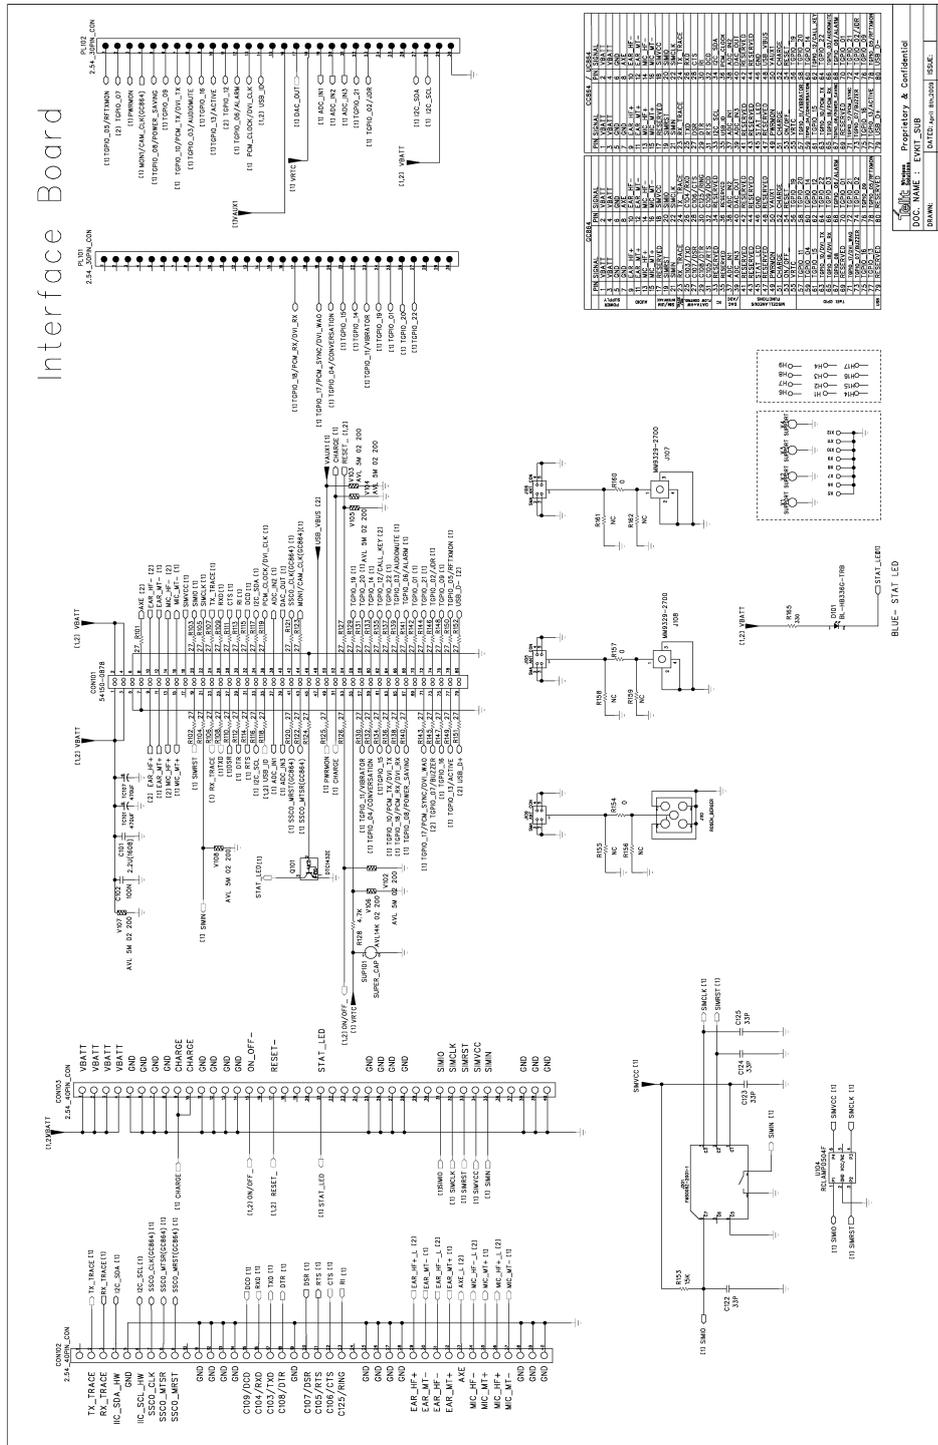

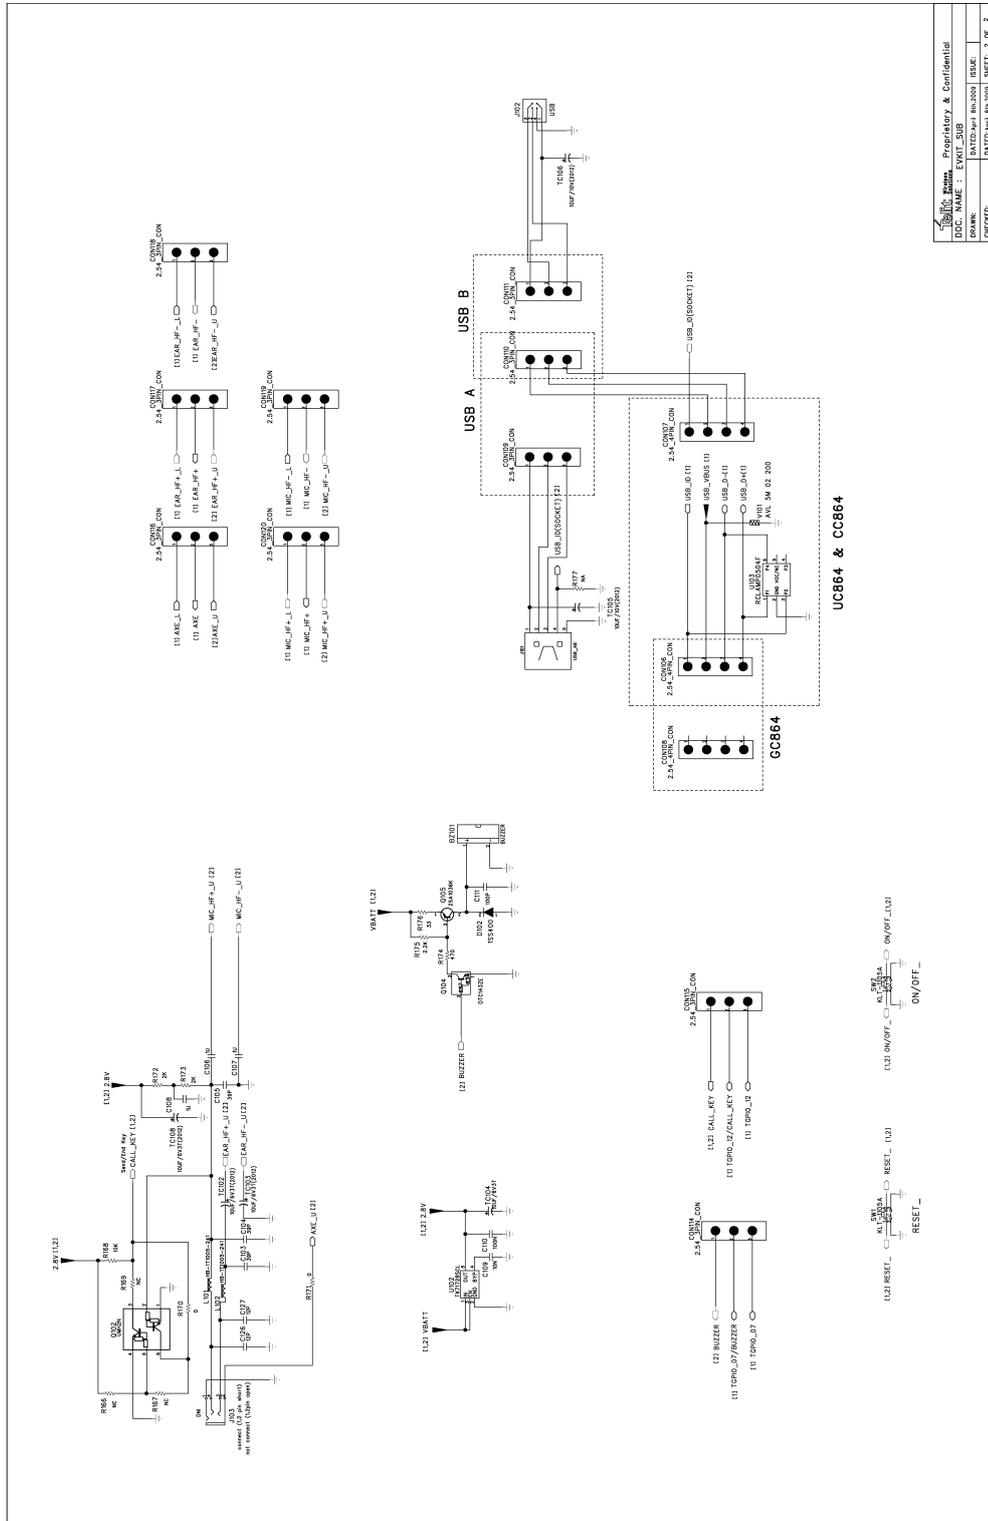


### 36.14. HE910/UE910 Interface board

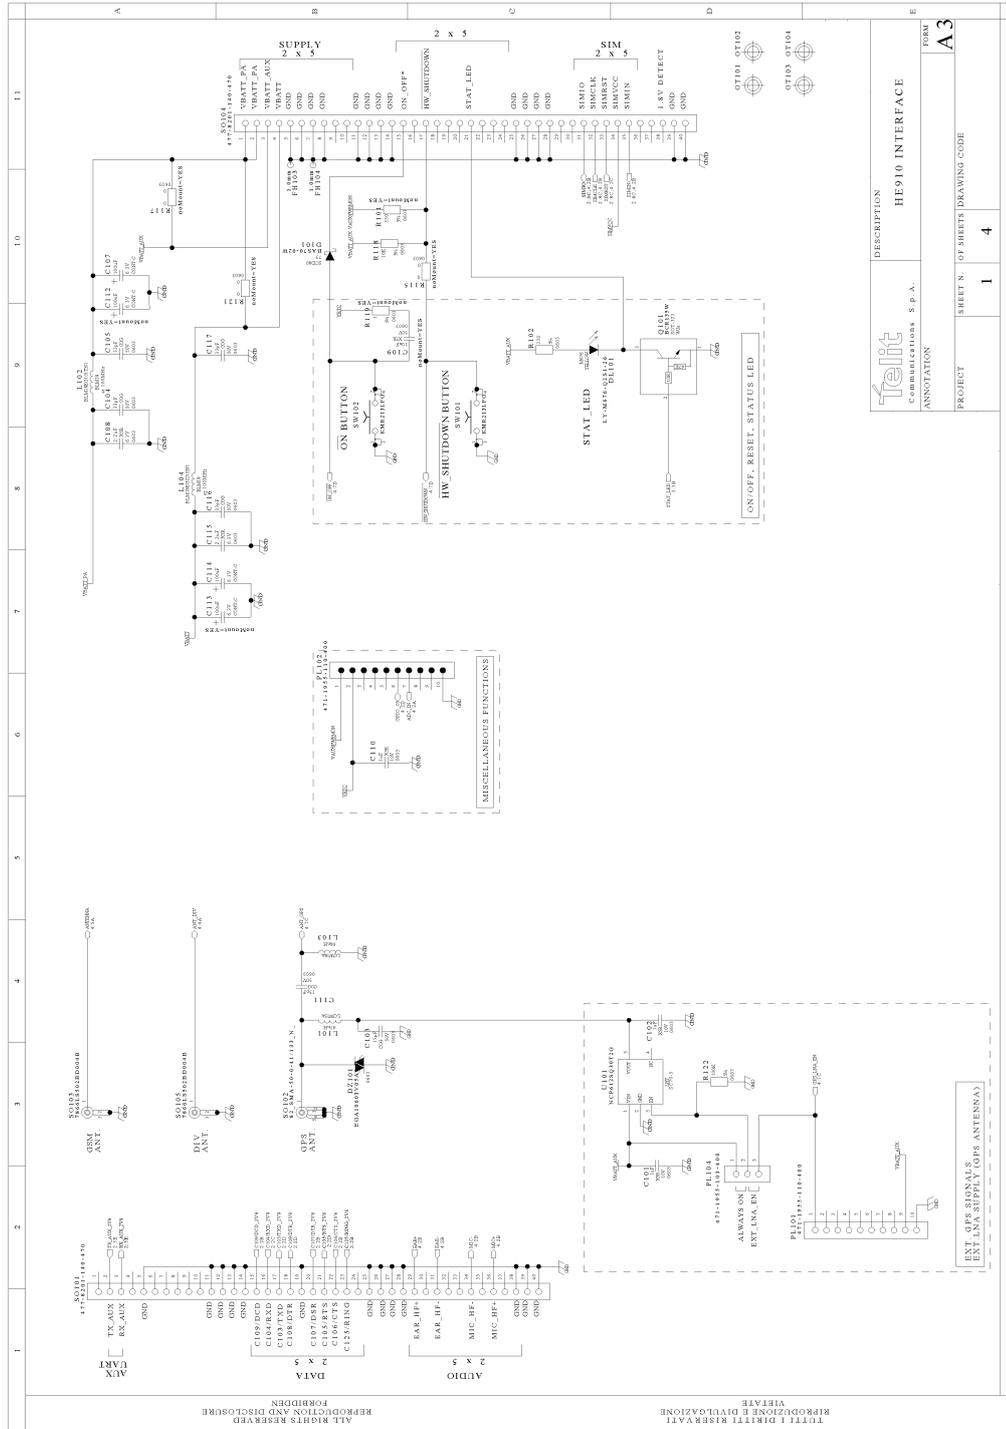







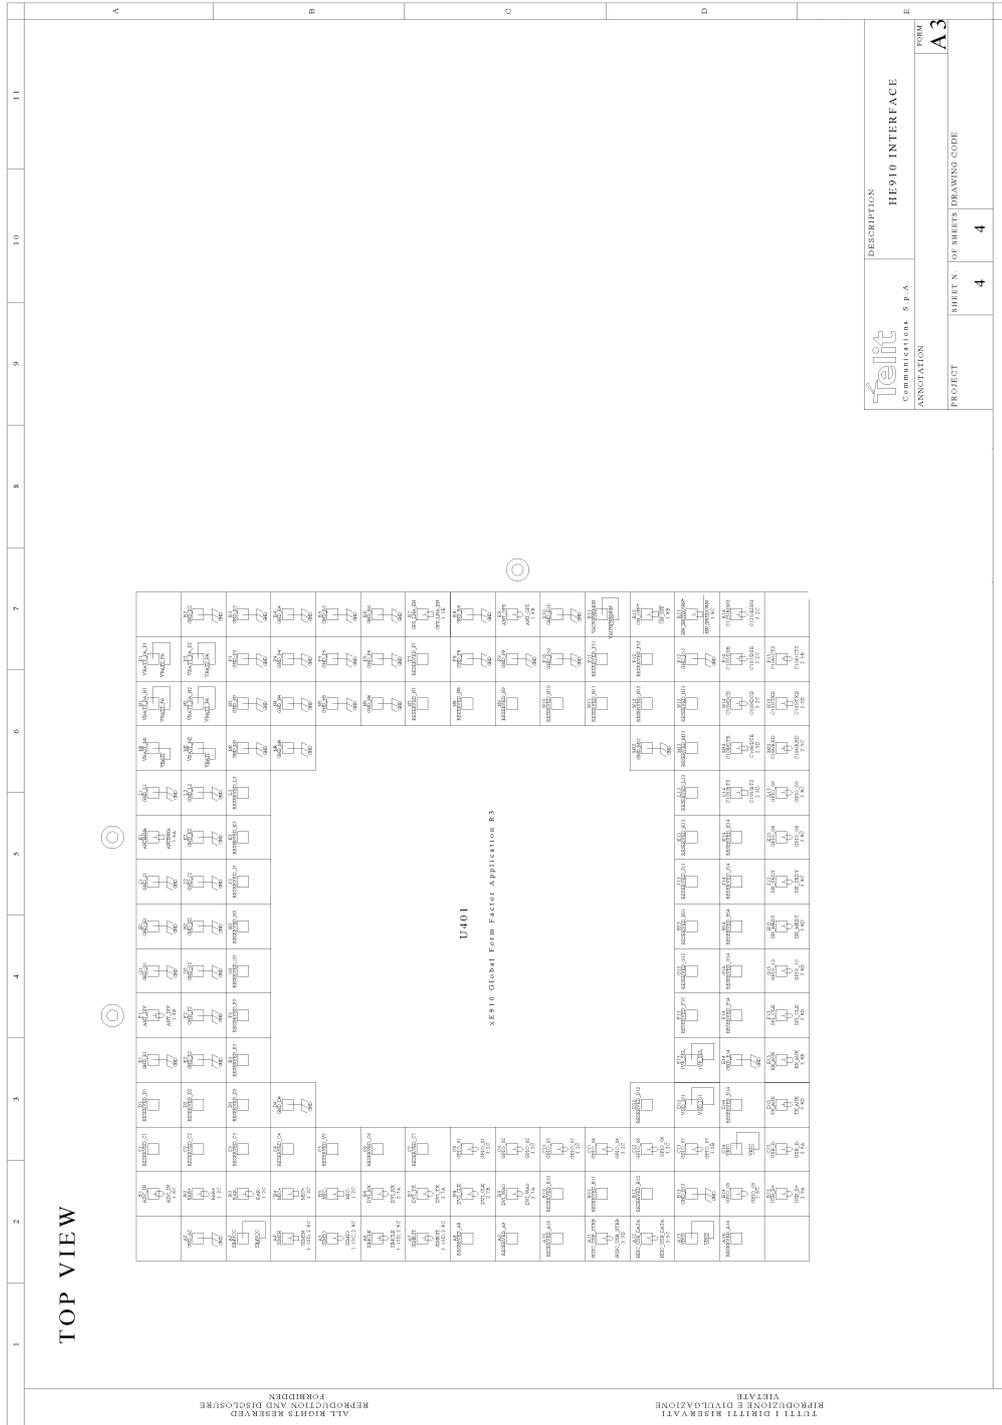






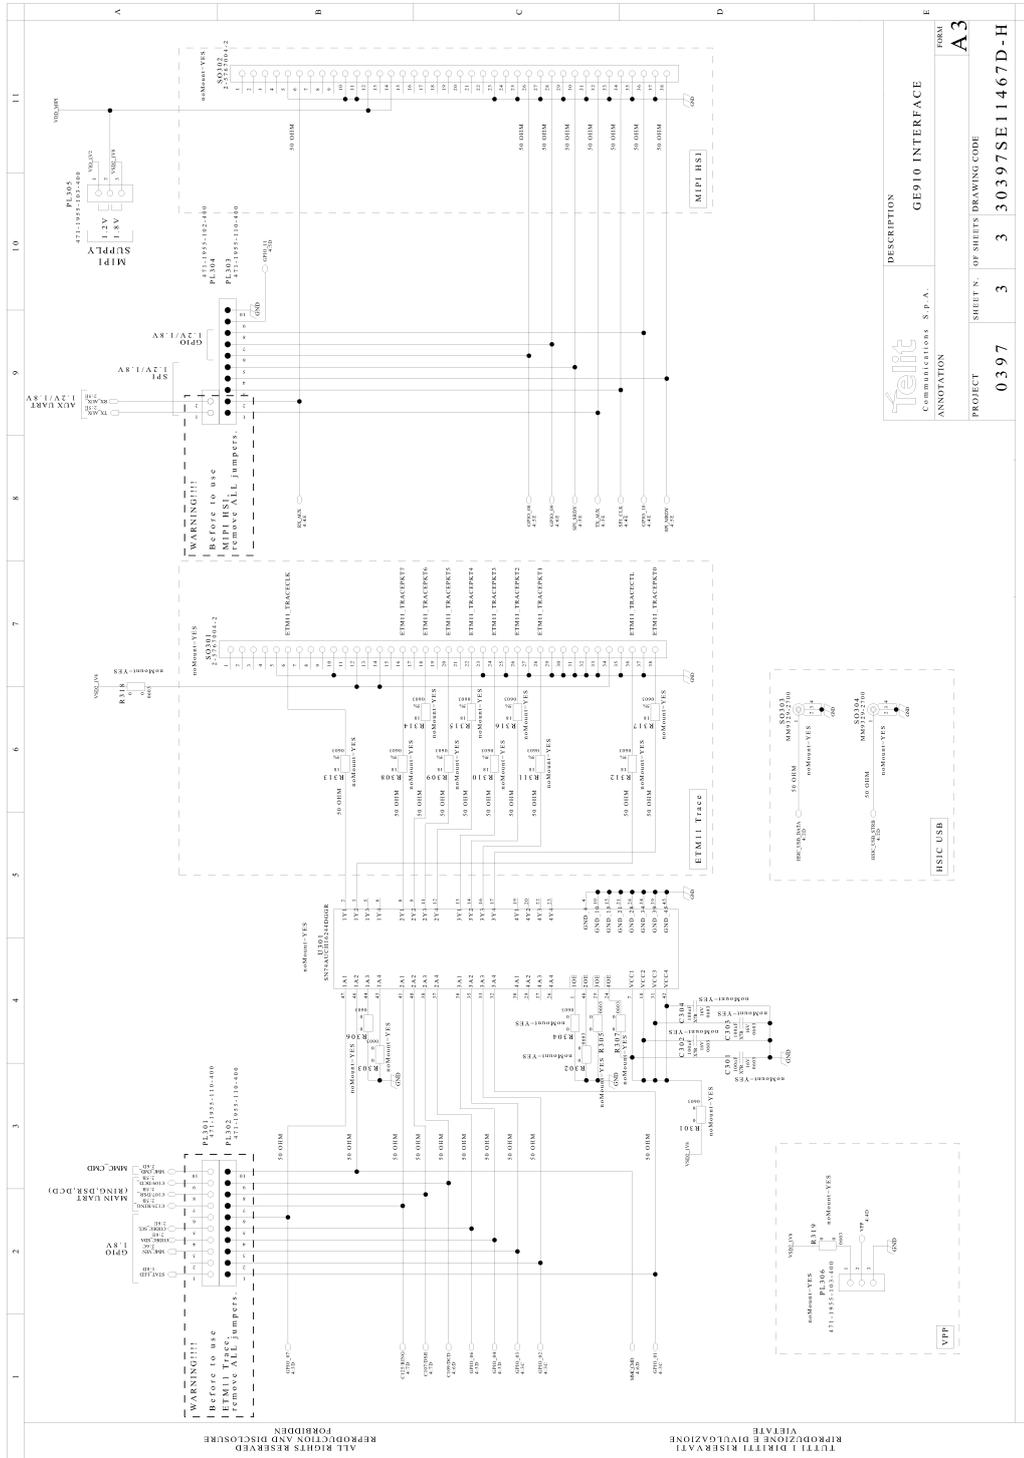

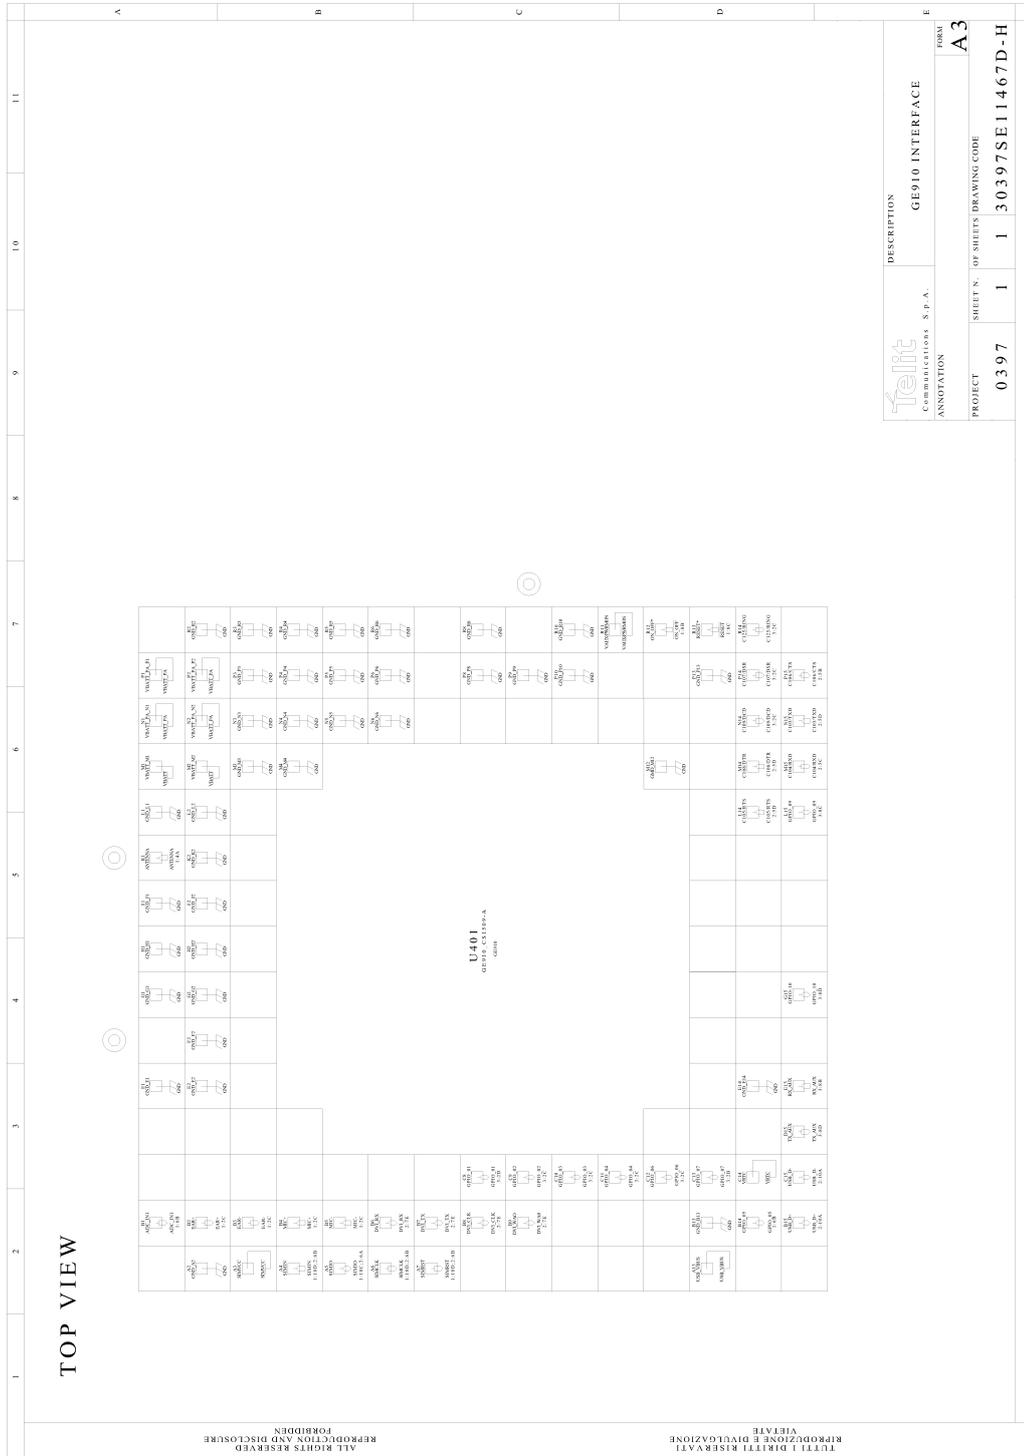


### 36.16. GE910-GNSS Interface board

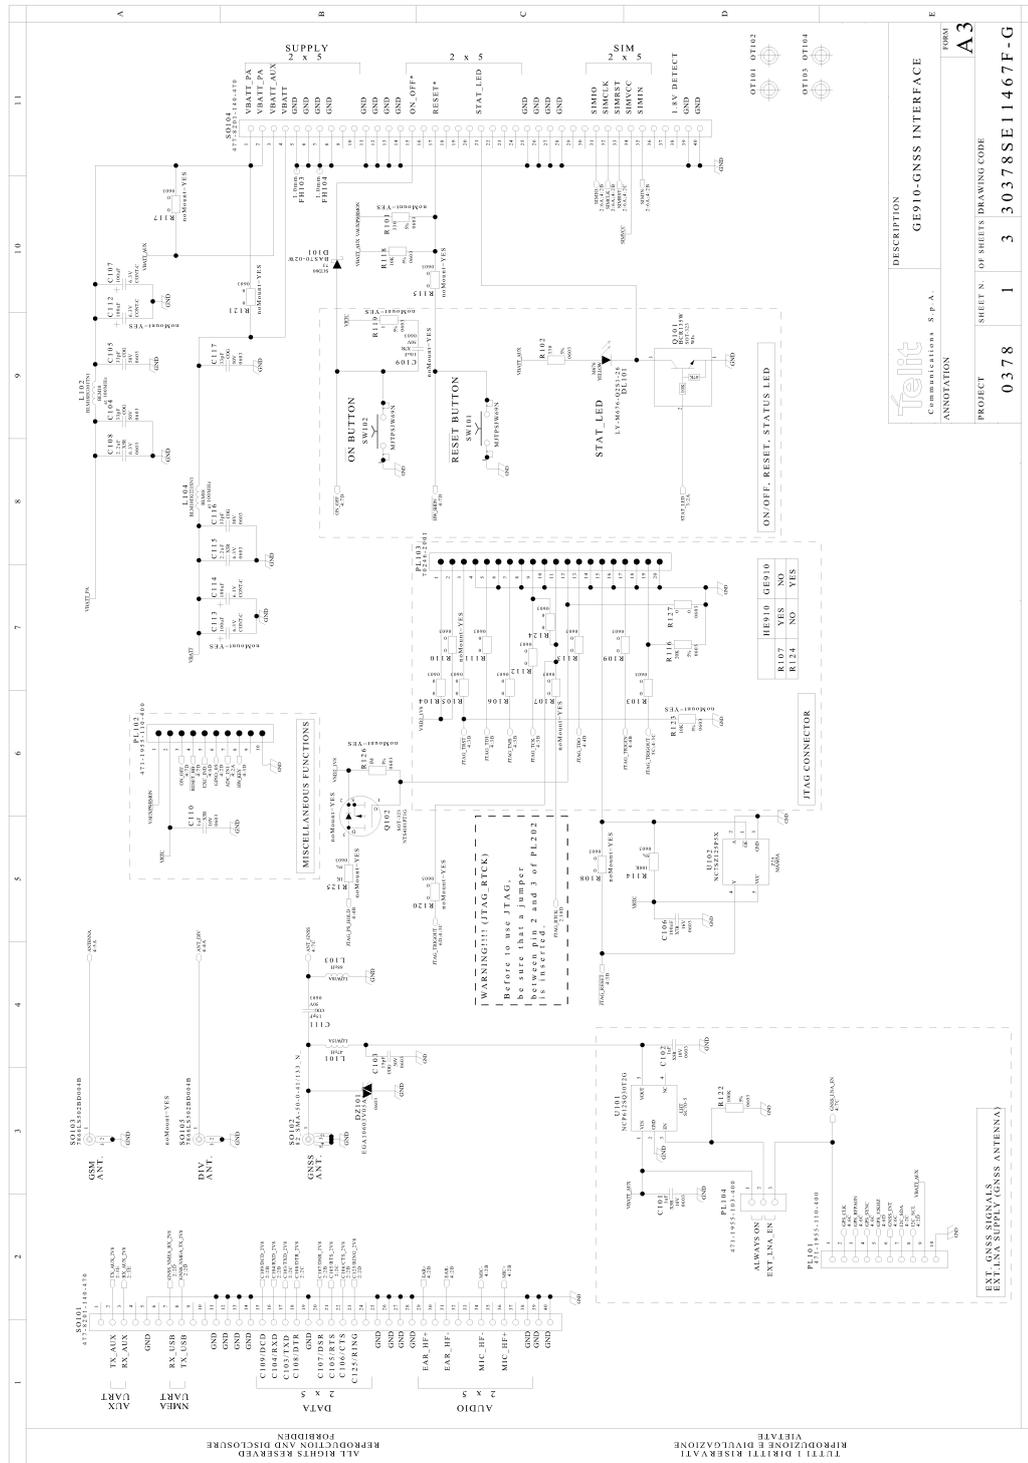


DESCRIPTION	GE910-GNSS INTERFACE
PROJECT	0378
OF SHEETS	1
DRAWING CODE	30378SE11467F-G
SHEET N.	A3




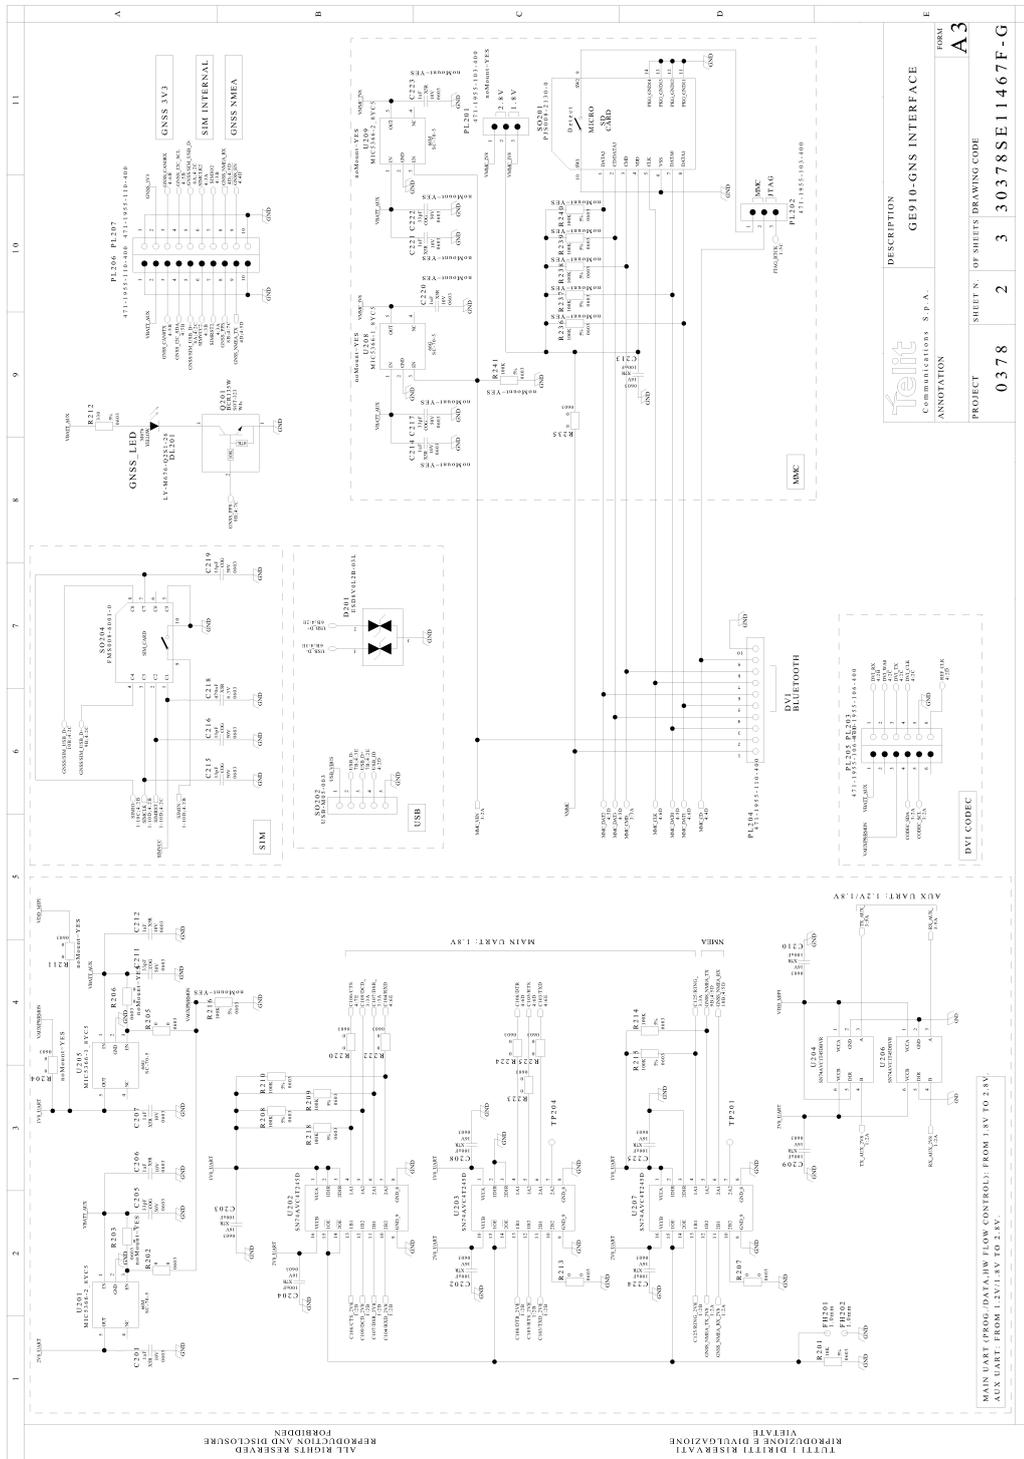




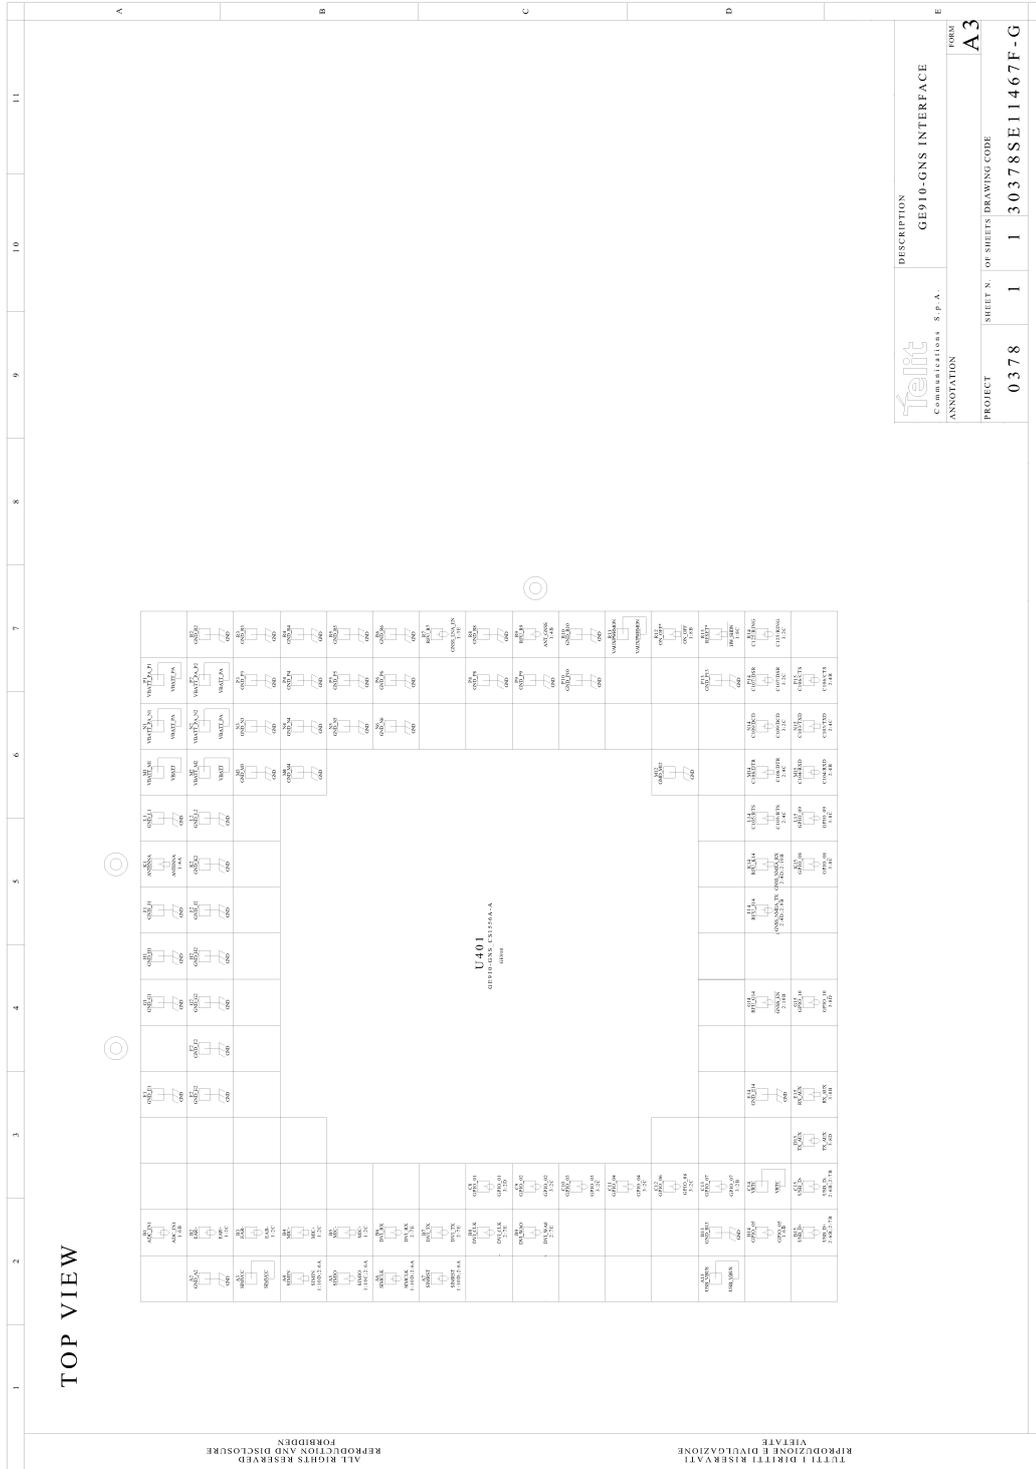




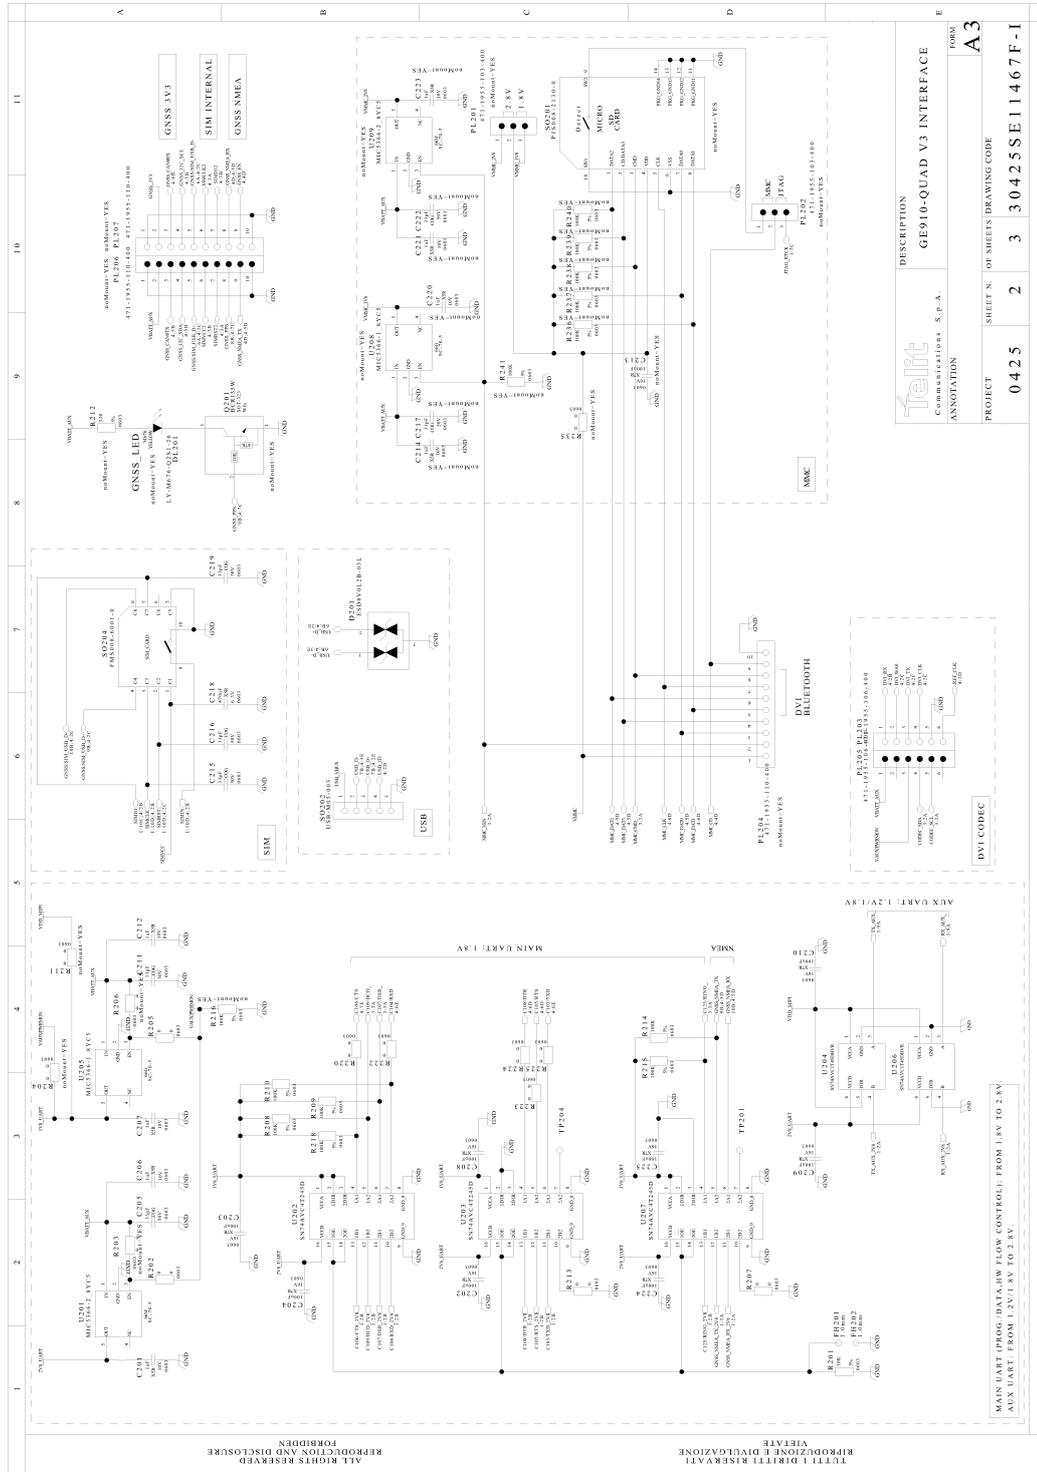




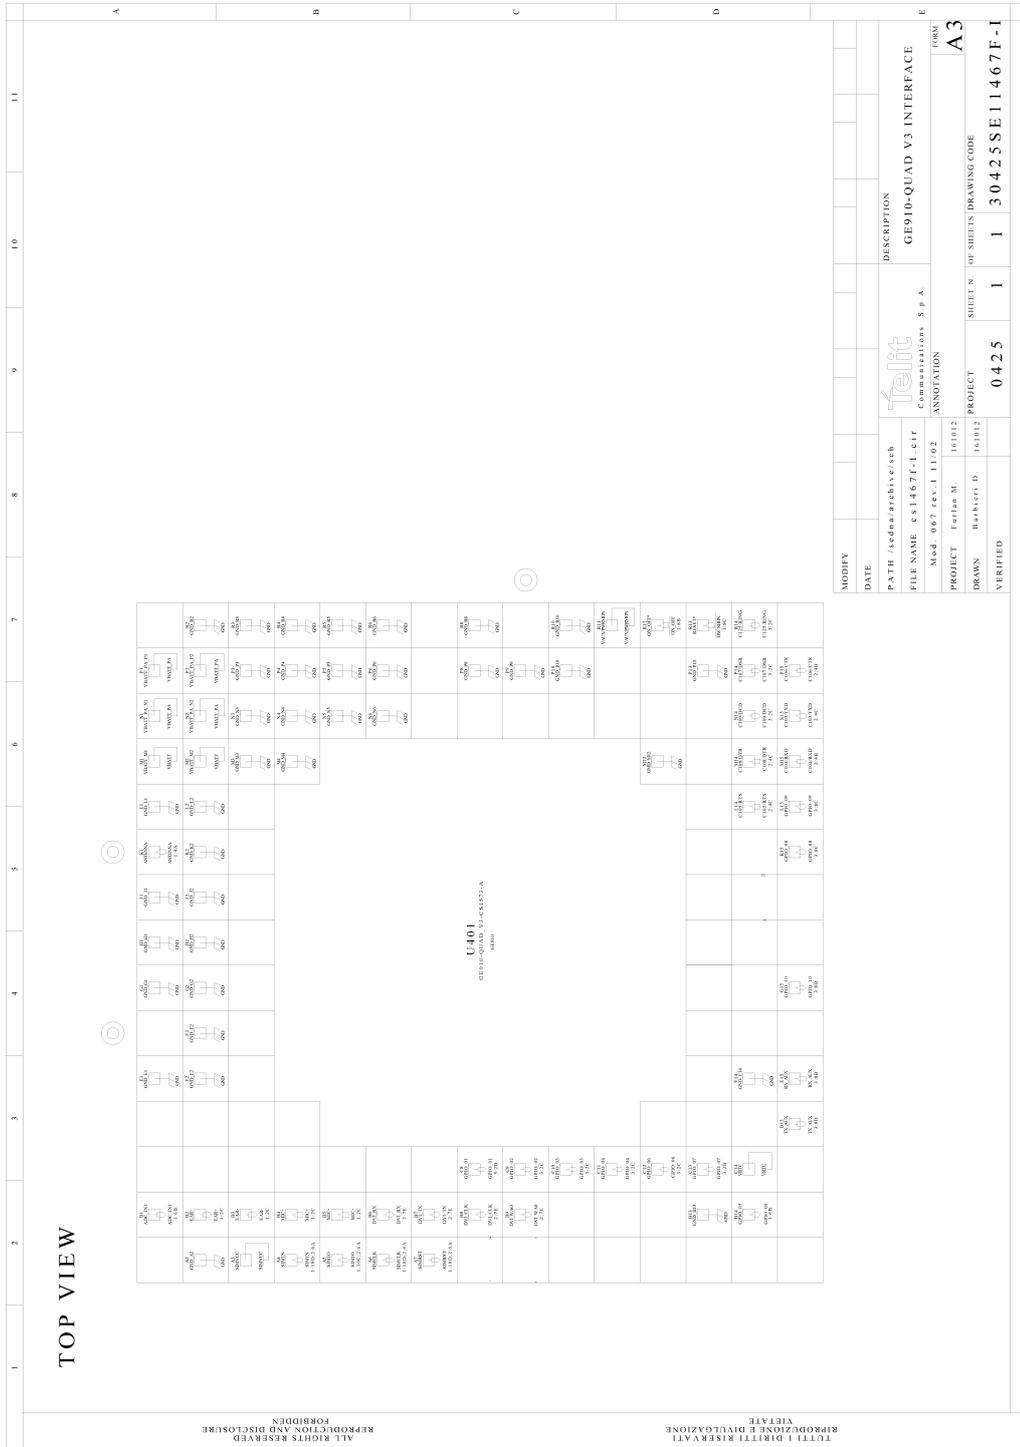

### 36.18. GE865 – JF2 Interface board

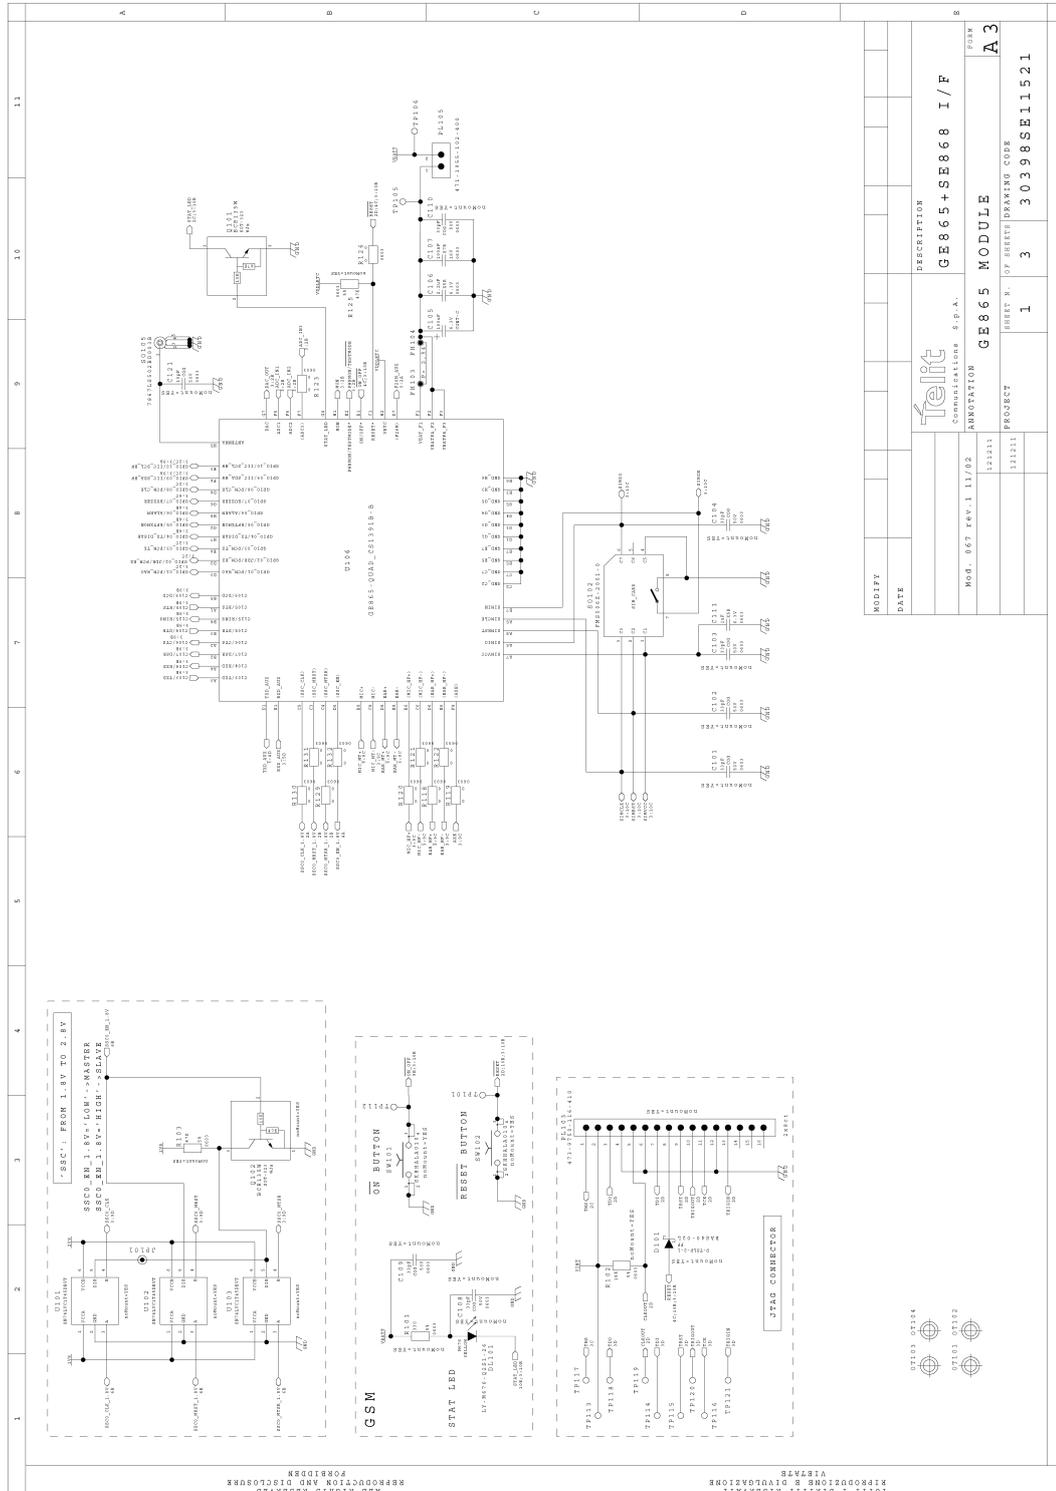




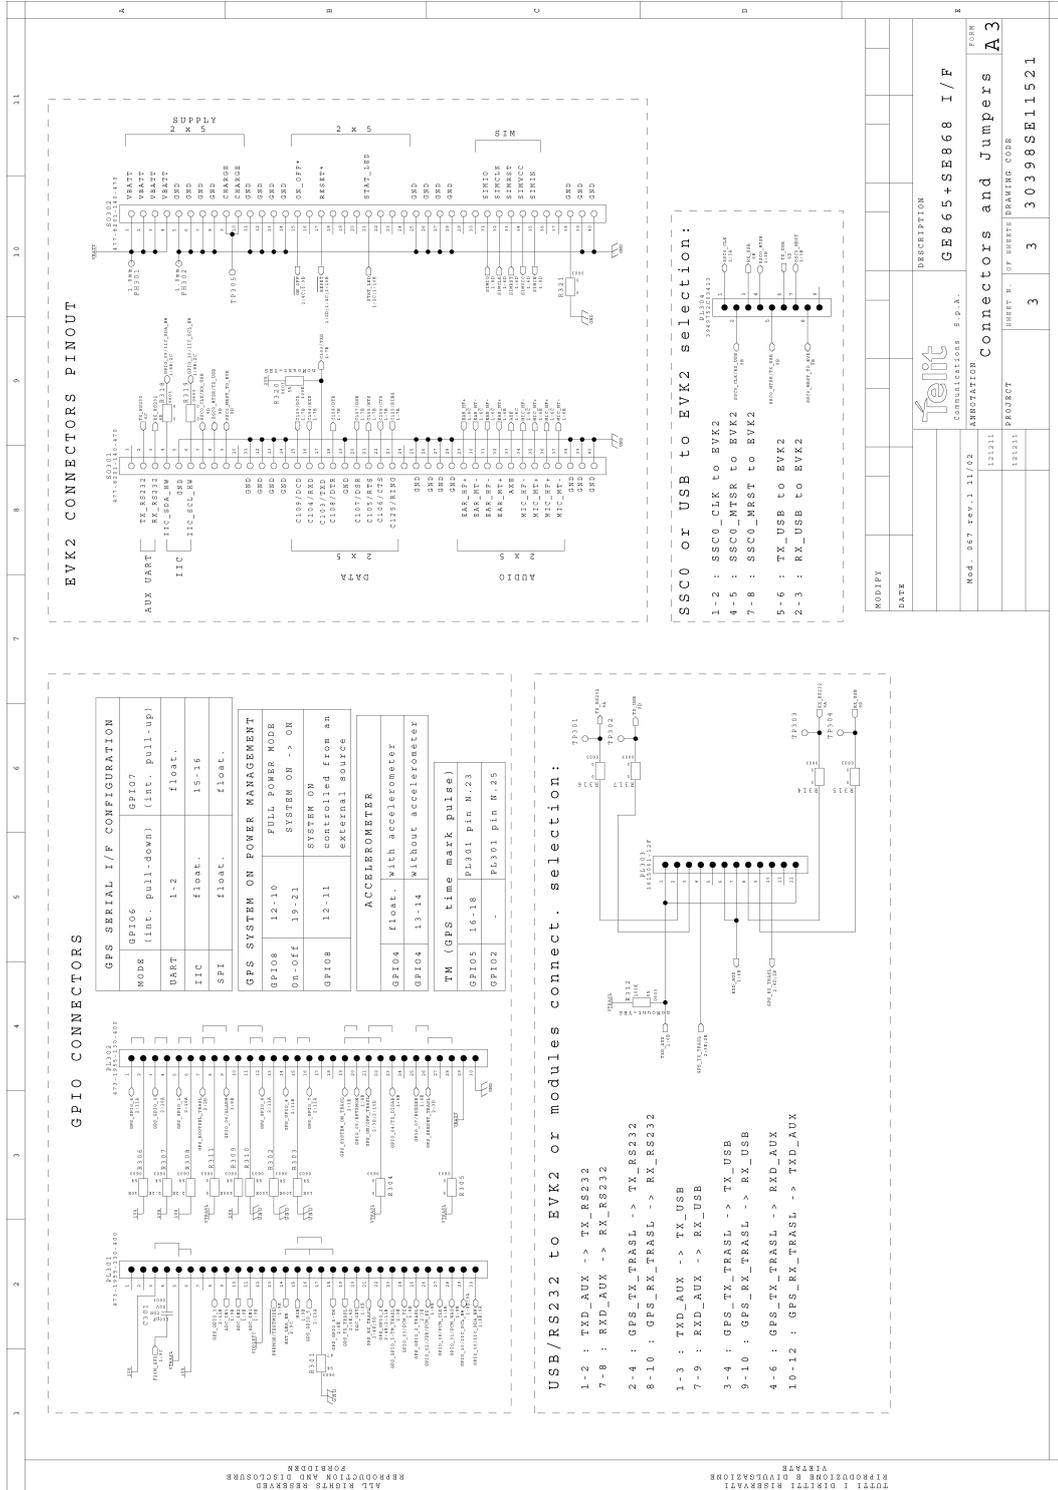


MODIFY DATE	DESCRIPTION
	GE865+SE868 I/F
MOD. 087 REV. 11/02	AMSTERDAM S.p.A.
121211	PROJECT
121211	3
	3
	303988E11521
	CONNECTORS and Jumpers
	A3
	3
	303988E11521




### 36.1. GL865 – SL869/JN3 Interface board

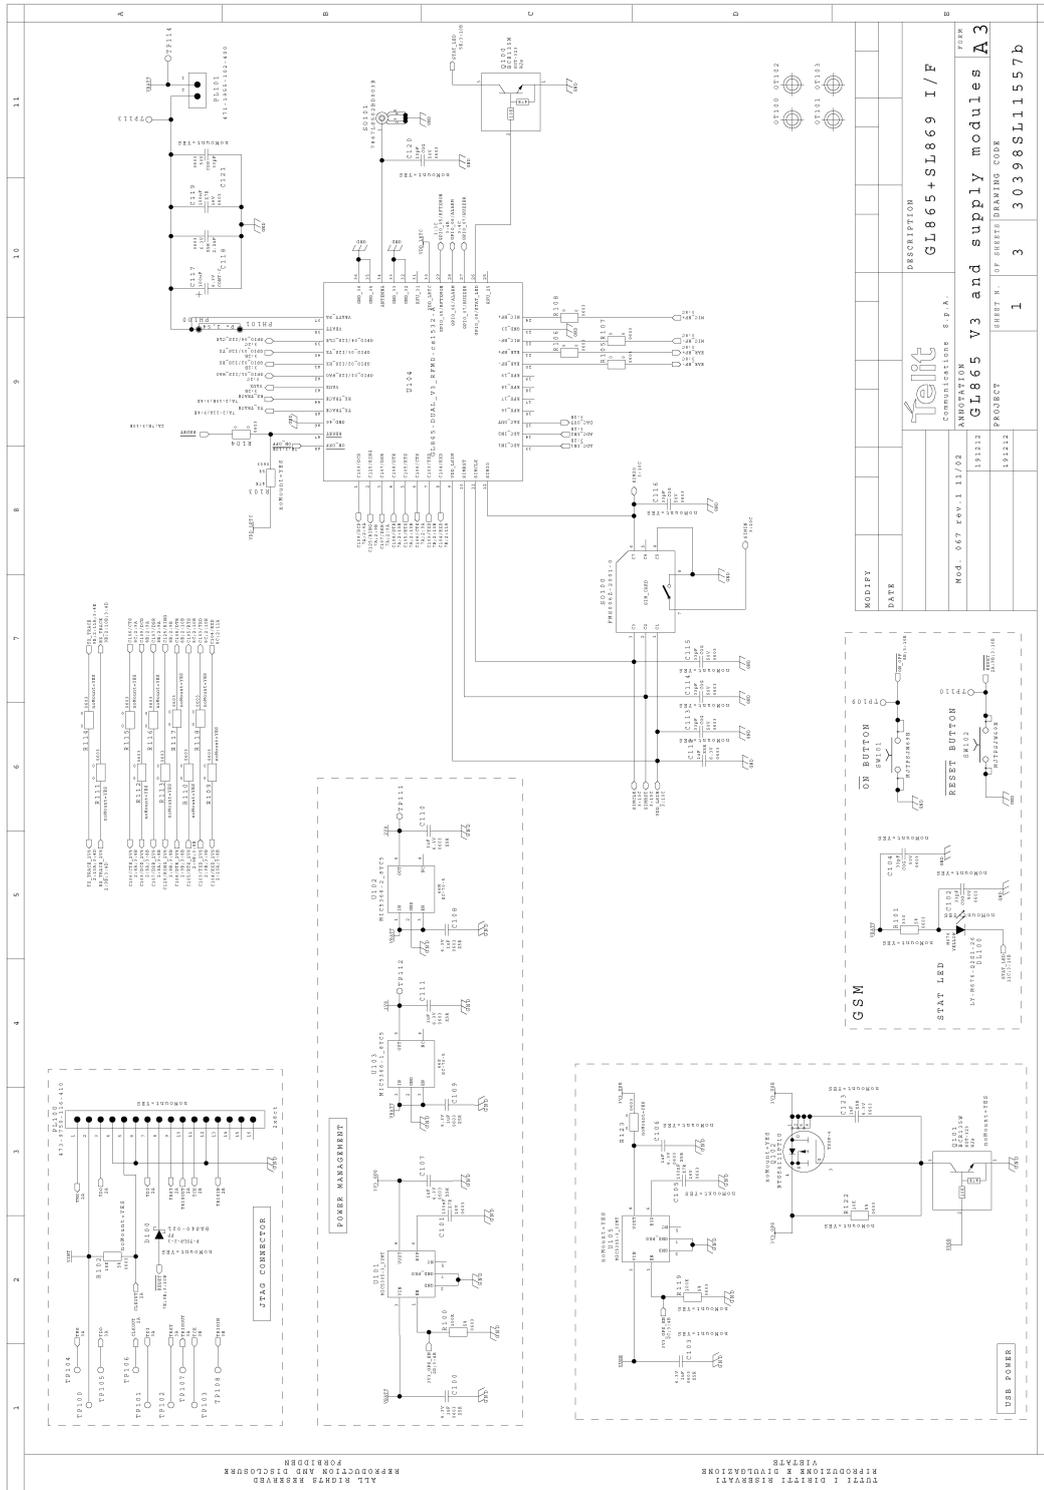

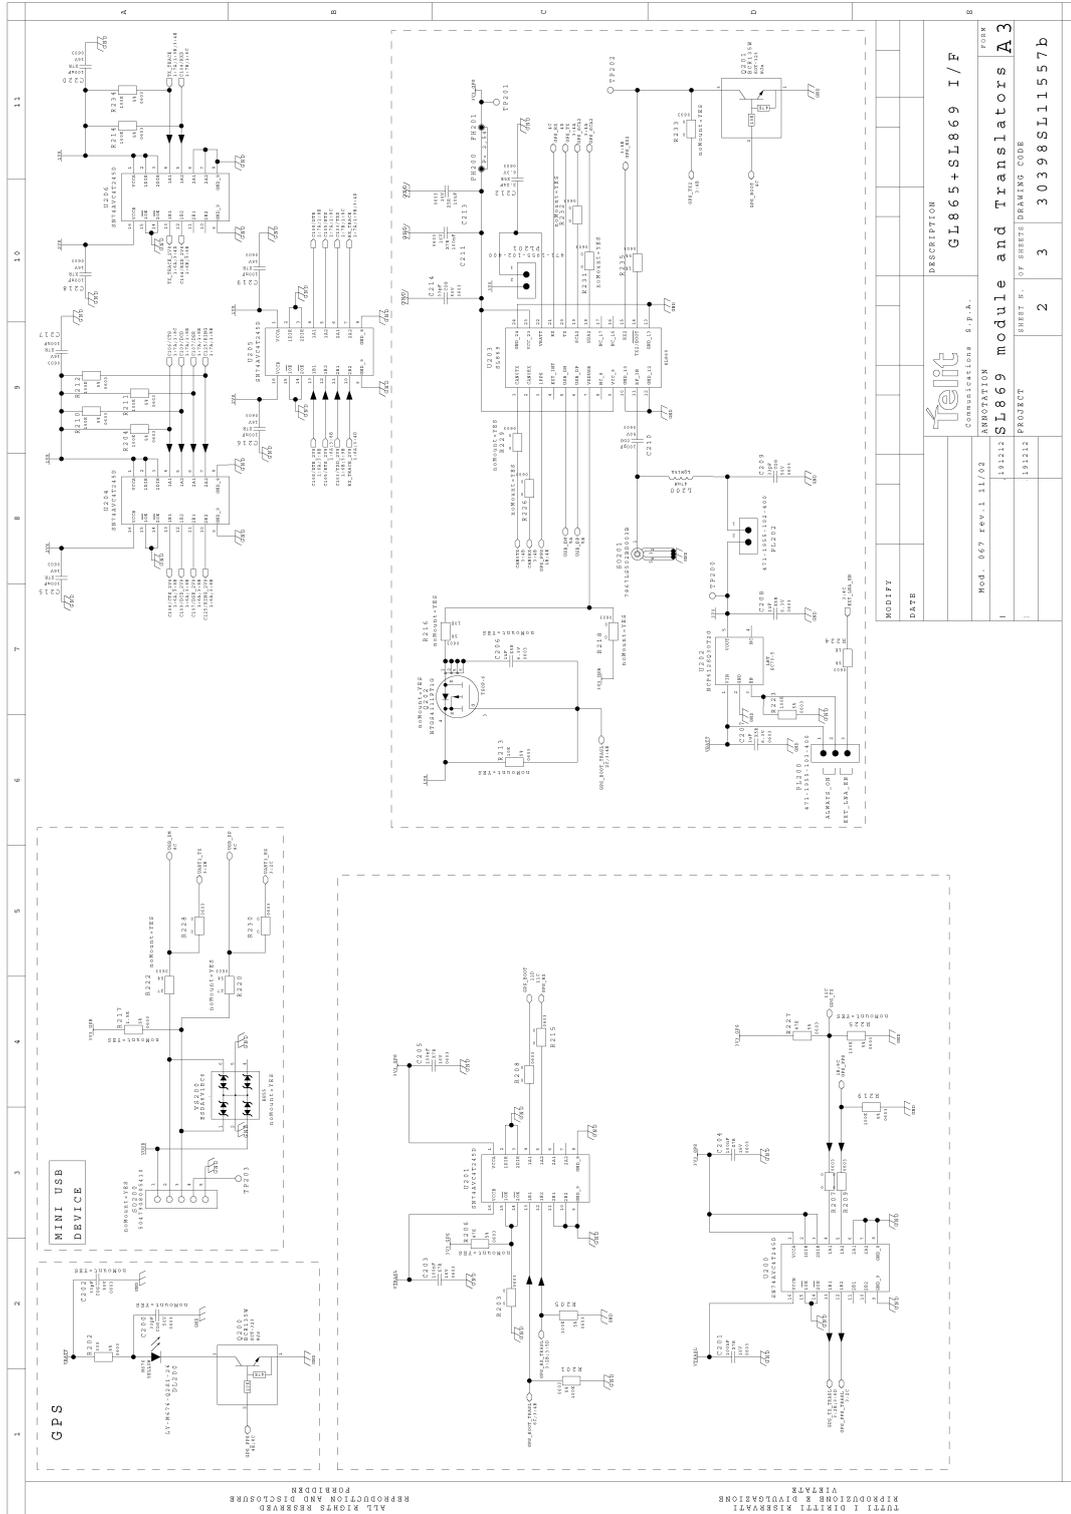




## 36.2. DE910 Interface board

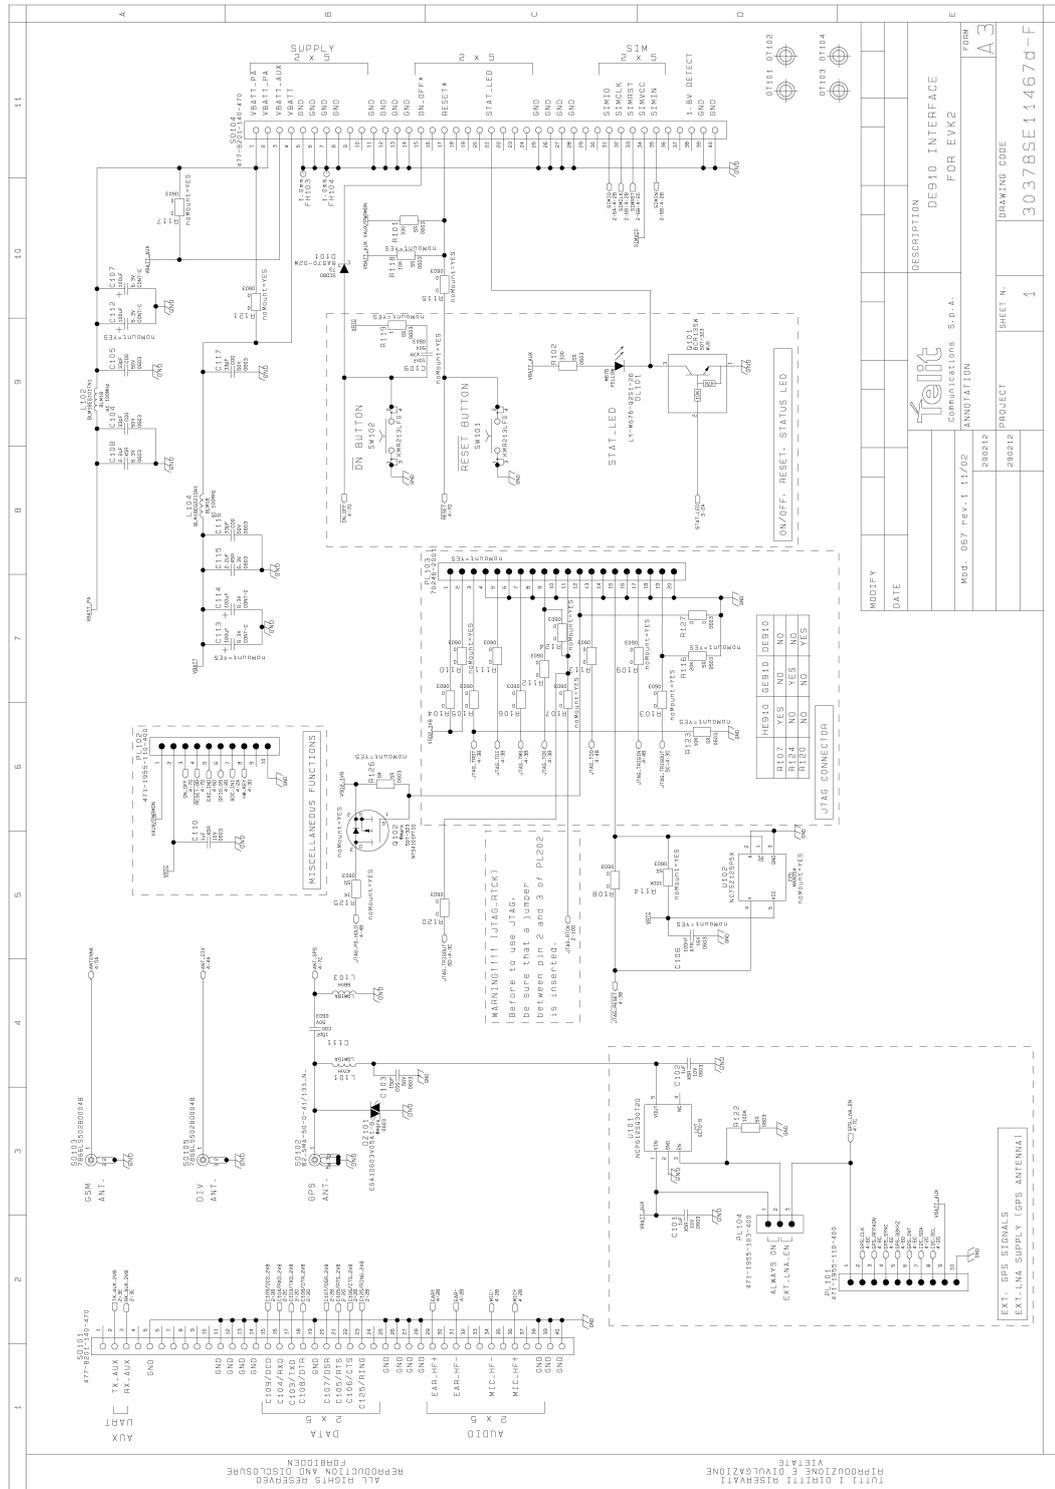


**Telit EVK2 User Guide**  
1w0300704 Rev.17 – 2013/05/30

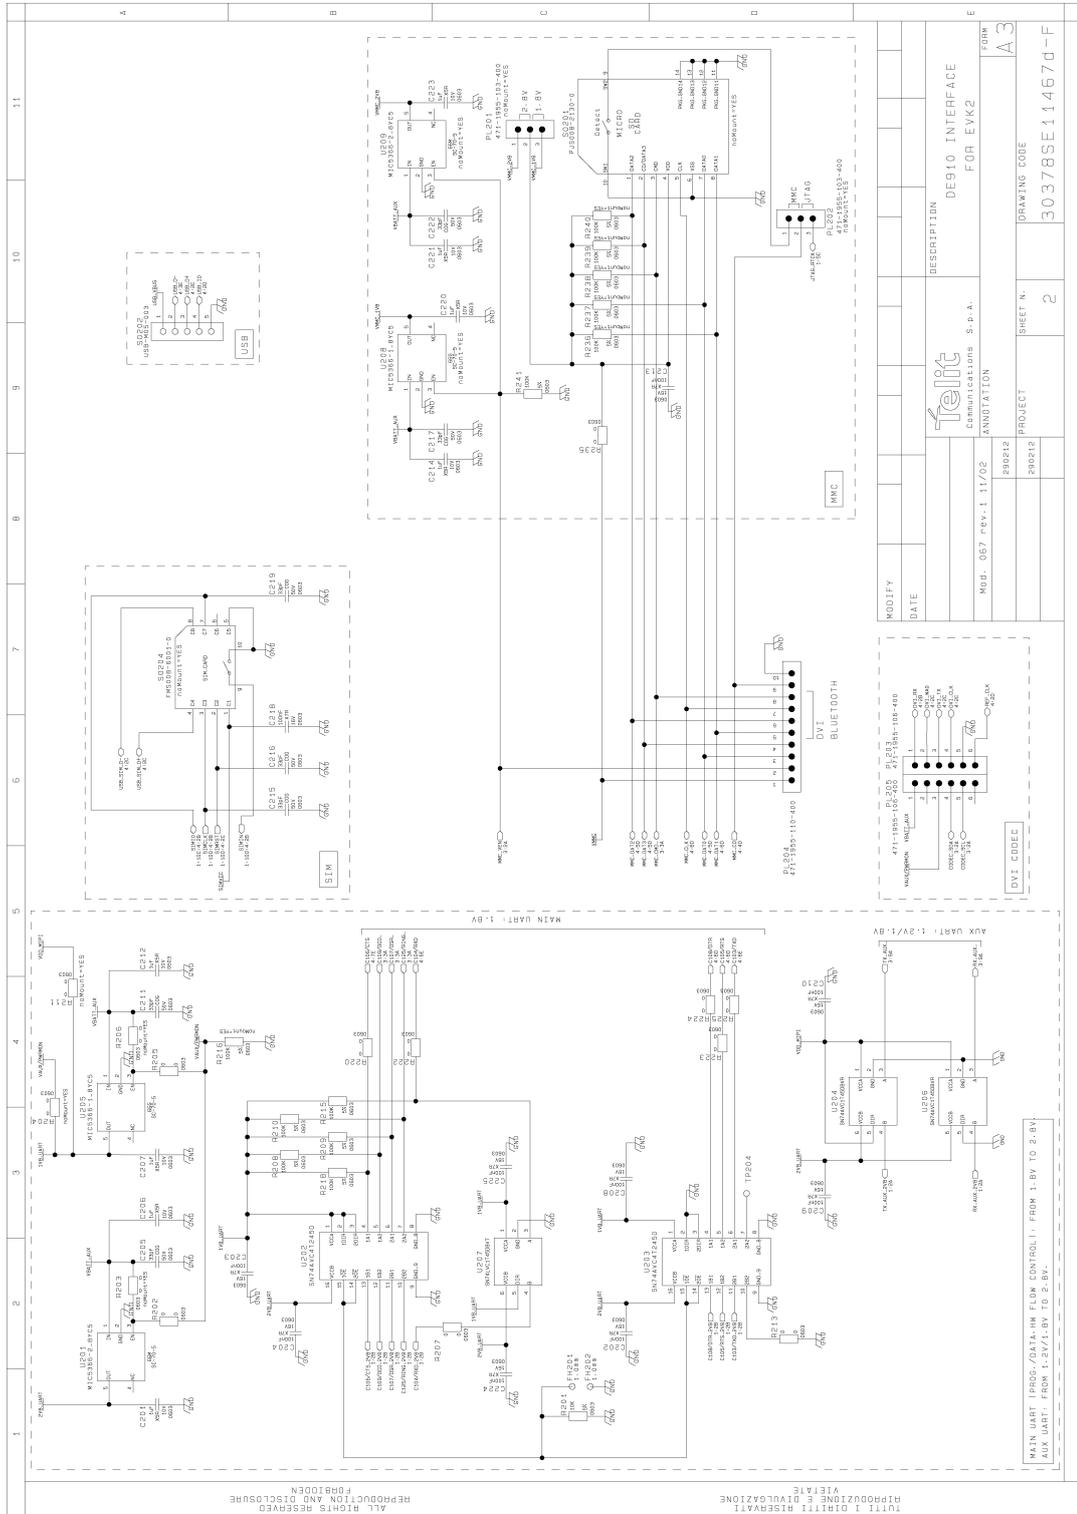


MODIFY	
DATE	
DESCRIPTION	DEB10 INTERFACE FOR EVK2
FORM	A3
PROJECT	2
SHEET N.	2
ANNOTATION	
DRAWING CODE	30378SE11467d-F





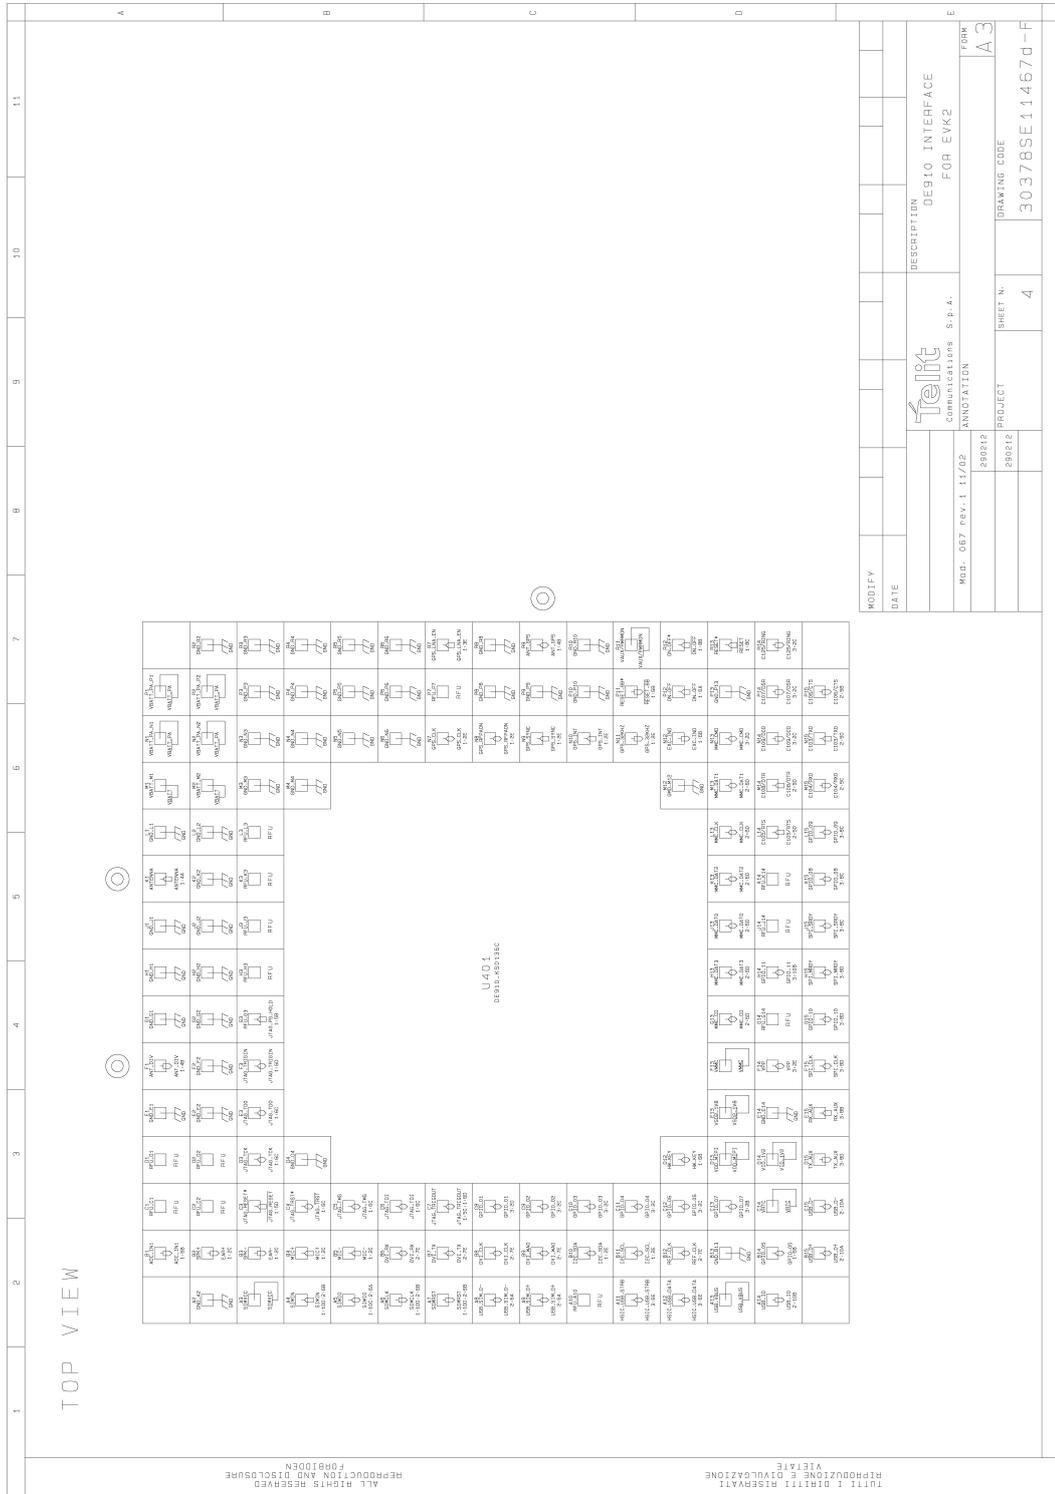


### 36.3. CE910 Interface board

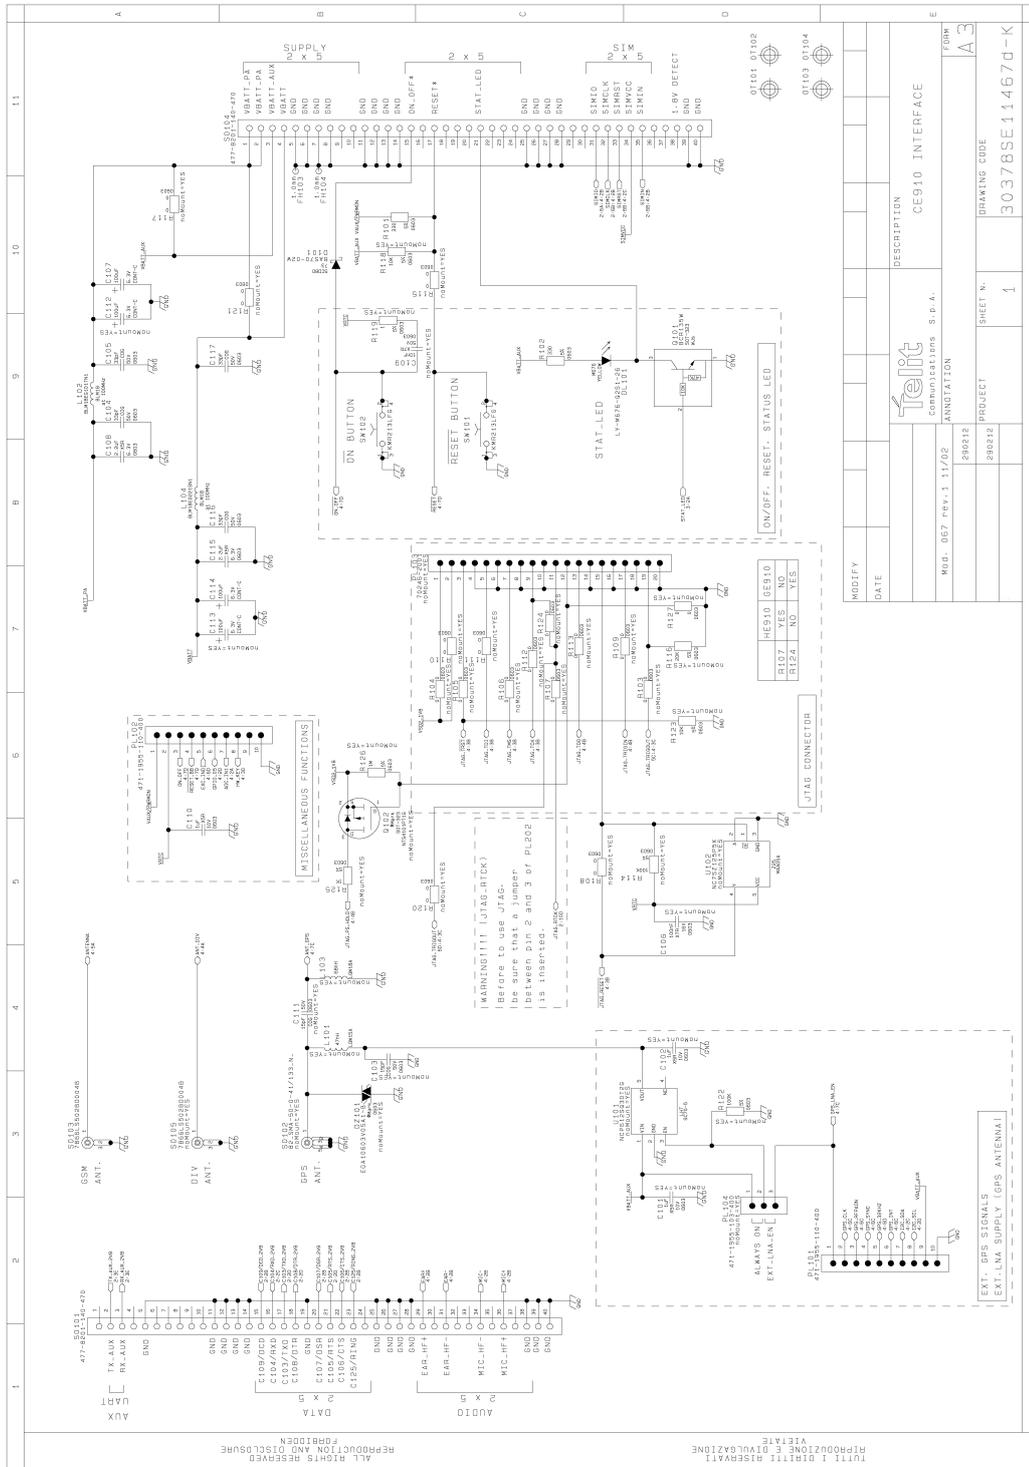






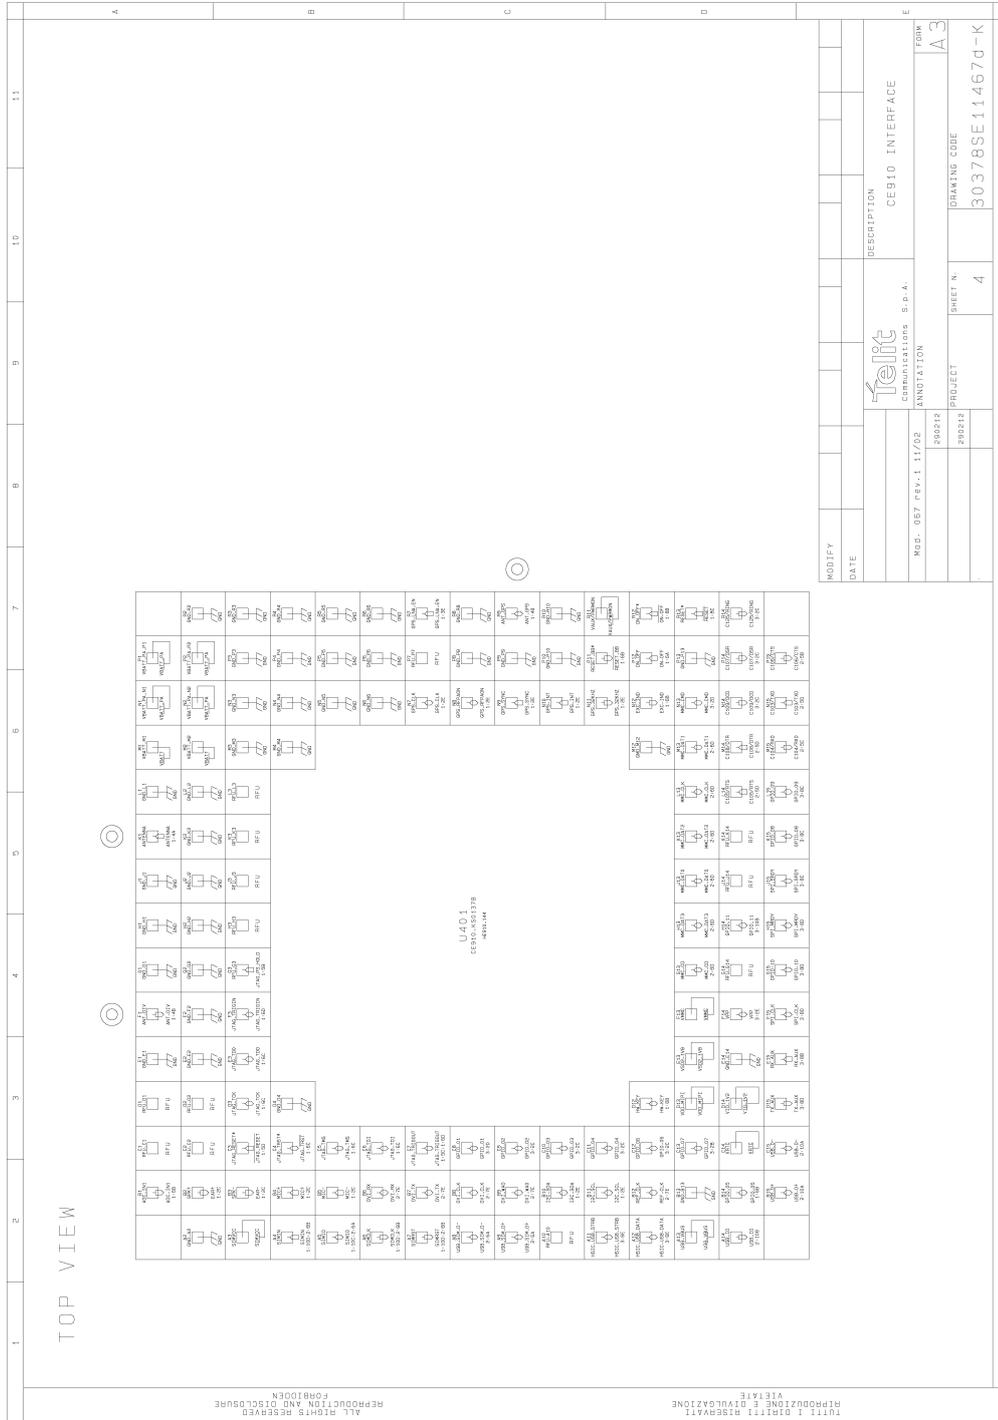

## 36.4. GL865 V3 Interface board

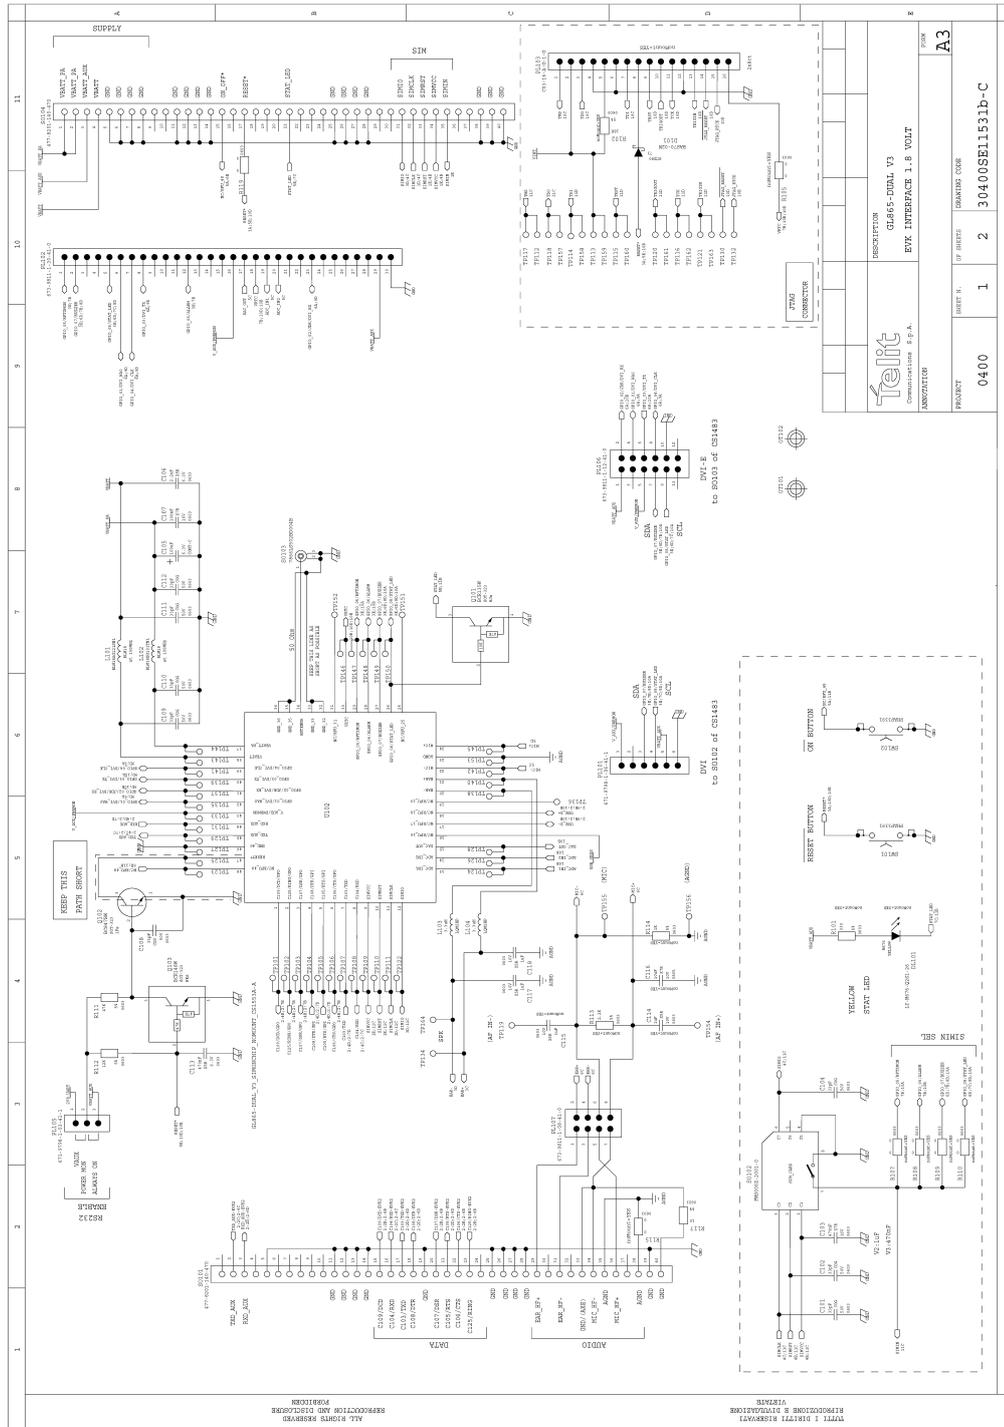










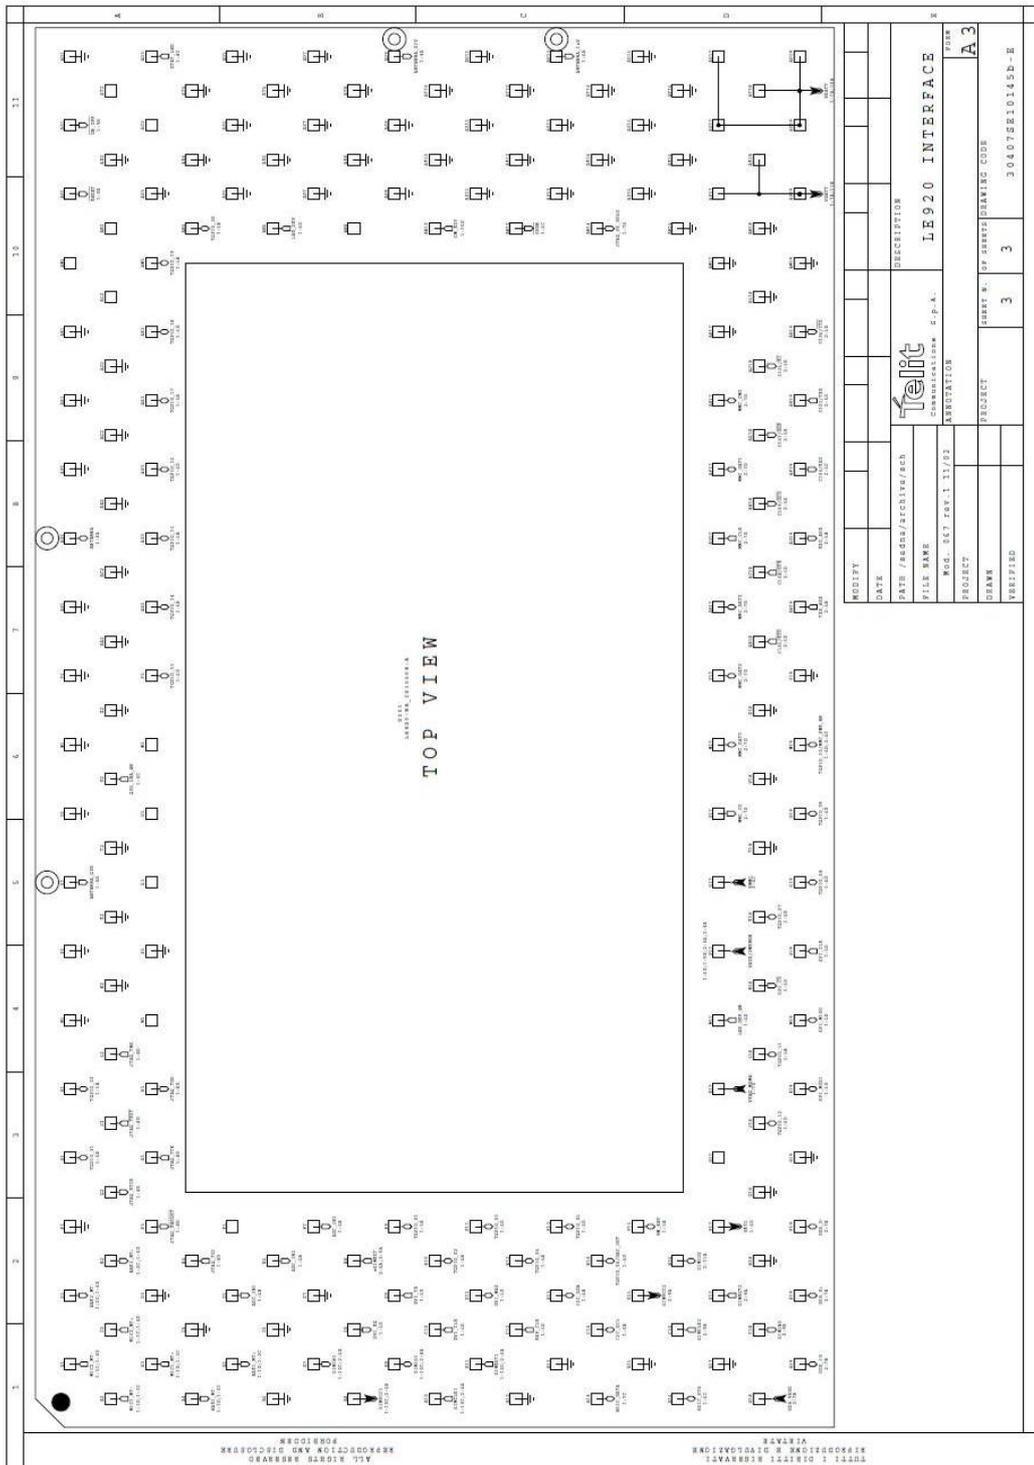





The text of the Directive 99/05 regarding telecommunication equipments is available, while the applicable Directives (Low Voltage and EMC) are available at:

[http://europa.eu.int/comm/enterprise/electr\\_equipment/index\\_en.htm](http://europa.eu.int/comm/enterprise/electr_equipment/index_en.htm)

## 38.1. Disposal of this product in the European Union

According to the directives 2002/95/CE, 2002/96/CE and 2003/108/CE, which have been transposed in Italian Legislative Decree of July 25, 2005, n. 151, Telit Communications S.p.A informs that:

The symbol of the crossed-out wheeled bin reproduced on the product or on the packaging, indicates that the product, at the end of life cycle, must be gathered separately from the other waste.



The separate collection of rubbish for this product at the end of its life cycle is arranged and managed by the manufacturer.

The user, who wants to dispose the product, must contact the manufacturer and follow the available system that allows the separate collection of rubbish for this product that has reached the end of the life cycle.

The suitable separate collection of rubbish, necessary for the subsequent transfer of the obsolete product for the recycling, the treatment and the compatible environment disposal, contributes to avoid possible negative effects to the environment and the health, and helps in the re-use and/or recycle of the materials from which this product is composed.

The illegitimate disposal of the product by the holder implies the enforcement of the administrative penalties provided for the regulations in force.

The company is enrolled on the register of the manufacturers of Electric and Electronic Equipment (EEE) of the Italian Minister for the Environment with the number: **IT08020000002357**





## 39. RoHS Certifications



### EU RoHS DECLARATION OF CONFORMITY




1.

PRODUCTS NAMES	Telit's CODE
EVK2	3990150474
GM862 INTERFACE	3990250670
GE863-PY INTERFACE	3990250684
GE863-GPS INTERFACE	3990250698
GE863-SIM INTERFACE	3990250703
GE864-PY INTERFACE	3990250672
GE864-QUAD V2 INTERFACE	3990250777
GE864-DUAL V2 INTERFACE	3990250778
GE864-QUAD AUTOMOTIVE V2 INTERFACE	3990250773
GE864-QUAD ATEX V2 INTERFACE	3990250772
GE864-QUAD SIM V2 INTERFACE	3990250771
GE864-GPS INTERFACE	3990250820
GC864 INTERFACE	3990250880
GC864-QUAD-C2 INTERFACE	3990250983
GE865-QUAD INTERFACE	3990250786
GE865/SE867-AGPS INTERFACE	3990250814
GL865-QUAD INTERFACE	3990250812
GL865-DUAL INTERFACE	3990250783
GL865-DUAL INTERFACE	3990250790
UC884 INTERFACE	4990150470
HE910 EVK2 INTERFACE	3990250829

2. Telit Communications S.p.A Via Stazione di Prosecco, 5/b 34010 Sgonico (TRIESTE)-ITALY (manufacturer).

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Evaluation board for product's development and product's specific interfaces.

5. The products described above are in conformity with EU Community harmonisation 2002/95/CE (EU-ROHS Directive) on Restriction of the use of certain Hazardous Substances in electrical and electronic equipment (RoHS), subsequent amendments and the European Court of Justice decision on Deca-BDE substances from July 1, 2008.

6. This information represents Telit's knowledge and belief as of the date that it is provided. Telit bases its material content knowledge on information provided by third parties and has taken and continues to take commercially reasonable steps to provide representative and accurate information, but may not have conducted chemical analysis on incoming materials and chemicals.

The documents relevant to the products described above and which support this Declaration of Conformity, are held at Telit Communications S.p.A Via Stazione di Prosecco, 5/b 34010 Sgonico (TRIESTE) ITALY that managed the compliance assessment process.

Signed on behalf of Telit Communications S.p.A.

  
 \_\_\_\_\_  
 Quality System Manager  
 Cesare Robelli

Trieste, **2011-07-21**

Mod 0216 2011-06 Rev.0 - This Declaration of Conformity is issued in compliance with 768/2008/EC







Rev.5	13/10/2006	<p>Renamed figure from 38 to 42</p> <p>Pag.2 Added products name and P/N for GE863-PY/QUAD interface and GC864-C2 interface</p> <p>3.2.6 Added mechanical characteristics GC864-C2 interface</p> <p>5.0 Correct Optically Positioning Guide system description</p> <p>7.1 Correct the line selection description</p> <p>6.5.2 Updated Current Charger footnote</p> <p>Generality: added note for the VGA camera</p> <p>Added in the Cross List GE864-PY/QUAD interface and GC864-C2 interface</p> <p>15.2.1 Inserted P/N of GE863-GPS version</p> <p>Added GC864-C2 interface description</p> <p>20.1 Corrected GPIO location and added p/n of GM862 interface</p> <p>20.2 Corrected GPIO location and added p/n of GE863-GPS interface</p> <p>Corrected GPIO location and added p/n of GE863 interface</p> <p>Corrected GPIO location and added p/n of GE864 interface</p> <p>Corrected GPIO location and added p/n of GC864 interface</p> <p>Corrected GPIO location and added p/n of GC864-C2 interface</p> <p>Added GC864-C2 interface Schematic</p> <p>GM862 Interface p/n 3990250670: added RoHS certification</p> <p>GE863-PY Interface p/n 3990250669: added RoHS certification</p> <p>GE863-GPS Interface p/n 3990250671: added RoHS certification</p> <p>GE863-PY Interface p/n 3990250684: added RoHS certification</p> <p>GC864-QUAD Interface p/n 3990250685: added RoHS certification</p> <p>GE864-PY Interface p/n 3990250672: added RoHS certification</p> <p>GC864-PY Interface p/n 3990250680: added RoHS certification</p>
Rev.6	24/05/2007	<p>Pag. 2 Product Table updated</p> <p>Pag. 10 Table 1 updated</p> <p>Pag.24 Modified the formula</p> <p>Pag.22 Inserted the Audio Section chapter</p> <p>Pag.39 Table 10 modified</p> <p>PCB release updating</p> <p>Erased all Dual Camera paragraph</p> <p>Figures and table updated</p> <p>Paragraph 15.3 16.2 17.3 18.3 19.3 inserted</p> <p>24.1 EVK2 SYS p/n 3990150463: added RoHS certification</p> <p>24.9 GE864-QUAD Interface p/n 3990250688: added RoHS certification</p> <p>24.11 GE864-QUAD-C2 Interface p/n 3990250683: added RoHS certification</p>



Rev.7	22/01/2008	<p>Pag. 2 Product Table updated with UC864-E and GE863-SIM</p> <p>Pag.7 Disclaimer Date modified</p> <p>Pag.13 Inserted UC864 Interface dimensions</p> <p>Pag.36 Inserted refer to GE863-SIM</p> <p>Pag.38 Table 10 Inserted UC864 and GE863-SIM Interface Code</p> <p>Pag.38 Order Code Table updated</p> <p>Pag.42 Added figure 24 with GE863-SIM photo</p> <p>Pag.43 Added GE863-SIM version kit list</p> <p>Pag.54 Inserted UC864 Interface photo</p> <p>Pag.64 Inserted figure 40 and Table 17 of UC864 GPIO positioning</p> <p>Pag.77-78 Inserted UC864 Interface Schematic diagrams</p> <p>Removed notes regarding interface board of phased out models from the GE863 family (Please refer to the previous version of this document if you need information for the interfaces with the following P/N: 3990250669 &amp; 3990250677)</p>
Rev.8	20/03/2008	<p>Pag.64 Updated 40 and Table 19 of UC864 GPIO positioning</p> <p>Pag.66-70 Updated EVK mother board schematics</p> <p>Pag.81 Added new European WEEE directive</p>
Rev. 9	28/05/2008	<p>Pag.77-78 Replaced UC864 Interface board schematics with more readable drawings.</p>
Rev. 10	20/06/2011	<p>Pag.02 Replaced the applicability list – Pag.123 replaced the RoHS certifications</p>
Rev. 11	18/07/2011	<p>HE910 added to the document</p> <p>GE864-GPS section update to align with latest PCB development</p>
Rev. 12	2012/05/21	<p>Added GE865-JF2 sections</p>
Rev. 13	2012/06/25	<p>Updated fig.48</p> <p>Updated HE910 interface board P/N in applicability Table.</p> <p>Update GE865+JF2 drawings §27.1</p>
Rev. 14	2012/12/11	<p>Updated with GE910 interface board; P/N in applicability Table.</p> <p>Updated Startup procedure chapter with XX910 products and timings;</p> <p>Updated Power ON Switch chapter with XX910 products and timings;</p> <p>Updated Figure 22 Switches position</p> <p>Added info for DE910 and CE910</p> <p>20 2.2.15 DE910 Interface CS1467D</p> <p>20 2.2.16 CE910 Interface CS1467D</p> <p>27 DE910 family Interface</p> <p>28 CE910 family Interface</p> <p>29.1.12 DE910 Interface</p> <p>29.1.13 CE910 Interface</p> <p>30.17 DE910 Interface board schematic</p> <p>30.18 CE910 Interface board schematic</p>
Rev. 15	2013-02-19	<p>Added §20 about JN3+GL865 Interface board.</p>
Rev. 16	2013/03/15	<p>Added GL865 V3 interface board</p>
Rev. 17	2013/05/30	<p>Added GE910-GNSS; GE910-QUAD V3, UE910, LE920 interface board</p>

