

WIRED MICROPHONE ACCESSORIES & PARTS MATRIX

MICROPHONE MODEL NUMBER	CABLE‡	CARTRIDGE	SCREEN & GRILLE ASSEMBLY	MIC CLIP	WINDSCREEN	MISCELLANEOUS ACCESSORIES
55SH Series II		R15				SW=RK32S; DST=S37A; PL=RK169P
450 Series II	C31C	R96	RK361G			
512		R93				SW=A120S
514B	C25C	R103				
515BSM		R180	RK334G	A25D	A1WS	SMT=A55M, A55HM; M=A26M
515BSLX		R180	RK334G	A25D	A1WS	SMT=A55M, A55HM; M=A26M
515SBGX		R180	RK344G	A25D	A1WS	SMT=A55M, A55HM; M=A26M
515SBG-18X		R180	RK344G	A25D	A1WS	SMT=A55M, A55HM; M=A26M; F=A13HD
515SBG-18XF		R180	RK344G	A25D	A1WS	SMT=A55M, A55HM; M=A26M; F=A12
515SDX		R180	RK333G	A25D	A1WS	SMT=A55M, A55HM; M=A26M; DST=S37A, S39A
520DX		R198				
522	C31C	489	RK362G			
527A +		R131				M=RK6MB
527B	C29C	R131				M=RK6MB
527C	C30C	R132				M=RK6MB
545L +		R45L	RPM210	A25D	A2WS	M=A26M; SMT=A55M, A55HM
545SD-LC		R45	RPM210	A25D	A2WS	M=A26M; A27T; SMT=A55M, A55HM; PL=RK169P; DST=S37A, S39A
550L	C32C	R50	RK360G			
561			RK85G			
562		R90				G=G12, G12CN, G18, G18CN, G6A, G18A; F=A12, A13HD
565SD-CN		R65	RS65	A25D	A58WS	M=A26M; PL=RK169P; SMT=A55M, A55HM; DST=S37A, S39A
565SD-LC		R65	RS65	A25D	A58WS	M=A26M; PL=RK169P; SMT=A55M, A55HM
577B		R98B				M=RK6MB
588SDX		R180	RK332G	A25D	A58WS	M=A26M; SMT=A55M, A55HM; PL=RK169P; DST=37A, 379A
849-LC +				A25D	A3WS	PS=PS1A; SMT=A53M
BETA 52A		R175	RK321			M=A26X
BETA 53			RPM208, RPM212 RPM214, RPM216 RPM218, RPM220		WS=RPM304, RPM306	BO=RPM132, RPM134, RPM136, RPM138; CA=95A2180; PA=RPM626; PA=MX1BP; PS=PS1A
BETA 54			RPM208, RPM212 RPM214, RPM216 RPM218, RPM220		WS=RPM316, RPM318	BO=RPM646, RPM648; CA=95A2180; PA=RPM626; PA=MX1BP; PS=PS1A
BETA 56A		R174	RH320		A1WS	M=A26X, DM=A56D
BETA 57A		R174	RK320	A25D	A57AWS	SMT=A55M, A55HM; DST=S37A, S39A; DM=A56D
BETA 58A		R176	RK265G	A25D	A58WS	SMT=A55M, A55HM; DST=S37A, S39A; M=A26M
BETA87A		R193	RK312	A25D	A85WS	SMT=A53M; PS=PS1A
BETA87C		RPM118	RK312	A25D	A85WS	SMT=A53M; PS=PS1A
BETA91	C98D	RPM110				PA=RPM 626
BETA 98S	C98D	RPM110		RK282	RK183WS	HC=A98KCS, DM=A98D, PA=RPM 626
BETA 98D/S	C98D	RPM110		RK282	RK183WS	DM=A98D, PA=RPM 626
BETA 98H/C		RPM108, RPM110			RK318WS	PS=MX1-BP, PA=RPM 440
EZG/12		RPM142,RPM144,RPM146		A57F	WS=RPM310	CA=A27VP; SMT=A400SM
EZG/18		RPM142,RPM144,RPM146		A57F	WS=RPM310	
EZG/12SE		RPM142,RPM144,RPM146			WS=RPM310	
EZG/18SE		RPM142,RPM144,RPM146			WS=RPM310	M=RPM506,RPM508
EZO/G		RPM142,RPM144,RPM146			WS=RPM312, RPM314	
EZO/W		RPM142,RPM144,RPM146			WS=RPM312, RPM314	
EZB/C		RPM142,RPM144,RPM146				
EZB/O		RPM142,RPM144,RPM146				

Microflex® Models
POLAR PATTERN
 C=Cardioid
 S=Supercardioid
 O=Omnidirectional
 N=No Cartridge

CARTRIDGE
 R185B, R185W
 R184B, R184W
 R183B, R183W

BA=BATTERY
BC=BELT CLIP
BO=BOOM ASSEMBLY
CA=CASE
DM=DRUM MOUNT
DST=DESK STAND

ACCESSORIES CODES
F=FLANGE
G=GOOSENECK
HC=HORN CLAMP
M=SPECIAL MIC MOUNT
PA=PREAMPLIFIER

PL=PLUG ELEMENT
PS=POWER SUPPLY
SMT=SHOCK MOUNT
SW=SWITCH
TB=TIE BAR

+ Accessories still available for these discontinued models.
 ‡ See also Accessory Cables, Page 19.

WIRED MICROPHONE ACCESSORIES & PARTS MATRIX

MICROPHONE MODEL NUMBER	CABLE‡	CARTRIDGE	SCREEN & GRILLE ASSEMBLY	MIC CLIP	WINDSCREEN	MISCELLANEOUS ACCESSORIES
KSM109/SL		RPM114		A25D	A3WS	SMT=A55M, A55HM
KSM137/SL		RPM116		A57F	A100WS	CA=A137C; A137SPC; SMT=A53M
KSM141/SL		RPM116		A57F	A100WS	SMT=A53M; CA=A137C; A137SPC
KSM27/SL					A32WS, PS6	M= A32M; SMT=A27SM
KSM32/SL		RK374	RK371		A32WS, PS-6	M=A32M; SMT=A32SM; CA=A32SC, A32ZB
KSM32/CG		RK374	RK372		A32WS, PS-6	M=A32M; SMT=A32SM; CA=A32SC, A32ZB
KSM44/SL		RPM130	RPM230		A32WS, PS-6	M=A44M; SMT=A44SM; CA=A44SC, A32ZB
MX180/N	C122	R185B, R184B, R183B				TB=RK183T1, RK183T2; PS=PS1A
MX183	C122	R183B			RK183WS	TB=RK183T1, RK183T2; PS=PS1A
MX184	C122	R184B			RK183WS	TB=RK183T1, RK183T2; PS=PS1A
MX185	C122	R185B			RK183WS	TB=RK183T1, RK183T2; PS=PS1A
MX202B/C,S,N		R185B,R184B,R183B			RK183WS	PS=PS1A
MX202BP/C,S,N		R185B,R184B,R183B			RK183WS	PS=PS1A
MX202W/C,S,N		R185W,R184W,R183W				PS=PS1A
MX202WP/C,S,N		R185W,R184W,R183W				PS=PS1A
MX391/C,S,O	C123	R185B,R184B,R183B				PS=PS1A
MX391W/C,S,O	C125	R185W,R184W,R183W				PS=PS1A
MX392/C,S,O		R185B,R184B,R183B				PS=PS1A
MX393/C,S,O	C119	R185B,R184B,R183B				PS=PS1A
MX412/C,S,N		R185B,R184B,R183B		A57F	RK412WS	SMT=A400SM; PS=PS1A
MX418/C,S,N		R185B,R184B,R183B		A57F	RK412WS	SMT=A400SM; PS=PS1A
MX412D/C,S,N	C120	R185B,R184B,R183B			RK412WS	PS=PS1A
MX418D/C,S,N	C120	R185B,R184B,R183B			RK412WS	PS=PS1A
MX412S/C,S,N		R185B,R184B,R183B		A57F	RK412WS	SMT=A400SM; PS=PS1A
MX418S/C,S,N		R185B,R184B,R183B		A57F	RK412WS	SMT=A400SM; PS=PS1A
MX412SE/C,S,N		R185B,R184B,R183B			RK412WS	SMT=A400SM; PS=PS1A
MX418SE/C,S,N		R185B,R184B,R183B			RK412WS	SMT=A400SM; PS=PS1A
PG48				A25D	A58WS	SMT=A55HM, A55M
PG52		RPM154				
PG56		RPM152			A85WS	
PG57		RPM152		A25D	A85WS	SMT=A55HM, A55M; DM=A56D
PG58		RPM150		A25D	A58WS	SMT=A55HM, A55M
PG81				A25D	A3WS	SMT=A53M; PS=PS1A
SM2	C108	R93			RK184WS	
SM7B		RPM106			A7WS, RK345	DST=S37A, S39A
SM10A-CN		R93			RK184WS	SW=A120S; BC=RK200BC
SM11-CN	C91	R99				SW=120S; TR=RK203TC; M=RK279; BC=RK200BC
SM12A-CN		R93			RK184WS	SW=A120S; BC=RK200BC
SM48-LC		R136	RK248G	A25D	A58WS	M=A26M; SMT=A55M, A55HM; PL=RK40P; DST=S37A, S39A
SM48S-LC		R136	RK248G	A25D	A58WS	M=A26M; SMT=A55M, A55HM; PL=RK40P; DST=A37A, S39A; SW=RK81S
SM57-LC		R57	RK244G	A25D	A2WS A81WS	M=A26M, A27T; SMT=A55M, A55HM; PL=RK40P, DM=A56D
SM58-CN		R59	RK143G	A25D	A58WS	M=A26M; SMT=A55M, A55HM; PL=RK0P
SM58-LC		R59	RK143G	A25D	A58WS	M=A26M; SMT=A55M, A55HM; PL=RK0P
SM58S		R59	RK143G	A25D	A58WS	M=A26M; SMT=A55M, A55HM; PL=RK40P
SM63			RK366G	A57F	RK229WS	SMT=A53M; DST=S37A, S39A
SM63L			RK367G	A57F	RK229WS	SMT=A53M; DST=S37A, S39A
SM63LB			RK368G	A57F	49A130	SMT=A53M; DST=S37A, S39A
SM81-LC			A81G	A57F	A81WS	PS=PS1A; SMT=A53M
SM86		RPM112	RPM226	A25D	A85WS	SMT=A55M, A55HM; PA=PS1A
SM87A		R128	RK214G	A25D	A85WS	SMT=A53M; PS=PS1A
SM89				A57F	RK257WS	SMT=A89SM; PS=PS1A
SM93					RK303BK	
SM94-LC				A25D	A3WS	SMT=A53M; PS=PS1A
VP64A		R199		A57F	49A130	
VP64AL		R199		A57F	49A130	
VP88						SMT=A88SM; BA=80A463
WH20XLR					RK318WS	PA=RPM420; BC=RK200BC
WH30XLR					90WP1371	

Microflex® Models
POLAR PATTERN
 C=Cardioid
 S=Supercardioid
 O=Omnidirectional
 N=No Cartridge

CARTRIDGE
 R185B, R185W
 R184B, R184W
 R183B, R183W

BA=BATTERY
BC=BELT CLIP
BO=BOOM ASSEMBLY
CA=CASE
DM=DRUM MOUNT
DST=DESK STAND

ACCESSORIES CODES
F=FLANGE
G=GOOSENECK
HC=HORN CLAMP
M=SPECIAL MIC MOUNT
PA=PREAMPLIFIER

PL=PLUG ELEMENT
PS=POWER SUPPLY
SMT=SHOCK MOUNT
SW=SWITCH
TB=TIE BAR