

Alarm signal sent to PC immediately.
Audible alarm on PC and flashing screen
indicates breach.

Text and Email Alerts



Dedicated alert unit that
works at all times, even
when the PC is turned
off. Module will send
flashing visual, audio,
e-mail and text alerts
when alarm has been
breached.

User selectable transmission rates
of data to the PC.

Once set up on PC, remove and start
logging from various locations. Multiple
sensors can be supported on one
system at any one time dependent on
router type and usage by other Wi-Fi
devices.

Sensor memory stores all data even if
Wi-Fi is temporarily disconnected. All
info uploaded when reconnected with
Wi-Fi network.

Adjust sensor settings wirelessly via
PC with free EL-WiFi software.

Monitor remote sensors using PC
application and view graphed
readings on-screen.

Wireless connectivity to PC and
sensors via Wi-Fi wireless router.
-802.11b compliant



Wi-Fi Temperature Data Logging

