

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size		Appliance mounting Part No.		Hood mounting Part No.		A		B		C		D		E	
1		F-GV-1 F-GV-1M3		F-GV-1H F-GV-1HM3		±0,3		±0,15		±0,2		4-40UNC M3		F	
2		F-GV-2 F-GV-2M3		F-GV-2H F-GV-2HM3		35,1		25		12,5		4-40UNC M3		10,0	
3		F-GV-3 F-GV-3M3		F-GV-3H F-GV-3HM3		43,1		33,3		12,5		4-40UNC M3		8,5	
4		F-GV-4 F-GV-4M3		F-GV-4H F-GV-4HM3		56,94		47,04		12,5		4-40UNC M3		12,4	
5		F-GV-5 F-GV-5M3		F-GV-5H F-GV-5HM3		72		61,1		14,7		4-40UNC M3		10,9	

PACKING UNIT:

F-GV-1 to 5 and F-GV-1M3 to 5M3 with 2 screws, 2 spring washers and 2 nuts

F-GV-1H to 5H and F-GV-1HM3 to 5HM3 with 2 screws

1		2		3		4		5		6		7		8	
A		B		C		D		E		F		G		H	
Shell size															