

APPLICATOR PARTS LIST				I.D. BAND				ENDFEED				AMP INCORPORATED CHANGE HARRISBURG, PENNA. ASSY				QUICK CHANGE ASSY			
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	TO APPLY TERMINAL	CRIMPING DATA	TERMINALS					
1	WIRE CRIMPER			42	COMP. SPRING (TABLE)	2	803036-1	40681				40681							
2	INS. CRIMPER			43	COVER PLATE	2	375680	40942				40942							
3	ANVIL			44	FEED BLOCK - LEFT	1	376659	41108				41108							
4	ANVIL			45	FEED BLOCK - RIGHT	1	376658	41276				41276							
5	SHEAR BLADE			46	FEED LINK	1	376656												
6	REAR SHEAR PLATE			47	FEED PIN (FEED BLOCK)	1	376657												
7	SHEAR BLADE SPACER			48															
8	FRONT SHEAR PLATE			49															
9	REAR ANVIL SPACER PLT.			50	TO BE USED ONLY WHEN INDENTING (S REQ'D)														
10	FRONT ANVIL SPACER PLT.			51	INDENTOR HOLDER	1	375676												
11	TOOL SPACER			52	INDENTOR HOLDER KEY	1	376075												
12	CRIMP SPACER			53	INDENTOR HOLDER PIN	1	375675												
13	STRIP GUIDE	1	376662	54	INDENTORS (AS REQ'D)	1	374595												
14	STOCK DRAG	1	376663	55															
15	RAM	1	47167	56	INDENTOR SPACER AS REQ'D	1													
16	TOOL HOLDER	1	471662	57															
17	ADJ. CRIMP MOUNT ASSY	1	379729	58															
18	ADJ. BLOCK			59															
19	APPLICATOR MOUNT ASSY.			60	INDENTOR HOLDER (AS REQ'D)	1	375675												
20	BASE PLATE	1	471658	61															
21	BASE BLOCK	1	471659	62	SPACER, GUARD	1	693372-1												
22	STRIP GUIDE PLATE FLOATING	1	471660	63															
23	ANVIL HOLDER			64	SCREW, DRIVE	3	21017-6												
24	AUX. ANVIL HOLDER			65	PLATE, IDENTIFICATION	1	452373-1												
25	STRIPPER	1	375690-1	66	QUICK FEED CHANGE ASSY	1	693308-1												
26	STRIPPER MOUNT	1	377811	67	NUT - HEX JAM 1/4-20	1	1-22202-4												
27	RETAINER PLATE			68															
28	STRIPPER MOUNT BRACKET			69															
29	STRIPPER BUSHING			70															
30	STOCK DRAG CONTROL BRK.	1	465870-1	71															
31	STOCK DRAG HANDLE			72															
32	STOCK DRAG STUD			REV.	REVISION RECORD	DATE	BY	ECN											
33	STOCK DRAG SPRING	2	3-22284-9	C3	REINSTATED & REDRAWN	3-14-79	SM	R2229											
34	STOCK DRAG ADJ. SCREW	2	372997	D	REV. PER ECN	7-17-79	SM	R3118											
35	FEED FINGER HOLDER			E	REV. ITEM 42 PER ECN	1-28-80	SM	R3882											
36	FEED FINGER	1	376655-1	F	REV ECN R-6406	8-16-80	SM	R6406											
37	FEED FINGER	1	376661-1																
38	FEED FINGER	1	21030-7																
39	BASE CASTING	1	570238																
40	GUARD	1	459401-1																
41	TABLE MOUNTS	2	3756689																

APPLICATOR PARTS LIST				I.D. BAND				ENDFEED				AMP INCORPORATED CHANGE HARRISBURG, PENNA. ASSY				QUICK CHANGE ASSY			
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	TO APPLY TERMINAL	CRIMPING DATA	TERMINALS					
1	WIRE CRIMPER			42	COMP. SPRING (TABLE)	2	803036-1	40681				40681							
2	INS. CRIMPER			43	COVER PLATE	2	375680	40942				40942							
3	ANVIL			44	FEED BLOCK - LEFT	1	376659	41108				41108							
4	ANVIL			45	FEED BLOCK - RIGHT	1	376658	41276				41276							
5	SHEAR BLADE			46	FEED LINK	1	376656												
6	REAR SHEAR PLATE			47	FEED PIN (FEED BLOCK)	1	376657												
7	SHEAR BLADE SPACER			48															
8	FRONT SHEAR PLATE			49															
9	REAR ANVIL SPACER PLT.			50	TO BE USED ONLY WHEN INDENTING (S REQ'D)														
10	FRONT ANVIL SPACER PLT.			51	INDENTOR HOLDER	1	375676												
11	TOOL SPACER			52	INDENTOR HOLDER KEY	1	376075												
12	CRIMP SPACER			53	INDENTOR HOLDER PIN	1	375675												
13	STRIP GUIDE	1	376662	54	INDENTORS (AS REQ'D)	1	374595												
14	STOCK DRAG	1	376663	55															
15	RAM	1	47167	56	INDENTOR SPACER AS REQ'D	1													
16	TOOL HOLDER	1	471662	57															
17	ADJ. CRIMP MOUNT ASSY	1	379729	58															
18	ADJ. BLOCK			59															
19	APPLICATOR MOUNT ASSY.			60	INDENTOR HOLDER (AS REQ'D)	1	375675												
20	BASE PLATE	1	471658	61															
21	BASE BLOCK	1	471659	62	SPACER, GUARD	1	693372-1												
22	STRIP GUIDE PLATE FLOATING	1	471660	63															
23	ANVIL HOLDER			64	SCREW, DRIVE	3	21017-6												
24	AUX. ANVIL HOLDER			65	PLATE, IDENTIFICATION	1	452373-1												
25	STRIPPER	1	375690-1	66	QUICK FEED CHANGE ASSY	1	693308-1												
26	STRIPPER MOUNT	1	377811	67	NUT - HEX JAM 1/4-20	1	1-22202-4												
27	RETAINER PLATE			68															
28	STRIPPER MOUNT BRACKET			69															
29	STRIPPER BUSHING			70															
30	STOCK DRAG CONTROL BRK.	1	465870-1	71															
31	STOCK DRAG HANDLE			72															
32	STOCK DRAG STUD			REV.	REVISION RECORD	DATE	BY	ECN											
33	STOCK DRAG SPRING	2	3-22284-9	C3	REINSTATED & REDRAWN	3-14-79	SM	R2229											
34	STOCK DRAG ADJ. SCREW	2	372997	D	REV. PER ECN	7-17-79	SM	R3118											
35	FEED FINGER HOLDER			E	REV. ITEM 42 PER ECN	1-28-80	SM	R3882											
36	FEED FINGER	1	376655-1	F	REV ECN R-6406	8-16-80	SM	R6406											
37	FEED FINGER	1	376661-1																
38	FEED FINGER	1	21030-7																
39	BASE CASTING	1	570238																
40	GUARD	1	459401-1																
41	TABLE MOUNTS	2	3756689																

APPLICATOR PARTS LIST				I.D. BAND				ENDFEED				AMP INCORPORATED CHANGE HARRISBURG, PENNA. ASSY				QUICK CHANGE ASSY			
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	TO APPLY TERMINAL	CRIMPING DATA	TERMINALS					
1	WIRE CRIMPER			42	COMP. SPRING (TABLE)	2	803036-1	40681				40681							
2	INS. CRIMPER			43	COVER PLATE	2	375680	40942				40942							
3	ANVIL			44	FEED BLOCK - LEFT	1	376659	41108				41108							
4	ANVIL			45	FEED BLOCK - RIGHT	1	376658	41276				41276							
5	SHEAR BLADE			46	FEED LINK	1	376656												
6	REAR SHEAR PLATE			47	FEED PIN (FEED BLOCK)	1	376657												
7	SHEAR BLADE SPACER			48															
8	FRONT SHEAR PLATE			49															
9	REAR ANVIL SPACER PLT.			50	TO BE USED ONLY WHEN INDENTING (S REQ'D)														
10	FRONT ANVIL SPACER PLT.			51	INDENTOR HOLDER	1	375676												
11	TOOL SPACER			52	INDENTOR HOLDER KEY	1	376075												
12	CRIMP SPACER			53	INDENTOR HOLDER PIN	1	375675												
13	STRIP GUIDE	1	376662	54	INDENTORS (AS REQ'D)	1	374595												
14	STOCK DRAG	1	376663	55															
15	RAM	1	47167	56	INDENTOR SPACER AS REQ'D	1													
16	TOOL HOLDER	1	471662	57															
17	ADJ. CRIMP MOUNT ASSY	1	379729	58															
18	ADJ. BLOCK			59															
19	APPLICATOR MOUNT ASSY.			60	INDENTOR HOLDER (AS REQ'D)	1	375675												
20	BASE PLATE	1	471658	61															
21	BASE BLOCK	1	471659	62	SPACER, GUARD	1	693372-1												
22	STRIP GUIDE PLATE FLOATING	1	471660	63															
23	ANVIL HOLDER			64	SCREW, DRIVE	3	21017-6												
24	AUX. ANVIL HOLDER			65	PLATE, IDENTIFICATION	1	452373-1												
25	STRIPPER	1	375690-1	66	QUICK FEED CHANGE ASSY	1	693308-1												
26	STRIPPER MOUNT	1	377811	67	NUT - HEX JAM 1/4-20	1	1-22202-4												
27	RETAINER PLATE			68															
28	STRIPPER MOUNT BRACKET			69															
29	STRIPPER BUSHING			70															
30	STOCK DRAG CONTROL BRK.	1	465870-1	71															
31	STOCK DRAG HANDLE			72															
32	STOCK DRAG STUD			REV.	REVISION RECORD	DATE	BY	ECN											
33	STOCK DRAG SPRING	2	3-22284-9	C3	REINSTATED & REDRAWN	3-14-79	SM	R2229											
34	STOCK DRAG ADJ. SCREW	2	372997	D	REV. PER ECN	7-17-79	SM	R3118											
35	FEED FINGER HOLDER			E	REV. ITEM 42 PER ECN	1-28-80	SM	R3882											
36	FEED FINGER	1	376655-1	F	REV ECN R-6406	8-16-80	SM	R6406											
37	FEED FINGER	1	376661-1																
38	FEED FINGER	1	21030-7																
39	BASE CASTING	1	570238																
40	GUARD	1	459401-1																
41	TABLE MOUNTS	2	3756689																

APPLICATOR PARTS LIST				I.D. BAND				ENDFEED				AMP INCORPORATED CHANGE HARRISBURG, PENNA. ASSY				QUICK CHANGE ASSY			
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	TO APPLY TERMINAL	CRIMPING DATA	TERMINALS					
1	WIRE CRIMPER			42	COMP. SPRING (TABLE)	2	803036-1	40681				40681							
2	INS. CRIMPER			43	COVER PLATE	2	375680	40942				40942							
3	ANVIL			44	FEED BLOCK - LEFT	1	376659	41108				41108							
4	ANVIL			45	FEED BLOCK - RIGHT	1	376658	41276				41276							
5	SHEAR BLADE			46	FEED LINK	1	376656												

FOR HARDWARE SEE 687531-1