


Powering Servos from Separate Power Supply Setup

EXTERNAL POWER SUPPLY


5 - 6 VDC
2 - 5 Amp

+

Optional Power Setup
Servo Motors
5 - 6 VDC

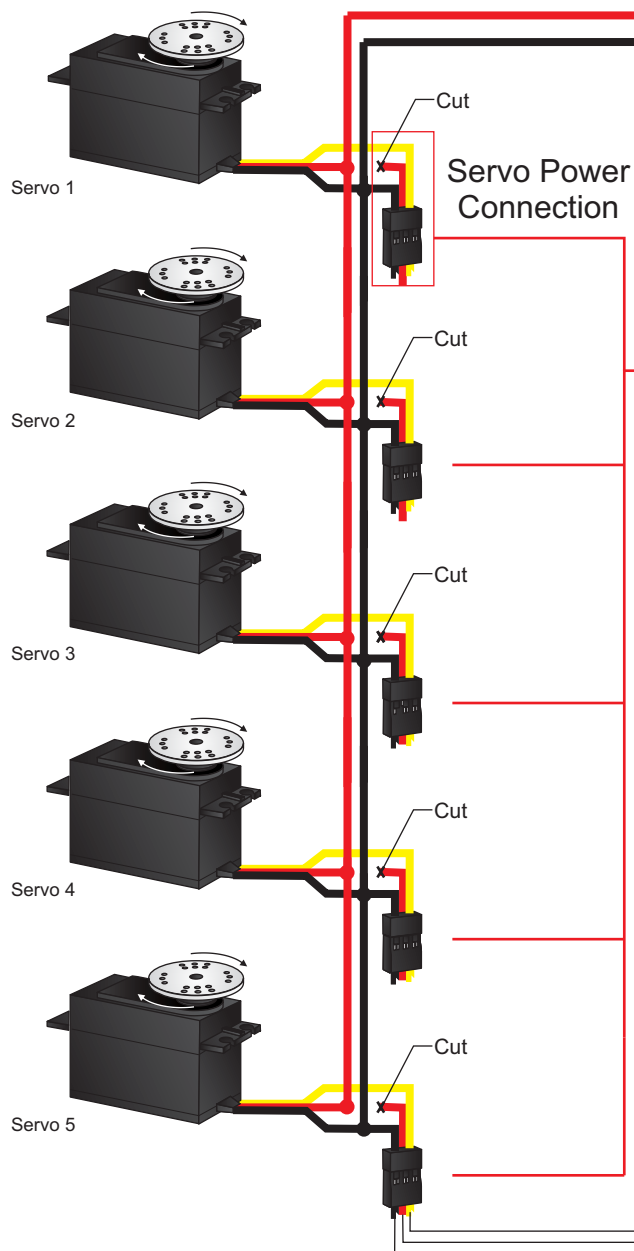

Note: Disconnect power to servomotors from controller board by cutting red wires as shown to the left. Then reconnect red power wires to external power supply as shown.

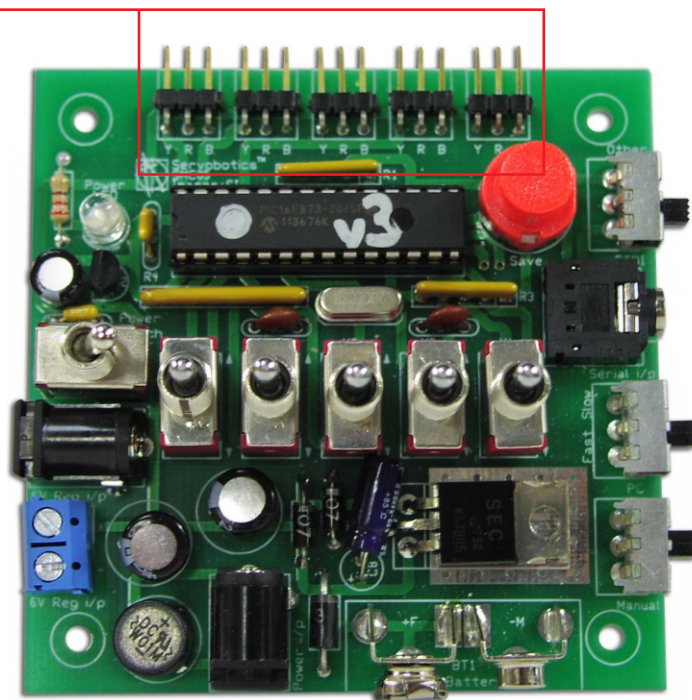

LEGEND

SMC-05

- White/Yellow = Signal
- Red = Power
- Black = Ground