



Catalogue Number	Description	Carton Quantity
10 AMP - 10AX PLATE SWITCHES		
811	1 gang, 1 Way 10 AX Switch	10
812	1 gang, 2 Way 10 AX Switch	10
813	Intermediate 10 AX Switch	10
814	Bell Push	10
815	3 Pole Fan Isolator 10 AX Switch	10
842	2 gang, 2 Way 10 AX Switch	10
843	3 gang, 2 Way 10 AX Switch	10
844	4 gang, 2 Way 10 AX Switch	5
846	6 gang, 2 Way 10 AX Switch	5
20 AMP SWITCHES		
830	20A DP Switch	10
831	20A DP Switch With Neon	10
832	20A DP Switch With Flex Outlet	10
833	20A DP Switch With Neon and Flex outlet	10
832WH	20A DP Switch, marked Water Heater With Flex Outlet	10
833WH	20A DP Switch, marked Water Heater With Neon and F/O	10
45 AMP SWITCHES		
870	45A DP Cooker Control Unit with 13A Socket and Neon	5
871	45A DP Cooker Control Unit with 13A Socket	5
872	45A DP Switch With Neon, Large Plate	5
873	45A DP Switch, Large Plate	5
874	45A DP Switch With Neon, Single Plate	10
875	45A DP Switch, Single Plate	10
45 AMP COOKER OUTLET		
879	45A Flex Outlet Plate, Bottom Entry	10
13 AMP SOCKET OUTLETS		
821SP	1 gang, 13A Single Pole Switched	10
821DP	1 gang, 13A Double Pole Switched	10
822SP	2 gang, 13A Single Pole Switched	5
822DP	2 gang, 13A Double Pole Switched	5
823	1 gang, 13A Unswitched	10
824	2 gang, 13A Unswitched	5
825	1 gang, 13A Switched With Neon	10
826	2 gang, 13A Switched With Neon	5
ROUND PIN AND EXPORT SOCKET OUTLETS		
828	1 gang, 2A Unswitched Socket, Round Pin	10
829	1 gang, 5A Unswitched Socket, Round Pin	10
899	1 gang, 15A Switched Socket Round Pin	10
899N	15A Switched Socket Round Pin With Neon	10
827	1 gang, Switched Universal Socket	10
827N	2 gang, Switched Universal Socket With Neon	10
897	16A, 2 gang Shuttered Socket	10