



# VIPER Remote Control Systems

- 433MHz FM Technology
- 1 – 4 Channels each 1000W Rated
- upto 150metres Range
- 12-30Vdc / 230Vac supply
- Waterproof (IP68)
- High Security RF Protocol
- 4 Relays 5A @ 230Vac
- Outputs Momentary or Latching
- Any Switch Map to Any Relay Output
- Systems supplied 'ready to Go'
- EMC / FCC Compliant for Europe / USA



## Applications

- General Purpose Remote Switching
- Garage Doors
- Electric Gates, Shutters
- All known Lighting types (LED, fluorescent, halogen, tungsten, xenon; basically all lighting types).
- Access Control

## Description

Housed in a rugged IP68 weatherproof enclosure, The VIPER system is ideally suited to any outside Remote switch requirement.

Each receiver has 4 relays, using the 'easy-learn' process each relay can be controlled from any switch on any transmitter.

Installation is by screw terminals to the power supply, and the output relay contacts. The output relays are activated by the button press on the transmitter encoder.



# VIPER Remote Control Systems

## System Part Numbering

### Operating from 12-30Vdc



| Part Number | Description      | Receiver Power Supply | Range** (Metres) |
|-------------|------------------|-----------------------|------------------|
| VIPER-S1    | System 1 channel | 12-30Vdc              | 150              |
| VIPER-S2    | System 2 channel | 12-30Vdc              | 150              |
| VIPER-S4    | System 4 channel | 12-30Vdc              | 150              |

### Systems Operating from 230Vac

| Part Number | Description      | Receiver Power Supply | Range** (Metres) |
|-------------|------------------|-----------------------|------------------|
| VIPER-S1M   | System 1 channel | 230Vac                | 150              |
| VIPER-S2M   | System 2 channel | 230Vac                | 150              |

\*\*Range stated is optimum, direct line of sight. In worst conditions this can be reduced by over 50%

## Additional Transmitters



Transmitters ship with; Wall Mounting Cradle, and Lanyard



| Part Number       | Description                             |
|-------------------|-----------------------------------------|
| FIREFLY-TX1       | Transmitter 1 switch                    |
| FIREFLY-TX2       | Transmitter 2 switch                    |
| FIREFLY-TX4       | Transmitter 4 switch                    |
| FIREFLY-TX8       | Transmitter 8 switch                    |
| FIREFLY-TX16      | Transmitter 16 switch (8Sw + Shift Key) |
| FIREFLY -TX-IPKIT | 'O' Ring, Seals Transmitter to IP68     |

## Custom Version

To create a custom version requires just a Sticker!  
Please contact Sales for further info.






# VIPER Remote Control Systems

## Data Outputs


Each output relay provides an isolated switch. Connections are Common (COM), Normally Open (NO) and Normally Closed (NC).

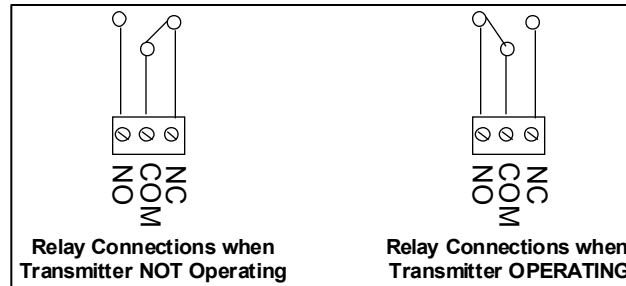


## Installation

Below is a simple example showing one possible way to wire a relay in order to give switched power to an external load:

When the relay is energised the 'COM' connects to 'NO' and power is applied to the Load.

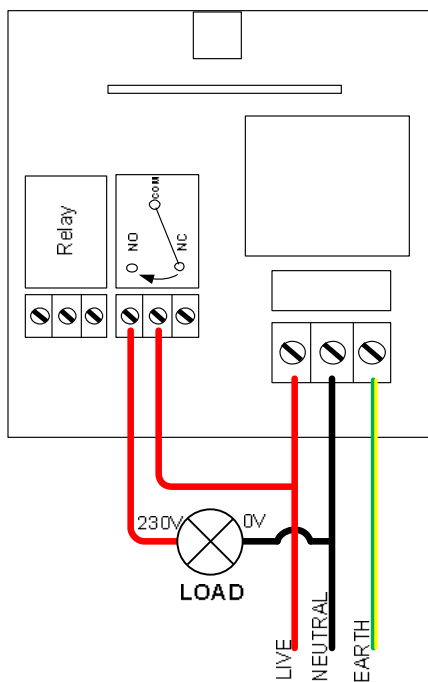

**HORNET 230V Systems**  
230V Switched Output Example—  
Only to be used by a competent person

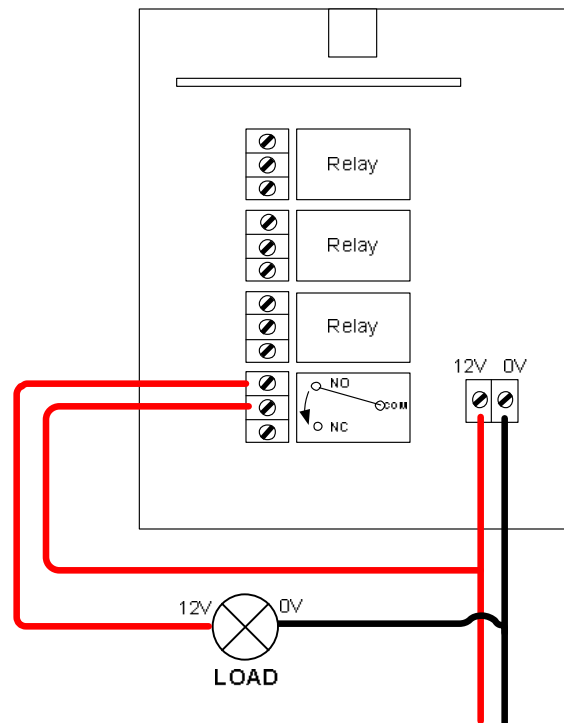

**HORNET 12 - 32V Systems**  
12V Switched Output Example —  
Only to be used by a competent person

R F Solutions Ltd.,  
Unit 21, Cliffe Industrial Estate,  
Lewes, E. Sussex. BN8 6JL. England.

Email : [sales@rfsolutions.co.uk](mailto:sales@rfsolutions.co.uk) <http://www.rfsolutions.co.uk>

Tel: +44 (0)1273 898 000 Fax: +44 (0)1273 480 661



# VIPER Remote Control Systems

## Pairing a Transmitter to a Receiver

Each transmitter has a unique identity. Each time a transmitter Switch is operated, it emits a secure RF signal. The Receiver can learn this signal and allocate to any of its outputs.

The only limitation is that each receiver has a maximum memory for up to 40 pairings, these can be from the same or any number of transmitters.

Hint: the same transmitter may be taught to different receivers to create 'master keys'.


## VIPER-S1 / VIPER-S2 / VIPER-S4 (12-30Vdc Receivers)

### To Learn a New Transmitter switch follow this procedure

Any transmitter button can be learnt to one or many of the receiver output relays.

Each button must be learnt to each relay individually by following this procedure:

1. Select the receiver output relay to learn to:
  2. Briefly press the receiver Learn switch (S2) once
  3. The Learn LED will flash once to indicate output relay 1 is selected
  4. After the LED stops flashing, press the Learn switch again to select the next relay channel
  5. Repeat step 2 until the required output relay is selected.
6. Press the button on the transmitter you want to learn to the relay output.
7. The Learn LED will then illuminate, press the same transmitter button again.
8. The Learn LED will then flash to indicate learning is complete.
9. The transmitter button will now operate the relay.

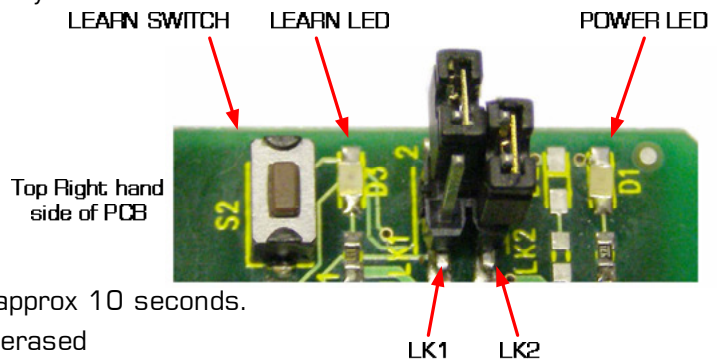

## Erasing Receivers Memory

1. Press and hold the receiver Learn Switch for approx 10 seconds.
2. When the Learn LED turns OFF all memory is erased

**NOTE:** You cannot erase individual Tx encoders

## Configuring Receiver Outputs

The jumper links configure the outputs to be Momentary or Latching.

The jumper links are made / removed by the small link 'cap' placed over the pin header.

| Link Positions |        | Relay Outputs |       |       |       |
|----------------|--------|---------------|-------|-------|-------|
| LK1            | LK2    | RLY 1         | RLY 2 | RLY 3 | RLY 4 |
| Closed         | Closed | Mom           | Mom   | Mom   | Mom   |
| Closed         | Open   | Mom           | Mom   | Latch | Latch |
| Open           | Closed | Mom           | Latch | Latch | Latch |
| Open           | Open   | Latch         | Latch | Latch | Latch |

(The configuration shown in the picture above represents the third row of the table)



# VIPER Remote Control Systems

## VIPER-S1M / VIPER S2M (230Vac Powered Receivers)

**Please Note:** During Learn and Erase the relays operate at high speed. They should be isolated from sensitive equipment during this process.

### To Pair a Transmitter button to receiver Output Relay #1

1. Apply power the receiver and wait 10secs for the unit to enter 'normal operation' mode.
2. Switch the receiver unit OFF and then ON again in ~1sec intervals **FOUR** times finally leaving the unit powered.
3. After 5 seconds the receiver emits a single 'buzz' The unit is now in 'learn' Mode
5. Press the chosen transmitter button.
6. The receiver will acknowledge by sounding the a single 'buzz'
7. Press the same transmitter button again, to confirm OK. The receiver will "buz" again to confirm.
8. Learn Process complete. After 10 seconds the unit will return to 'normal operation' mode.

### To Pair a Transmitter button to receiver Output Relay #2

1. Apply power the receiver and wait 10secs for the unit to enter 'normal operation' mode.
2. Switch the receiver unit OFF and then ON again in ~1sec intervals **SIX** times finally leaving the unit powered.
3. After 5 seconds the receiver emits a double 'buzz' The unit is now in 'learn' Mode
5. Press the chosen transmitter button.
6. The receiver will acknowledge by sounding the a double 'buzz'
7. Press the same transmitter button again, to confirm OK. The receiver will double "buzz" again to confirm.
8. Learn Process complete. After 10 seconds the unit will return to 'normal operation' mode.

### Erasing Receivers Memory


1. Power the receiver unit up and wait 10 seconds for the unit to enter 'normal operation' mode.
2. Switch the unit off and then on again at ~1 second intervals **TEN** times, leaving the unit powered.
3. Wait 5 seconds until a 'clicking' sound is heard for a period of 10 seconds.
4. Wait 10 seconds for the receiver unit to return to 'normal' mode

### Configuring Receiver Outputs

The jumper links configure the outputs to be Momentary or Latching.

The jumper links are made/removed by the small link 'cap' placed over the pin header.

| Link Positions - Relay Outputs |          |        |          |
|--------------------------------|----------|--------|----------|
| LK1                            | Relay #1 | LK2    | Relay #2 |
| Open                           | Mom      | Open   | Mom      |
| Closed                         | Latch    | Closed | Latch    |

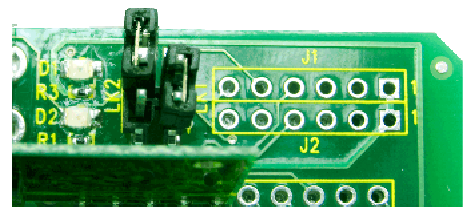

(the above image shows, RLY2 Momentary, RLY1 Latched)



# VIPER Remote Control Systems

## Technical Specifications

### Transmitters: FIREFLY-TXn

Enclosure Rating: Standard IPx8

Battery Type: CR2032 (supplied)

Dimensions: 90 x 54 x 27 mm

Changing the Battery: Remove the six fixing screws, remove battery and replace note polarity

| Electrical Characteristics      | Min    | Typical | Max    | Units |
|---------------------------------|--------|---------|--------|-------|
| Supply Voltage                  |        | 3V      |        | V     |
| Supply Current                  |        |         |        | mA    |
| Frequency: FireFLY: Wideband    | 432.90 | 433.920 | 434.10 | MHz   |
| RF Output Power (ERP) @ 433 MHz | -      | 3       | 10     | mW    |

### Receiver Decoder

Enclosure Rating IP68

Dimensions 130 x 112 x 42 mm (not including antenna)

Storage Temperature: -10 to +70° Celsius.


Operating Temperature: -10 to +50° Celsius.

| ELECTRICAL CHARACTERISTICS                         | MIN  | TYPICAL | MAX | DIMENSION |
|----------------------------------------------------|------|---------|-----|-----------|
| Supply Voltage for +12 v                           | 10.5 |         | 30  | Vdc       |
| Relay Rating* (230Vac) RLY1-4                      |      | 5       | 12  | A         |
| Supply Current : Quiescent                         |      | 10      |     |           |
| All relays operating*                              |      | 140     |     | mA        |
| Time delay from Tx on Switch to Rx Relay operation |      |         | 100 | mS        |
| Time delay from Tx sw relax to Rx Relay release    |      |         | 300 | MS        |

\*The relay contacts in this unit are for functional use only and must not be used for isolation purposes



# VIPER Remote Control Systems

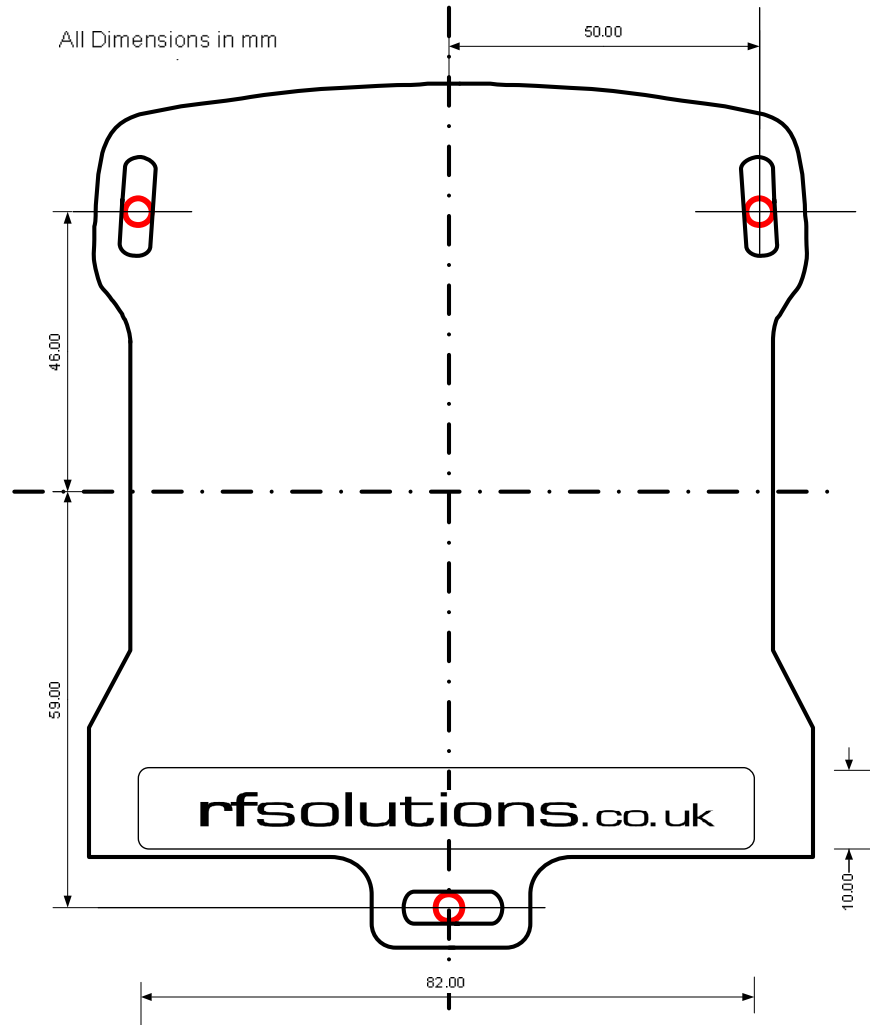

|                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>RF Solutions Ltd RECYCLING NOTICE</b>                                                                                                                                                                                                                                                                                      |
| Meets the following EC Directives                                                                                                                                                                                                                                                                                             |
|                                                                                                                                                                                                                                            |
| <b>DO NOT Discard with normal waste, please recycle.</b>                                                                                                                                                                                                                                                                      |
| <b>ROHS Directive</b><br>2002/95/EC<br>Specifies certain limits for hazardous substances.                                                                                                                                                                                                                                     |
| <b>WEEE Directive</b><br>2002/96/EC<br>Waste Electrical & Electronic Equipment.<br>This product must be disposed of through a licensed WEEE collection point.<br>RF Solutions Ltd fulfils its WEEE obligations by membership of an approved compliance scheme.<br>Environment Agency producer registration number WEE_80194WV |
| <b>Waste Batteries and Accumulators Directive</b><br>2006/66/EC<br>Where batteries are fitted, before recycling the product, the batteries must be removed and disposed of at a licensed collection point.                                                                                                                    |

R F Solutions Ltd.,  
Unit 21, Cliffe Industrial Estate,  
Lewes, E. Sussex. BN8 6JL England.

Email : [sales@rfsolutions.co.uk](mailto:sales@rfsolutions.co.uk) <http://www.rfsolutions.co.uk>

Tel: +44 (0)1273 898 000 Fax: +44 (0)1273 480 661

