


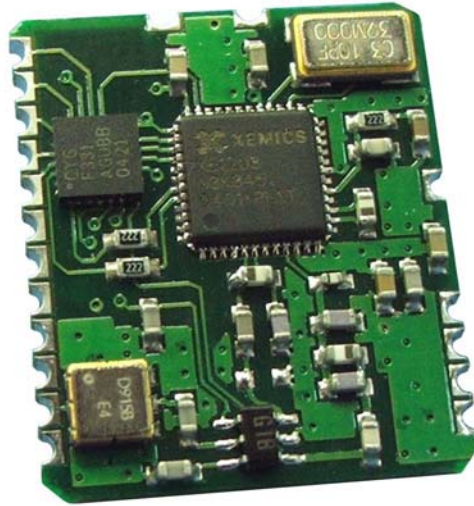

**Wi.232EUR User's Manual**  
**European 868-870MHz Band Version**  
**Rev 1.6**



905 Messenger Lane  
Moore, OK 73160  
405-794-7730

© 2003-2007 Radiotronix Inc, all rights reserved

## 1. Document Control

|                        |           |          |
|------------------------|-----------|----------|
| Created By             | Tom Marks | 12/15/04 |
| Engineering Review     |           |          |
| Marketing Review       |           |          |
| Approved - Engineering |           |          |
| Approved - Marketing   |           |          |

| Revision | Author | Date      | Description                                                                                                       |
|----------|--------|-----------|-------------------------------------------------------------------------------------------------------------------|
| 1.0.1    | TRM    | 12/9/2003 | Document Created, Preliminary                                                                                     |
| 1.5.0    | TRM    | 3/12/2005 | Document modified to match initial release. Channel tables changed substantially to match regulatory requirements |
| 1.6      | TRM    | 1/22/2007 | Various document corrections and clarifications                                                                   |
|          |        |           |                                                                                                                   |
|          |        |           |                                                                                                                   |

## 2. Introduction

### 2.1. Module Overview

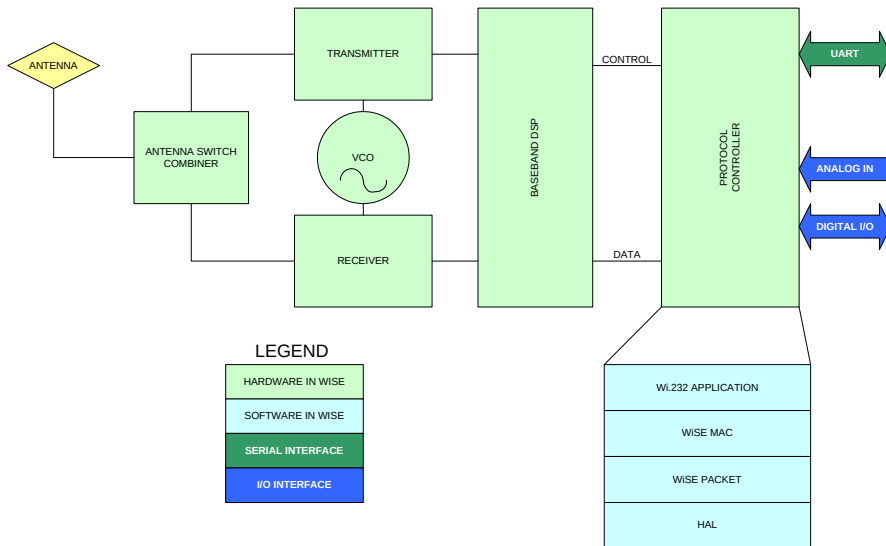


Figure 1: Wi.232EUR Block Diagram

### 2.2. Features

- True UART to antenna solution
- 16-bit CRC error checking
- 76.8kbit/sec maximum RF data rate
- 2 channels in Wideband mode
- 6 channels in Narrowband mode
- Small size – .8" x .935" .08"
- Low power standby and sleep modes
- PHY and MAC layer protocol built in
- CSMA medium access control
- 115dB link budget in Wideband mode
- 8 modes allow user to optimize power/range
- Command mode for volatile and non-volatile configuration
- 48-bit unique address
- 5 volt tolerant I/O
- Under \$20 in production quantities
- 915MHz U.S. version available

### 2.3. Applications

- Direct RS-232/422/485 wire replacement (requires external RS-232 to 3V CMOS conversion circuitry)
- Asset Tracking
- Automated Meter Reading
- Industrial/Home Automation
- RFID
- Wireless Sensors
- Remote Data Logging

### 3. Table of Contents

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>1. Document Control .....</b>                              | <b>2</b>  |
| <b>2. Introduction.....</b>                                   | <b>2</b>  |
| 2.1. Module Overview .....                                    | 2         |
| 2.2. Features .....                                           | 2         |
| 2.3. Applications .....                                       | 2         |
| <b>3. Table of Contents .....</b>                             | <b>3</b>  |
| <b>4. Table of Figures .....</b>                              | <b>4</b>  |
| <b>5. Index of Tables.....</b>                                | <b>4</b>  |
| <b>6. Theory of Operation .....</b>                           | <b>5</b>  |
| 6.1. General.....                                             | 5         |
| 6.2. Operating States .....                                   | 8         |
| 6.3. Resetting Module to Factory Defaults .....               | 9         |
| <b>7. Application Information .....</b>                       | <b>10</b> |
| 7.1. Pin-out Diagram .....                                    | 10        |
| 7.2. Pin Description .....                                    | 10        |
| 7.3. Mechanical Drawings .....                                | 11        |
| 7.4. Example Circuit .....                                    | 13        |
| 7.5. Power Supply .....                                       | 13        |
| 7.6. UART Interface .....                                     | 13        |
| 7.7. Antenna.....                                             | 14        |
| 7.8. Link budget, transmit power, and range performance ..... | 14        |
| <b>8. Module Configuration.....</b>                           | <b>15</b> |
| 8.1. Channel settings .....                                   | 15        |
| 8.2. Power Mode .....                                         | 16        |
| 8.2.1. Wideband Mode.....                                     | 16        |
| 8.2.2. Narrowband Mode .....                                  | 17        |
| 8.3. UART Data Rate .....                                     | 17        |
| 8.4. Network Mode .....                                       | 18        |
| 8.5. Transmit Wait Timeout.....                               | 18        |
| 8.6. Network Group .....                                      | 18        |
| 8.7. CRC Control.....                                         | 18        |
| 8.8. UART minimum transmission unit.....                      | 19        |
| 8.9. Verbose mode.....                                        | 19        |
| 8.10. CSMA enable .....                                       | 19        |
| 8.11. Sleep control.....                                      | 19        |
| 8.12. MAC Address .....                                       | 20        |
| 8.13. Register Summary.....                                   | 21        |
| <b>9. Using Configuration Registers.....</b>                  | <b>21</b> |
| 9.1. CMD Pin.....                                             | 21        |
| 9.2. Command Formatting .....                                 | 22        |
| 9.3. Writing To Registers.....                                | 23        |
| 9.4. Reading From Registers .....                             | 24        |
| <b>10. Electrical Specifications .....</b>                    | <b>25</b> |
| 10.1. Absolute Maximum Ratings.....                           | 25        |
| 10.2. Detailed Electrical Specifications .....                | 25        |
| 10.2.1. AC Specifications – RX .....                          | 25        |
| 10.2.2. AC Specifications – TX .....                          | 26        |
| 10.2.3. DC Specifications.....                                | 26        |
| 10.3. Flash Specifications (Non-Volatile Registers) .....     | 27        |
| <b>11. Custom Applications.....</b>                           | <b>28</b> |
| <b>12. Ordering Information.....</b>                          | <b>28</b> |
| <b>13. Contact Us.....</b>                                    | <b>28</b> |
| 13.1. Technical Support.....                                  | 28        |
| 13.2. Sales Support .....                                     | 28        |

## 4. Table of Figures

|                                                         |    |
|---------------------------------------------------------|----|
| Figure 1: Wi.232EUR Block Diagram .....                 | 2  |
| Figure 2: WiSE Block Diagram .....                      | 5  |
| Figure 3: Wi.232EUR Networking Concept .....            | 6  |
| Figure 4: RX State Machine .....                        | 8  |
| Figure 5: TX State Machine .....                        | 9  |
| Figure 7: Pin-out diagram .....                         | 10 |
| Figure 8: Module Mechanical Drawings .....              | 11 |
| Figure 9: Wi.232EUR/Wi.232DTS Suggested Footprint ..... | 12 |
| Figure 10: Evaluation Module Circuit.....               | 13 |
| Figure 11: Command and CMD Pin Timing .....             | 22 |
| Figure 12: Command Conversion Code .....                | 23 |


## 5. Index of Tables

|                                                                                                 |    |
|-------------------------------------------------------------------------------------------------|----|
| Table 1, Module Pin Descriptions.....                                                           | 10 |
| Table 2, Wi.232EUR UART Interface Lines .....                                                   | 14 |
| Table 3, Channel Table .....                                                                    | 16 |
| Table 4, Power Mode Register Settings .....                                                     | 16 |
| Table 5, Wideband Mode Parameters.....                                                          | 17 |
| Table 6, narrowband Mode Parameters .....                                                       | 17 |
| Table 7, Data Rate Register Settings .....                                                      | 17 |
| Table 8, Register Summary .....                                                                 | 21 |
| Table 9, Write Register Command, value to be written is less than 128 (0x80). .....             | 23 |
| Table 10, Write Register Command, value to be written is greater than or equal to 128 (0x80). . | 24 |
| Table 11, Read Register Command .....                                                           | 24 |
| Table 12, Read Register Module Response For A Valid Register .....                              | 24 |
| Table 13, Absolute Maximum Ratings.....                                                         | 25 |
| Table 14, AC Specifications - Rx.....                                                           | 25 |
| Table 15, AC Specifications - Tx .....                                                          | 26 |
| Table 16, DC Specifications .....                                                               | 26 |
| Table 17, Flash Specifications (Non-Volatile Registers) .....                                   | 27 |

## 6. Theory of Operation

### 6.1. General


The Wi.232 module is one of a family of WiSE™ (Wireless Serial Engine) modules. A WiSE™ module combines a state-of-the-art wideband/FSK data transceiver and a high-performance protocol controller to create a complete embedded wireless communications link in a tiny IC-style package.

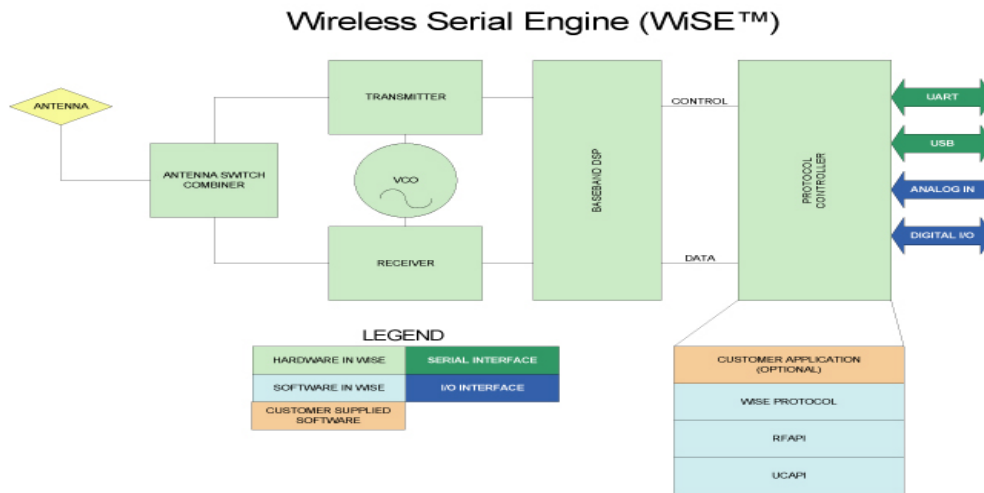

**Figure 2: WiSE Block Diagram**

The Wi.232EUR module has a UART-type serial interface and contains special application software to create a transparent UART-to-antenna wireless solution capable of direct wire replacement in most embedded RS-232/422/485 applications.

**NOTE:** Although the module is capable of supporting the typical serial communications required by RS-232, RS-422, and RS-485 networks, it is not compatible with the electrical interfaces for these types of networks. The module has CMOS inputs and outputs and would require an appropriate converter for the particular type of network it is connected to.

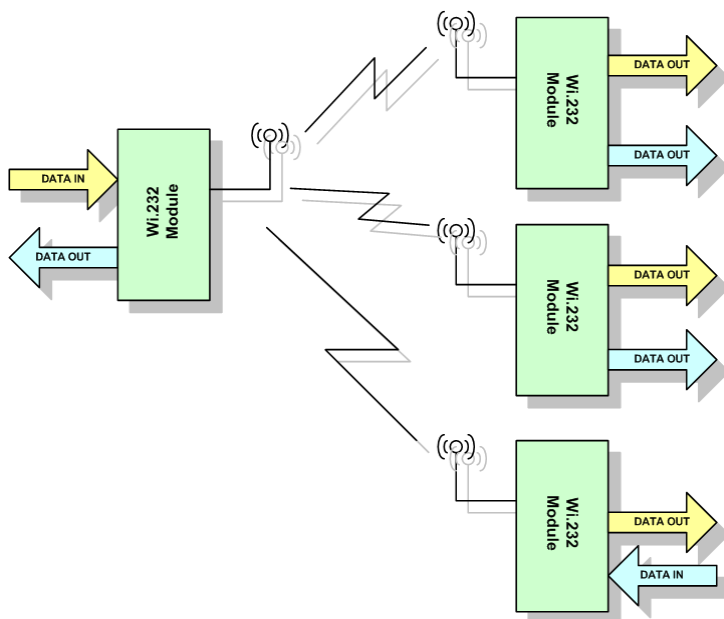

**Figure 3: Wi.232EUR Networking Concept**

The module is designed to interface directly to a host UART. Three signals are used to transfer data between the module and the host UART: **TXD**, **RXD**, and **CTS**. **TXD** is the data output from the module **RXD** is the data input to the module. **CTS** is an output that indicates the status of the module's data interface. If **CTS** is low, the module is ready to accept data. If **CTS** is high, the module is busy and the host UART should not send any further data.

Internally, the module has a 192 byte buffer for incoming characters from the host UART. The module can be programmed to automatically transmit when the buffer reaches a programmed limit, set by **regUARTMTU**. The module can also be programmed to transmit based on a delay between characters, set by **regTXTO**(set in 1mSec increments). These registers allow the designer to optimize performance of the module for fixed length and variable length data. The module will support streaming data, as well. To optimize the module for streaming data, **regUARTMTU** should be set to 144, and **regTXTO** should be set to a value equal to 1 byte time at the current UART data rate or 2, whichever is greater. If the buffer is full, or the timer set by **regTXTO** expires, and the module is in the process of sending the previous packet over the RF link, the module will assert **CTS** high, indicating that the host should not send any more data. Data sent by the host while **CTS** is high will be lost.

When the MAC layer has a packet to send, it will use a **carrier-sense-multiple-access (CSMA)** protocol to determine if another module is already transmitting. If another module is transmitting, the module will receive that data before attempting to transmit its data again. If, during this process, the UART receive buffer gets full, the **CTS** line will go high to prevent the host UART from over-running the receive buffer. The CSMA mechanism introduces a variable delay to the transmission channel. This delay is the sum of a random period and a weighted period that is dependent on the number of times that the module has tried and failed to acquire the channel. For applications that guarantee that only one module will be transmitting at any given time, the CSMA mechanism can be turned off to avoid this delay.

The MAC layer prefixes the data with a packet header and postfixes the data with a 16-bit CRC. The 16-bit CRC error checking can be disabled to allow the application to do its own error checking. Data is encoded using a proprietary algorithm (DirectSPREAD™) to spread the RF energy equally within the transmission bandwidth.

Modules can operate in groups. Each module can be assigned a 7-bit group ID, which is used to logically link it to other modules on the same channel. All modules on a channel will interoperate, regardless of their respective group IDs. In other words, the CSMA mechanism will prevent collisions of modules on the same channel but belonging to different groups.

Modules can also operate in two network modes: Master/Slave and Peer-to-Peer. These modes define a set of communication rules that identifies which modules can talk to any given module. In Master/Slave mode, masters can talk to slaves and other masters, slaves can talk to masters, but slaves cannot talk to other slaves. This mode is sometimes required for applications that are replacing legacy RS-485 networks. In peer-to-peer mode, any module can hear any other module. In both modes, group integrity is enforced.

When a module transmits a packet, all other modules on the same channel will receive the packet, check the packet for errors, and determine whether the received group ID matches the local group ID. If the packet is error free and the group IDs match, the module will decrypt the data if necessary, and send the error free data to its host UART for processing. The modules only implement the ISO reference network stack up to the MAC layer, so they are transparent to link layer addressing schemes. Therefore, the modules can work with any link-layer and higher protocols in existing today.

Certain features of the module are controlled through programmable registers. Registers are accessed by bringing **CMD** low. When **CMD** is low, all data transfers from the host UART are considered to be register access commands. When **CMD** is high, all data transfers from the host UART are considered to be raw data that needs to be transparently transmitted across the wireless link. The module maintains two copies of each register: one in flash and one in RAM. On reset, the module loads the RAM registers from the values in the flash registers. The module is operated out of the RAM registers. Applications that need to change parameters of the module often would simply modify the RAM register. By putting default settings in the flash registers, the module will always come up in a preconfigured state, which is useful for applications that do not have external microcontrollers, such as RS-232 adapters.

The UART interface is capable of operating in full duplex at baud rates from 2.4 to 115.2 kbps.

The module has 10 power modes: 4 wideband modes, 4 narrowband modes, standby, and sleep.

In wideband mode, the module's channel bandwidth is set to 600kHz. In this mode, the module can operate on 2 channels and support a maximum RF data rate of 76.8kbit/second. The receiver sensitivity at the max data rate is -102dBm typical, yielding a maximum link budget of 115dB. This mode is an excellent alternative to frequency hopping spread spectrum. It requires no synchronization, allowing it to operate in a duty-cycle mode for extended battery life.

In narrowband mode, the module's channel bandwidth is set to 200kHz. In this mode, the module can operate on 6 channels and supports a maximum data rate of 9600 baud. The receiver sensitivity at the maximum data rate is -104 typical, yielding a link budget of 117dB.

The module can be placed into sleep mode through the command mode. In sleep mode, the RF section is completely shutdown, and the protocol processor is in an idle state. Once the module has been placed in the sleep mode, it can be awakened by either cycling power, which will lose all volatile settings, or by sending a power-up sequence through the serial port. The power up sequence is 0x00, 0xFF, 0xFF, 0xFF sent back-to-back at the data rate for which the module is configured.

**Note:** When in sleep mode, the module will not be able to receive data from other modules. Any data sent to the module while it is in sleep mode will be lost.




If the current draw in sleep mode is too high for a particular application, the designer can switch power to the module through a switching transistor to “turn-off” the module when it is not needed. If this technique is used, the volatile registers will reset to the values in their non-volatile mirrors, so any changes from the default will have to be reloaded.

The Wi.232EUR is a very flexible module because of all of the configurable parameters it supports. However, modules that are not configured in the same way will not be able to communicate reliably, causing poor performance or outright failure of the wireless link. **All modules in a network must have the same mode configuration to ensure interoperability.**

Every Wi.232 module has read-only internal registers that contain factory programmed information that includes calibration data and a 48-bit MAC address that can be used by the host application for higher level, connection oriented protocols. This MAC address can be read through the command interface.


## 6.2. Operating States

The primary active state is the IDLE state. When the module is not actively transmitting or receiving data, it is in this state. While in this state, the receiver is enabled and the module is continuously listening for incoming data. If the module detects a pre-amble and valid start-code, it will enter the RX\_HEADER state.

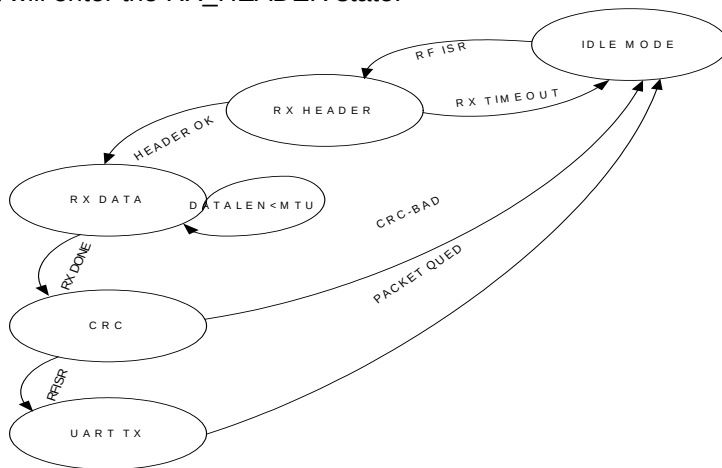

**Figure 4: RX State Machine**

If the module is in the IDLE state and a byte is received by the UART, it will enter the TX\_WAIT state.

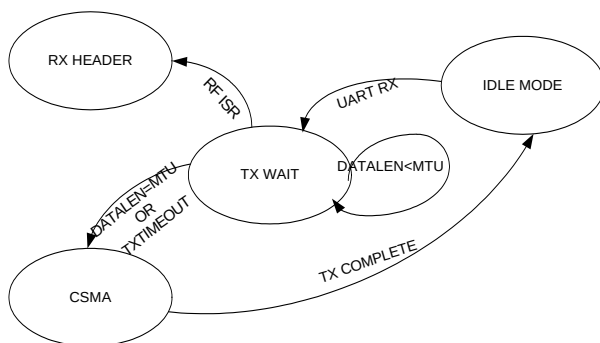

**Figure 5: TX State Machine**

### **6.3. *Resetting Module to Factory Defaults***

It may be necessary to reset the non-volatile registers to their factory defaults. To reset the module to factory defaults, hold the command line low and cycle power to the module. The command line must remain low for a minimum of 600ms after the resetting the module. Once the command line is released, the module will be operating at factory defaults.

## 7. Application Information

### 7.1. Pin-out Diagram

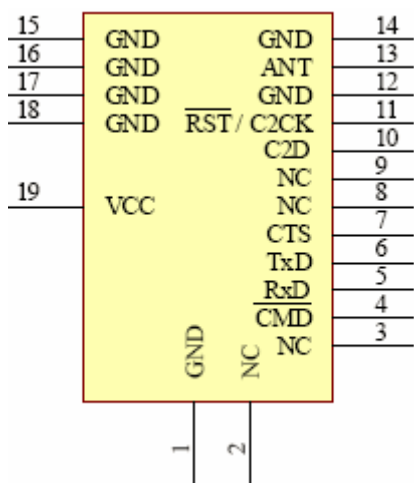


Figure 6: Pin-out diagram

### 7.2. Pin Description


| No. | Description                            |
|-----|----------------------------------------|
| 1   | Ground                                 |
| 2   | No connect – reserved                  |
| 3   | No connect – reserved                  |
| 4   | Command input – active low             |
| 5   | UART receive input                     |
| 6   | UART transmit output                   |
| 7   | UART clear to send output – active low |
| 8   | No connect – reserved                  |
| 9   | No connect – reserved                  |
| 10  | Reserved – ISP pin                     |
| 11  | Active-low Reset / Reserved – ISP pin  |
| 12  | Ground                                 |
| 13  | Antenna port – 50 ohm                  |
| 14  | Ground                                 |
| 15  | Ground                                 |
| 16  | Ground                                 |
| 17  | Ground                                 |
| 18  | Ground                                 |
| 19  | VCC – 2.7 to 3.6 VDC                   |

Table 1, Module Pin Descriptions


#### Legend

|  |                                                         |
|--|---------------------------------------------------------|
|  | Signals that are used in this implementation            |
|  | Signals not used in this implementation –do not connect |
|  | Signals used for in-system programming                  |

### 7.3. Mechanical Drawings

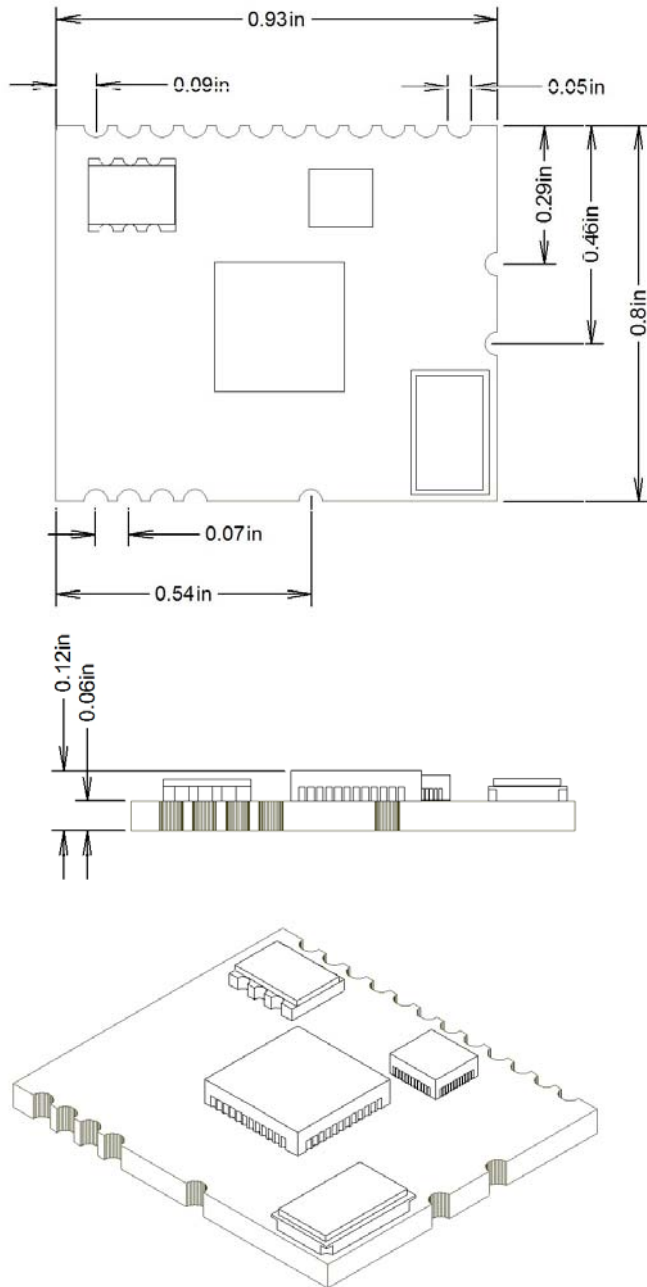

**Figure 7: Module Mechanical Drawings**

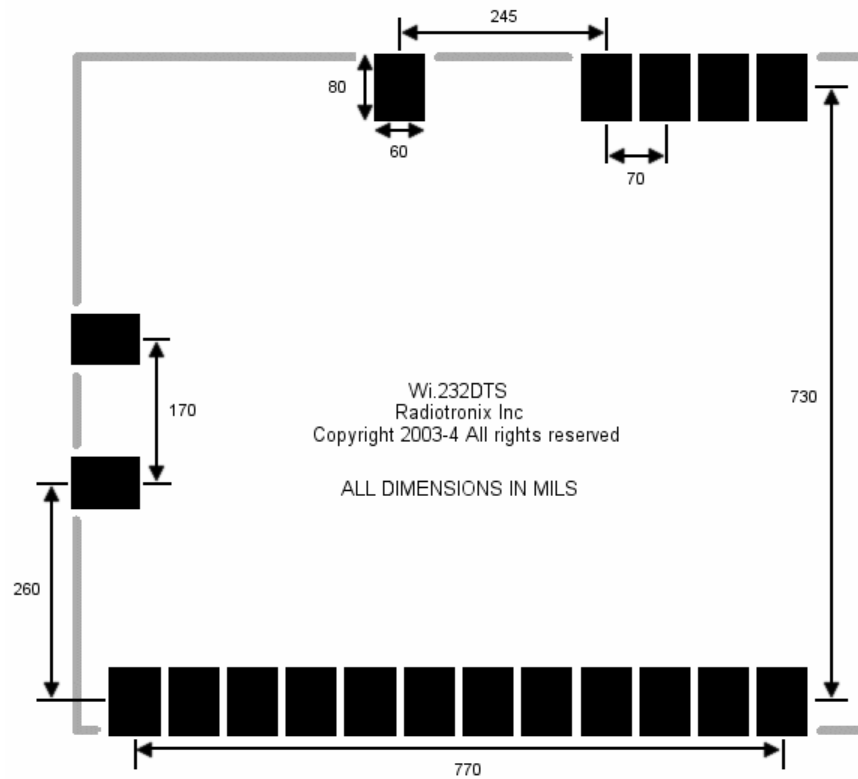

**Figure 8: Wi.232EUR/Wi.232DTS Suggested Footprint**

## 7.4. Example Circuit

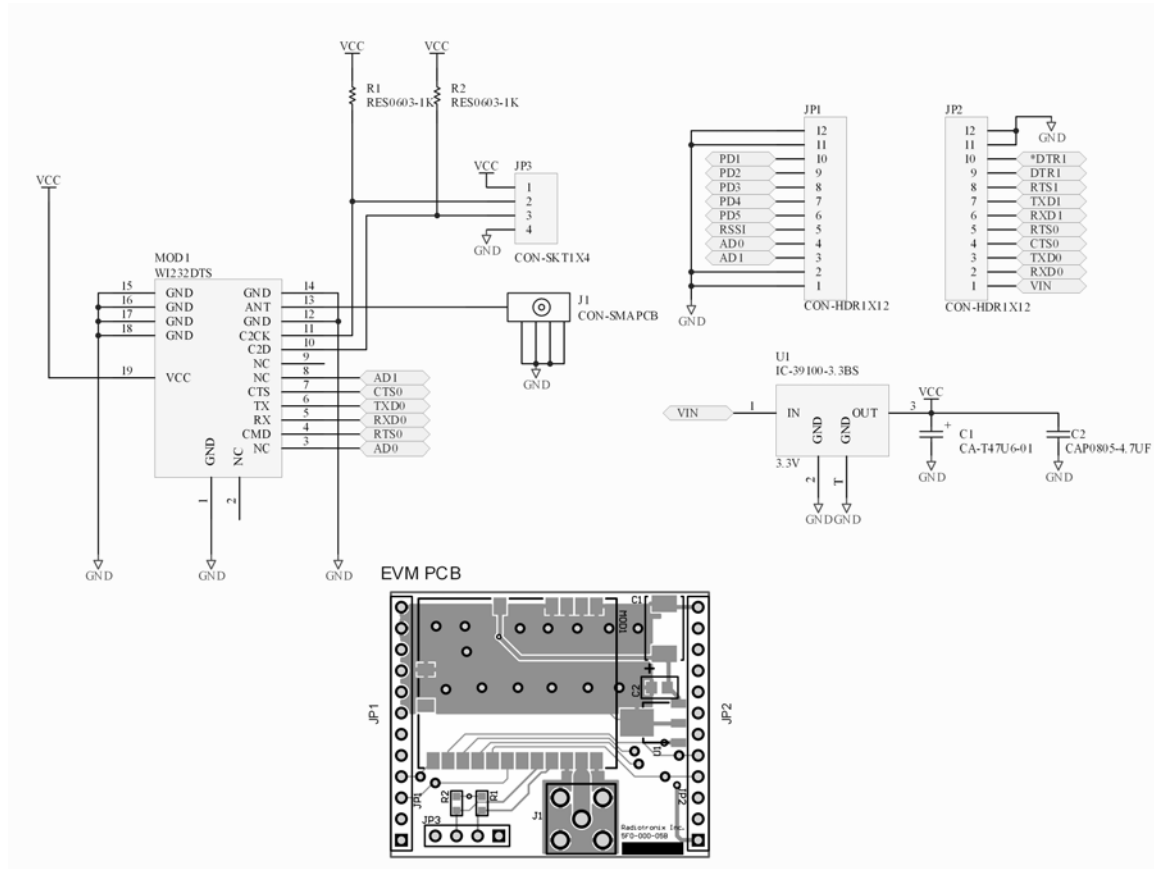


Figure 9: Evaluation Module Circuit

## 7.5. Power Supply

Although the Wi.232EUR module is very easy to use, care must be given to the design of the power supply circuit. It is important for the power supply to be free of digital noise generated by other parts of the application circuit, such as the RS-232 converter.

Figure 4 shows the schematic for our evaluation module circuit for the Wi.232EUR module. It includes an on-board power supply and antenna connector. This evaluation circuit was used to measure the performance of the Wi.232EUR module.

If noise is a problem, it can usually be eliminated by adding bypass capacitance or inductive choking to the power supply, using a dedicated LDO regulator for the module, and/or by separating the grounds for the module and the other circuits.

## 7.6. UART Interface

The UART interface is very simple; it is comprised of four CMOS compatible digital lines.

| Line | Direction | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CTS  | Out       | Clear to send – this pin indicates to the host micro when it is ok to send data. When CTS is high, the host micro should stop sending data to the module until CTS returns to the low state.                                                                                                                                                                                                                                                                                                                                      |
| CMD  | In        | Command – the host micro will bring this pin low to put the module in command mode. Command mode is used to set and read the internal registers that control the operation of the module. When CMD is high, the module will transparently transfer data to and from other modules on the same channel.<br>NOTE: If this pin is low when the module comes out of reset, the registers will be reset to their factory programmed defaults. It is important to ensure that CMD is held high during power-up under normal conditions. |
| RXD  | In        | Receive data input.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| TXD  | Out       | Transmit data output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

Table 2, Wi.232EUR UART Interface Lines

## 7.7. Antenna

The module is designed to work with any 50-ohm antenna, including PCB trace antennas.

We are often asked: “What is the best antenna to use with your module?” Actually, the selection of an antenna is based on a particular application, not the module used.

As a rule, either a  $\frac{1}{4}$  wave whip or  $\frac{1}{2}$  wave dipole antenna paired with a good, solid ground plane are good choices. However, many embedded applications cannot support an externally mounted antenna. If this is the case, a PCB antenna must be used. The designer can either use an off-of-the-shelf PCB antenna, or design a trace antenna.

**Note:** *Antenna design is difficult and can be impossible without the proper test equipment. As such, we strongly encourage all of our customers to use off-of-the-shelf antennas whenever possible.*

## 7.8. Link budget, transmit power, and range performance

A link budget is the best figure of merit for comparing wireless solutions and determining how they will perform in the field.

In general, the solution with the best link budget will deliver the best line-of-sight range performance. Improving the link budget by increasing the receiver sensitivity will result in lower power consumption while improving the link budget by increasing the transmit power will result in more robust performance in the presence of an on-channel interferer or multi-path interference.

**Wireless Fact:** *Frequency hopping spread spectrum does not effectively combat multipath interference in the 868-870 MHz band. It does combat in-channel interference, but at the expense of bandwidth, power consumption, and latency. Direct sequence spread spectrum, like FHSS, does not combat multipath interference. It does do a better job than FHSS at combating in-channel interference, but at the expensive of occupied bandwidth and power consumption. These spread spectrum techniques are generally chosen because higher output powers are allowed from a transmitter employing these techniques.*

To calculate the link budget for a wireless link, simply add the transmit power, the antenna gains, and the receiver sensitivity:

$$LB = P_{tx} + G_{txa} - SENS_{rx} + G_{rxa}$$

For example, the link budget for a pair of Wi.232 modules in wideband mode at the maximum data rate and using 2dBi dipole antennas would be:

$$+13\text{dBm} + 2\text{dB} - (-102\text{dBm}) + 2\text{dB} = 119\text{dB}$$

A link budget of 119dB should easily yield a range of ¼ mile or more outdoors. If the environment is open and the antennas are 8 to 10 feet off of the ground, the range could be a mile. Indoors, this link budget should yield a range of several hundred feet.

This is a well-balanced link budget. More than 10dB of the budget is achieved through transmit power, which will allow good performance indoors in the presence of multi-path while keeping the overall operating current low, making the module suitable for primary battery powered applications such as RFID and automated meter reading.

## 8. Module Configuration

### 8.1. Channel settings

| regNVTXCHAN (0x00) |     |     |     |     | regTXCHAN (0x4B) |     |     |
|--------------------|-----|-----|-----|-----|------------------|-----|-----|
| R/W                | R/W | R/W | R/W | R/W | R/W              | R/W | R/W |
| RES                | D6  | D5  | D4  | D3  | D2               | D1  | D0  |
| 7                  | 6   | 5   | 4   | 3   | 2                | 1   | 0   |

| regNVRXCHAN (0x01) |     |     |     |     | regRXCHAN (0x4C) |     |     |
|--------------------|-----|-----|-----|-----|------------------|-----|-----|
| R/W                | R/W | R/W | R/W | R/W | R/W              | R/W | R/W |
| RES                | D6  | D5  | D4  | D3  | D2               | D1  | D0  |
| 7                  | 6   | 5   | 4   | 3   | 2                | 1   | 0   |

The Wi.232EUR supports 2 channels (0 – 1) in wideband mode and 6 channels (0 – 5) in narrowband mode.



| Wideband Channels   |             |
|---------------------|-------------|
| Channel Number      | Frequency   |
| 0                   | 868.300 MHz |
| 1                   | 868.95 MHz  |
| Narrowband Channels |             |
| Channel Number      | Frequency   |
| 0                   | 868.225 MHz |
| 1                   | 868.375 MHz |
| 2                   | 868.850 MHz |
| 3                   | 869.050 MHz |
| 4                   | 869.525 MHz |
| 5                   | 869.850 MHz |

Table 3, Channel Table

Transmit and receive channels are set in **regTXCHAN (addr 0x4B)** and **regRXCHAN (addr 0x4C)** respectively.

All modules in a network must be in the same mode (narrowband or wideband) and must have the same transmit and receive channels programmed in order to communicate properly.

## 8.2. Power Mode

The transmission and reception modes of the module are determined by the settings of the **regPWRMODE** register. It is important to note that a module configured to operate in narrowband mode cannot “hear” another module transmitting in wideband mode, or vice versa. However, a module configured to operate in any of the four wideband modes can “hear” any other module transmitting in any of the wideband modes (provided that they are within range of one another).

| regNVPWRMODE (0x02) |     |     |     |     | regPWRMODE (0x4D) |     |     |
|---------------------|-----|-----|-----|-----|-------------------|-----|-----|
| R/W                 | R/W | R/W | R/W | R/W | R/W               | R/W | R/W |
| NA                  | NA  | NA  | NA  | NA  | PM2               | PM1 | PM0 |
| 7                   | 6   | 5   | 4   | 3   | 2                 | 1   | 0   |

| PM1 | PM1 | PM0 | Mode                                             |
|-----|-----|-----|--------------------------------------------------|
| 0   | 0   | 0   | Narrowband Mode – -2dBm power setting (typical)  |
| 0   | 0   | 1   | Wideband Mode – +2dBm power setting (typical)    |
| 0   | 1   | 0   | Wideband Mode – +7dBm power setting (typical)    |
| 0   | 1   | 1   | Wideband Mode – +13dBm power setting (typical)   |
| 1   | 0   | 0   | Wideband Mode – -2dBm power setting (typical)    |
| 1   | 0   | 1   | Narrowband Mode – +2dBm power setting (typical)  |
| 1   | 1   | 0   | Narrowband Mode – +7dBm power setting (typical)  |
| 1   | 1   | 1   | Narrowband Mode – +13dBm power setting (typical) |

Table 4, Power Mode Register Settings

### 8.2.1. Wideband Mode

In wideband mode, the module is configured as follows:

| wideband Mode Parameters |                     |
|--------------------------|---------------------|
| TX Power                 | -2, +2, +7, +13 dBm |
| Deviation                | +/-80kHz            |
| TX Current               | 26 to 65mA          |
| RX Current               | 16 to 20mA          |
| RX Bandwidth             | 600kHz              |

Table 5, Wideband Mode Parameters

### 8.2.2. Narrowband Mode

In low-power mode, the module is configured as follows:

| narrowband Mode Parameters |                     |
|----------------------------|---------------------|
| TX Power                   | -2, +2, +7, +13 dBm |
| Deviation                  | +/-40kHz            |
| TX Current                 | 26 to 65mA          |
| RX Current                 | 16 to 24mA          |
| RX Bandwidth               | 200kHz              |

Table 6, Narrowband Mode Parameters

### 8.3. UART Data Rate

| regNVDATARATE (0x03) |     |     |     |     | regDATARATE (0x4E) |     |     |
|----------------------|-----|-----|-----|-----|--------------------|-----|-----|
| R/W                  | R/W | R/W | R/W | R/W | R/W                | R/W | R/W |
| RES                  | RES | RES | RES | RES | BR2                | BR1 | BR0 |
| 7                    | 6   | 5   | 4   | 3   | 2                  | 1   | 0   |

By default, the UART data rate is set to 2.4 kbit/second at the factory. This data rate can be changed by setting the **regDATARATE** register. The data rate should be limited to 9600 bits/sec when in narrowband mode. Exceeding this rate will result in poor link quality. Valid settings are:

| Baud Rate | BR2 | BR1 | BR0 |
|-----------|-----|-----|-----|
| 2400      | 0   | 0   | 0   |
| 9600      | 0   | 0   | 1   |
| 19200     | 0   | 1   | 0   |
| 38400     | 0   | 1   | 1   |
| 57600     | 1   | 0   | 0   |
| 115200    | 1   | 0   | 1   |
| 10400     | 1   | 1   | 0   |
| 31250     | 1   | 1   | 1   |

Table 7, Data Rate Register Settings

**TROUBLESHOOTING HINT: Baud Rate Problems.** If you lose track of the baud rate setting of the module, it will be impossible to program the module. You can either try every possible baud rate to discover the setting, or force a power-on reset with CMD held low to set the baud rate to its default: 2.4kbit/second.

## 8.4. Network Mode

| regNVNETMODE (0x04) |     |     |     |     | regNETMODE (0x4F) |     |     |
|---------------------|-----|-----|-----|-----|-------------------|-----|-----|
| R/W                 | R/W | R/W | R/W | R/W | R/W               | R/W | R/W |
| D7                  | D6  | D5  | D4  | D3  | D2                | D1  | D0  |
| 7                   | 6   | 5   | 4   | 3   | 2                 | 1   | 0   |

The module supports two networking modes: Normal and Slave.

In normal mode, the module can talk to any other module. In slave mode, the module can talk to normal-mode modules, but cannot transmit to or receive from other slaves.

Slave mode is selected by writing 0x00 to this register. The default network mode is 0x01 (Normal Mode).

## 8.5. Transmit Wait Timeout

| regNVTXTO (0x05) |     |     |     |     | regTXTO (0x50) |     |     |
|------------------|-----|-----|-----|-----|----------------|-----|-----|
| R/W              | R/W | R/W | R/W | R/W | R/W            | R/W | R/W |
| D7               | D6  | D5  | D4  | D3  | D2             | D1  | D0  |
| 7                | 6   | 5   | 4   | 3   | 2              | 1   | 0   |

When a byte is received by the UART, the module will start a timer that will countdown every millisecond. The timer is restarted when each byte is received.

If the timer reaches zero before the next byte is received from the UART, the module begin transmitting the data in the buffer. Normally, this timeout value should be greater than 0x01 and greater than one byte time at the current UART data rate. If the timeout value is set to 0x00, the transmit wait timeout will not operate, and a full buffer will be required for transmission. When configured this way, the data will be sent only when a full MTU has been received through the UART. The default setting for this register is 0x10 (~16ms delay).

## 8.6. Network Group

| regNVNETGRP (0x06) |     |     |     |     | regNETGRP (0x51) |     |     |
|--------------------|-----|-----|-----|-----|------------------|-----|-----|
| R/W                | R/W | R/W | R/W | R/W | R/W              | R/W | R/W |
| N/A                | B6  | B5  | B4  | B3  | B2               | B1  | B0  |
| 7                  | 6   | 5   | 4   | 3   | 2                | 1   | 0   |

Modules can be grouped into networks. Although only modules with the group ID will be able to talk to each other, modules in different groups but on the same channel will still coordinate transmissions through the CSMA mechanism. Valid values for this register are 0 to 127. The default group setting is 0.

## 8.7. CRC Control

| regNVUSECRC (0x08) |     |     |     |     | regUSECRC (0x53) |     |     |
|--------------------|-----|-----|-----|-----|------------------|-----|-----|
| R/W                | R/W | R/W | R/W | R/W | R/W              | R/W | R/W |
| B7                 | B6  | B5  | B4  | B3  | B2               | B1  | B0  |
| 7                  | 6   | 5   | 4   | 3   | 2                | 1   | 0   |

Set to 0x01 to enable CRC mode, or 0x00 to disable CRC mode. The default CRC mode setting is enabled.

## 8.8. UART minimum transmission unit

| regNVUARTMTU (0x09) |     |     |     |     | regUARTMTU (0x54) |     |     |
|---------------------|-----|-----|-----|-----|-------------------|-----|-----|
| R/W                 | R/W | R/W | R/W | R/W | R/W               | R/W | R/W |
| B7                  | B6  | B5  | B4  | B3  | B2                | B1  | B0  |
| 7                   | 6   | 5   | 4   | 3   | 2                 | 1   | 0   |

This register determines the UART buffer level that will trigger the transmission of a packet. The minimum value is 1 and the maximum value is 144. The default value for this register is 64, which provides a good mix of throughput and latency.

## 8.9. Verbose mode

| regNVSHOWVER (0x0A) |     |     |     |     |     |     |     |
|---------------------|-----|-----|-----|-----|-----|-----|-----|
| R/W                 | R/W | R/W | R/W | R/W | R/W | R/W | R/W |
| B7                  | B6  | B5  | B4  | B3  | B2  | B1  | B0  |
| 7                   | 6   | 5   | 4   | 3   | 2   | 1   | 0   |

Setting this register to 0x00 will suppress the start-up message, including firmware version, that is sent to the UART when the module is reset. A value of 0x01 will cause the message to be displayed after reset. By default, the module start-up message will be displayed.

## 8.10. CSMA enable

| regNVCSMAMODE (0x0B) |     |     |     |     | regCSMAMODE (0x56) |     |     |
|----------------------|-----|-----|-----|-----|--------------------|-----|-----|
| R/W                  | R/W | R/W | R/W | R/W | R/W                | R/W | R/W |
| B7                   | B6  | B5  | B4  | B3  | B2                 | B1  | B0  |
| 7                    | 6   | 5   | 4   | 3   | 2                  | 1   | 0   |

Carrier-sense multiple access (CSMA) is a best-effort delivery system that listens to the channel before transmitting a message. If another Wi.232 module is already transmitting when a message is queued, the module will wait before sending its payload. This helps to eliminate RF message corruption at the expense of additional latency. Setting this register to 0x01 will enable CSMA. Setting this register to 0x00 will disable CSMA. By default, CSMA is enabled.

## 8.11. Sleep control

| regNVSLPMODE (0x0D) |     |     |     |     | regSLPMODE (0x58) |     |     |
|---------------------|-----|-----|-----|-----|-------------------|-----|-----|
| R/W                 | R/W | R/W | R/W | R/W | R/W               | R/W | R/W |
| B7                  | B6  | B5  | B4  | B3  | B2                | B1  | B0  |
| 7                   | 6   | 5   | 4   | 3   | 2                 | 1   | 0   |

Setting this register to 0x01 will place the module into sleep mode; 0x02 will place the module in standby mode. Sleep mode places the module in the lowest power inactive state (~35µA) and requires approximately 7-8ms to resume transmission or reception once awakened. Standby draws ~850µA and requires approximately 1-2ms to awaken. To wake up the module, send four 0xFF bytes to the UART in a row or perform a hard reset. If four 0xFF bytes are used to wake the module, the fifth character sent to the UART will be transmitted over the RF link. Upon

awakening, the module will clear the volatile register to 0x00. The default value for this register is 0x00 (awake).

## 8.12. MAC Address

| regOUI2 – regOUI0 (0x22 – 0x24) |    |    |    |    | N/A |    |    |
|---------------------------------|----|----|----|----|-----|----|----|
| R                               | R  | R  | R  | R  | R   | R  | R  |
| D7                              | D6 | D5 | D4 | D3 | D2  | D1 | D0 |
| 7                               | 6  | 5  | 4  | 3  | 2   | 1  | 0  |

| regMAC2 – regMAC0 (0x25 – 0x27) |     |     |     |     | N/A |     |     |
|---------------------------------|-----|-----|-----|-----|-----|-----|-----|
| R/W                             | R/W | R/W | R/W | R/W | R/W | R/W | R/W |
| RES                             | D6  | D5  | D4  | D3  | D2  | D1  | D0  |
| 7                               | 6   | 5   | 4   | 3   | 2   | 1   | 0   |

These registers make a unique 48-bit MAC address. These values are factory preset and cannot be altered. These address bytes are not used by the module. They are provided for customer applications as a unique address.

### 8.13. Register Summary

| Volatile Read/Write Registers    |         |                                                     |                       |
|----------------------------------|---------|-----------------------------------------------------|-----------------------|
| Name                             | Address | Description                                         |                       |
| regTXCHANNEL                     | 0x4B    | Transmit channel setting                            |                       |
| regRXCHANNEL                     | 0x4C    | Receive channel setting                             |                       |
| regPWRMODE                       | 0x4D    | Operating mode settings                             |                       |
| regDATARATE                      | 0x4E    | UART data rate                                      |                       |
| regNETMODE                       | 0x4F    | Network mode (Normal or Slave)                      |                       |
| regTXTO                          | 0x50    | Transmit wait timeout                               |                       |
| regNETGRP                        | 0x51    | Network group ID                                    |                       |
| regUSECRC                        | 0x53    | Enable/Disable CRC                                  |                       |
| regUARTMTU                       | 0x54    | Minimum transmission unit.                          |                       |
| Reserved                         | 0x55    |                                                     |                       |
| regCSMAMODE                      | 0x56    | Enable/disable CSMA                                 |                       |
| regSLPMODE                       | 0x58    | Power state of module                               |                       |
| Non-volatile Read Only Registers |         |                                                     |                       |
| Name                             | Address | Description                                         |                       |
| regMAC0                          | 0x22    | These registers form the unique 48-bit MAC address. |                       |
| regMAC1                          | 0x23    |                                                     |                       |
| regMAC2                          | 0x24    |                                                     |                       |
| regOUI0                          | 0x25    |                                                     |                       |
| regOUI1                          | 0x26    |                                                     |                       |
| regOUI2                          | 0x27    |                                                     |                       |
|                                  |         |                                                     |                       |
| Non-volatile Registers           |         |                                                     |                       |
| Name                             | Address | Description                                         | Default               |
| regNVTXCHANNEL                   | 0x00    | Transmit channel setting                            | 0                     |
| regNVRXCHANNEL                   | 0x01    | Receive channel setting                             | 0                     |
| regNVPWRMODE                     | 0x02    | Operating mode settings                             | +13 dBm wideband mode |
| regNVDATARATE                    | 0x03    | UART data rate                                      | 2400bps               |
| regNVNETMODE                     | 0x04    | Network mode (Normal/Slave)                         | Normal                |
| regNVTXTO                        | 0x05    | Transmit wait timeout                               | ~16ms                 |
| regNVNETGRP                      | 0x06    | Network group ID                                    | 0x00                  |
| regNVUSECRC                      | 0x08    | Enable/Disable CRC                                  | Enabled               |
| regNVUARTMTU                     | 0x09    | Minimum transmission unit.                          | 64 bytes              |
| regNVSHOWVER                     | 0x0A    | Enable/Disable start-up message                     | Enabled               |
| regNVCSMAMODE                    | 0x0B    | Enable/Disable CSMA                                 | Enabled               |
| regNVSLPMODE                     | 0x0D    | Power state of module                               | Awake                 |


Table 8, Register Summary

## 9. Using Configuration Registers

### 9.1. CMD Pin

The CMD pin is used to inform the module where incoming UART information should be routed. When the CMD pin is high or left floating, all incoming UART information is treated as payload data and transferred over the wireless interface. If the CMD pin is low, the incoming UART data is routed to the command parser for processing. Since the module's processor looks at UART data one byte at a time, the CMD line must be held low for the entire duration of the command plus a 20μs margin for processing. Leaving the CMD pin low for additional time (for example, until the ACK byte is received by your application) will not adversely affect the module. If RF

packets are received while the CMD line is active, they are still processed and presented to the module's UART for transmission.

 

**Figure 10: Command and CMD Pin Timing**

## 9.2. Command Formatting

The Wi.232EUR module contains several volatile and non-volatile registers that control its configuration and operation. The volatile registers all have a non-volatile mirror register that is used to determine the default configuration when power is applied to the module. During normal operation, the volatile registers are used to control the module.

Placing the module in the command mode allows these registers to be programmed. Byte values in excess of 127 (0x80 or greater) must be changed into a two-byte escape sequence of the format: 0xFE, [value - 128]. For example, the value 0x83 becomes 0xFE, 0x03. The following function will prefix a 0xFF header and size specifier to a command sequence and create escape sequences as needed. It is assumed that *\*src* is populated with either the register number to read (one byte, pass 1 into *src\_len*) or the register number and value to write (two bytes, pass 2 into *src\_len*). It is also assumed that the *\*dest* buffer has enough space for the two header characters plus, the encoded command, and the null terminator.

```

int EscapeString(char *src, char src_len, char *dest)
{
    // The following function copies and encodes the first
    // src_len characters from *src into *dest. This
    // encoding is necessary for Wi.232 command formats.
    // The resulting string is null terminated. The size
    // of this string is the function return value.
    // -----
    char src_idx, dest_idx;

    // Save space for the command header and size bytes
    // -----
    dest_idx = 2;

    // Loop through source string and copy/encode
    // -----
    for (src_idx = 0; src_idx < src_len; src_idx++)
    {
        if (src[src_idx] > 127)
        {
            dest[dest_idx++] = 0xFE;
        }/*if*/

        dest[dest_idx++] = (src[src_idx] & 0x7F);
    }/*for*/

    // Add null terminator
    // -----
    dest[dest_idx] = 0;

    // Add command header
    // -----
    dest[0] = 0xFF;
    dest[1] = dest_idx - 2;

    // Return escape string size
    // -----
    return dest_idx;
}

```

**Figure 11: Command Conversion Code**

### 9.3. Writing to Registers

Writing to a volatile register is nearly instantaneous. Writing to a non-volatile register, however, takes typically 16 ms. Because the packet size can vary based on the need for encoding, there are two possible packet structures. The following tables show the byte sequences for writing a register in each case.

**WARNING:** Be sure that the module is properly powered and remains powered for the duration of the register write. Loss of important configuration information could occur if the unit loses power during a non-volatile write cycle.

| Byte 0          | Byte 1          | Byte 2          | Byte 3          |
|-----------------|-----------------|-----------------|-----------------|
| Header          | Size            | Register        | Value           |
| 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 |
| 0xFF            | 0x02            | 0 Register      | 0 Value         |

Table 9, Write Register Command, value to be written is less than 128 (0x80).



| Byte 0          | Byte 1          | Byte 2          | Byte 3          | Byte 4                  |
|-----------------|-----------------|-----------------|-----------------|-------------------------|
| Header          | Size            | Register        | Escape          | Value                   |
| 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0         |
| 0xFF            | 0x03            | 0 Register      | 0xFE            | 0 Lower 7 bits of Value |

Table 10, Write Register Command, value to be written is greater than or equal to 128 (0x80).

The module will respond to this command with an ACK (0x06). If an ACK is not received, the command should be resent. If a write is attempted to a read-only or invalid register, the module will respond with a NAK (0x15).

## 9.4. Reading from Registers

A register read command is constructed by placing an escape character before the register number. The following table shows the byte sequence for reading a register.

| Byte 0          | Byte 1          | Byte 2          | Byte 3          |
|-----------------|-----------------|-----------------|-----------------|
| Header          | Size            | Escape          | Register        |
| 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 |
| 0xFF            | 0x02            | 0xFE            | 0 Register      |

Table 11, Read Register Command

The module will respond to this command by sending an ACK (0x06) followed by the register number and register value. The register value is sent unmodified. For example, if the register value is 0x83, 0x83 is returned after the ACK (0x06). See table below for the format of the response. If the register number is invalid, it will respond with a NACK (0x15).

| Byte 0          | Byte 1          | Byte 2          |
|-----------------|-----------------|-----------------|
| ACK             | Register        | Value           |
| 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0 |
| 0x06            | 0 Register      | Value           |

Table 12, Read Register Module Response for a Valid Register

## 10. Electrical Specifications

### 10.1. Absolute Maximum Ratings

| Parameter                      | Min  | Max | Units |
|--------------------------------|------|-----|-------|
| VCC – Power Supply             | 2.7  | 3.6 | VDC   |
| Voltage on any digital I/O pin | -0.3 | 5   | VDC   |
| Input RF Level                 |      | 15  | dBm   |
| Storage Temperature            | -40  | 85  | °C    |

Table 13, Absolute Maximum Ratings

### 10.2. Detailed Electrical Specifications

#### 10.2.1. AC Specifications – RX

| Parameter                              | Min     | Typ      | Max     | Units      | Notes                     |
|----------------------------------------|---------|----------|---------|------------|---------------------------|
| Receive frequency – EUR                | 868.225 |          | 869.885 | MHz        | At antenna pin            |
| Channels – wideband                    | 2       |          |         |            |                           |
| Channels – narrowband Mode             | 6       |          |         |            |                           |
| Channel spacing – wideband Mode        |         | 650      |         | kHz        |                           |
| Channel spacing – narrowband Mode      |         | Variable |         | kHz        |                           |
| Receiver sensitivity – wideband MODE   |         | -102     |         | dBm        | 115200 baud UART          |
| Receiver sensitivity – wideband MODE   |         | -106     |         | dBm        | 2400 baud UART            |
| Receiver sensitivity – narrowband MODE |         | -104     |         | dBm        | 9600 baud UART            |
| Receiver sensitivity – narrowband MODE |         | -107     |         | dBm        | 2400 baud UART            |
| Input IP3                              |         | -40      |         | dBm        | Flo+1MHz and Flo+1.945MHz |
| Input Impedance                        |         | 50       |         | Ohms       | No matching required      |
| LO Leakage                             |         | -65      |         | dBm        | 50-ohm termination at ANT |
| Adjacent channel rejection             |         | -48      |         | dBc<br>dBc | Fc +/-650kHz              |
| IF Bandwidth – wideband Mode           |         | 600      |         | KHz        |                           |
| IF Bandwidth – narrowband Mode         |         | 200      |         | KHz        |                           |

Table 14, AC Specifications - Rx

### 10.2.2. AC Specifications – TX

| Parameter                              | Min     | Typ   | Max     | Units | Notes                          |
|----------------------------------------|---------|-------|---------|-------|--------------------------------|
| Transmit Frequency –EUR                | 868.225 |       | 869.885 | MHz   |                                |
| Center frequency error                 |         | 2     | 3       | ppm   | 869.05 MHz<br>@ 25°C           |
| Frequency Deviation – wideband Mode    |         | +/-80 |         | kHz   |                                |
| Frequency Deviation – narrowband Mode  |         | +/-40 |         | kHz   |                                |
| Maximum Output Power – narrowband Mode |         | 13    | 15      | dBm   | 869.05 MHz<br>Into 50 ohm load |
| Maximum Output Power – wideband Mode   |         | 13    | 15      | dBm   | 869.05 MHz<br>Into 50 ohm load |
| Output Impedance                       |         | 50    |         | Ohms  |                                |
| Harmonic Output                        |         | -50   |         | dBc   | Into 50 ohm load               |

Table 15, AC Specifications - Tx

### 10.2.3. DC Specifications

| Parameter                                                                                                                    | Min                      | Typ.                             | Max                       | Units                    | Notes                                                                      |
|------------------------------------------------------------------------------------------------------------------------------|--------------------------|----------------------------------|---------------------------|--------------------------|----------------------------------------------------------------------------|
| Operating Temperature                                                                                                        | -40                      |                                  | +85                       | °C                       |                                                                            |
| Supply voltage                                                                                                               | 2.7                      | 3.0                              | 3.6                       | VDC                      | Operating limits                                                           |
| Receive current consumption                                                                                                  |                          | 16-24                            |                           | mA                       | Continuous operation,<br>Vdd = 3.3VDC, depends<br>on data rate selected    |
| Transmit current consumption<br>-2 dBm<br>+2 dBm<br>+7 dBm<br>+13 dBm                                                        |                          | 24-32<br>28-36<br>35-43<br>50-58 |                           | mA<br>mA<br>mA<br>mA     | Output into 50 ohm load,<br>Vdd = 3.3VDC, depends<br>on data rate selected |
| Standby current consumption                                                                                                  |                          | 850                              |                           | µA                       | Vdd = 3.3VDC                                                               |
| Sleep current consumption                                                                                                    |                          | 35                               |                           | µA                       | Vdd = 3.3VDC                                                               |
| Vih – Logic high level input<br>Vil – Logic low level input<br>Voh – Logic high level output<br>Vol – Logic low level output | 0.7*Vcc<br>0<br>2.5<br>0 |                                  | 5<br>0.3*Vcc<br>Vcc<br>.4 | VDC<br>VDC<br>VDC<br>VDC |                                                                            |

Table 16, DC Specifications

### 10.3. Flash Specifications (Non-Volatile Registers)

| Parameter            | Min | Typ. | Max | Units  | Notes                                 |
|----------------------|-----|------|-----|--------|---------------------------------------|
| Flash Write Duration |     | 16   | 21  | ms     | Module stalled during write operation |
| Flash Write Cycles   | 20k | 100k |     | Cycles |                                       |

Table 17, Flash Specifications (Non-Volatile Registers)

## **11. Custom Applications**

For cost-sensitive applications, such as wireless sensors and AMR, Radiotronix can embed the application software directly into the microcontroller built into the module. For more information on this service, please contact Radiotronix.

## **12. Ordering Information**

Wi.232EUR modules can be ordered on-line 24/7 from our distributors: Please visit the following web link to obtain a list of representatives and distributors who service your region.

<http://www.radiotronix.com/corpsales.asp>

## **13. Contact Us**

### ***13.1. Technical Support***

Radiotronix has built a solid technical support infrastructure so that you can get answers to your questions when you need them.

Our primary technical support tools are the support forum and knowledge base found on our website. We are continuously updating these tools. To find the latest information about these technical support tools, please visit <http://www.radiotronix.com/support/>.

Our technical support engineers are available Mon-Fri between 9:30 am and 4:30 pm central standard time. The best way to reach a technical support engineer is to send an email by visiting the Support page at <http://www.radiotronix.com/support/>. E-mail support requests are given priority because we can handle them more efficiently than phone support requests.

For customers that would prefer to talk directly to a support engineer, we do offer phone support free of charge. All support requests are placed in a queue and returned in the order that they are received.

### ***13.2. Sales Support***

Our sales department can be reached via e-mail at [sales@radiotronix.com](mailto:sales@radiotronix.com) or by phone at 405-794-7730.

Our sales department is available Mon-Fri between 8:30 am and 5:00 pm. You may also contact our distributors for pre-sales support. Please visit the following website for a list of distributors and representatives in your area.

<http://www.radiotronix.com/corpsales.asp>