

 
Touch Panel Accessories

Controller Board Interface Cables

- **CABLE/RTP/USB/DT:** USB Host Interface Cable for NC01850-B045RS(Dual Touch, 4-wire)
- **CABLE/RTP/USB:** USB Host Interface Cable for NC01850-B010RS (4-wire)
and NC01850-B020RS (7-wire)
- **CABLE/RTP/RS232:** Serial Host Interface Cable for N16B-0558-B270 (4-wire)
and N16B-0558-B280 (7-wire)

These cables are offered as a convenience to customers prototyping, testing, and small production lot use.


■ CABLE / RTP / USB / DT

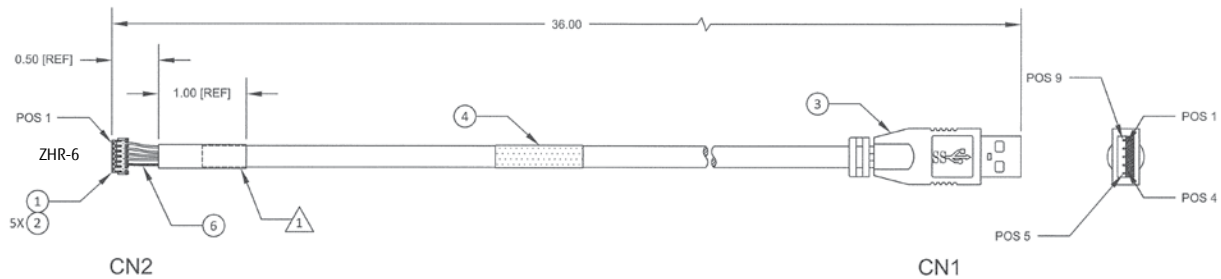

PIN OUT			
Color (ref)	CN2 POS	SIGNAL	CN1 POS
Red	1	VCC	1
White	2	D-	2
Green	3	D+	3
Black	4	GND	4
Black	5	FR GND	CAN
N/C	6	N/A	5-9


Controller Board Interface Cables

 ■ CABLE / RTP / USB

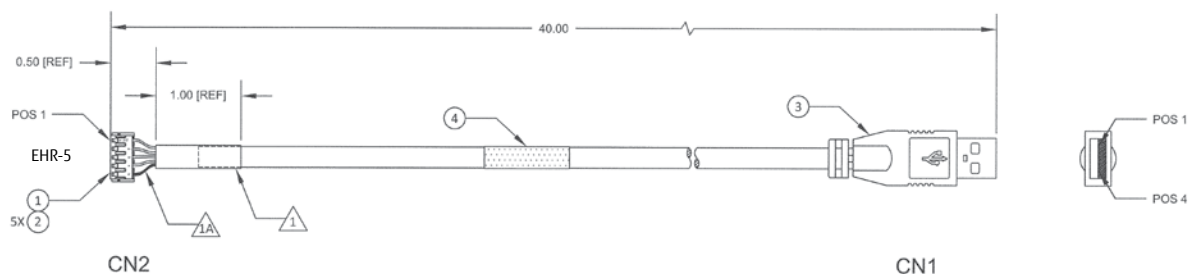

PIN OUT			
Color (ref)	CN2 POS	SIGNAL	CN1 POS
Red	1	VCC	1
Green	2	D+	3
White	3	D-	2
Black	4	GND	4
Black	5	FR GND	CAN

 ■ CABLE / RTP / RS232

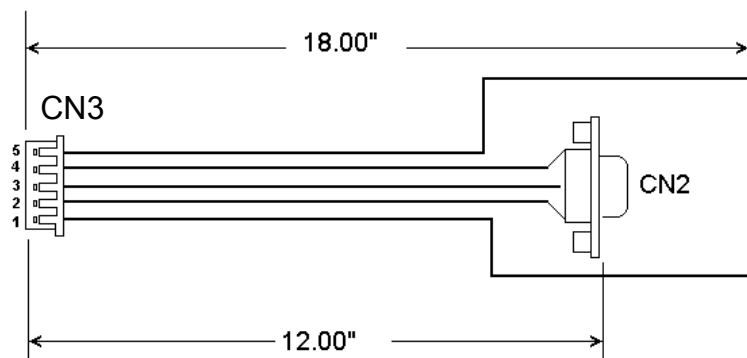

Fujitsu Components International Headquarter Offices

Japan

Fujitsu Component Limited
 Gotanda-Chuo Building
 3-5, Higashigotanda 2-chome, Shinagawa-ku
 Tokyo 141, Japan
 Tel: (81-3) 5449-7010
 Fax: (81-3) 5449-2626
 Email: promothq@ft.ed.fujitsu.com
 Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc.
 250 E. Caribbean Drive
 Sunnyvale, CA 94089 U.S.A.
 Tel: (1-408) 745-4900
 Fax: (1-408) 745-4970
 Email: components@us.fujitsu.com
 Web: <http://us.fujitsu.com/components>

Europe

Fujitsu Components Europe B.V.
 Diamantlaan 25
 2132 WV Hoofddorp
 Netherlands
 Tel: (31-23) 5560910
 Fax: (31-23) 5560950
 Email: info@fceu.fujitsu.com
 Web: emea.fujitsu.com/components/

Asia Pacific

Fujitsu Components Asia Ltd.
 102E Pasir Panjang Road
 #01-01 Citilink Warehouse Complex
 Singapore 118529
 Tel: (65) 6375-8560
 Fax: (65) 6273-3021
 Email: fcal@fcal.fujitsu.com
 Web: <http://www.fujitsu.com/sg/services/micro/components/>

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Fujitsu:

[CABLE/RTP/RS232](#) [CABLE/RTP/USB](#) [CABLE/RTP/USB/DT](#)