


Installation and Initial Start-Up

To obtain warranty coverage, please fill out and return the warranty registration card now.

Inspection

Inspect the UPS upon receipt. Notify the carrier and dealer if there is damage. The packaging is recyclable; save it for reuse or dispose of it properly.


Placement

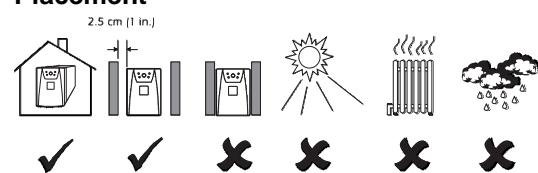

Install the UPS in a protected area that is free of excessive dust and has adequate air flow. Do not operate the UPS where the temperature and humidity is outside the specified limits.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the warranty.

Connect to Utility

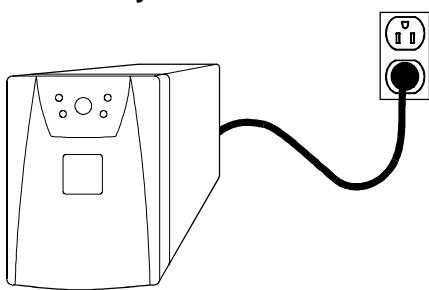

Operating Instructions

Switch "On" — Switch "Off"

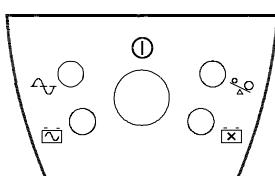

With the UPS plugged in, press and release the On/Off/Test button to supply power to the loads.

The UPS loads are immediately powered while the UPS performs a self-test. Press and release the button again to turn "Off" power to the loads. It may be convenient to use the UPS as a master "On/Off" switch for the protected equipment.

Note: Surge protected outlets are powered whenever the UPS has utility power.

 The on-line LED illuminates when the UPS is supplying utility power to the battery backup loads.

Self-test

The UPS performs a self-test automatically when turned "On", and every two weeks thereafter (by default). Automatic self-test eliminates the need for periodic manual self-tests.

During the self-test, the UPS briefly operates the loads on-battery. If the UPS passes the self-test, it returns to on-line operation.

 If the UPS fails the self-test it immediately returns to on-line operation and lights the replace battery LED.


Check the Site Wiring Fault Indicator

Location: Top right corner of UPS back panel.

Caution: If the site wiring fault indicator lights, get a qualified electrician to correct the building wiring.

Connect the Loads

Plug the loads into the output connectors on the rear of the UPS. To use the UPS as a master "On/Off" switch, make sure that all of the loads are switched "On".

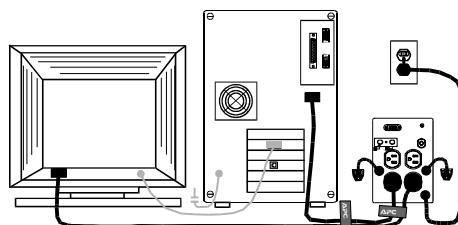

Caution: Do not connect a laser printer to the Battery Backup Outlets.

Cord Straps: Straps are provided to keep cords from tangling and taking up too much space.

Battery Backup Outlets: These UPS outlets provide battery power and surge protection to equipment when utility voltage is outside acceptable limits. Data sensitive equipment such as a computer, monitor, or external drive are connected to these outlets.

Surge Protected Outlets: These outlets are for equipment that need surge protection but do not need power during a utility outage (like an inkjet printer or scanner).

The loads are not affected by a failed test. Recharge the battery overnight and perform the self-test again. If the replace battery LED is still "On", replace the battery using the **Replacing the Battery** procedure.

On-Battery

 During on-battery operation, the on-battery LED illuminates and the UPS sounds an audible alarm consisting of 4 beeps every 30 seconds. The alarm stops when the UPS returns to on-line operation.

Low Battery

When the UPS is operating on-battery and the energy reserve of the battery runs low, the UPS beeps continuously until the UPS shuts down from battery exhaustion or returns to on-line operation.

 
Overload

 When loads exceed the UPS's capacity, the overload LED illuminates and the UPS emits a sustained tone. The alarm remains "On" until the overload is removed. Disconnect nonessential load equipment from the battery backup outlets, to eliminate the overload.

If the overload is severe, the input circuit breaker may trip (the resettable center plunger of the circuit breaker pops out), as well. Disconnect nonessential load equipment from the UPS to eliminate the overload and press the plunger back in to restart the UPS.

If there is AC power and the circuit breaker does not trip during overload, the loads are still powered. If the circuit breaker trips or the UPS attempts to transfer to battery, the loads' power will be shut "Off". Turn the UPS "Off" then back "On" to repower the loads.

Block Safe Outlets: (420/650): Corded sockets are provided which accept "block type" plugs without covering other outlets. Some printers and external disk drives have block type plugs that look similar to the one below.



Connect Telephone / Network Surge Suppression (Optional)

Connect a single line telephone or a 10Base-T/100Base-Tx network cable into the RJ-45/RJ-11 telephone/network surge protection "IN" jack on the back of the UPS. Connect from the "OUT" jack with telephone cable (supplied) or network cabling (not supplied) to a fax modem or network port.

Connect Computer Interface Port (Optional)

PowerChute® plus power management software is included with this UPS. Connect the supplied interface cable to the 9-pin computer interface port on the back panel of the UPS. Connect to the computer. See software documentation for installation instructions.

Charge the battery

The UPS charges its battery whenever it is connected to utility power. The battery will charge fully during the first 4 hours of normal operation. Do not expect full runtime during this initial charge period.

Replace Battery

 If the battery fails a self-test, the UPS emits short beeps for one minute and the replace battery LED illuminates.

The UPS repeats the alarm every five hours. Perform the self-test procedure to confirm replace battery conditions. The alarm stops when the battery passes the self-test.

Shutdown Mode

If there is no power, the host connected to the computer interface port can command the UPS to shut down. This is normally done to preserve battery capacity after a controlled shutdown of the protected system. In shutdown mode the UPS stops supplying power to the load. The on-line and overload LED indicators flash alternately or, if the UPS has shutdown due to a low battery, the UPS will beep once every 4 seconds for approximately 16 seconds. When line power is restored, the UPS will return to on-line operation.

Cold Start

Note: Cold start is not a normal operating condition.

When the UPS is "Off" and there is no utility power, it is possible to cold start the UPS to power the loads from the UPS's battery.

- With the UPS "Off", **Press and hold** the On/Off/Test button until the UPS begins beeping.
- Release** the On/Off/Test button *during* the beeping to start the UPS.

Storage

Storage conditions

Store the UPS covered and upright in a cool, dry location, with its battery fully charged. Before storing, charge the UPS for at least 4 hours.

Extended storage

At -15 to +30 °C (+5 to +86 °F), charge the UPS's battery every 6 months. At +30 to +45 °C (+86 to +113 °F), charge the UPS's battery every 3 months.

Replacing the Battery

This UPS has an easy to replace hot-swappable battery.

Note: Please read the cautions in the APC Safety Guide.


Replacement Batteries

See your dealer or call the number in this manual for information on replacement battery kits. For 280 and 420 models, order RBC 2. For 650 models, order RBC 4.

Battery Replacement Procedure

Battery replacement is a safe procedure, isolated from electrical hazards. You may leave the UPS and loads "On" for the following procedure.


Note: Once the battery is disconnected, the loads are not protected from power outages.

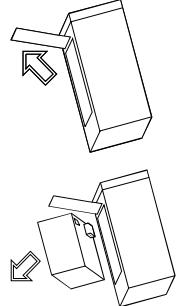

1. Lay the UPS on its left side. Remove the two screws holding on the battery door and open the door.

Note: It may be necessary to pull the battery door slightly toward the front of the unit in order to open the door fully.


2. Gently pull out the battery by grasping the white tab.

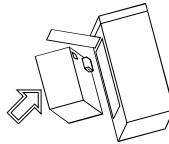


3. Disconnect the two wires connecting the battery to the UPS. Loosen the wires by wiggling them while pulling straight back from the battery connector.

4. Connect the new battery in place of the old.

Note: Small sparks at the battery connections are normal during connection.

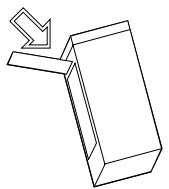

 5. Place the new battery in the UPS. Use care to avoid pinching the wires.



6. Close the battery compartment door and replace the screws.
7. Dispose of the old battery properly at an appropriate recycling facility or return it to the supplier in the packing material for the new battery. See the new battery instructions for more information.

Service

If the UPS requires service, **please do Not return it to the dealer!**

Follow these steps:

1. Use the **Troubleshooting** section of the **Quick Reference Guide** to eliminate common problems.
2. Verify that no circuit breakers are tripped. A tripped circuit breaker is the most common UPS problem!
3. If the problem persists, call customer service or visit the APC Internet Website (www.apcc.com).
- Note the model number of the UPS, the serial number, and the date purchased. A technician will ask you to describe the problem and try to solve it over the phone, if possible. If this is not possible the technician will issue a Return Merchandise Authorization Number (RMA#).
- If the UPS is under warranty, repairs are free. If not, there is a repair charge.
4. Pack the UPS in its original packaging. If the original packing is not available, ask customer service about obtaining a new set.
- Pack the UPS properly to avoid damage in transit. Never use Styrofoam™ beads for packaging. Damage sustained in transit is not covered under warranty.
- Include a letter with your name, RMA#, address, copy of the sales receipt, description of the trouble, your daytime phone number, and a check (if necessary).
5. Mark the RMA# on the outside of the package.
6. Return the UPS by insured, prepaid carrier to the address given to you by Customer Service.

APC Contact Information



USA/Canada	1-800-800-4272
Mexico	292-0253 / 292-0255
Brazil	0800-12-72-21
Worldwide	1-401-789-5735
Internet	http://www.apcc.com
E-Mail	apctech@apcc.com

Specifications

	280 VA	420 VA	650 VA
Acceptable input voltage	0 - 160 VAC		
Input voltage (on-line operation)*	81-143 VAC		
Output voltage *	106-127 VAC		
Input Over Current Protection	Resettable circuit breaker		
Frequency limits (on-line operation)	47 - 63 Hz (autosensing)		
Transfer time	4 ms typical, blackout response time		
Maximum load	280 VA 180 W	420 VA 260 W	650 VA 410 W
On-battery output voltage	115 VAC		
On-battery frequency	50 or 60 Hz, ± 0.1 Hz; unless synchronized to utility during brownout		
On-battery waveshape	Stepped sine-wave		
Output Over Current Protection	Overcurrent and short-circuit protected, latching shutdown on overload		
Battery type	Spill proof, maintenance free, sealed lead-acid		
Typical battery life	3 to 6 years, depending on number of discharge cycles and ambient temperature		
Typical recharge time	2 to 5 hours from total discharge		
Operating temperature	0 to $+40^{\circ}\text{C}$ ($+32$ to $+104^{\circ}\text{F}$)		
Storage temperature	-15 to $+45^{\circ}\text{C}$ ($+5$ to $+113^{\circ}\text{F}$)		
Operating / storage relative humidity	0 to 95%, non-condensing		
Operating elevation	0 to $+3,000$ m (0 to $+10,000$ ft)		
Storage elevation	0 to $+15,000$ m (0 to $+50,000$ ft)		
Audible noise at 1 m (3 ft)	<45 dBA		
Size (H x W x D)	15 x 8.6 x 33.8 cm (5.9 x 3.4 x 13.3 in.)	16.8 x 11.9 x 36.8 cm (6.6 x 4.7 x 14.5 in.)	
Weight - net (shipping)	7.5 (9.3) kg 16.6 (20.4) lb.	10.0 (10.9) kg 22.0 (24.0) lb.	12.3 (13.2) kg 27.0 (29.0) lb.
Listing, Certifications and Unlisted Components	UL 1778, UL 497A, CSA 107.1, FCC part 15		
EMI certification	FCC/DOC Class B certified		
Electromagnetic immunity	IEC 801-4 level IV, 801-5 level III		

* User-adjustable through PowerChute® plus (see software documentation)

For Computer Interface Port Specifications, see the APC Website.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[APC:](#)

[BP280S](#)