

PT-Series, Solder Type — MIL-C-26482, Series 1

Receptacles mate with plugs that are on the same line the table. Ordering Examples: Environmental — PT02E-10-6P; Environmental with Strain Relief — PT01E-10-6P-SR.



Class E Environmental Receptacles

Table with columns: Shell Size and Contacts, Wall Mounting (PT00E, EACH), Cable Connecting (PT01E, EACH), Box Mounting (PT02E, EACH), Jam Nut (PT07E, EACH). Rows list various shell sizes from 8-2P to 24-61S with dimensions for 1-9 and 10-24 configurations.

Class E Environmental Plugs

Table with columns: Shell Size and Contacts, Straight (PT06E, EACH), 90° Angle (PT08E, EACH). Rows list various shell sizes from 8-2S to 24-61P with dimensions for 1-9 and 10-24 configurations.

Class E Environmental Receptacles with Strain Relief

Table with columns: Shell Size and Contacts, Wall Mounting (PT00E-SR, EACH), Cable Connecting (PT01E-SR, EACH), Jam Nut (PT07E-SR, EACH). Rows list various shell sizes from 8-2P to 14-18S with dimensions for 1-9 and 10-24 configurations.

Class E Environmental Plugs with Strain Relief

Table with columns: Shell Size and Contacts, Straight (PT06E-SR, EACH), 90° Angle (PT08E-SR, EACH). Rows list various shell sizes from 8-2S to 14-18P with dimensions for 1-9 configurations.

Class E Environmental Receptacles with Strain Relief (continued)

Table with columns: Shell Size and Contacts, Wall Mounting (PT00E-SR, EACH), Cable Connecting (PT01E-SR, EACH), Jam Nut (PT07E-SR, EACH). Rows list various shell sizes from 14-19P to 24-61S with dimensions for 1-9 and 10-24 configurations.

Class E Environmental Plugs with Strain Relief (cont.)

Table with columns: Shell Size and Contacts, Straight (PT06E-SR, EACH), 90° Angle (PT08E-SR, EACH). Rows list various shell sizes from 14-19S to 24-61P with dimensions for 1-9 configurations.