

AT73C246-EK1 Evaluation Kit

User Guide





Section 1

Introduction	1-1
1.1 Scope	1-1
1.1.1 Typical Applications:	1-1
1.2 AT73C246-EK1 Features	1-2
1.3 Deliverables	1-3

Section 2

Getting Started	2-1
2.1 Electrostatic Warning	2-1
2.2 Requirements	2-1
2.3 PC System Requirements	2-1
2.4 Instructions	2-2
2.4.1 To start the AT73C246-EK1 board (before using the AT73C246-EK1 software)	2-2
2.4.2 To turn off the AT73C246-EK1 evaluation board	2-2
2.5 Block Diagram	2-3
2.6 Power Supply	2-4
2.7 Communication Interfaces	2-5
2.7.1 Communication Interfaces Header (J15)	2-5
2.8 Audio Interfaces	2-6
2.9 Output Voltages	2-7
2.10 Input/Output Signals	2-8
2.10.1 ADC	2-8
2.10.2 CLK32K - RTC Output Clock	2-8
2.10.3 LED	2-8
2.10.4 Wakeup Push Buttons	2-9
2.10.5 LDOs Optional Programming Enable	2-9

Section 3

AT73C246-EK1 Software Interface	3-1
3.1 Software Panel	3-1
3.1.1 Login	3-1
3.1.2 Login Errors	3-1
3.1.3 Functionality and Control Pages	3-3

Section 4

USB-to-Serial Card	4-1
4.1 USB-to-Serial Card Features	4-1
4.2 Electrostatic Warning	4-1
4.3 Requirements	4-1
4.4 Instructions	4-2

4.4.1	To start the USB-to-Serial Card (after software installation).....	4-2
4.4.2	To turn off the USB-to-Serial Card.....	4-2
4.5	Identification LEDs	4-2
4.6	Serial Interfaces Header	4-3

Section 5

Technical Specifications	5-1
5.1 AT73C246-EK1	5-1

Section 6

PCB Layout.....	6-1
6.1 AT73C246-EK1	6-1

Section 7

Schematics	7-1
------------------	-----

Section 8

Revision History.....	8-1
8.1 Revision History	8-1



Section 1

Introduction

Congratulations on your purchase of the AT73C246-EK1. It is designed to give designers a quick start to evaluate the power management and audio capability of the AT73C246 and for prototyping and testing of new designs.

1.1 Scope

This document describes the AT73C246-EK1. This board is designed to allow an easy evaluation of the products using demonstration software.

To increase its capabilities for demonstration, this standalone board has two serial interfaces (TWI and I²S via a dedicated connector), Manual Startup/Reset Control, Input/Audio Connectors, 4 x ADC Inputs, RTC and Output Supply Voltages Terminals.

This user guide acts as a general getting started guide as well as a complete technical reference for advanced users.

This document refers the AT73C246 datasheet.

1.1.1 Typical Applications:

- Portable devices

1.2 AT73C246-EK1 Features

The AT73C246-EK1 provides the following features:


- Small size (only 70 x 70mm) with maximum available features.
- Input power supply:
 - External Power Supply on VIN pad (2.5V to 5.5V).
- On-board audio/analog resources:
 - 100dB Dynamic Range Stereo Audio DAC - 8 to 96 kHz sampling frequency,
 - 4 x 96dB Dynamic Range Stereo Audio ADC - 8 to 96 kHz sampling frequency,
 - 1 stereo 16/32 Ohm/20mW stereo headset (3.5mm jack connector),
 - 1 stereo line in (3.5mm jack connector),
 - 1 auxiliary in (3.5mm jack connector),
 - 1 stereo line output (3.5mm jack connector),
 - Stereo microphone inputs with bias generator,
- On-board power supply resources:
 - DCDC0 : 0.8 - 3.6V / 600mA,
 - DCDC1 : 0.8 - 3.6V / 600mA,
 - LDO2 : 0.8 - 1.9V / 300mA,
 - LDO3 : 2.7 - 3.6V / 200mA,
 - LDO4 : 2.7 - 3.6V / 200mA,
 - LDO5 : 2.5V / 10mA - Backup battery charger and RTC supply,
- Serial interfaces:
 - TWI for PMU and Audio controls,
 - I²S Master / Slave protocol support (for audio streaming),
- RTC 32KHz output for host support.
- Reset and Interrupt generation.
- On-board buttons:
 - Power Enable (PWREN),
 - Hard Reset (HRST),
 - Wakeup Sequence (WAKEUP0).

1.3 Deliverables

The AT73C246-EK1 package contains the following items:

1. An AT73C246-EK1 board,

Figure 1-1. AT73C246-EK1 Top View (card photo)

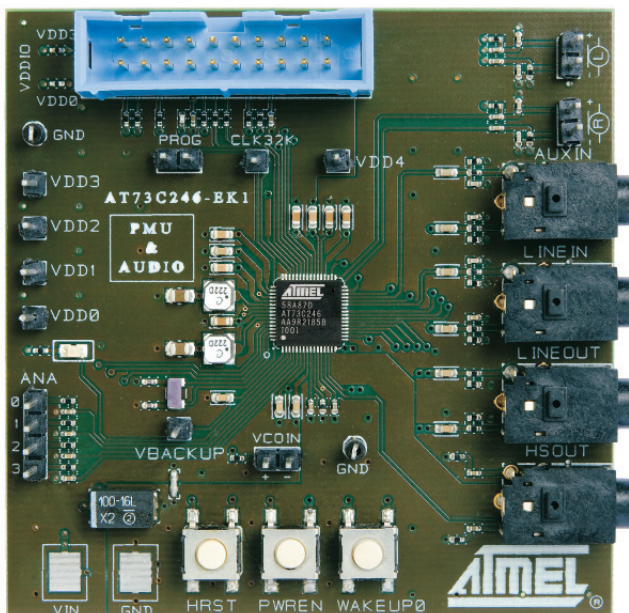


The AT73C246 is located in the center of the AT73C246-EK1 on the Components Side.

2. USB Interface card,



3. USB cable,

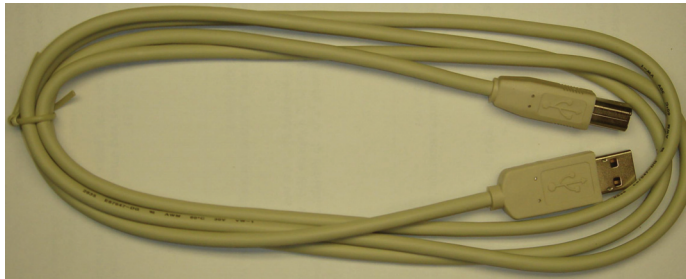


4. 20-pins flat cable,



5. One CD-ROM containing the product's user guide, full datasheet and ready to use GUI and Command line applications.



Figure 1-2. AT73C246-EK1 Components Side

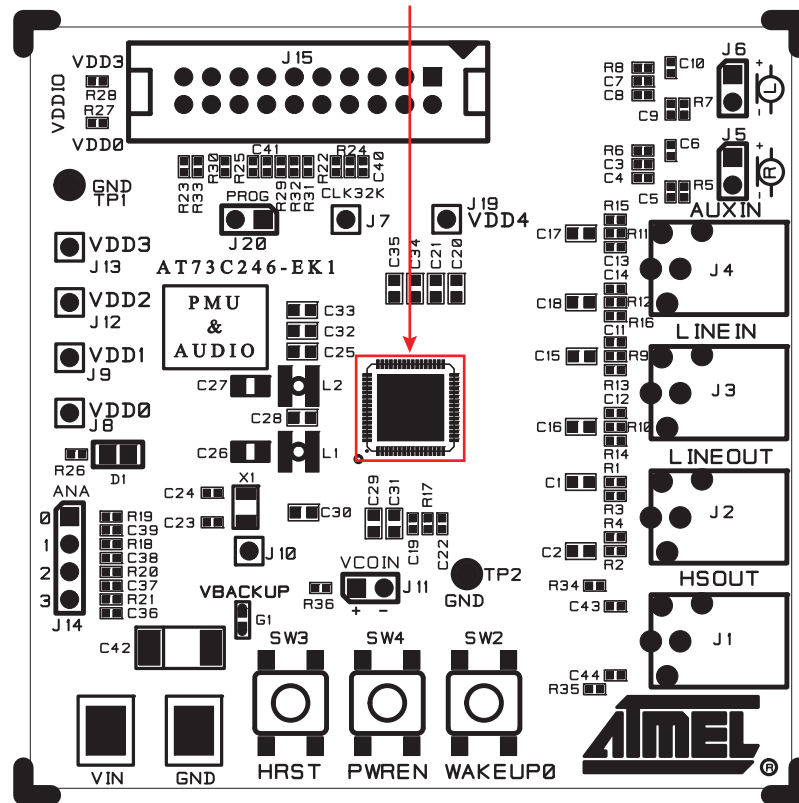





Section 2

Getting Started

2.1 Electrostatic Warning

The AT73C246-EK1 evaluation board is shipped in protective anti-static packaging. The board must not be subjected to high electrostatic potentials. A grounding strap or similar protective device should be connected when handling the board. Avoid touching the components pins or any metallic element.

2.2 Requirements

In order to set up the AT73C246-EK1 evaluation kit the following items are needed:

1. The AT73C246-EK1 evaluation board itself.
2. A DC 2.9V to 5.5V, connected to Vin pad, output power source for main supply (minimum 1 A are required for fully operation).
3. The USB interface card with its USB cable and 20-pins flat cable.
4. Input/Output devices (Headset, Microphone, etc)
5. PC station with a USB connection (i.e. Universal Serial Bus) for command communication (via USB interface card).

2.3 PC System Requirements

For a correct software operation of the AT73C246-EK1 evaluation board, the minimum hardware and software PC requirements are:

- Intel Pentium II processor
- 64 MB RAM
- 70 MB free hard disk space (for AT73C246 Evaluation board software installation)
- Windows® 2000/XP/VISTA
- A USB connection.

2.4 Instructions

2.4.1 To start the AT73C246-EK1 board (before using the AT73C246-EK1 software)

- Install the AT73C246 software by clicking on setup.exe.
- If the software is downloaded from the Atmel Web site then it is necessary to install first the National Instrument Labview software (LabVIEW8.0.1RuntimeEngine).
- Connect Input and Output devices to the AT73C246-EK1 board (into linein, Headset, Microphone, etc..) as in [Section 2.8 "Audio Interfaces" on page 2-6](#),
- Connect DC power supply on P1 and P2.
- Connect the USB cable between the PC and the USB Interface card and when the PC requests an "inf" driver point to "CompositeCDCSerial.inf" in USB Driver folder,
- Connect the 20-pins flat cable between the to USB Interface card header and the AT73C246-EK1 board.
- Launch the AT73C246 software test interface by clicking on AT73C246.exe (and follow instructions in ["AT73C246-EK1 Software Interface" on page 3-1](#) and ["USB-to-Serial Card" on page 4-1](#))
- Push once on PWREN button (the AT73C246-EK1 on-board ["LED \(D1\)"](#) should blink)


2.4.2 To turn off the AT73C246-EK1 evaluation board

- Disconnect the 20-pins flat cable,
- Disconnect the power supply on P1 and P2.



2.5 Block Diagram

Figure 2-1. AT73C246-EK1 Block Diagram

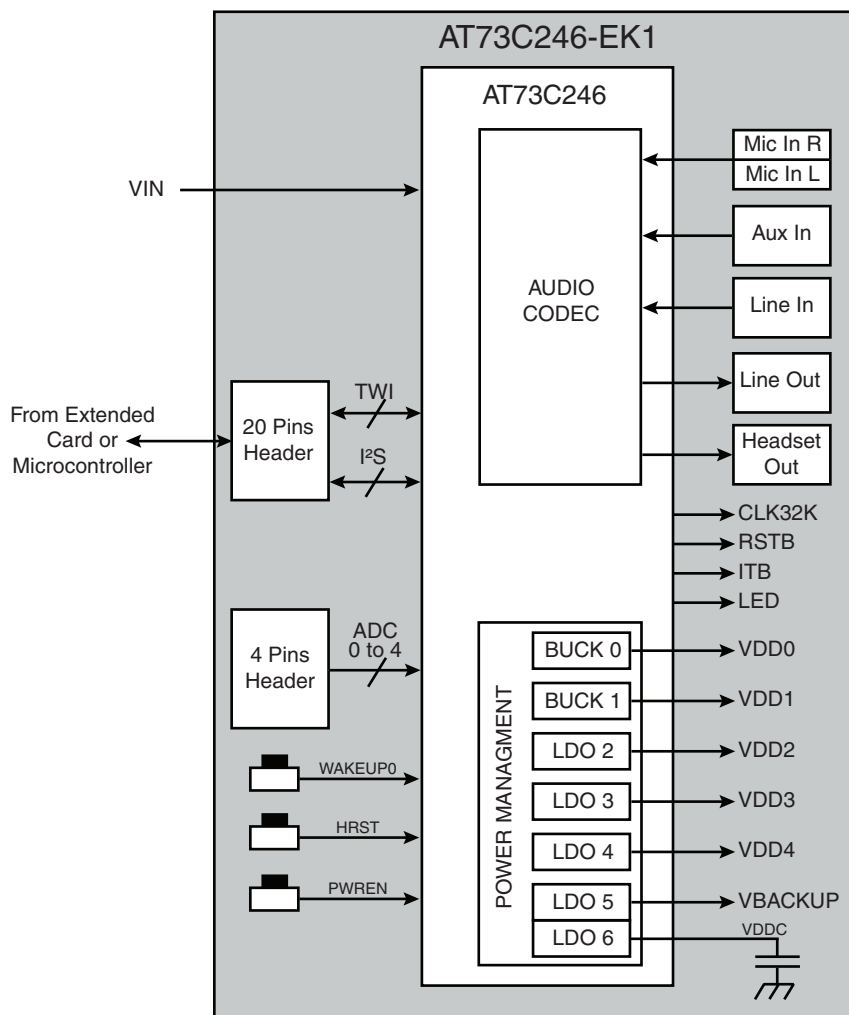

2.6 Power Supply

The AT73C246-EK1 is supplied by an external power supply connected on P1 (positive supply) and P2 (ground).

Figure 2-2. Power Supply Diagram


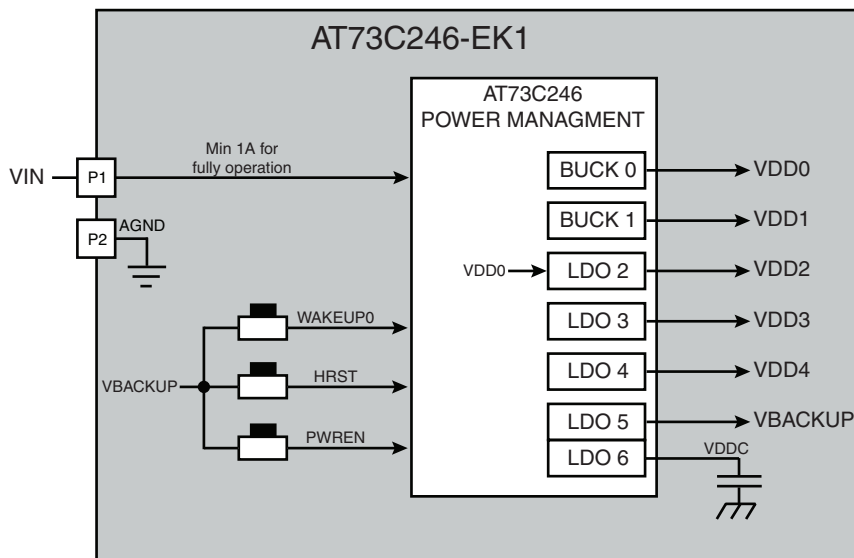


Table 2-1. Electrical Supply Requirements

Power supply source	Min	Max	Unit
On P1 pad (minimum 1 A for fully operation)	3.1	5.5	V

Note: This power supply input is NOT protected against polarization inversion.

Figure 2-3. Vin Supply Pad (P1 & P2)

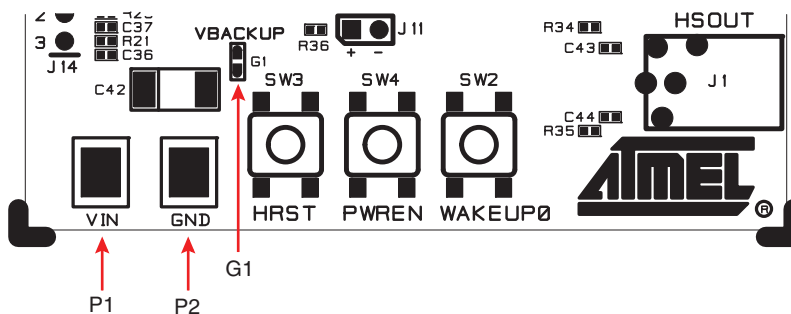

Connect the power supply (+) to P1 and the ground (-) to P2.

Note: Keep G1 soldered to insure connection between the AGND (analog ground on P2) and DGND (digital ground).

2.7 Communication Interfaces


2.7.1 Communication Interfaces Header (J15)

The following table details the pin assignments for each signal. All signal, I²S or TWI, are processed by the USB-to-Serial module. If needed the user can drive directly these signals (using a microcontroller for example) trough J15.

Table 2-2. Communication Interface Header Pins Assigning

Pin N°	Signal Name	Description	Pin N°	Signal Name	Description
1	WAKEUP3	-	2	Vin	Not Used
3	WAKEUP2	-	4	DGND	Digital Ground
5	WAKEUP1	-	6	-	Not Used
7	RSTB	Component Reset	8	DGND	Digital Ground
9	TWCK	TWI Clock	10	VDDIO	I/O level
11	LRFS-Signal	I ² S Frame Clock	12	MCLK	I ² S Master Clock
13	DAI-Signal	I ² S Data in	14	ITB	Interrupt
15	DAO-Signal	I ² S Data out	16	-	Not Used
17	BCLK-Signal	I ² S Bit Clock	18	-	Not Used
19	-	Not Used	20	TWD	TWI Data I/O

Figure 2-4. Communication Interfaces Header (J15)

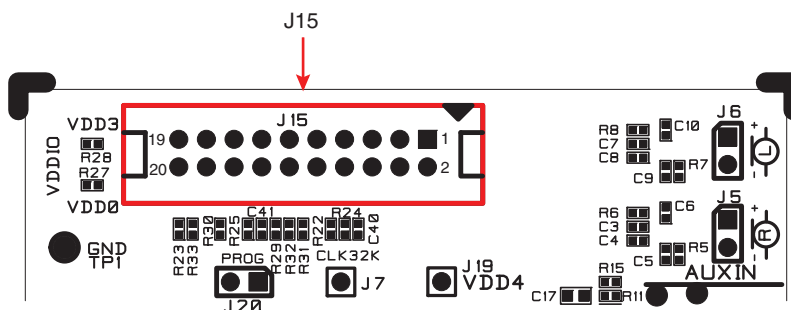

Note: For a reason of I/O level configuration between the AT73C246 and an external microcontroller and If using another interface then the USB Communication Box, the VDD3 or VDD0 should be connect on J15 by soldering a 0 ohms resistor on its pads (see VPAD Selection [“AT73C246-EK1 Schematic - Power Supply Page”](#) on page 7-5).

2.8 Audio Interfaces

The AT73C246-EK1 CODEC interface contains various connections of audio elements:

- Microphones Inputs connected to J5 and J6 (2 pins header for each input).
- Auxiliary Input connected to J4 (3.5mm jack).
- Line Input connected to J3 (3.5mm jack).
- Line Output connected to J2 (3.5mm jack).
- Headset Output connected to J1 (3.5mm jack).

Please consult the product data sheet for setup options and requirements.

Figure 2-5. Microphones Inputs (J5 and J6)


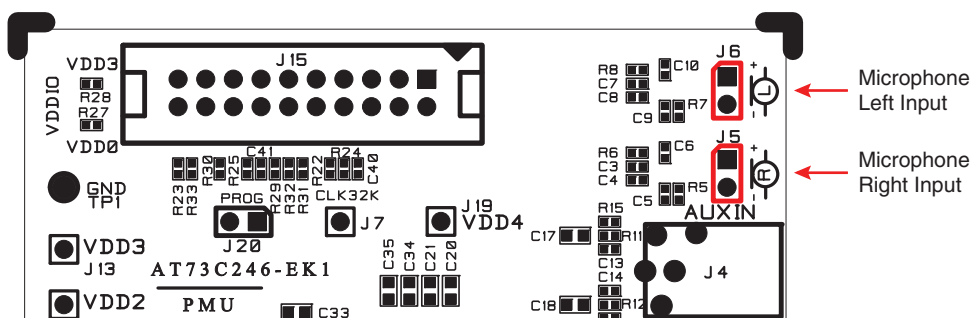


Figure 2-6. Audio Inputs and Outputs (J1, J2, J3 and J4)

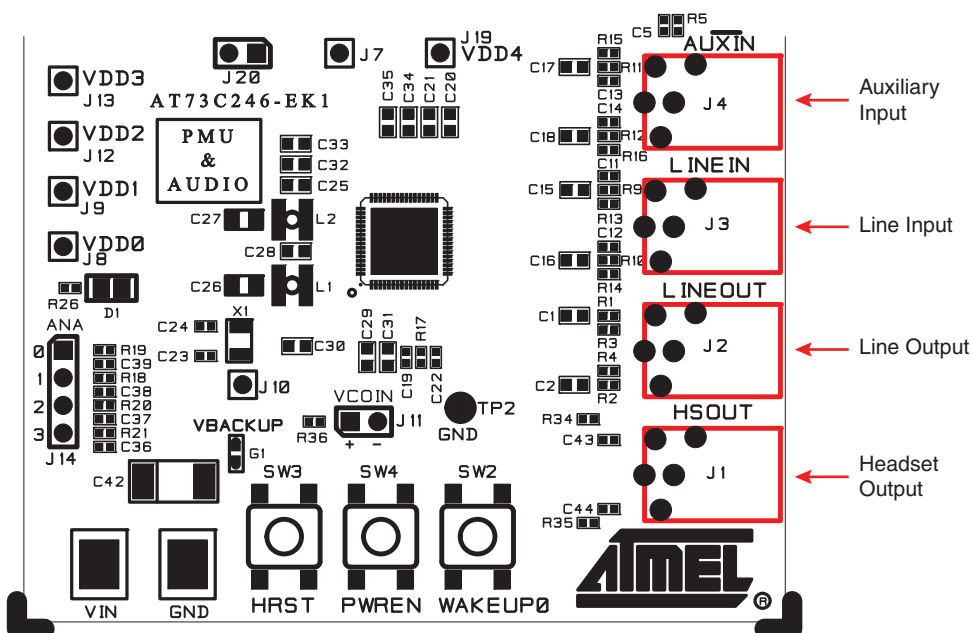

2.9 Output Voltages

In order to measure the output voltages connect a Volt-meter probe to the requested Test-Point by the following list:

- VDD0 - J8; 0.8 - 3.6V / 600mA
- VDD1 - J9; 0.8 - 3.6V / 600mA
- VDD2 - J12; 0.8 - 1.9V / 300mA
- VDD3 - J13; 2.7 - 3.6V / 200mA
- VDD4 - J19; 2.7 - 3.6V / 200mA
- VBACKUP - J10; 2.5V / 10mA (an additional connector J11 is available for rechargeable coin type battery)

Figure 2-7. Output Voltages Test-Points (J8, J8, J12, J13, J19)


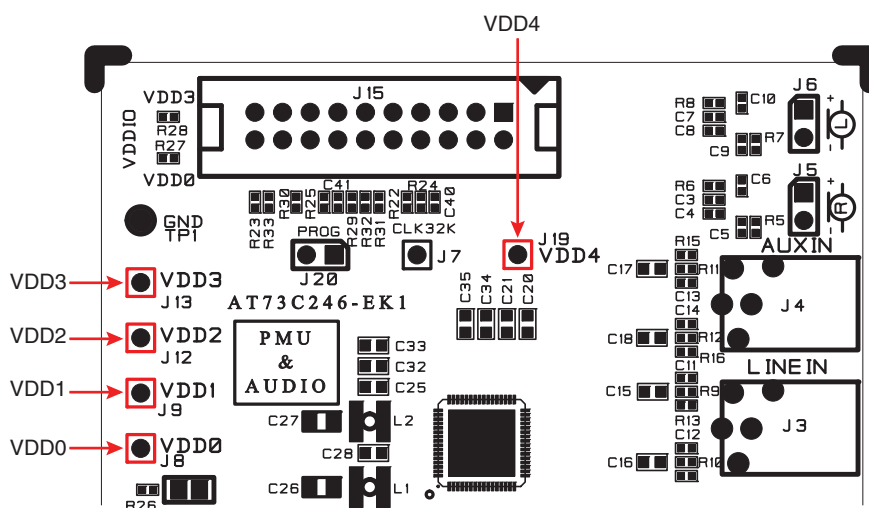


Figure 2-8. VBACKUP and VCOIN (J10 and J11)

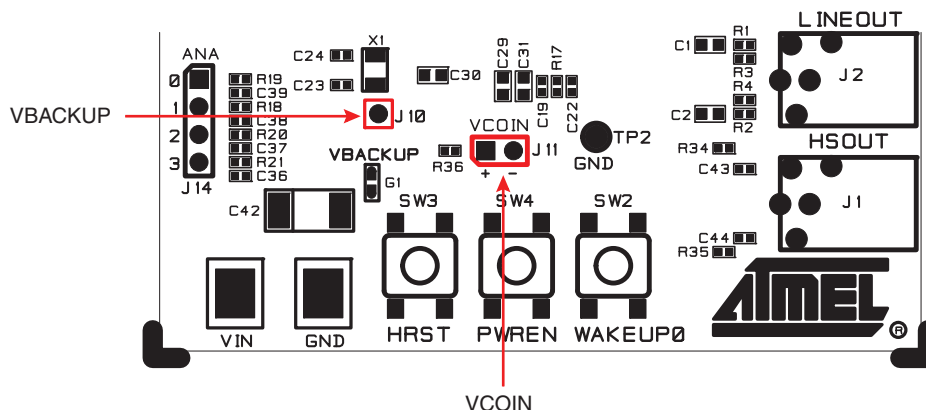


2.10 Input/Output Signals

2.10.1 ADC

Connect an external analog signal to ADC connector J14.


Figure 2-9. ADC connector (J14)

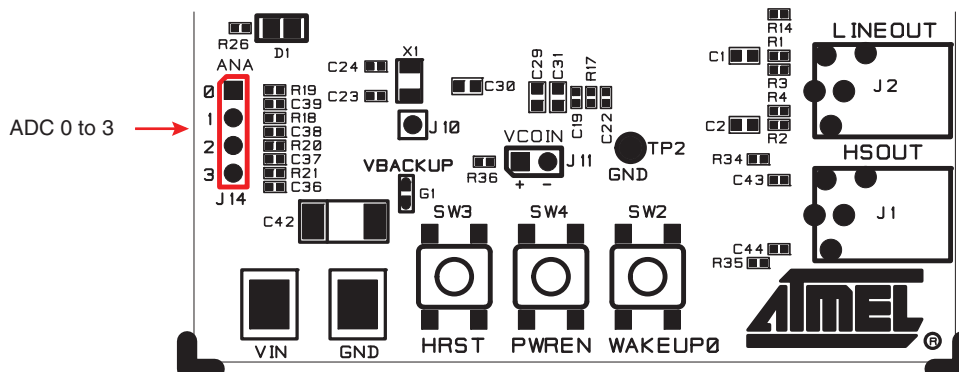

2.10.2 CLK32K - RTC Output Clock

The AT73C246-EK1 provides measuring the internal oscillator frequency (J7).


Figure 2-10. CLK32K (J7)

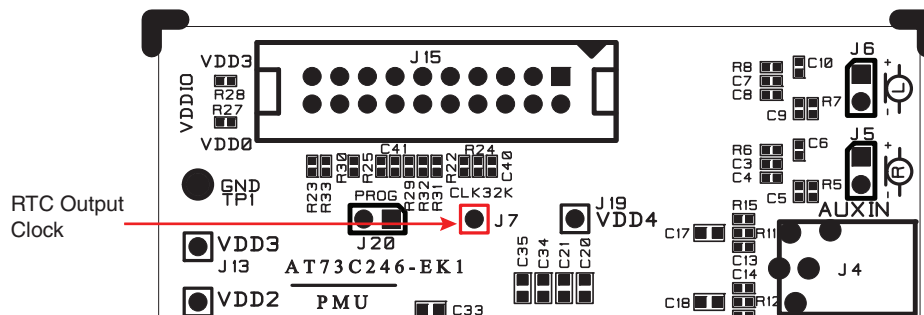

2.10.3 LED

The programmable output LED pin can be visualize by the on board led (D1).

Figure 2-11. LED (D1)

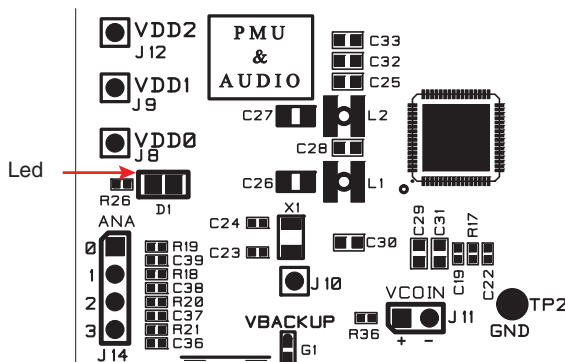

2.10.4 Wakeup Push Buttons


The AT73C246-EK1 provides 3 on board wakeup push buttons for startup/shutdown operations.

HRST - Pressing it for 1 second reset the AT73C246 (when the AT73C246 in “ON”).

PWREN - Pressing it for 5 sec start/stop the AT73C246.


WAKEUP0 - Pressing it once enable the sequence in PMU_WAKEUP_EVENT register. On the other hand, when the AT73C246 in “ON”, pressing it for 1 second switch the AT73C246 into standby mode.

Figure 2-12. Wakeup Push Buttons (SW2, SW3 and SW4)

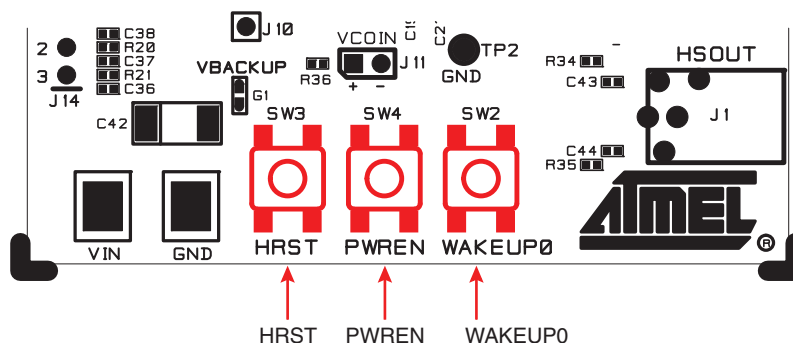

2.10.5 LDOs Optional Programming Enable

Close J20 before any access to the state machine LDOs startup sequences.

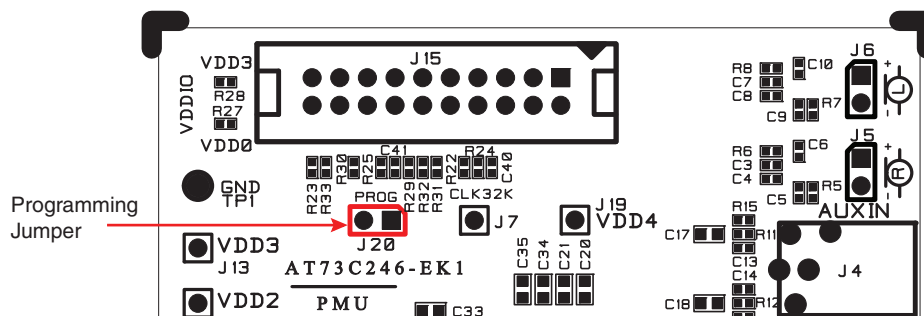




AT73C246-EK1 Software Interface

3.1 Software Panel

3.1.1 Login

1. Connect the USB cable to the USB Interface card and check which COM it uses. Go to Device Manager in the Control Panel of your computer and then look for "AT91 USB to Serial Converter" title in PORTS.
2. On setup panel - Select Port and required operation: Init AT73C246 for initializing card or Exit program.

Figure 3-1. Login Message

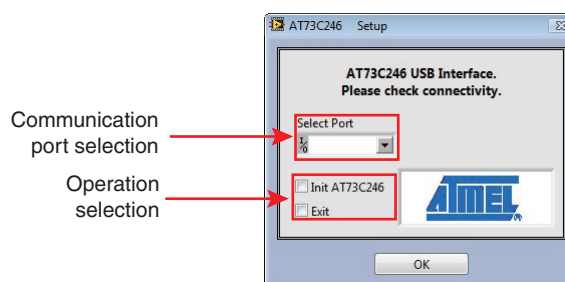


3.1.2 Login Errors

USB Communication Issue

In software startup - In case of "Communication Issue" check USB cable connectivity and/or COM selection.

Then, select Retry or Exit.

Figure 3-2. Communication Error

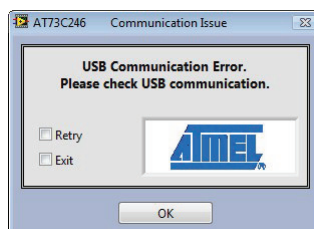


USB Connection Issue

While software runs - In case of “Connection Issue” check USB cable connectivity.

Then, select Retry or Exit.

Figure 3-3. Connection Issue

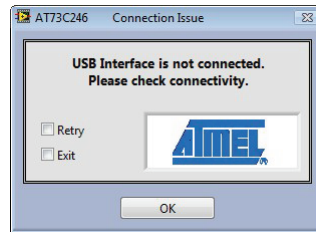

3.1.3 Functionality and Control Pages

AT startup (after pressing on WAKEUP button) the user can choose to initialize by clicking on “Example Init_audio” button (the initialization can be done manually or programmed by microcontroller). This action will startup the following elements:

- Audio Codec - for this example the first path is chosen - “Digital In - Headphone Out”.
- Power Management Unit
- Blinking Led

Figure 3-4. Software Panel - General Purpose

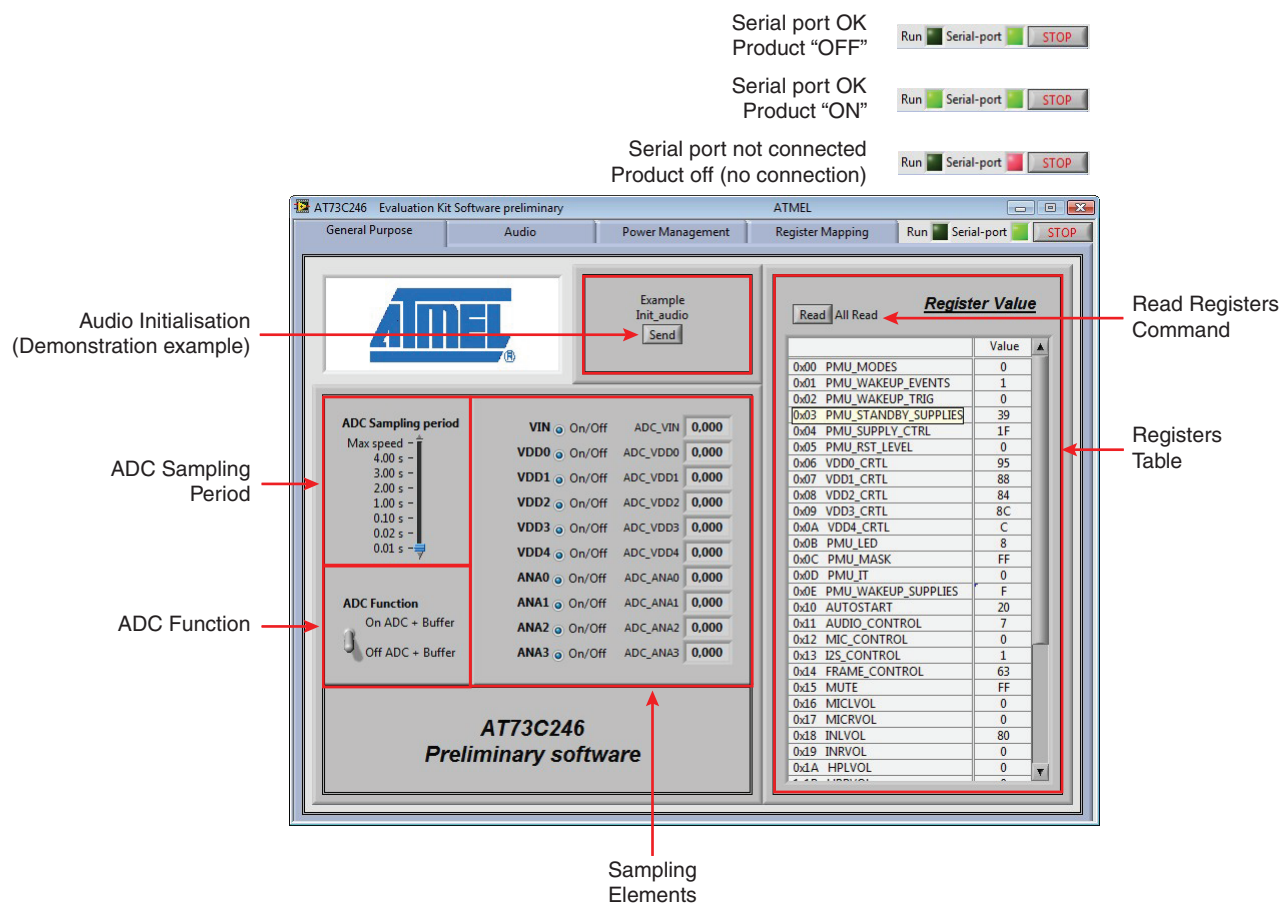


Figure 3-5. Software Panel - Audio Configuration

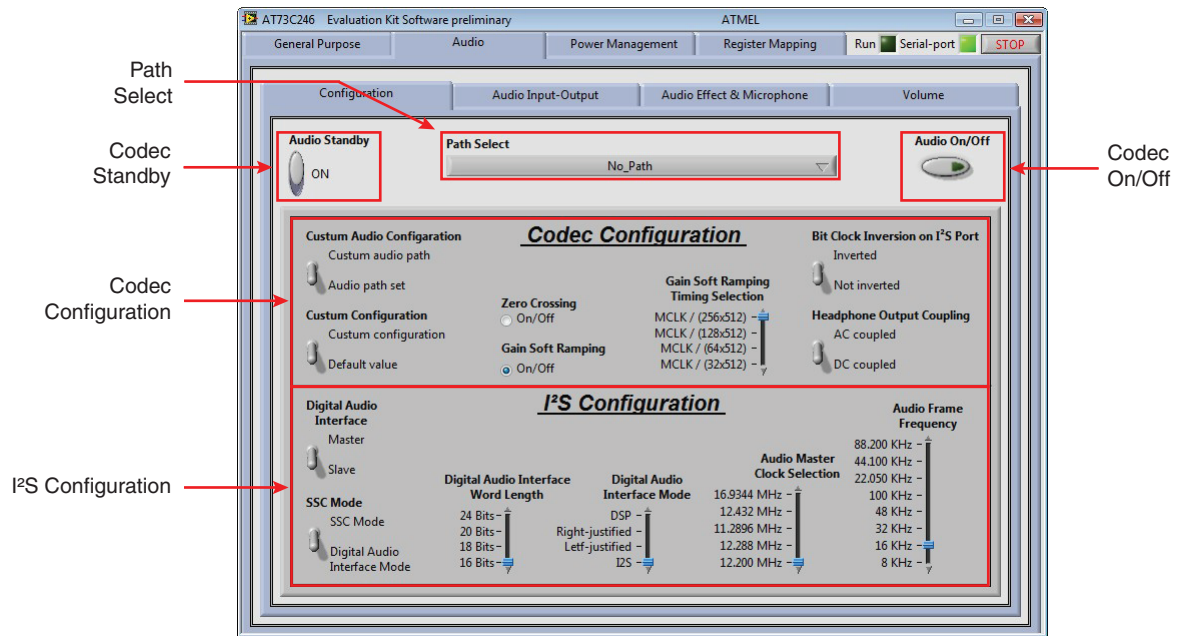


Figure 3-6. Software Panel - Audio Input-Output

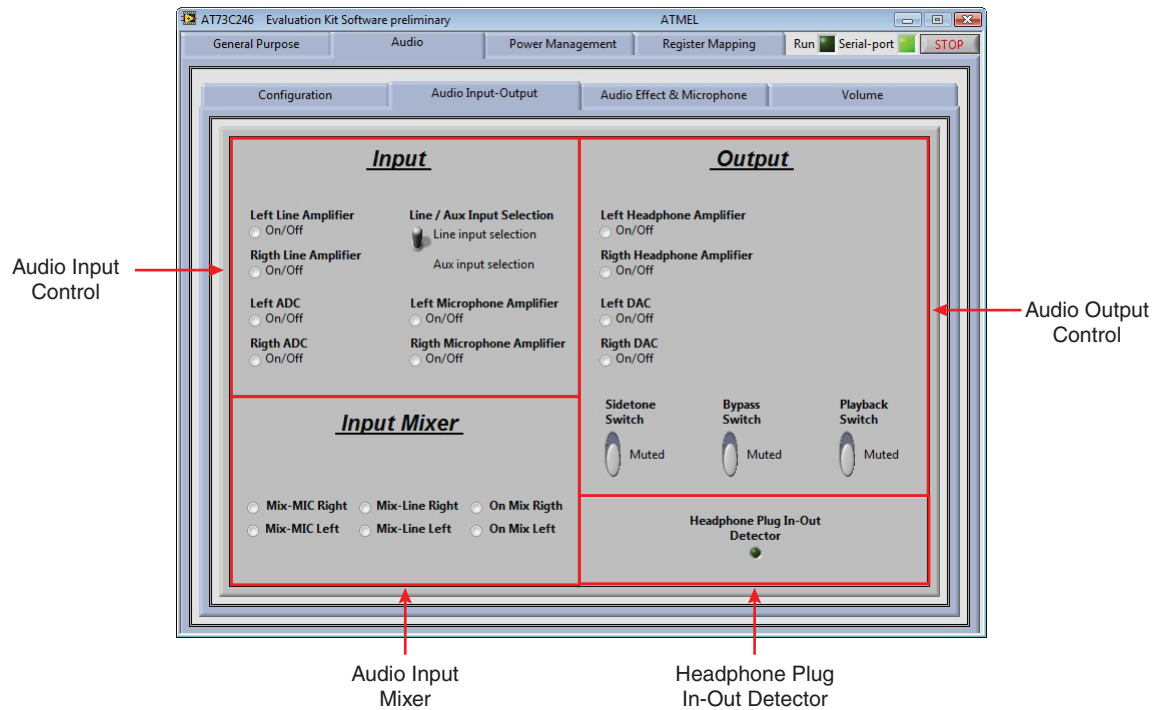


Figure 3-7. Software Panel - Audio Effect & Microphone

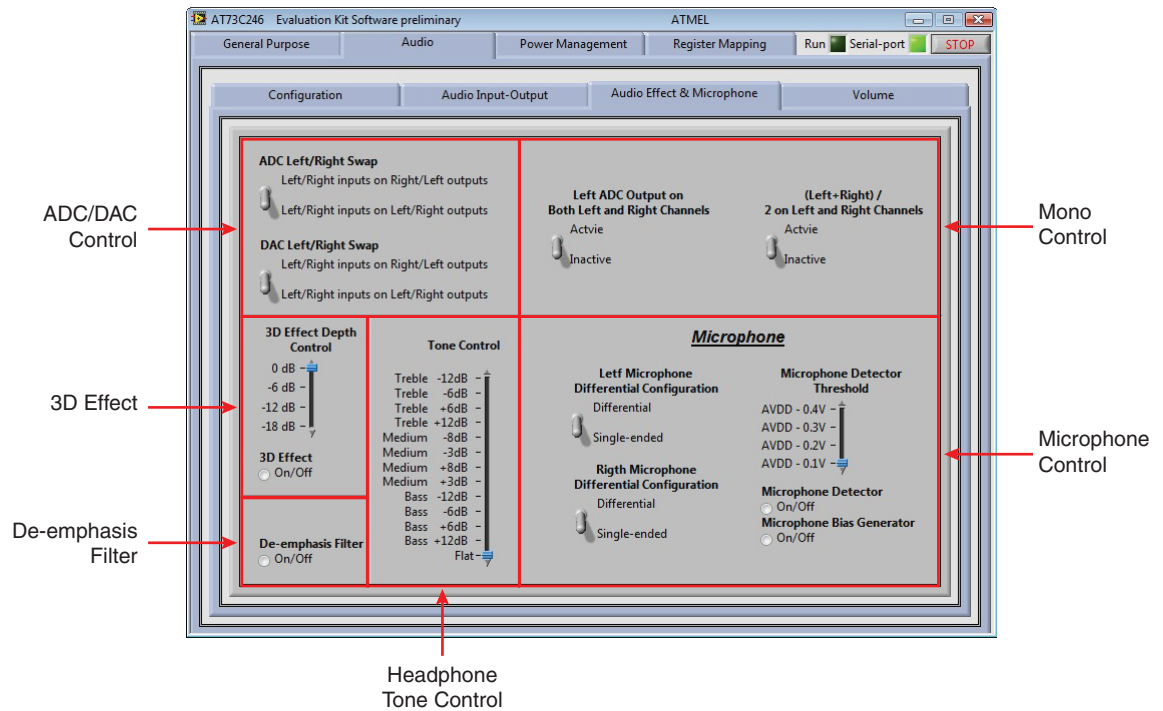


Figure 3-8. Software Panel - Audio Volume

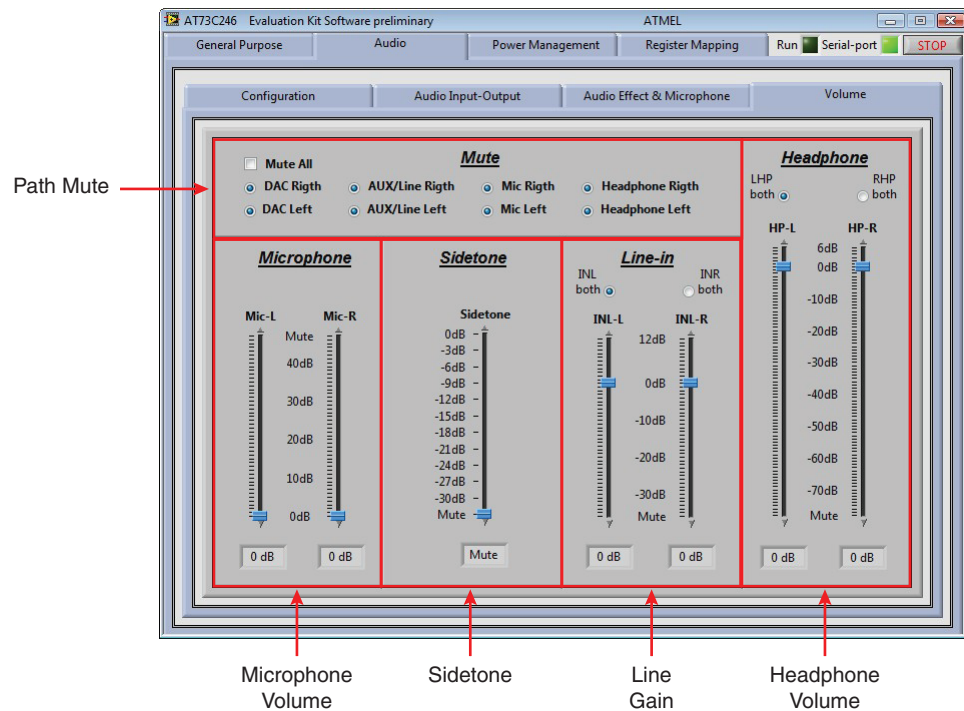


Figure 3-9. Software Panel - Power Management


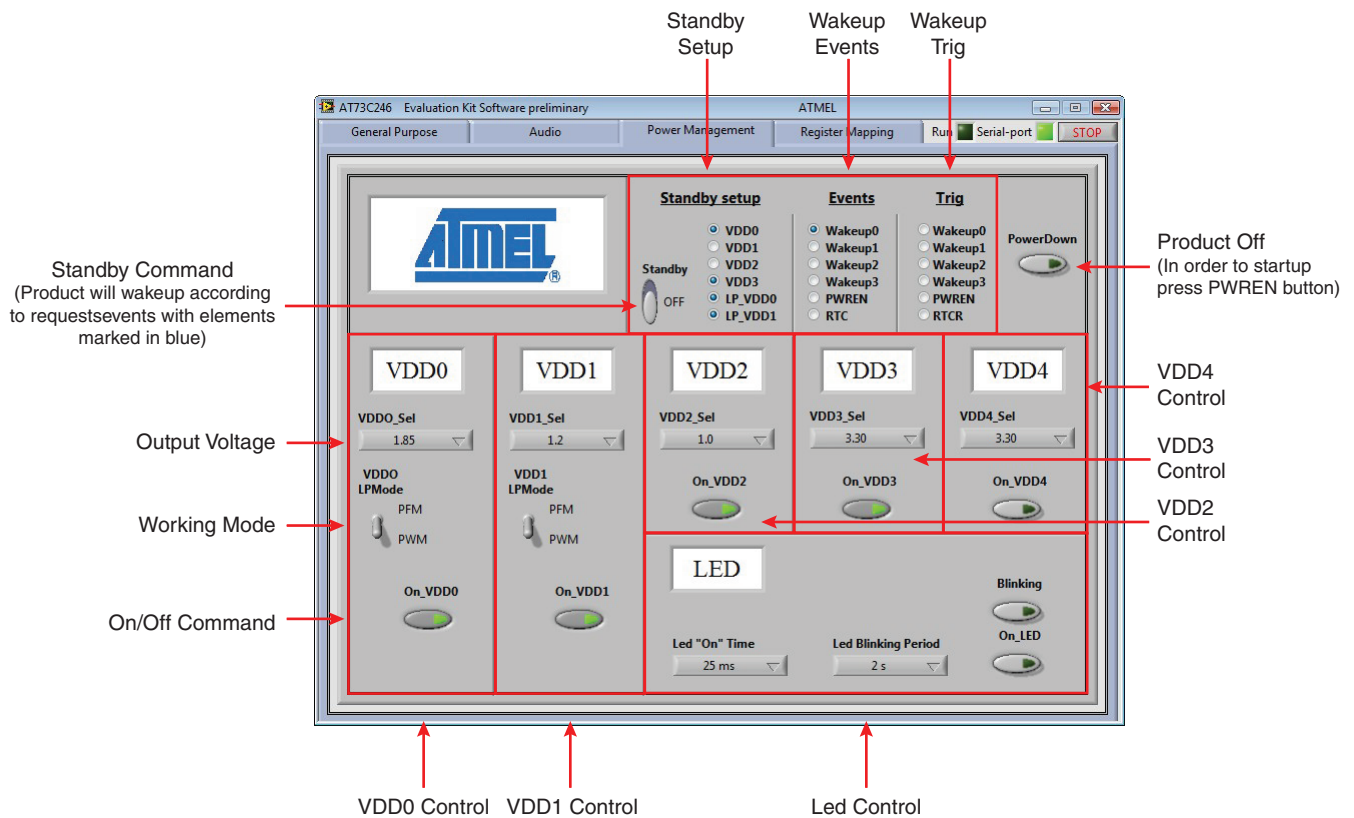


Figure 3-10. Software Panel - Register Mapping



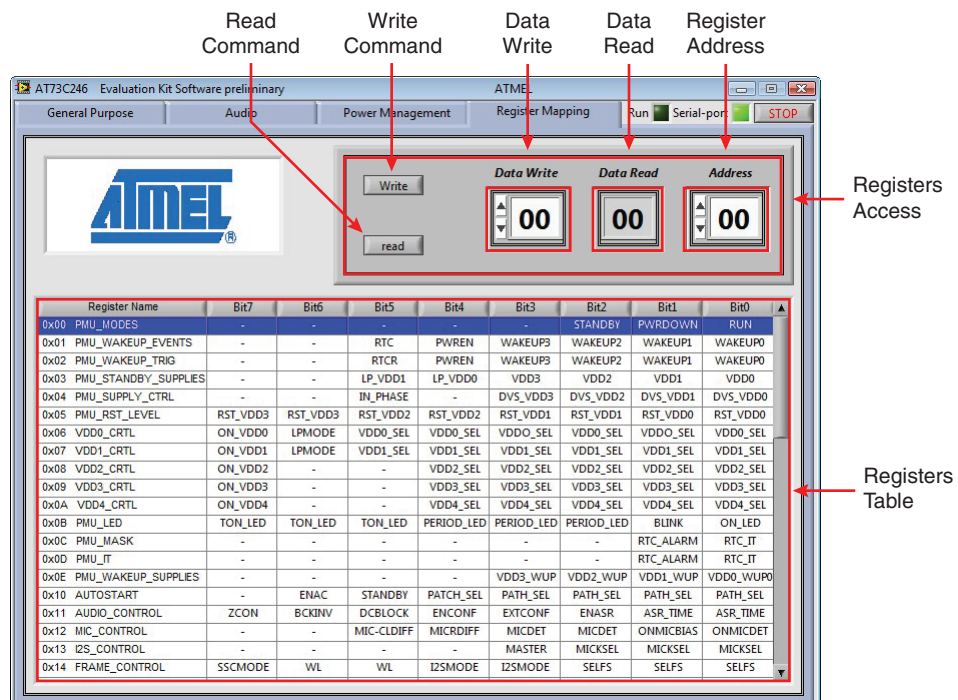

Section 4

USB-to-Serial Card

The USB-to-Serial Card provides computer terminals to communicate with all PMAAC product line.

It gives designers all necessary for a quick setup of an evaluation card and it supports different product's software.

To increase its capabilities for demonstration, this standalone board has 3 serial interfaces (I²S, TWI and SPI).

4.1 USB-to-Serial Card Features

The USB-to-Serial Card provides the following features:

- On-board resources:
 - Standard USB interface,
 - 20 leads GPIO connector,
 - 12.288MHz Clock output for digital core,
- Serial interfaces:
 - Bidirectional buffered USB to SPI
 - Bidirectional buffered USB to TWI
 - Bidirectional buffered USB to I²S
- On-board indication leds:
 - Power “ON”
 - Data transmitting

4.2 Electrostatic Warning

The USB-to-Serial Card evaluation board is shipped in protective plastic packaging. The board must not be subjected to high electrostatic potentials. Avoid touching the components pins or any metallic element.

4.3 Requirements

In order to set up the USB-to-Serial Card the following items are needed:

1. The USB-to-Serial Card itself.
2. PC station with a standard USB connector.
3. The 20-leads flat cable.

4.4 Instructions

4.4.1 To start the USB-to-Serial Card (after software installation)

- Connect the USB cable to the USB-to-Serial Card and verify led color is green and constant,
- Connect the 20-pins flat cable between the to USB-to-Serial Card and the evaluation board.
- Once the USB-to-Serial Card properly installed; it should operate transparently - as if it were a standard cable connection. There is no ON/OFF switch and all data signals from and to the PC are passed straight through.

4.4.2 To turn off the USB-to-Serial Card

Disconnect the USB cable.

Figure 4-1. USB Side


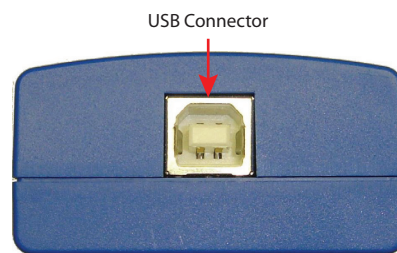


Figure 4-2. GPIO Side

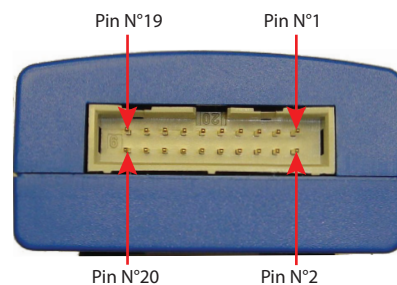

4.5 Identification LEDs

The bi color LED identify the following statuses:

- Continuous Green - Power “ON”
- Blinking Red - Data transmitting

4.6 Serial Interfaces Header

The USB-to-Serial Card supports I²S, SPI and TWI protocols which configured automatically by the software. The following table details the pins assigning for each signal on the GPIO connector (2x10 pins header Type HE10 for flat cable).

Note: In most cases, a clock must run during any I²S, SPI or TWI write access. In any case of not using the Serial Board and connecting an external communication system for I²S, SPI or TWI a clock should be provided to the supported evaluation card.

Table 4-1. Serial Interface Header Pins Assigning

Pin N°	Signal Name	Description	Pin N°	Signal Name	Description
1	MOSI	SPI Data out ⁽¹⁾	2	ADJ_VOUT	Not Used
3	SPCK	SPI CLK ⁽¹⁾	4	GND	Ground ⁽⁴⁾
5	NPCS1	SPI Chip Select 1 ⁽¹⁾	6	+3V3	Not Used
7	NPCS0	SPI Chip Select 0 ⁽¹⁾	8	GND	Ground ⁽⁴⁾
9	TWCK	TWI CLK ⁽¹⁾	10	Vin_VDDIO	Input supply from supported card ⁽²⁾
11	LRFS	I ² S Frame Clock ⁽¹⁾	12	MCLK	12.288MHz Output clock for supported digital core ⁽¹⁾⁽⁵⁾
13	SDIN_Codec	I ² S Data in ⁽²⁾	14	IRQ	Interrupt Request
15	SDOUT_Codec	I ² S Data out ⁽¹⁾	16	nRST_in	Reset in ⁽²⁾
17	BCLK_Codec	I ² S Bit Clock ⁽¹⁾	18	MISO	SPI Data in ⁽²⁾
19	AD4	Not Used	20	TWD	TWI Data ⁽³⁾

- Notes:**
1. An output signal from USB-to-Serial Card to supported card.
 2. An input signal from supported card to USB-to-Serial Card.
 3. A Bi-directional signal.
 4. Ground - These pins must be connected between the USB-to-Serial Card and the supported board.
 5. 12.288 MHz Clock - The USB-to-Serial Card's oscillator provides a 12.288MHz clock (+3.3V p-p via pin 12). This clock is necessary for driving the digital core of the evaluated board.





Section 5

Technical Specifications

5.1 AT73C246-EK1

- System Unit: AT73C246-EK1
 - Physical Dimensions..... L= 70 x W=70 x H=20 mm
 - Weight.....70 g
- Operating Conditions
 - External Voltage Supply (on Vin Pad)..... 2.9V - 5.5V
- Connections
 - Communication Connector (for I²S and TWI).....2x10 pins Header






Section 6

PCB Layout


6.1 AT73C246-EK1

Figure 6-1. Layer 1 - Components Layer

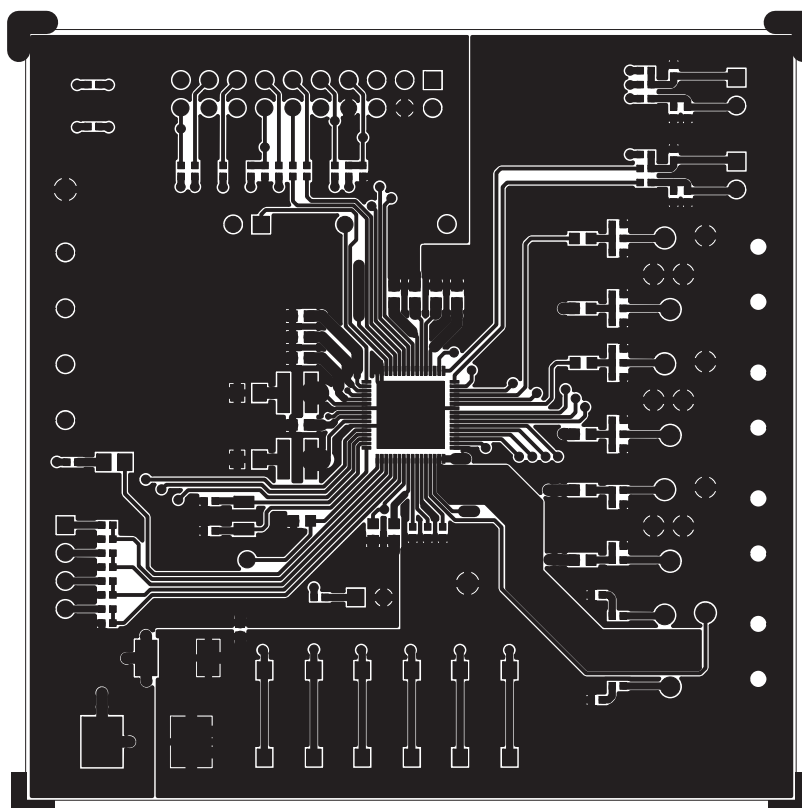


Note: Size not to scale

Figure 6-2. Layer 2

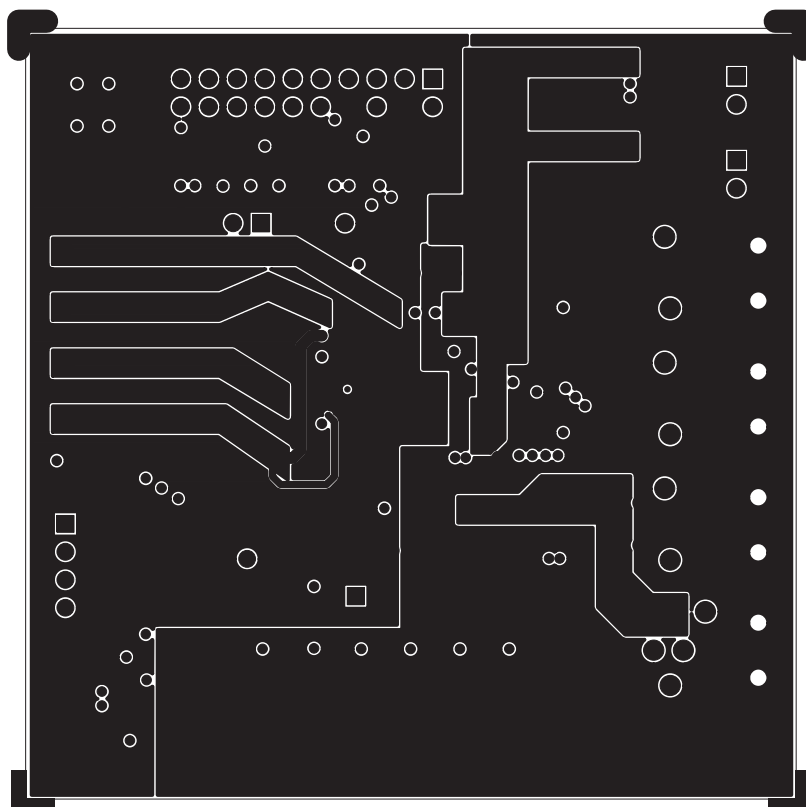


Note: Size not to scale

Figure 6-3. Layer 3

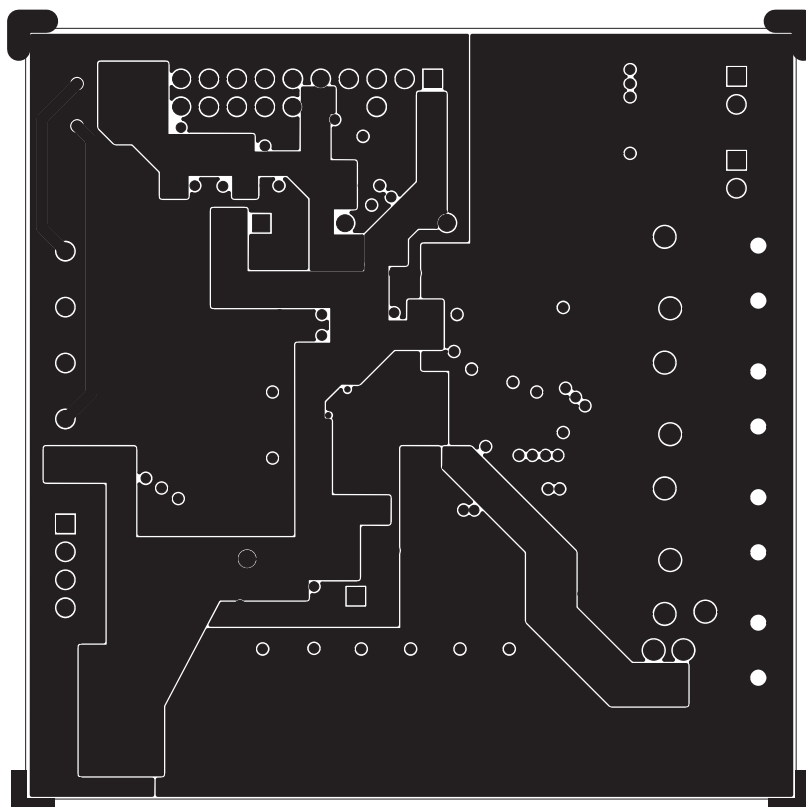


Note: Size not to scale

Figure 6-4. Layer 4 - Print Side

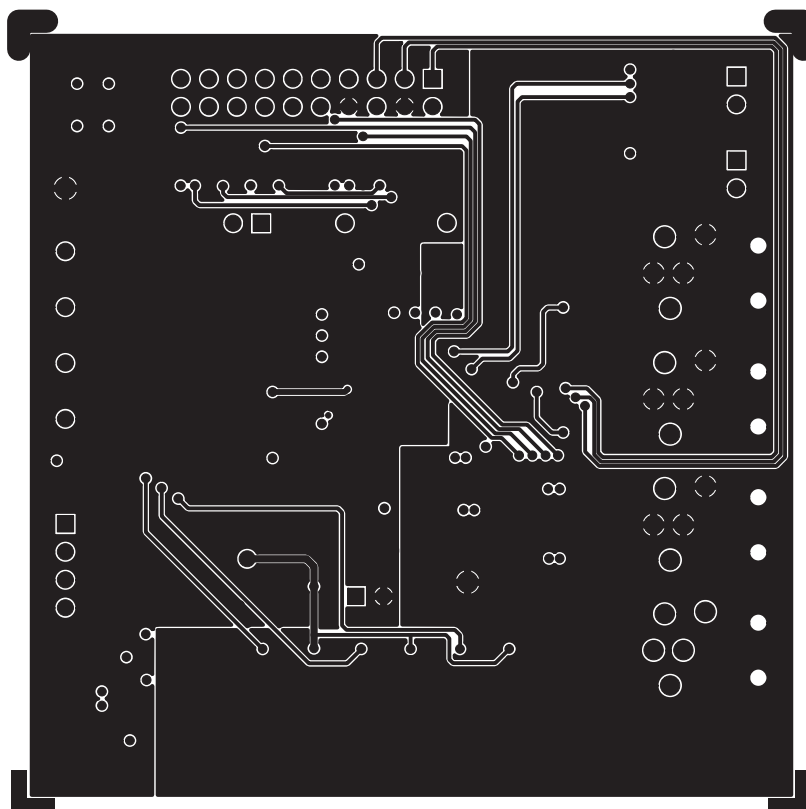


Note: Size not to scale

Figure 6-5. Silk Screen

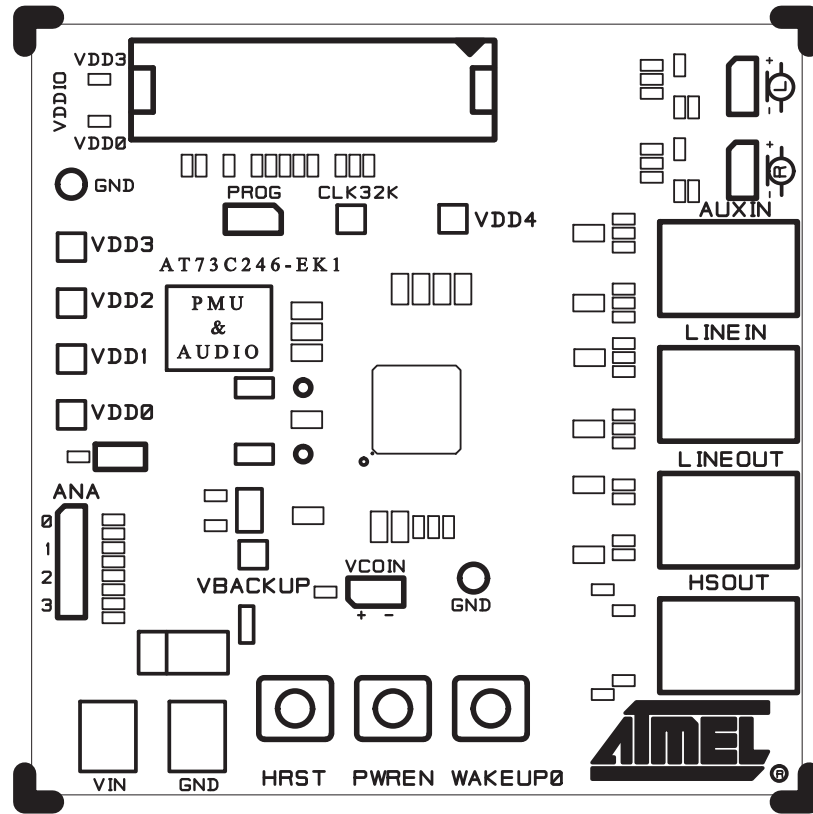



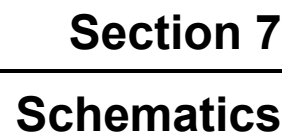

DIGITAL INTERFACE

AUDIO INTERFACE

POWER PADS

CONNECT G1 NEAR AGND PAD

VIN VAG AGND

CS CS2 CS3 CS4 CS5 CS6 CS7 CS8 CS9 CS10 CS11 CS12 CS13 CS14 CS15 CS16 CS17 CS18 CS19 CS20 CS21 CS22 CS23 CS24 CS25 CS26 CS27 CS28 CS29 CS30 CS31 CS32 CS33 CS34 CS35 CS36 CS37 CS38 CS39 CS40 CS41 CS42 CS43 CS44 CS45 CS46 CS47 CS48 CS49 CS50 CS51 CS52 CS53 CS54 CS55 CS56 CS57 CS58 CS59 CS60 CS61 CS62 CS63 CS64 CS65 CS66 CS67 CS68 CS69 CS70 CS71 CS72 CS73 CS74 CS75 CS76 CS77 CS78 CS79 CS80 CS81 CS82 CS83 CS84 CS85 CS86 CS87 CS88 CS89 CS90 CS91 CS92 CS93 CS94 CS95 CS96 CS97 CS98 CS99 CS100 CS101 CS102 CS103 CS104 CS105 CS106 CS107 CS108 CS109 CS110 CS111 CS112 CS113 CS114 CS115 CS116 CS117 CS118 CS119 CS120 CS121 CS122 CS123 CS124 CS125 CS126 CS127 CS128 CS129 CS130 CS131 CS132 CS133 CS134 CS135 CS136 CS137 CS138 CS139 CS140 CS141 CS142 CS143 CS144 CS145 CS146 CS147 CS148 CS149 CS150 CS151 CS152 CS153 CS154 CS155 CS156 CS157 CS158 CS159 CS160 CS161 CS162 CS163 CS164 CS165 CS166 CS167 CS168 CS169 CS170 CS171 CS172 CS173 CS174 CS175 CS176 CS177 CS178 CS179 CS180 CS181 CS182 CS183 CS184 CS185 CS186 CS187 CS188 CS189 CS190 CS191 CS192 CS193 CS194 CS195 CS196 CS197 CS198 CS199 CS200 CS201 CS202 CS203 CS204 CS205 CS206 CS207 CS208 CS209 CS210 CS211 CS212 CS213 CS214 CS215 CS216 CS217 CS218 CS219 CS220 CS221 CS222 CS223 CS224 CS225 CS226 CS227 CS228 CS229 CS230 CS231 CS232 CS233 CS234 CS235 CS236 CS237 CS238 CS239 CS240 CS241 CS242 CS243 CS244 CS245 CS246 CS247 CS248 CS249 CS250 CS251 CS252 CS253 CS254 CS255 CS256 CS257 CS258 CS259 CS260 CS261 CS262 CS263 CS264 CS265 CS266 CS267 CS268 CS269 CS270 CS271 CS272 CS273 CS274 CS275 CS276 CS277 CS278 CS279 CS280 CS281 CS282 CS283 CS284 CS285 CS286 CS287 CS288 CS289 CS290 CS291 CS292 CS293 CS294 CS295 CS296 CS297 CS298 CS299 CS300 CS301 CS302 CS303 CS304 CS305 CS306 CS307 CS308 CS309 CS310 CS311 CS312 CS313 CS314 CS315 CS316 CS317 CS318 CS319 CS320 CS321 CS322 CS323 CS324 CS325 CS326 CS327 CS328 CS329 CS330 CS331 CS332 CS333 CS334 CS335 CS336 CS337 CS338 CS339 CS340 CS341 CS342 CS343 CS344 CS345 CS346 CS347 CS348 CS349 CS350 CS351 CS352 CS353 CS354 CS355 CS356 CS357 CS358 CS359 CS360 CS361 CS362 CS363 CS364 CS365 CS366 CS367 CS368 CS369 CS370 CS371 CS372 CS373 CS374 CS375 CS376 CS377 CS378 CS379 CS380 CS381 CS382 CS383 CS384 CS385 CS386 CS387 CS388 CS389 CS390 CS391 CS392 CS393 CS394 CS395 CS396 CS397 CS398 CS399 CS400 CS401 CS402 CS403 CS404 CS405 CS406 CS407 CS408 CS409 CS410 CS411 CS412 CS413 CS414 CS415 CS416 CS417 CS418 CS419 CS420 CS421 CS422 CS423 CS424 CS425 CS426 CS427 CS428 CS429 CS430 CS431 CS432 CS433 CS434 CS435 CS436 CS437 CS438 CS439 CS440 CS441 CS442 CS443 CS444 CS445 CS446 CS447 CS448 CS449 CS450 CS451 CS452 CS453 CS454 CS455 CS456 CS457 CS458 CS459 CS460 CS461 CS462 CS463 CS464 CS465 CS466 CS467 CS468 CS469 CS470 CS471 CS472 CS473 CS474 CS475 CS476 CS477 CS478 CS479 CS480 CS481 CS482 CS483 CS484 CS485 CS486 CS487 CS488 CS489 CS490 CS491 CS492 CS493 CS494 CS495 CS496 CS497 CS498 CS499 CS500 CS501 CS502 CS503 CS504 CS505 CS506 CS507 CS508 CS509 CS510 CS511 CS512 CS513 CS514 CS515 CS516 CS517 CS518 CS519 CS520 CS521 CS522 CS523 CS524 CS525 CS526 CS527 CS528 CS529 CS530 CS531 CS532 CS533 CS534 CS535 CS536 CS537 CS538 CS539 CS540 CS541 CS542 CS543 CS544 CS545 CS546 CS547 CS548 CS549 CS550 CS551 CS552 CS553 CS554 CS555 CS556 CS557 CS558 CS559 CS560 CS561 CS562 CS563 CS564 CS565 CS566 CS567 CS568 CS569 CS570 CS571 CS572 CS573 CS574 CS575 CS576 CS577 CS578 CS579 CS580 CS581 CS582 CS583 CS584 CS585 CS586 CS587 CS588 CS589 CS590 CS591 CS592 CS593 CS594 CS595 CS596 CS597 CS598 CS599 CS600 CS601 CS602 CS603 CS604 CS605 CS606 CS607 CS608 CS609 CS610 CS611 CS612 CS613 CS614 CS615 CS616 CS617 CS618 CS619 CS620 CS621 CS622 CS623 CS624 CS625 CS626 CS627 CS628 CS629 CS630 CS631 CS632 CS633 CS634 CS635 CS636 CS637 CS638 CS639 CS640 CS641 CS642 CS643 CS644 CS645 CS646 CS647 CS648 CS649 CS650 CS651 CS652 CS653 CS654 CS655 CS656 CS657 CS658 CS659 CS660 CS661 CS662 CS663 CS664 CS665 CS666 CS667 CS668 CS669 CS670 CS671 CS672 CS673 CS674 CS675 CS676 CS677 CS678 CS679 CS680 CS681 CS682 CS683 CS684 CS685 CS686 CS687 CS688 CS689 CS690 CS691 CS692 CS693 CS694 CS695 CS696 CS697 CS698 CS699 CS700 CS701 CS702 CS703 CS704 CS705 CS706 CS707 CS708 CS709 CS710 CS711 CS712 CS713 CS714 CS715 CS716 CS717 CS718 CS719 CS720 CS721 CS722 CS723 CS724 CS725 CS726 CS727 CS728 CS729 CS730 CS731 CS732 CS733 CS734 CS735 CS736 CS737 CS738 CS739 CS740 CS741 CS742 CS743 CS744 CS745 CS746 CS747 CS748 CS749 CS750 CS751 CS752 CS753 CS754 CS755 CS756 CS757 CS758 CS759 CS760 CS761 CS762 CS763 CS764 CS765 CS766 CS767 CS768 CS769 CS770 CS771 CS772 CS773 CS774 CS775 CS776 CS777 CS778 CS779 CS780 CS781 CS782 CS783 CS784 CS785 CS786 CS787 CS788 CS789 CS790 CS791 CS792 CS793 CS794 CS795 CS796 CS797 CS798 CS799 CS800 CS801 CS802 CS803 CS804 CS805 CS806 CS807 CS808 CS809 CS810 CS811 CS812 CS813 CS814 CS815 CS816 CS817 CS818 CS819 CS820 CS821 CS822 CS823 CS824 CS825 CS826 CS827 CS828 CS829 CS830 CS831 CS832 CS833 CS834 CS835 CS836 CS837 CS838 CS839 CS840 CS841 CS842 CS843 CS844 CS845 CS846 CS847 CS848 CS849 CS850 CS851 CS852 CS853 CS854 CS855 CS856 CS857 CS858 CS859 CS860 CS861 CS862 CS863 CS864 CS865 CS866 CS867 CS868 CS869 CS870 CS871 CS872 CS873 CS874 CS875 CS876 CS877 CS878 CS879 CS880 CS881 CS882 CS883 CS884 CS885 CS886 CS887 CS888 CS889 CS890 CS891 CS892 CS893 CS894 CS895 CS896 CS897 CS898 CS899 CS900 CS901 CS902 CS903 CS904 CS905 CS906 CS907 CS908 CS909 CS910 CS911 CS912 CS913 CS914 CS915 CS916 CS917 CS918 CS919 CS920 CS921 CS922 CS923 CS924 CS925 CS926 CS927 CS928 CS929 CS930 CS931 CS932 CS933 CS934 CS935 CS936 CS937 CS938 CS939 CS940 CS941 CS942 CS943 CS944 CS945 CS946 CS947 CS948 CS949 CS950 CS951 CS952 CS953 CS954 CS955 CS956 CS957 CS958 CS959 CS960 CS961 CS962 CS963 CS964 CS965 CS966 CS967 CS968 CS969 CS970 CS971 CS972 CS973 CS974 CS975 CS976 CS977 CS978 CS979 CS980 CS981 CS982 CS983 CS984 CS985 CS

Figure 7-2. AT73C246-EK1 Schematic - AT73C246 Page

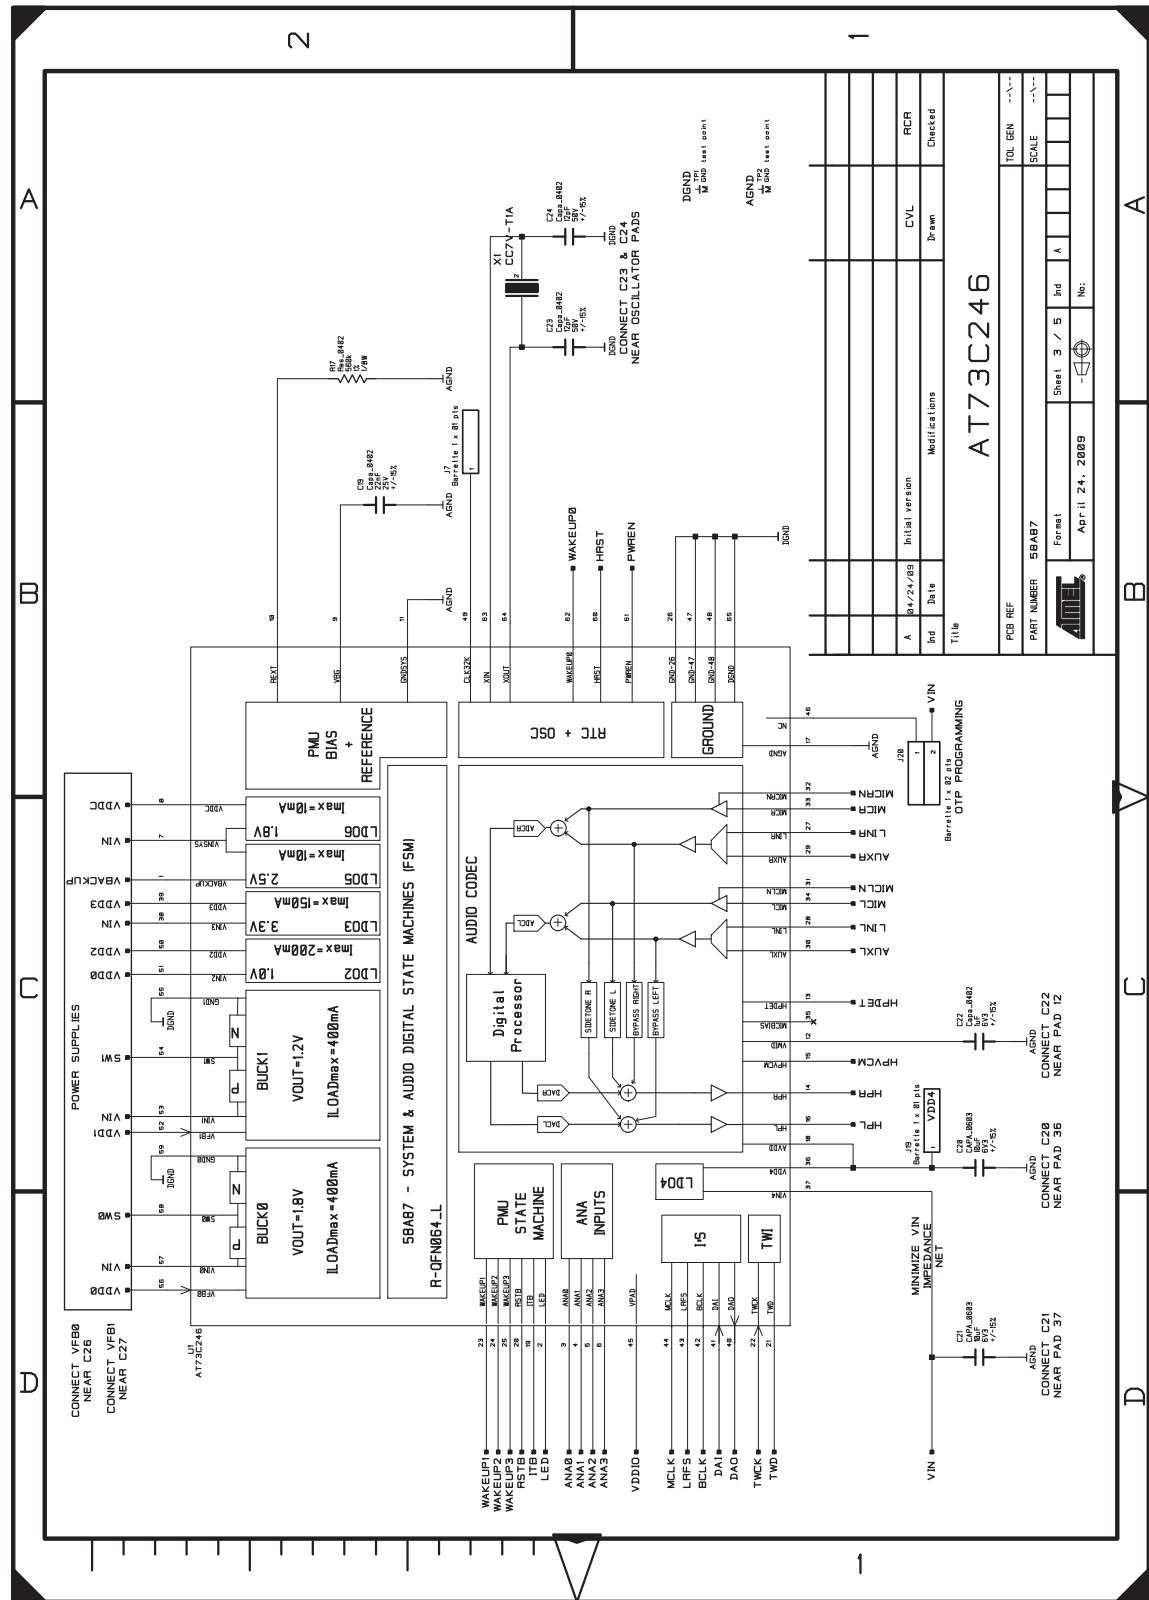


Figure 7-3. AT73C246-EK1 Schematic - Audio Interface Page

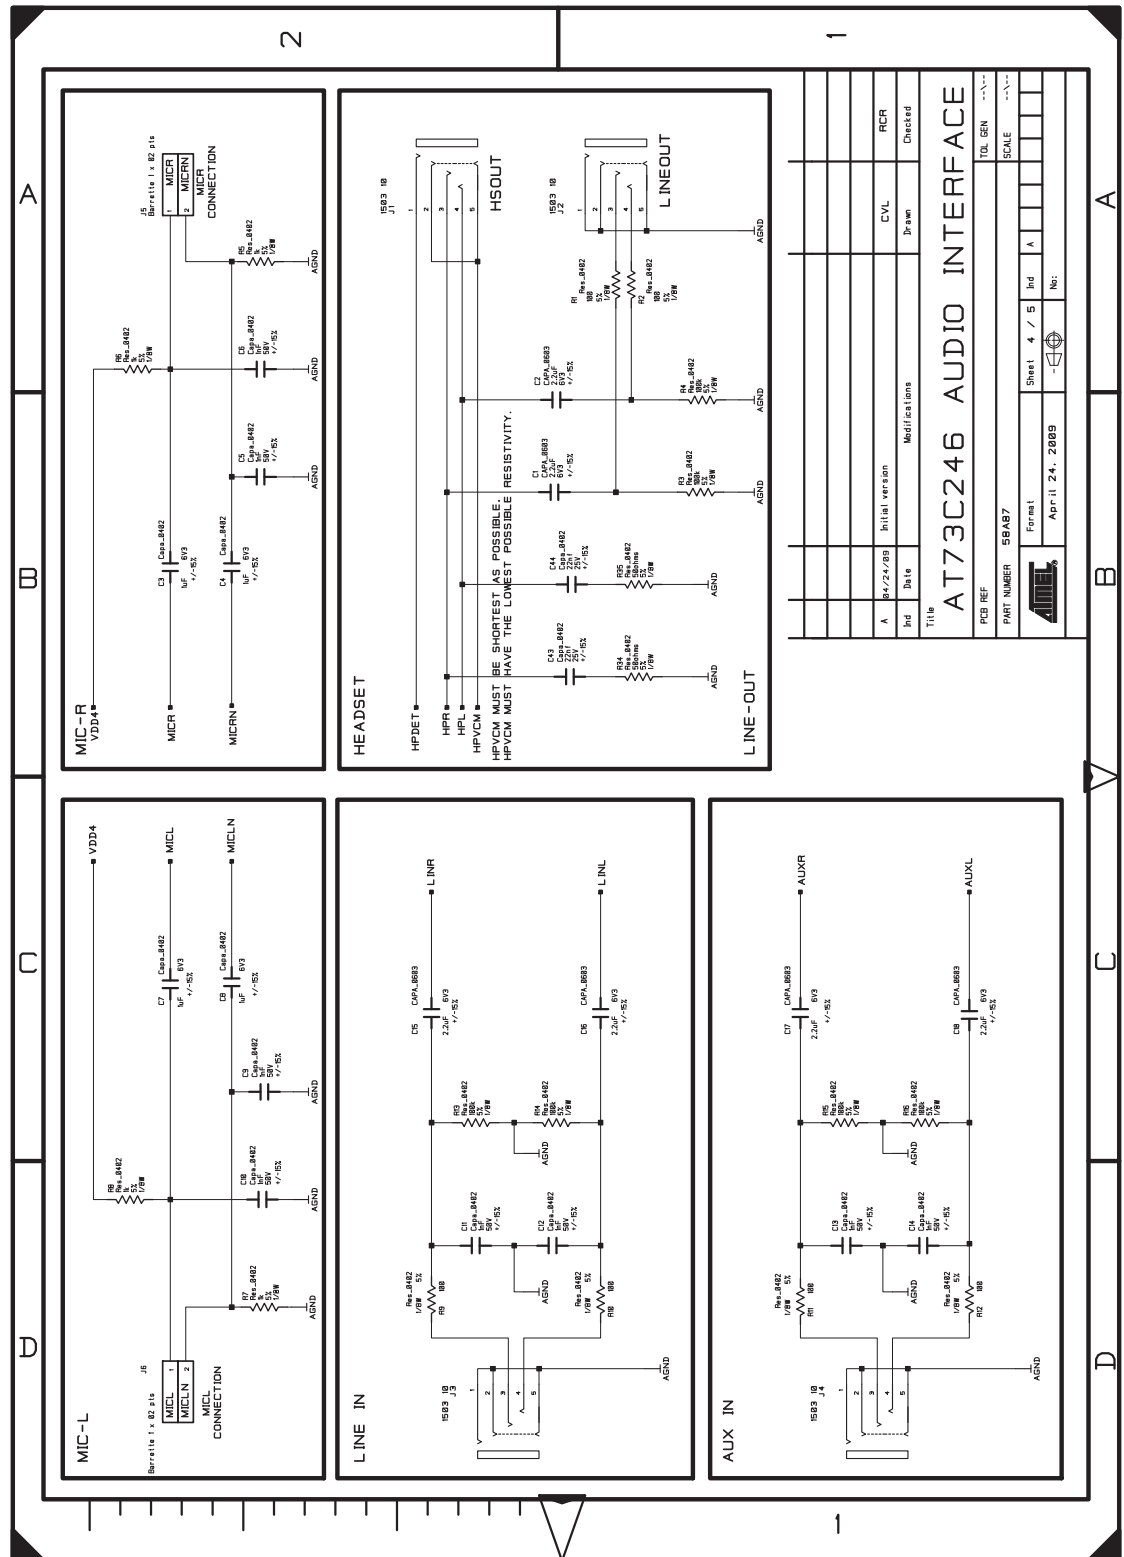


Figure 7-4. AT73C246-EK1 Schematic - Digital Interface Page


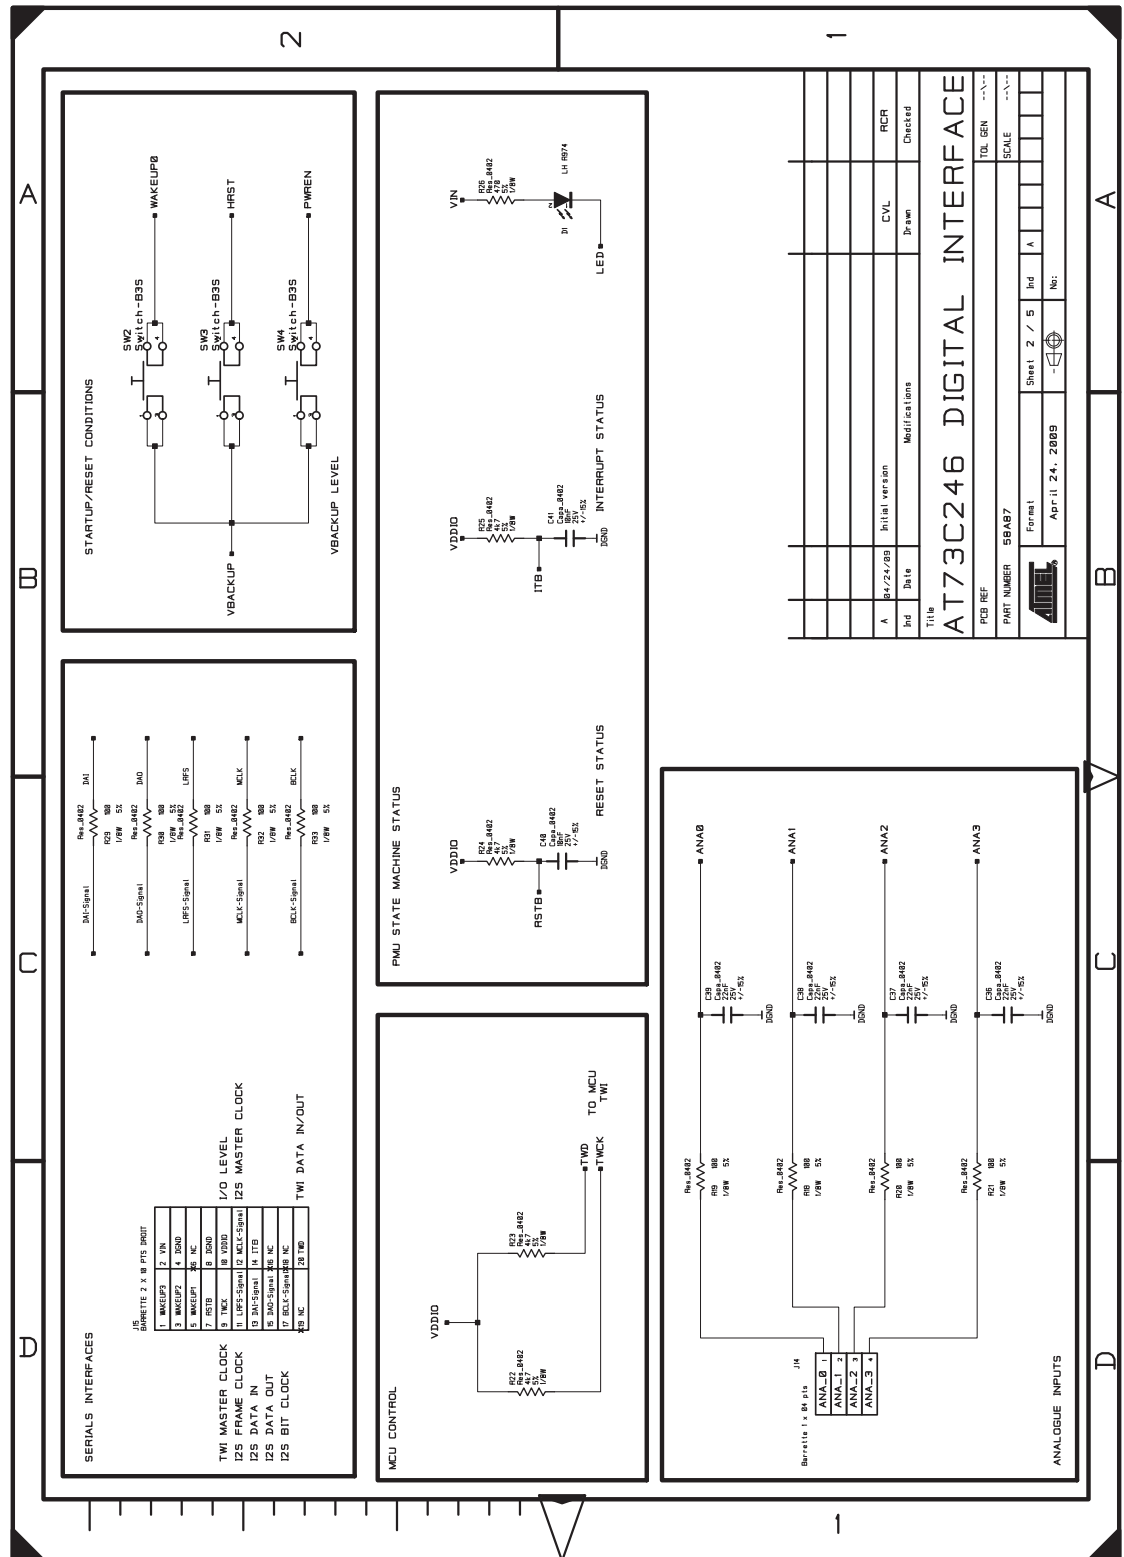


Figure 7-5. AT73C246-EK1 Schematic - Power Supply Page





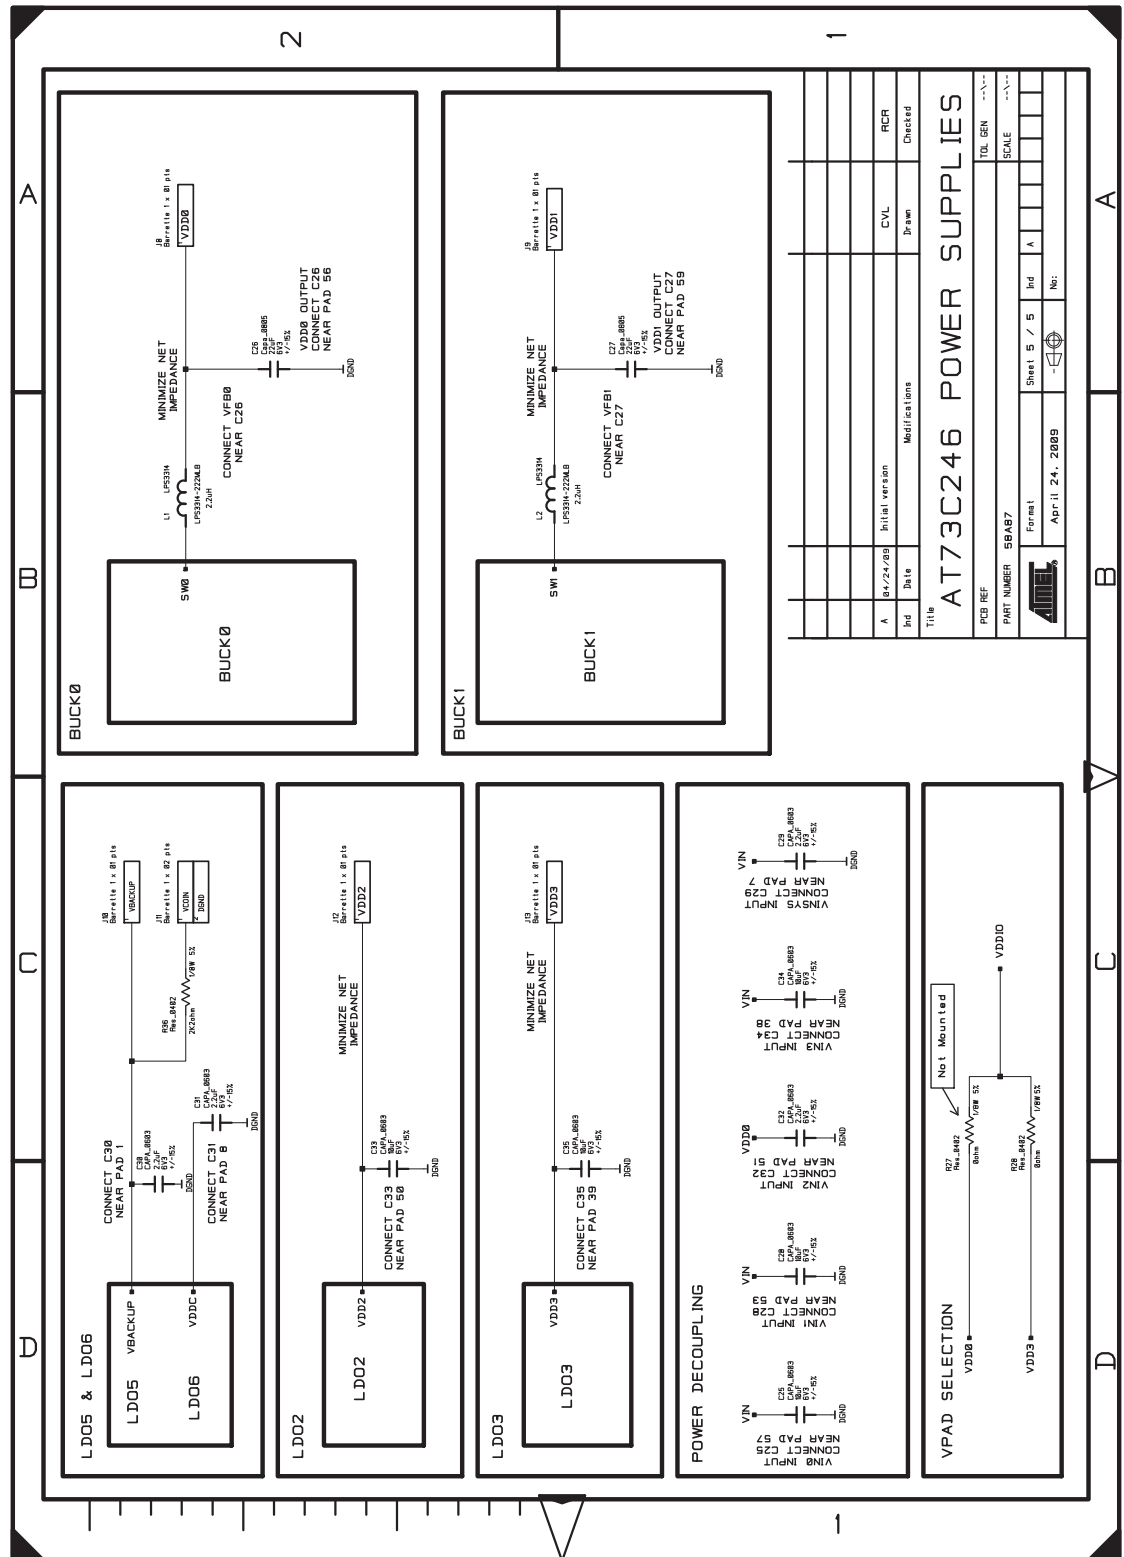

Section 8

Revision History

8.1 Revision History

Table 8-1. Revision History

Doc. Rev	Date	Comments	Change Request Ref.
11047A	08-Apr-10		





Headquarters

Atmel Corporation
2325 Orchard Parkway
San Jose, CA 95131
USA
Tel: 1(408) 441-0311
Fax: 1(408) 487-2600

International

Atmel Asia
Unit 1-5 & 16, 19/F
BEA Tower, Millennium City 5
418 Kwun Tong Road
Kwun Tong, Kowloon
Hong Kong
Tel: (852) 2245-6100
Fax: (852) 2722-1369

Atmel Europe
Le Krebs
8, Rue Jean-Pierre Timbaud
BP 309
78054 Saint-Quentin-en-
Yvelines Cedex
France
Tel: (33) 1-30-60-70-00
Fax: (33) 1-30-60-71-11

Atmel Japan
9F, Tonetsu Shinkawa Bldg.
1-24-8 Shinkawa
Chuo-ku, Tokyo 104-0033
Japan
Tel: (81) 3-3523-3551
Fax: (81) 3-3523-7581

Product Contact

Web Site
www.atmel.com
www.atmel.com/products/power-manage/default.asp

Technical Support
[Atmel techincal support](mailto:Atmel_techincal_support)

Sales Contacts
www.atmel.com/contacts/

Literature Requests
www.atmel.com/literature

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. **EXCEPT AS SET FORTH IN ATMEL'S TERMS AND CONDITIONS OF SALE LOCATED ON ATMEL'S WEB SITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.** Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

© 2010 Atmel Corporation. All rights reserved. Atmel®, logo and combinations thereof, and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

