



Premier Notebook Clip-On Camera

User's Guide

Model:IN3003CAM2



CAUTION: To use this device properly, please read
the user's guide before installation.

Tripp Lite World Headquarters
1111 W.35th Street
Chicago,IL 60609 USA
(773)869-1234
www.tripplite.com

Copyright ©Tripp Lite.All rights reserved.All trademarks are the property of
their respective owners.The policy of Tripp Lite is one of continuous improvement.
All specifications are subject to change without notice.

INSTALLATION (HOW TO SETUP PREMIER CAM)

● Driver's Installation Instruction for Windows 98/ME/2000

***NOTE:** Please Uninstall All Previous Installed Premier Cam Before Installing Tripplite Premier Cam. **DO NOT CONNECT** Tripplite Premier Cam To The Computer Until Its Driver Is Installed!

1. Insert the included CD into the CD-ROM: The Autorun Menu Window will popup, move the mouse cursor to and click on "Driver".
2. While preparing to install the driver, the Driver Setup Wizard will now being activated.
3. When the Driver Setup Wizard is activated and ready, the popup window will be idling. Click on "Next >" to continue the Installation Process.
4. When the Installation Process is completed, restart the Computer as the Driver Setup Wizard requests by Clicking on "Finish".
5. After the Driver Installation is done, it will take you back to the Autorun Menu Window. Close the Autorun Menu Window.
6. Now, Connect Tripplite CAM to an available USB Port on the back of the Computer.
7. Computer will now automatically install and ready Tripplite CAM. To verify if the Tripplite CAM is installed, Click on "Start" on the Left Bottom corner of the screen. Click on "Control Panel" >>"System" >> "Hardware" >> "Device Manager">> "Imaging Device".

● Driver Installation Instructions for Windows XP


***NOTE:** Please Uninstall All Previous Installed Premier Cam Before Installing Tripplite CAM. **DO NOT CONNECT** Tripplite CAM to The Computer Until Its Driver Is Installed!

1. Insert the included CD into the CD-ROM: The Autorun Menu Window will popup, move the mouse cursor to and click on "Driver".
2. While preparing to install the driver, the Driver Setup Wizard will now being activated.
3. When the Driver Setup Wizard is activated and ready, the popup window will be idling. Click on "Next >" to continue the Installation Process.
4. Windows XP will now popup "Found New Hardware Wizard" window. Select "Install from a list of specific location (Advanced)". Then, Click on "Next".
5. Next Screen, "Please choose your search and installation options", Click on "Don't search, I will choose the driver to install". Then Click on "Next".
6. Next Screen, "Select the device driver you want to install for this hardware", Click on "Tripplite CAM" in the frame. Then, Click on "Next".
7. Next Screen, "Please wait while the wizard installs the software...", the driver and its needed files are in process to be installed.
8. When the Installation Process is completed, Restart the Computer as the Driver Setup Wizard requests by Clicking on "Finish".
9. After the Driver Installation is done, it will take you back to the Autorun Menu Window. Close the Autorun Menu Window.

USER GUIDE

HOW TO OPERATE CAM in Win 98/ME/2000/XP

1. To Turn On the Tripplite CAM, Click on **"Start"** from the Taskbar. Choose **"Programs"**. Select **"Tripplite CAM"**. Choose **"AMCAP"**.
2. In AMCAP CAM Program, Click on **"Options"** and Select **"Preview"**. Now, the CAM is ready to work!

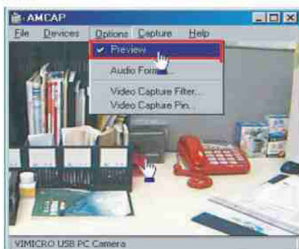

3. For the Best Video Quality, Under **"Option"**, Choose **"Video Capture Filter"**, and set Refreshing Rate to **"60Hz"**.
4. To Capture Instant Image or Video, Click on **"Capture"** and Choose the function as desired. Follow the on screen steps to set an Instant Image and or Video Folder where you may save the Captured file.

USB PC Camera



Specification

Image Sensor	1/4" color progressive CMOS, 640×480 pixels
Focus Range	10cm to infinity
Operating System	Microsoft Windows 98/ME/2000/XP
Video Capture Res.	640×480, 320×240, 352×288
Snap Shot Button	Software
PC Interface	USB
Power	Powered from USB port