

PLCC Extractor



- A spring assisted clip carrier extraction tool, specially designed for the safe removal of PLCCs from their sockets without damage to component parts