

## 943 Series Ultrasonic Distance Sensors

 
# CE




The new 943 series industrial sensors are the latest addition to our product range. They have improved scanning ranges, remote teach in of the switching or analog outputs, as well as new advanced features, such as window and hysteresis modes.

### M30

#### CONNECTOR




#### CABLE

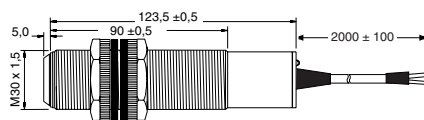


### M18
 
#### CONNECTOR



#### CABLE

 

### M18/M30

**Termination:** Connector M12 x 1  
Cable Prelead 2 m

## OPTIONS AND ORDER GUIDE

### 2 switching outputs PNP NO and NPN NO

**Beam angle:** 8°  
**Supply voltage:** 12 to 30 V  
**Sealing:** IP67

### M30

**Housing:** M30 x 1,5 mm plastic (PBTB)  
**Max. sensing distance:** 3500 mm  
**Min. sensing distance:** 300 mm  
**Switching frequency:** 1.0 Hz  
**Repeatability:** 0,2 % or 2 mm

| OUTPUT       | TERMINATION | REFERENCE           |
|--------------|-------------|---------------------|
| PNP, 2 NO/NC | Connector   | 943-T4V-2D-001-130E |
| PNP, 2 NO/NC | Cable       | 943-T4Y-2D-001-130E |
| NPN, 2 NO/NC | Connector   | 943-T4V-2D-002-130E |
| NPN, 2 NO/NC | Cable       | 943-T4Y-2D-002-130E |

### M18

**Housing:** M18 x 1,0 mm plastic (PBTB)  
**Max. sensing distance:** 2000 mm  
**Min. sensing distance:** 200 mm  
**Switching frequency:** 1.2 Hz  
**Repeatability:** 0,2 % or 2 mm

| OUTPUT       | TERMINATION | REFERENCE           |
|--------------|-------------|---------------------|
| PNP, 2 NO/NC | Connector   | 943-F4V-2D-001-180E |
| PNP, 2 NO/NC | Cable       | 943-F4Y-2D-001-180E |
| NPN, 2 NO/NC | Connector   | 943-F4V-2D-002-180E |
| NPN, 2 NO/NC | Cable       | 943-F4Y-2D-002-180E |

**Max. sensing distance:** 800 mm  
**Min. sensing distance:** 100 mm  
**Switching frequency:** 4.7 Hz  
**Repeatability:** 0,2 % or 1 mm

| OUTPUT       | TERMINATION | REFERENCE           |
|--------------|-------------|---------------------|
| PNP, 2 NO/NC | Connector   | 943-F4V-2D-001-300E |
| PNP, 2 NO/NC | Cable       | 943-F4Y-2D-001-300E |
| NPN, 2 NO/NC | Connector   | 943-F4V-2D-002-300E |
| NPN, 2 NO/NC | Cable       | 943-F4Y-2D-002-300E |

**Max. sensing distance:** 500 mm  
**Min. sensing distance:** 60 mm  
**Switching frequency:** 4.7 Hz  
**Repeatability:** 0,2 % or 1 mm

| OUTPUT       | TERMINATION | REFERENCE           |
|--------------|-------------|---------------------|
| PNP, 2 NO/NC | Connector   | 943-F4V-2D-001-330E |
| PNP, 2 NO/NC | Cable       | 943-F4Y-2D-001-330E |
| NPN, 2 NO/NC | Connector   | 943-F4V-2D-002-330E |
| NPN, 2 NO/NC | Cable       | 943-F4Y-2D-002-330E |

### Analogue voltage output 0-10 V and 4-20 mA

**Beam angle:** 8°  
**Supply voltage:** 15 to 30 V  
**Sealing:** IP67

### M30

**Housing:** M30 x 1,5 mm plastic (PBTB)  
**Max. sensing distance:** 3500 mm  
**Min. sensing distance:** 300 mm  
**Response time:** 400 ms  
**Repeatability:** 0,2 % or ±2 mm

| OUTPUT  | TERMINATION | REFERENCE           |
|---------|-------------|---------------------|
| 0-10 V  | Connector   | 943-T4V-2D-1C0-130E |
| 0-10 V  | Cable       | 943-T4Y-2D-1C0-130E |
| 4-10 mA | Connector   | 943-T4V-2D-1D0-130E |
| 4-20 mA | Cable       | 943-T4Y-2D-1D0-130E |

### M18

**Housing:** M18 x 1,0 mm plastic (PBTB)  
**Max. sensing distance:** 2000 mm  
**Min. sensing distance:** 200 mm  
**Switching frequency:** 250 ms  
**Repeatability:** 0,2 % or ±2 mm

| OUTPUT  | TERMINATION | REFERENCE           |
|---------|-------------|---------------------|
| 0-10 V  | Connector   | 943-F4V-2D-1C0-180E |
| 0-10 V  | Cable       | 943-F4Y-2D-1C0-180E |
| 4-10 mA | Connector   | 943-F4V-2D-1D0-180E |
| 4-20 mA | Cable       | 943-F4Y-2D-1D0-180E |

**Max. sensing distance:** 800 mm  
**Min. sensing distance:** 100 mm  
**Switching frequency:** 100 ms  
**Repeatability:** 0,2 % or ±1 mm

| OUTPUT  | TERMINATION | REFERENCE           |
|---------|-------------|---------------------|
| 0-10 V  | Connector   | 943-F4V-2D-1C0-300E |
| 0-10 V  | Cable       | 943-F4Y-2D-1C0-300E |
| 4-10 mA | Connector   | 943-F4V-2D-1D0-300E |
| 4-20 mA | Cable       | 943-F4Y-2D-1D0-300E |

**Max. sensing distance:** 500 mm  
**Min. sensing distance:** 60 mm  
**Switching frequency:** 100 ms  
**Repeatability:** 0,2 % or ±1 mm

| OUTPUT  | TERMINATION | REFERENCE           |
|---------|-------------|---------------------|
| 0-10 V  | Connector   | 943-F4V-2D-1C0-330E |
| 0-10 V  | Cable       | 943-F4Y-2D-1C0-330E |
| 4-10 mA | Connector   | 943-F4V-2D-1D0-330E |
| 4-20 mA | Cable       | 943-F4Y-2D-1D0-330E |



### WARNING

#### MISUSE OF DOCUMENTATION

- The information presented in this product sheet (or catalogue) is for reference only. DO NOT USE this document as product installation information.
  - Complete installation, operation and maintenance information is provided in the instructions supplied with each product.
- Failure to comply with these instructions could result in death or serious injury.**



### WARNING

#### PERSONAL INJURY

DO NOT USE these products as safety or emergency stop devices, or in any other application where failure of the product could result in personal injury.  
**Failure to comply with these instructions could result in death or serious injury.**

## Warranty/Remedy

Honeywell warrants goods of its manufacture as being free of defective material and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during that period of coverage, Honeywell will repair or replace without charge those items it finds defective. **The foregoing is Buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose.**

While we provide application assistance, personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change at any time without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

## Sales and Service

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorised Distributor, contact your local sales office or:

INTERNET: [www.honeywell.com/sensing](http://www.honeywell.com/sensing)

E-mail: [info.sc@honeywell.com](mailto:info.sc@honeywell.com)

### ASIA PACIFIC

#### Control Products

##### Asia Pacific Headquarters

Phone: +(65) 6355-2828

FAX: +(65) 6445-3033

#### Australia

Honeywell Limited

Phone: +(61) 2-9370-4500

FAX: +(61) 2-9370-4525

Toll Free 1300-36-39-36

Toll Free Fax: 1300-36-04-70

#### China – PRC – Beijing

Honeywell China Inc.

Phone: +(86-10) 8458-3280

FAX: +(86-10) 8458-3102

#### China – PRC – Shanghai

Honeywell China Inc.

Phone: +(86-21) 6237-0237

FAX: +(86-21) 6237-1237

#### China - Hong Kong S.A.R.

Honeywell Ltd.

Phone: +(852) 2953-6412

FAX: +(852) 2953-6767

#### Indonesia

Honeywell Indonesia Pte Ltd.

Phone: +(62) 21-535-8833

FAX: +(62) 21-5367 1008

#### India

TATA Honeywell Ltd.

Phone: +(91) 20 6870 445/446

FAX: +(91) 20 681 2243/ 687 5992

#### Japan

Honeywell Inc

Phone: +(81) 3 5440 1425

FAX: +(81) 3 5440 1368

#### South Korea

Honeywell Korea Co Ltd

Phone: +(822) 799-6167

FAX: +(822) 792-9013

#### Malaysia

Honeywell Engineering Sdn Bhd

Phone: +(60-3) 7958-4988

FAX: +(60-3) 7958-8922

#### New Zealand

Honeywell Limited

Phone: +(64-9) 623-5050

FAX: +(64-9) 623-5060

Toll Free (0800) 202-088

#### Philippines

Honeywell Systems

(Philippines) Inc.

Phone: +(63-2) 636-1661/1662

FAX: +(63-2) 638-4013

#### Singapore

Honeywell South East Asia

Phone: +(65) 6355-2828

FAX: +(65) 6445-3033

#### Thailand

Honeywell Systems (Thailand)

Ltd.

Phone: +(662) 693-3099

FAX: +(662) 693-3085

#### Taiwan R.O.C.

Honeywell Taiwan Ltd.

Phone: +(886-2) 2245-1000

FAX: +(886-2) 2245-3241

### EUROPE

#### Austria

Honeywell Austria GmbH

Phone: +(43) 1 727 80 366/246

FAX: +(43) 1 727 80 337

#### Belgium

Honeywell SA/NV

Phone: +(32) 2 728 2522

FAX: +(32) 2 728 2502

#### Bulgaria

Honeywell EOOD

Phone: +(359) 2 979 00 23

FAX: +(359) 2 979 00 24

#### Czech Republic

Honeywell spol. s.r.o.

Phone: +(420) 242 442 111

FAX: +(420) 242 442 182

#### Denmark

Honeywell A/S

Phone: +(45) 39 55 55 55

FAX: +(45) 39 55 55 58

#### Finland

Honeywell OY

Phone: +(358) 9 3480101

FAX: +(358) 9 34801375

#### France

Honeywell SA

Phone: +(33) 1 60 19 80 40

FAX: +(33) 1 60 19 81 73

#### Germany

Honeywell AG

Phone: +(49) 69 8064 444

FAX: +(49) 69 8064 442

#### Hungary

Honeywell Kft.

Phone: +(361) 451 43 00

FAX: +(361) 451 43 43

#### Italy

Honeywell S.p.A.

Phone: +(39) 02 92146 450/456

FAX: +(39) 02 92146 490

#### The Netherlands

Honeywell B.V.

Phone: +(31) 20 565 69 11

FAX: +(31) 20 565 66 00

#### Norway

Honeywell A/S

Phone: +(47) 66 76 20 00

FAX: +(47) 66 76 20 90

#### Poland

Honeywell Sp. zo.o

Phone: +(48) 606 09 64

FAX: +(48) 606 09 01

#### Portugal

Honeywell Portugal Lda

Phone: +(351 21) 424 50 00

FAX: +(351 21) 424 50 99

#### Romania

Honeywell Bucharest

Phone: +(40) 21 231 64 37/38

FAX: +(40) 21 231 6439

#### Commonwealth of Independent States (CIS)

Z.A.O. Honeywell

Phone: +(7 095) 796 98 36

FAX: +(7 095) 797 99 06

#### Slovak Republic

Honeywell s.r.o.

Phone: +(421 2) 58 247 403

FAX: +(421 2) 58 247 415

#### South Africa (Republic of)

Honeywell Southern Africa

Honeywell S.A. Pty. Ltd

Phone: +(27) 11 695 8000

FAX: +(27) 11 805 1504

#### Spain

Honeywell S.A.

Phone: +(34) 91 313 6100

FAX: +(34) 91 313 6129

#### Sweden

Honeywell AB

Phone: +(46) 8 775 55 00

FAX: +(46) 8 775 56 00

#### Switzerland

Honeywell AG

Phone: +(41) 1 855 24 40

FAX: +(41) 1 855 24 45

#### Turkey

Honeywell Turkey A.S.

Phone: +(90) 216 5756620

FAX: +(90) 216 5756637

#### Ukraine

Honeywell

Phone: +(380) 44 201 44 74

FAX: +(380) 44 201 44 75

#### United Kingdom

Honeywell Control Systems

Ltd

Phone: +(44) 1698 481481

FAX: +(44) 1698 481676

#### Mediterranean & African Distributors

Honeywell SpA

Phone: +(39) 2 921 46 232

FAX: +(39) 2 921 46 233

#### Middle East Headquarters

Honeywell Middle East Ltd.

Phone: +(9712) 443 2119

FAX: +(9712) 443 2536

### NORTH AMERICA

#### USA/Canada

Honeywell

Sensing and Control

Phone: 1-800-537-6945

1-815-235-6847

FAX: 1-815-235-6545

E-mail:

[info.sc@honeywell.com](mailto:info.sc@honeywell.com)

### LATIN AMERICA

#### Honeywell Latin America Headquarters

Phone: 1-305-805-8188

FAX: 1-305-883-8257

#### Argentina

Honeywell S.A.I.C.

Phone: +(54-11) 4383-3627

FAX: +(54-11) 4325-6470

#### Brazil

Honeywell Do Brasil & Cia

Phone: +(55-11) 4166-1900

FAX: +(55-11) 4166-1901

#### Chile

Honeywell Chile, S.A.

Phone: +(56-2) 55 5081-8400

FAX: +(56-2) 425-8410

#### Mexico

Honeywell S.A. de C.V.

Phone: +(52) 55 5081-0200

FAX: +(52) 55 5081-0202

#### Puerto Rico, Caribbean

Honeywell Inc.

Phone: +(787) 792-7075

FAX: +(787) 792-0053

#### Venezuela

Honeywell C.A.

Phone: +(58-212) 273-0511

FAX: +(58-212) 273-0599

This publication does not constitute a contract between Honeywell and its customers. The contents may be changed at any time without notice. It is the customer's responsibility to ensure safe installation and operation of the products. Detailed mounting drawings of all products illustrated are available on request.

Copyright 2004 Honeywell International Inc. All Rights Reserved.

# Honeywell

## Sensing and Control

[www.honeywell.com/sensing](http://www.honeywell.com/sensing)

Honeywell Control Systems Ltd

Newhouse Industrial Estate

Motherwell, Lanarkshire ML1 5SB

Scotland, UK