

Auxiliary contact blocks

A/E/L9...A/E/L40; A/E/F50...AF2050; A/E/F50N2... AF1650N8



CA5-10

Ordering details

For contactors	Number of blocks (1)	Auxiliary contacts	Catalog number
		   	

Front-mounted instantaneous auxiliary contact blocks, 1-pole

A9...A40, T/AL9...T/AL40	1-5	1 0 - -	CA5-10
A45 ... A110	1-6	0 1 - -	CA5-01
AF45, AF110	1-6	- - 1 0	CC5-10
AE45 ... AE75, TAE45 ... TAE75	1-6	- - 0 1	CC5-01



CA5-40E

Front-mounted instantaneous auxiliary contact blocks, 4-pole

A45 ... A110	1	4 0 - -	CA5-40E
AE45 ... AE75		3 1 - -	CA5-31E
AF45 ... AF110		2 2 - -	CA5-22E
TAE45 ... TAE75		0 4 - -	CA5-04E
		1 1 1 1	CA5-11/11E
A40-30-10	1	3 1 - -	CA5-31M
AL40-30-10		2 2 - -	CA5-22M
TAL40-30-10		1 3 - -	CA5-13M
		0 4 - -	CA5-04M
		1 1 1 1	CA5-11/11M
A40-30-10	1	4 0 - -	CA5-40U
AL40-30-10		3 1 - -	CA5-31U
TAL40-30-10		2 2 - -	CA5-22U
		0 4 - -	CA5-04U



CAL5-11

Side-mounted instantaneous auxiliary contact blocks, 2-pole

A9...A75	1-2	1 1 - -	CAL5-11
T/AL9...T/AL40	1		
AE9...T/AE75	1		
AF45 ... AF75	1-2		
UA16 ... UA75	1-2		
A95 ... A300	1-2	1 1 - -	CAL18-11
AF95 ... AF2050			
UA95, UA110			
A145 ... A300	1-2(2)	1 1 - -	CAL18-11B
AF145 ... AF2050		1 1 - -	

(1) For each contactor type, refer to "Accessory fitting details" table.

(2) 2 blocks CAL18-11 + 2 blocks CAL18-11B.

Note:

- The front-mounted auxiliary contact blocks provided for the A... contactors can be used for the UA..., GA... and GAE... types
- The CAL... auxiliary contact blocks can be used for GA... contactors:
 - GA75-10-00: 2 x CAL5-11 blocks
 - GA75-10-11: 1 x CAL5-11 block
 - GAE75-10-00: 1 x CAL5-11 block
 - GAE75-10-11: no add-on block.
- The CAL... auxiliary contact blocks can be used for UA...RA contactors. See "Accessory fitting details" for this contactor type.



CAL18-11

Low-energy side-mounted contact blocks, 1-pole

A145...A300	1-2	1 0 - -	CEL18-10
AF145...AF2050	1-2	0 1 - -	CEL18-01