

## Accessories


### Electrical T1-T6

Acc.


#### Auxiliary Contacts - AUX <sup>(1)</sup>

Auxiliary contacts are for indication of the circuit breaker open-closed. Bell alarm contacts (BA) can be used to indicate circuit breaker tripped.

Frame Size	Factory Installation		Field Installation	
	Part Number Suffix	List Price Adder	Part Number	List Price
T1-T2-T3 <sup>(2)</sup>	1 AUX "C" + 1 BA "C" 250VAC/DC 3 AUX "C" + 1 BA "C" 250VAC/DC	A A3	KT3AS KT3AS3	
T2 <sup>(3)</sup>	2 AUX "C" + 1 BA "C" PR221DS 1 AUX "C" + 1 BA "C" + 1S51 "C" PR221DS	AE AE2	KT2AS-E KT2AS-E2	
Ts3	2 AUX "C" 250VAC/DC 1 AUX "C" + 1 BA "C" 250VAC/DC	A BA	KTs3AS KTs3BA	
T4-T5-T6	1 AUX "C" + 1 BA "C" 250VAC/DC 2 AUX "C" 400VAC 3 AUX "C" + 1 BA "C" 250VAC/DC 3 AUX "C" + 1 BA "C" 24VDC	A A2 A3 A3L	KT6AS KT6AS2 KT6AS3 KT6AS3L	

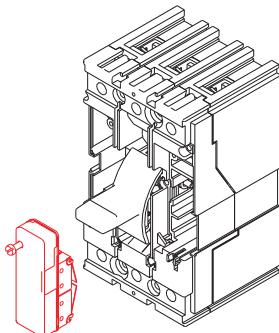

T1 with K3TAS

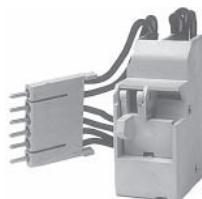

KTs3AS

#### Auxiliary Contact Connector (Required for Ts3) <sup>(4)</sup>

Ts3	Fixed Plug-In / Drawout	Not required for factory install Not required for factory installed	C-AB KTs3C-ABP	
-----	----------------------------	--	-------------------	--

(1) Add suffix to circuit breaker part number. See p.4 for more details.

(2) Not compatible for T2 with PR221DS trip unit.

(3) For installation on T2 with PR221DS electronic trip unit

(4) Must be ordered separately for field installation.