



# Core429 Development Kit Quickstart Card

## Kit Contents – CORE429-DEV-KIT-2 (RoHS-compliant)

Quantity	Description
1	CORE429-SA: Core429 Daughter Card
1	IP-DC-SA: IP Daughter Card
1	<ul> <li>M1AFS-ADV-DEV-KIT-PWR includes:</li> <li>Fusion Advanced Development Board with ARM® Cortex<sup>TM</sup>-M1-enabled M1AFS1500-FGG484</li> <li>Low-cost programming stick (LCPS)</li> <li>2 mini USB cables</li> <li>Two 9 V power supplies</li> </ul>
1	CORE429-RS232-CABLE: Core429 loopback cable

The Core429 Development Kit enables avionics designers to evaluate the functionality of Actel's Core429 with a full development kit that includes ARINC 429 example software, Core429 programming files, ARINC 429 physical connections, and full user documentation.

## Software and Licensing

Download and install the latest releases of Actel Libero® Integrated Design Environment (IDE) and SoftConsole from the Actel website (www.actel.com). In order to design with a Cortex-M1–enabled device, you should install both the Libero IDE and SoftConsole tools. SoftConsole is used for programming and debug of embedded processor designs.


Software releases: www.actel.com/download/software/libero

### **Documentation Resources**

For further kit information, including user's guide, tutorial, and full design examples, refer to the Core429 Development Kit page:

www.actel.com/products/hardware/devkits\_boards/core429\_fadk.aspx

#### Core429 Development Kit Quickstart Card

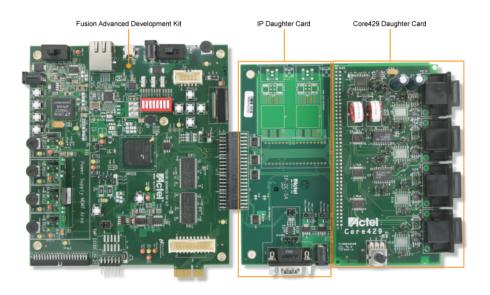

## **Technical Support and Contacts**

Technical support is available online at www.actel.com/support, by email at tech@actel.com, or by phone:

Phone (NA): 800.262.1060

Phone (Int'l): +1 650.318.4460

Actel Sales offices, including Representatives and Distributors, are located worldwide. To find your local representative go to www.actel.com/company/contact.