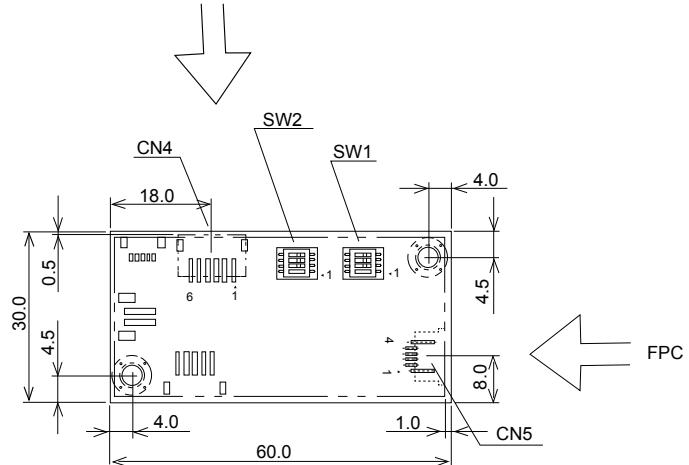
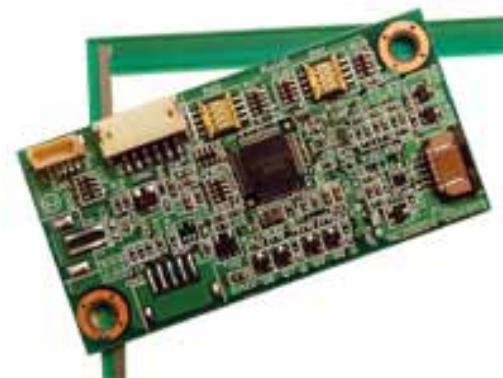


DUAL-TOUCH CONTROL BOARD: 4-WIRE USB

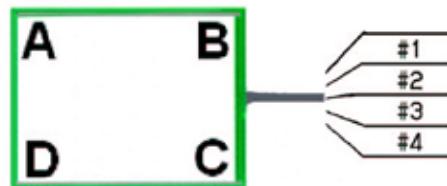
NC01850-B045RS Dual-Touch (2-finger) Control Board Quick Reference

4-Wire Resistive Touch Panels



■ FEATURES

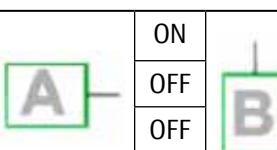
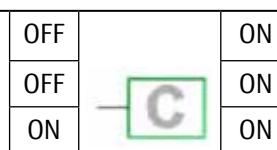
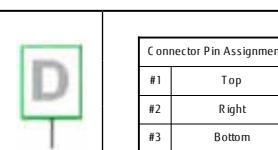
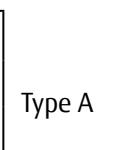
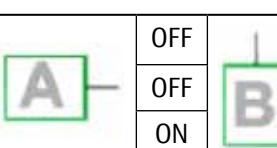
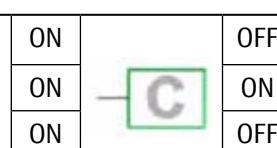
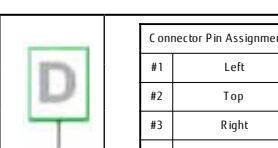
- Multi-touch functionality with 2 fingers: pinch, expand, rotate, flick
- Use with Fujitsu Feather Touch 4-wire resistive touch panel
- High quality and reliability
- USB 2.0 bus powered interface for direct connection
- Switch selectable origin point
- RoHS compliant



Origin (0,0) Point

■ SWITCH SETTINGS

SWITCH 1

SW1-1	Orientation mode selection switches	OFF		ON		OFF		ON		<table border="1"> <tr><th colspan="2">Connector Pin Assignment</th></tr> <tr><td>#1</td><td>Top</td></tr> <tr><td>#2</td><td>Right</td></tr> <tr><td>#3</td><td>Bottom</td></tr> <tr><td>#4</td><td>Left</td></tr> </table>	Connector Pin Assignment		#1	Top	#2	Right	#3	Bottom	#4	Left
Connector Pin Assignment																				
#1	Top																			
#2	Right																			
#3	Bottom																			
#4	Left																			
SW1-2	ON	OFF	OFF	ON																
SW1-3	OFF	OFF	ON	ON																
SW1-4	Reserved	OFF	OFF	OFF																
SW1-1	Orientation mode selection switches	ON		OFF		ON		OFF	<table border="1"> <tr><th colspan="2">Connector Pin Assignment</th></tr> <tr><td>#1</td><td>Left</td></tr> <tr><td>#2</td><td>Top</td></tr> <tr><td>#3</td><td>Right</td></tr> <tr><td>#4</td><td>Bottom</td></tr> </table>	Connector Pin Assignment		#1	Left	#2	Top	#3	Right	#4	Bottom	
Connector Pin Assignment																				
#1	Left																			
#2	Top																			
#3	Right																			
#4	Bottom																			
SW1-2	OFF	OFF	ON	ON																
SW1-3	OFF	ON	ON	OFF																
SW1-4	Reserved	OFF	OFF	OFF																

Notes:

Connector Pin Assignment listed on individual touch panel drawings.

USB 4 -Wire Control Board

SWITCH 2

SW2-1	Reserved	ON		ON	ON	ON	ON	ON	ON	Connector Pin Assignment #1 Top #2 Right #3 Bottom #4 Left
SW2-2	Dual/single touch mode select	ON		ON	ON	ON	ON	ON	ON	
SW2-3	Digitizer/mouse mode select	ON		ON	ON	ON	ON	ON	ON	
SW2-4	Reserved	ON		ON	ON	ON	ON	ON	ON	

Type A

SW2-1	Reserved	ON		ON	ON	ON	ON	ON	ON	Connector Pin Assignment #1 Top #2 Right #3 Bottom #4 Left
SW2-2	Dual/single touch mode select	ON		ON	ON	ON	ON	ON	ON	
SW2-3	Digitizer/mouse mode select	ON		ON	ON	ON	ON	ON	ON	
SW2-4	Reserved	ON		ON	ON	ON	ON	ON	ON	

Type B

■ CONSTRUCTION

Specification Item		NC01850-B045RS 4-Wire Dual-Touch Control Board								
Mechanical	Size / Weight	60mm x 30mm / 25 grams								
Electrical	Supply Voltage (min./max.)	Vcc 4.5 / 5.5 V USB bus powered								
	Operating Current (detect)	20mA @ Vcc 5.0V and 25°C								
	Sleep Mode Current	24 microAmps @ Vcc. 5.0V and 25°C								
Environment	Operating Temperature	-5°C to +60°C								
	Storage Temperature	-30°C to +70°C								
	Humidity	20% RH to 85% RH at 38°C maximum wet bulb temperature								

■ TOUCH PANEL CONNECTION CN5 (FCI: SFW4R-1STAЕ1-LF)

■ INTERFACE CONNECTION CN4 (JST S6B-ZR-SM4 (LF) (SN))

1.	+5V (Vcc)	3.	D+ (Signal)	5.	Frame ground
2.	D- (Signal)	4.	Ground (Vss)	6.	N.C.

Complete specification document is available on request for customers with whom we have an approved NDA in place.

Fujitsu Components International Headquarter Offices

Japan

Fujitsu Component Limited
Gotanda-Chuo Building
3-5, Higashigotanda 2-chome, Shinagawa-ku
Tokyo 141, Japan
Tel: (81-3) 5449-7010 / Fax: (81-3) 5449-2626
Email: promothq@fcl.fujitsu.com
Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc.
250 E. Caribbean Drive
Sunnyvale, CA 94089 U.S.A.
Tel: (1-408) 745-4900 / Fax: (1-408) 745-4970
Email: components@us.fujitsu.com
Web: http://us.fujitsu.com/components/

Europe

Fujitsu Components Europe B.V.
Diamantlaan 25
2132 WV Hoofddorp, Netherlands
Tel: (31-23) 5560910 / Fax: (31-23) 5560950
Email: info@fceu.fujitsu.com
Web: emea.fujitsu.com/components/

Asia Pacific

Fujitsu Components Asia Ltd.
102E Pasir Panjang Road
#01-01 Citilink Warehouse Complex
Singapore 118529
Tel: (65) 6375-8560 / Fax: (65) 6273-3021
Email: fcsl@fcal.fujitsu.com
Web: http://www.fujitsu.com/sg/services/micro/components/