



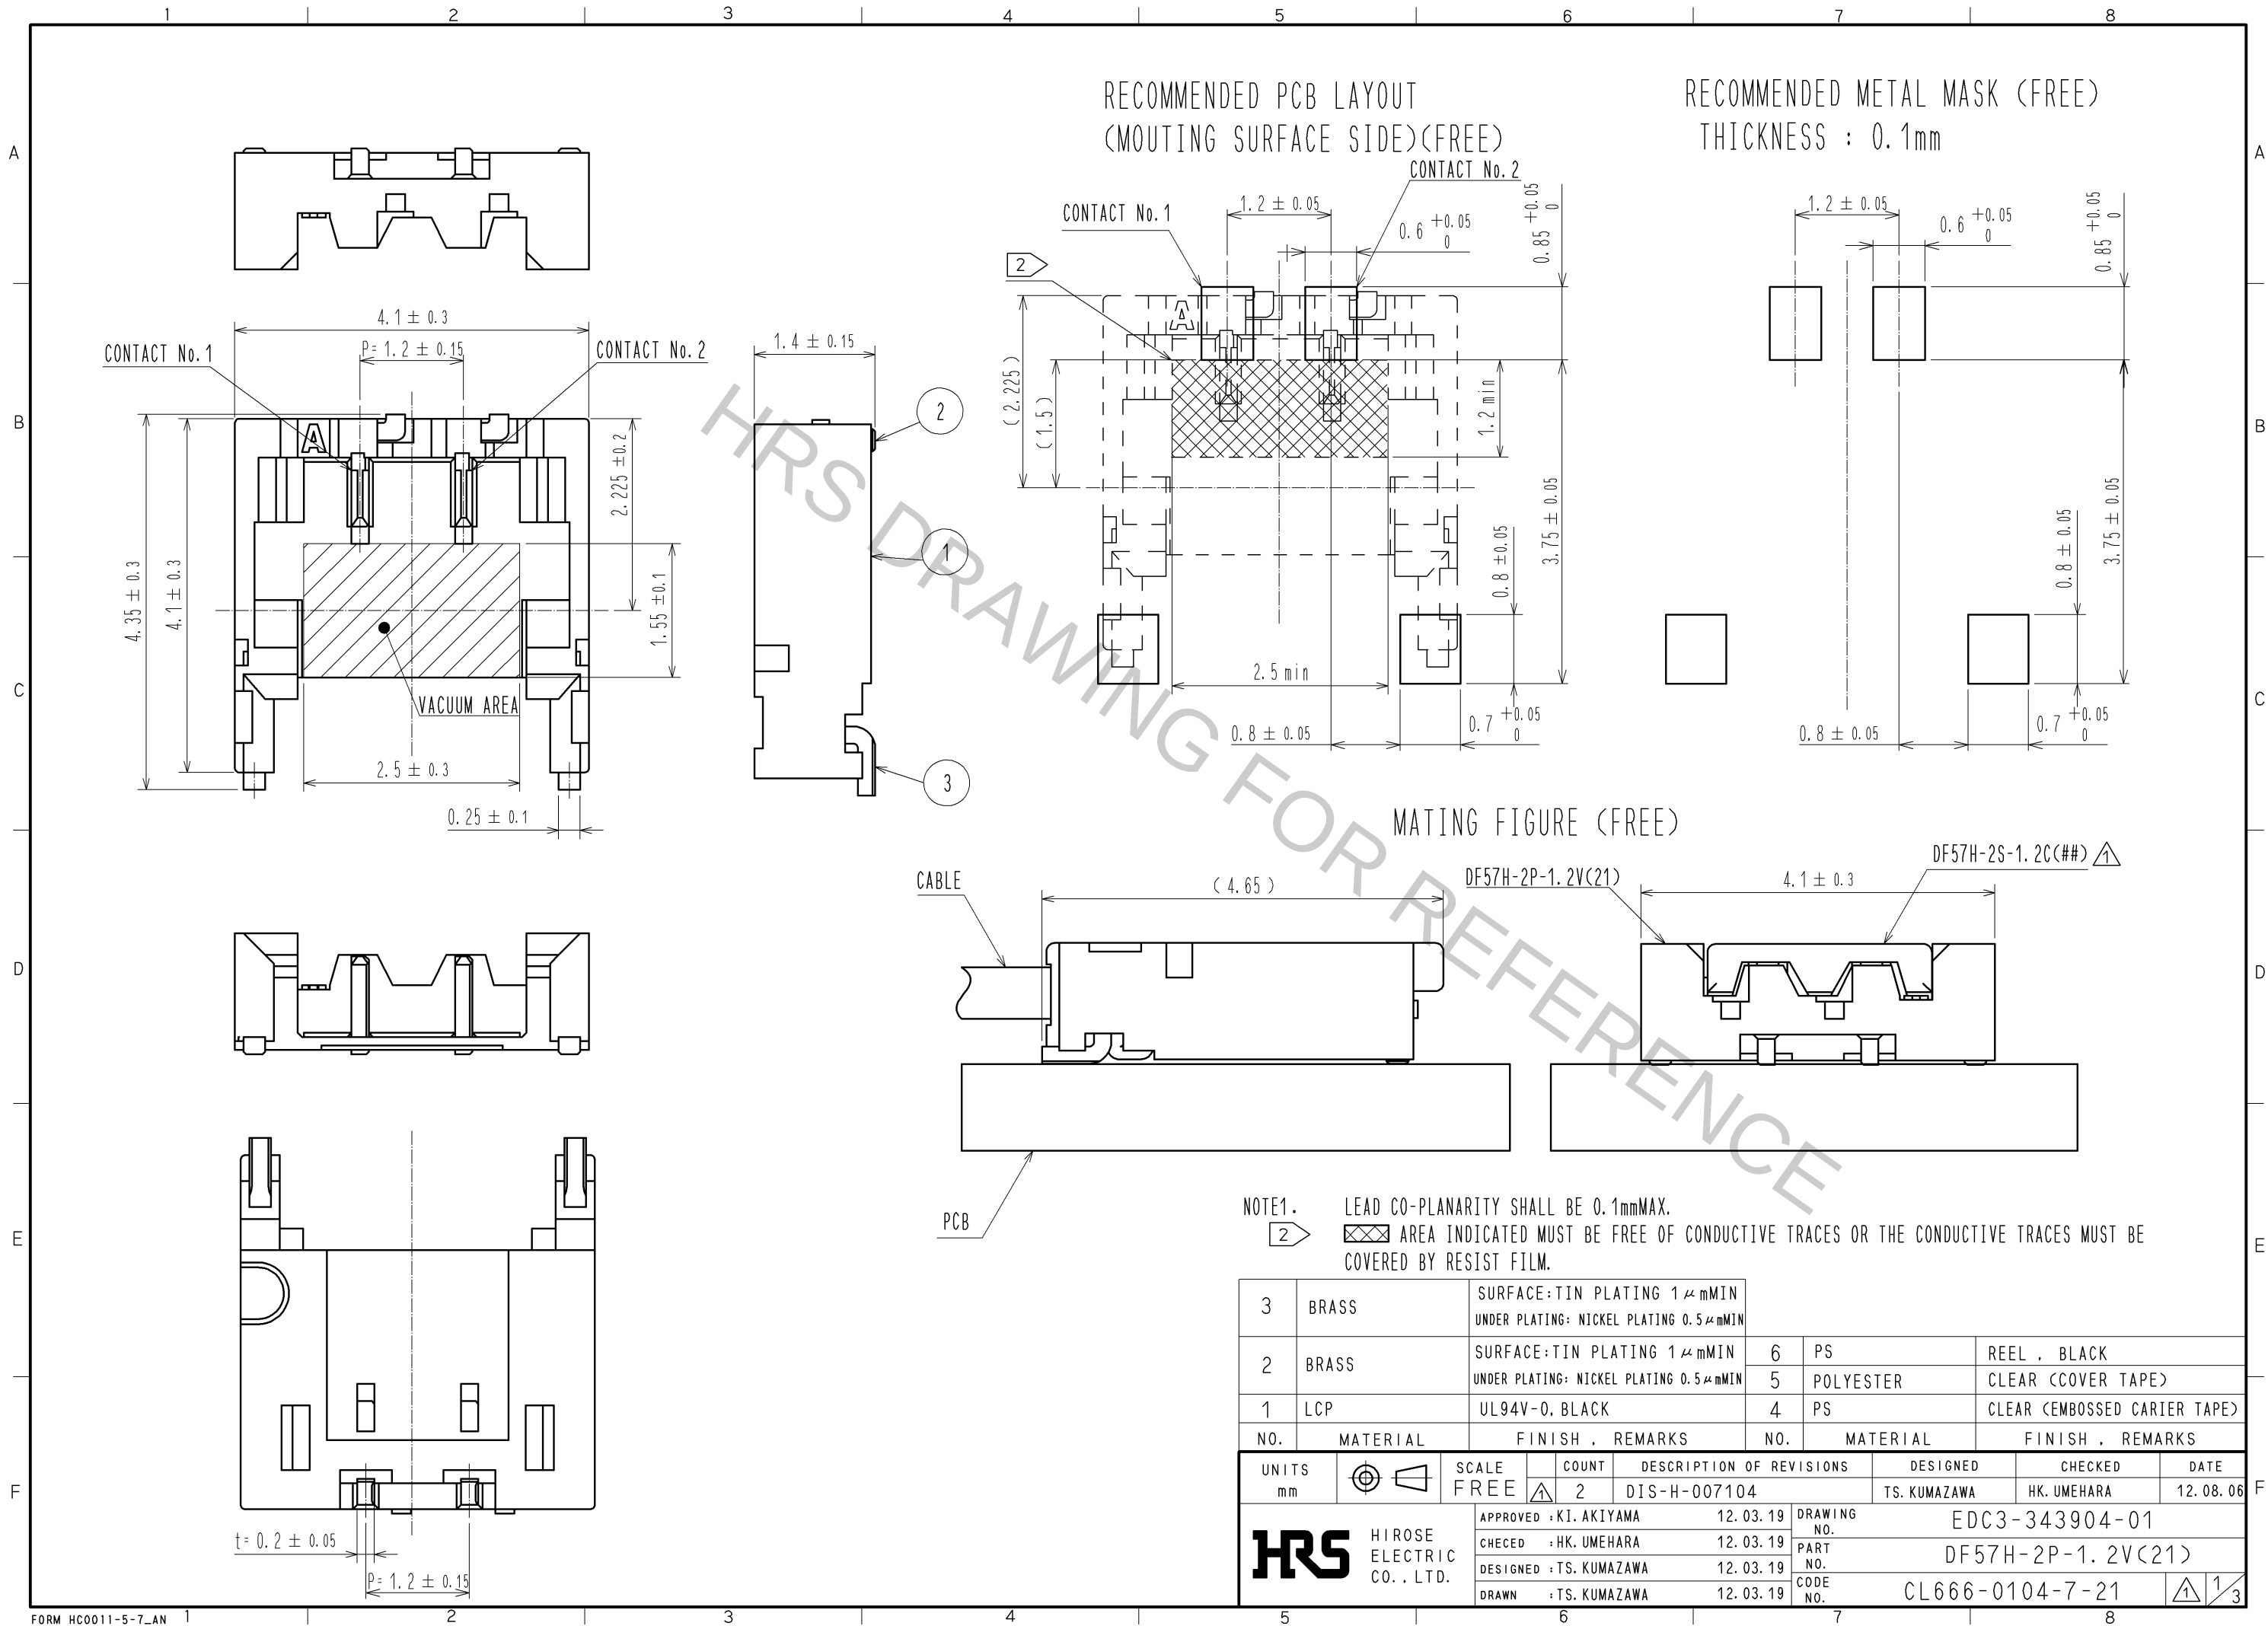


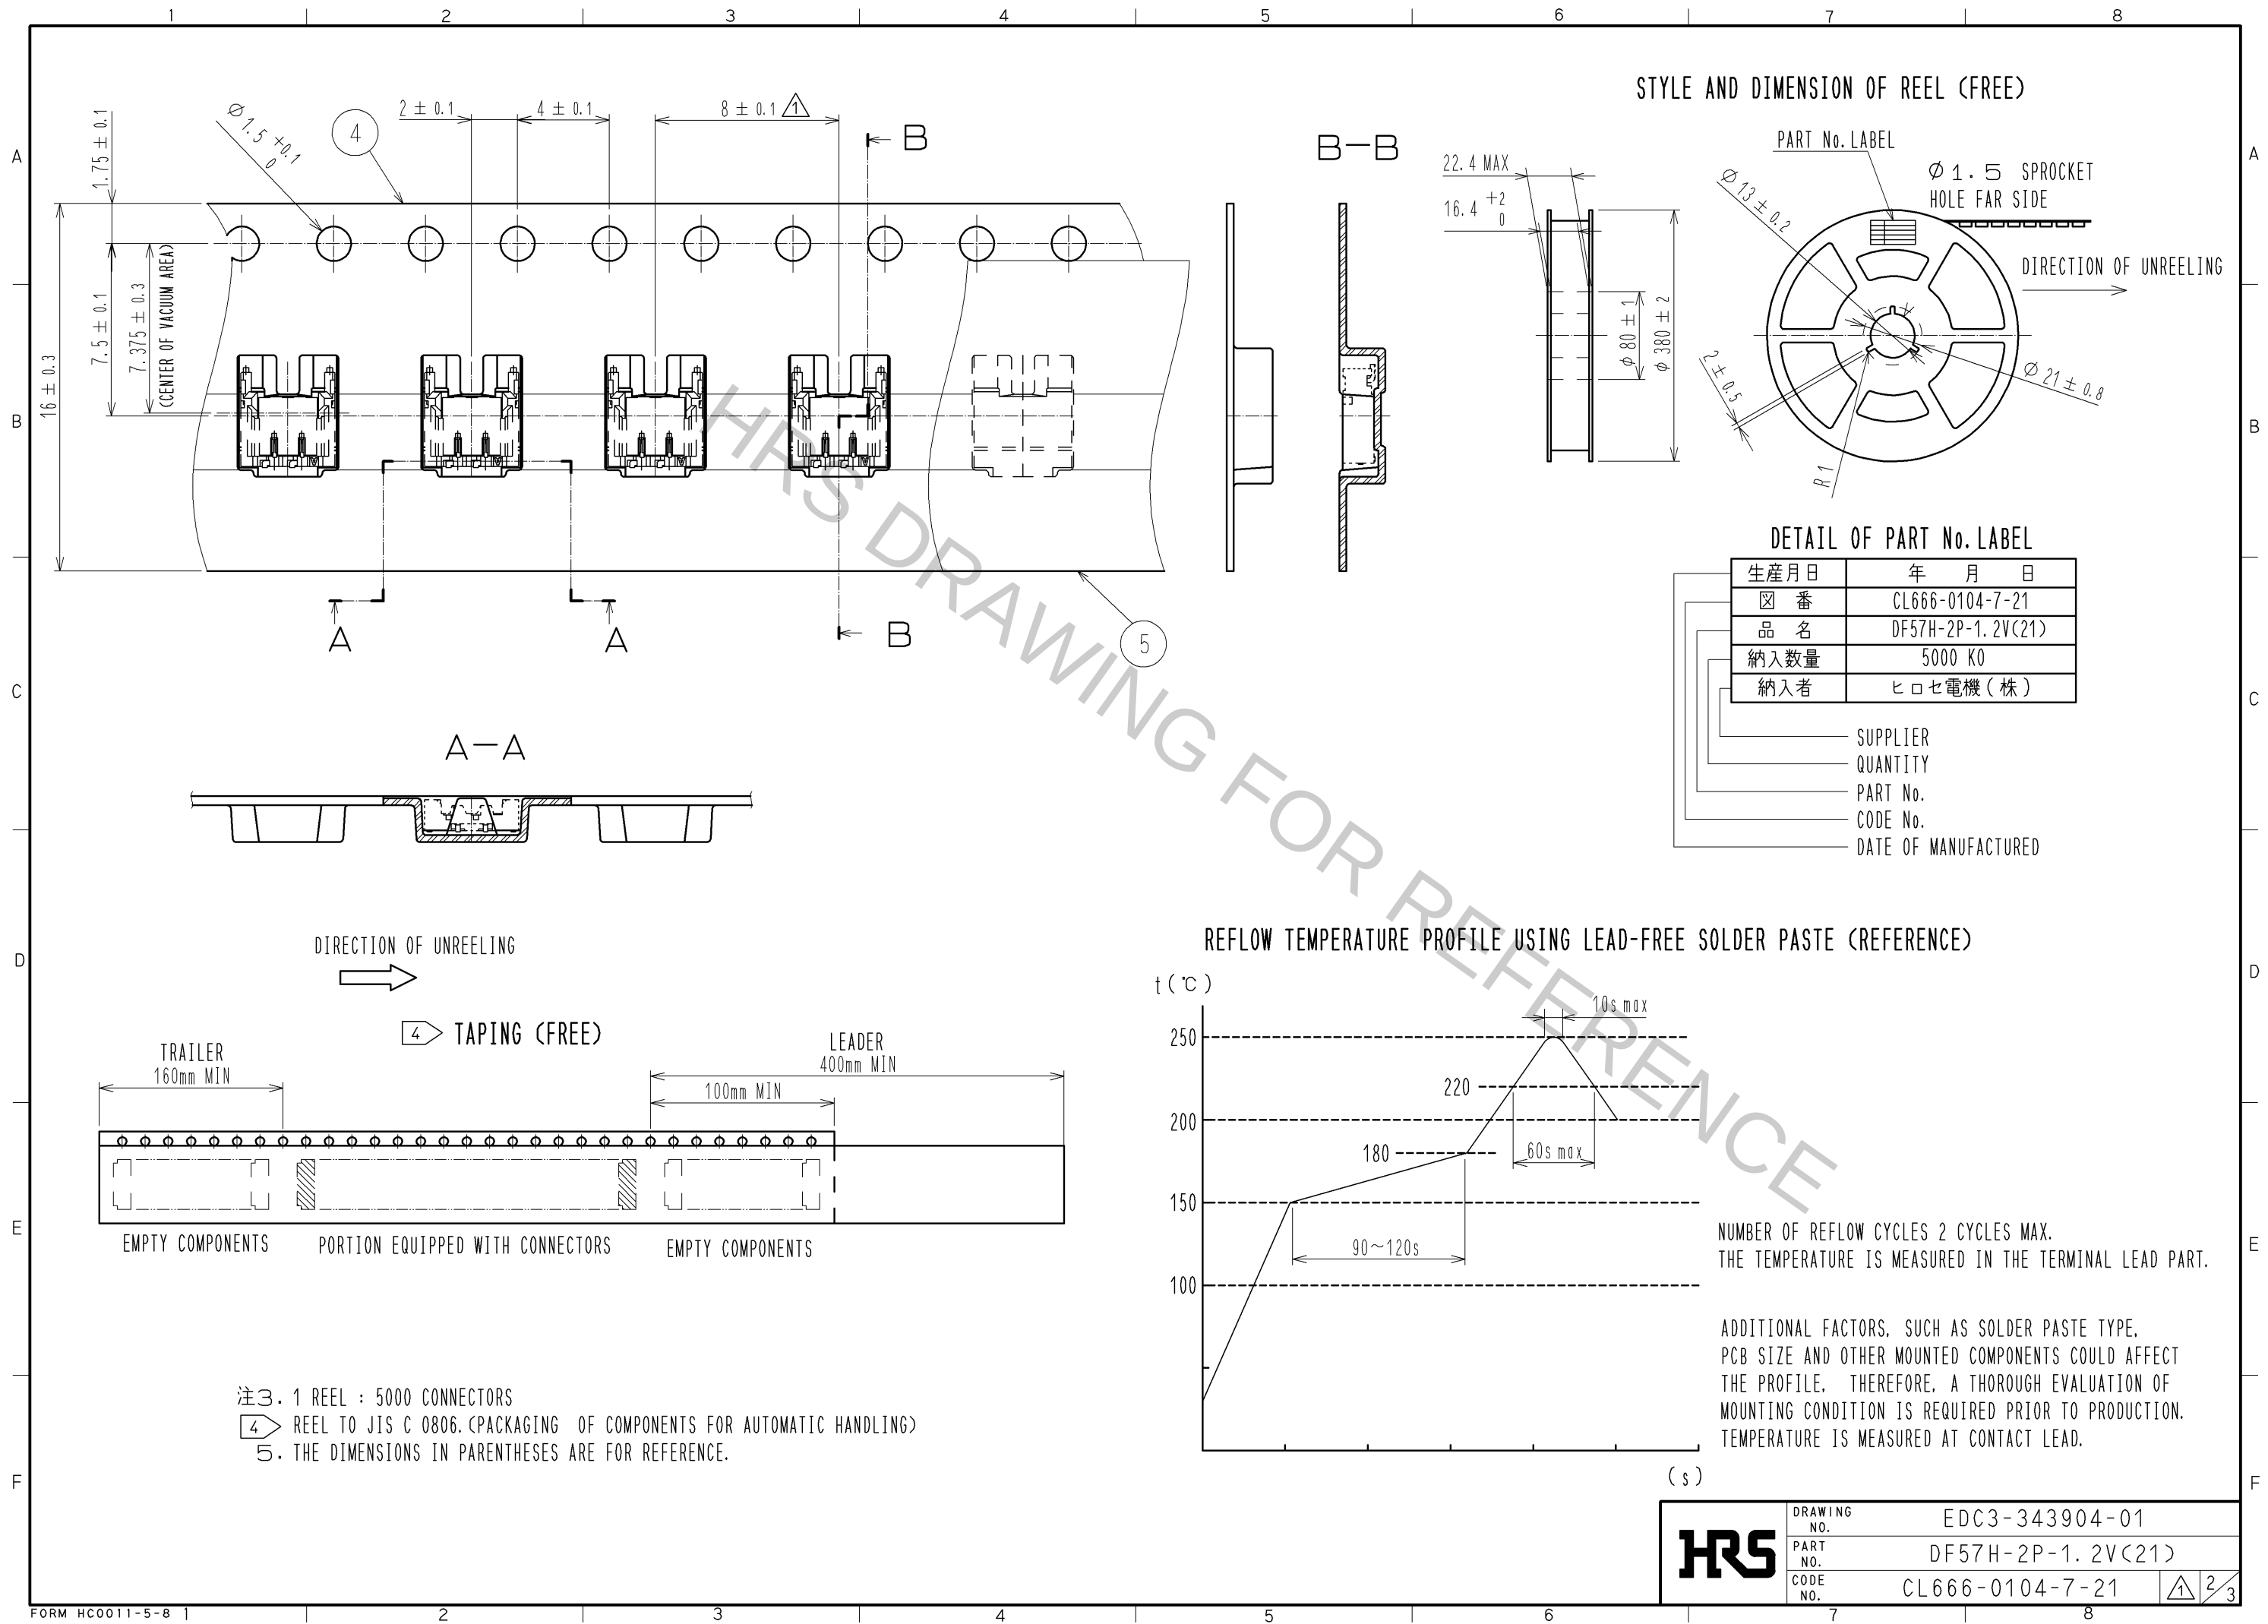


DF57 Series Mating / Unmating Operation Instruction

Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

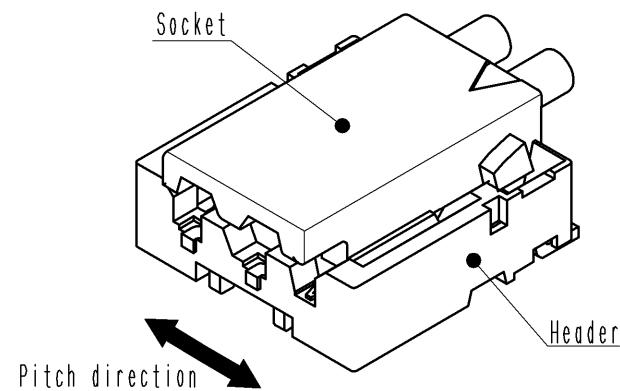

②Slightly press the socket down at cable side to tilted angle.

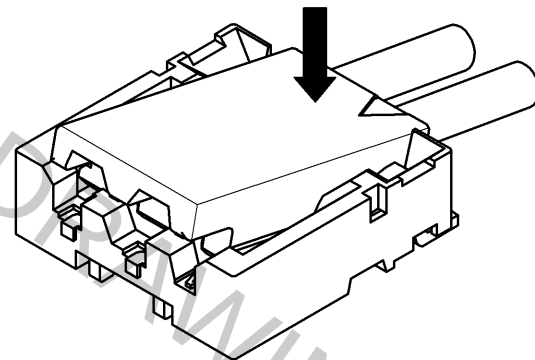


③Press down at the lever side with stabilizing the cable side to insert. Mating completes.

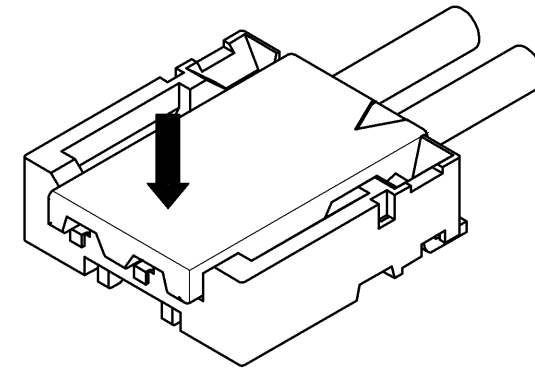


Unmating


①Hook the lever with finger nail.

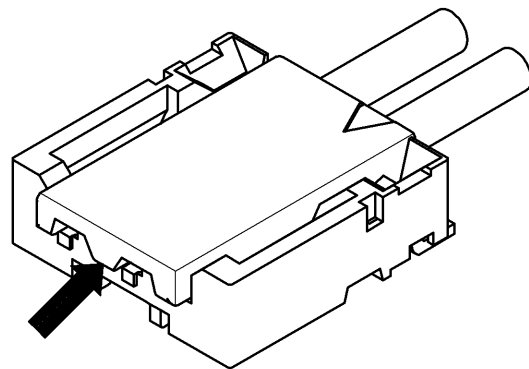

②Lift up to the upper direction and friction lock is released.

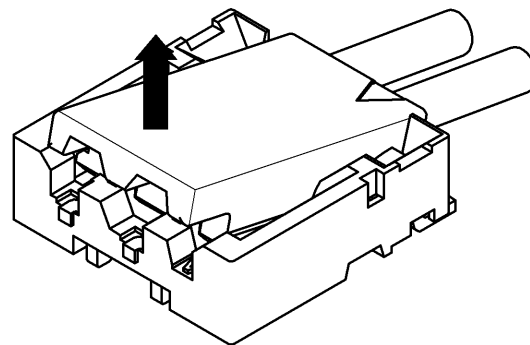

③Lift up to the upper direction and positive lock is released. Removal completes.

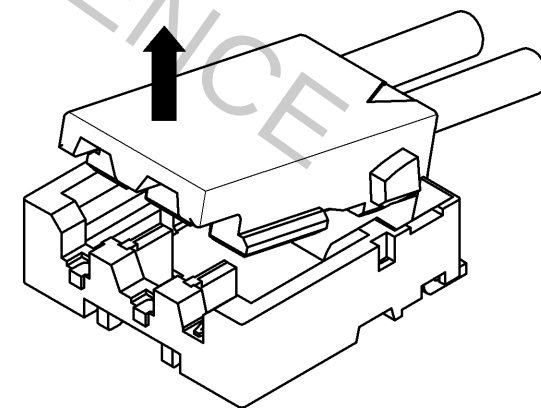**HRS**

DRAWING NO.	EDC3-343904-01
PART NO.	DF57H-2P-1.2V(21)
CODE NO.	CL666-0104-7-21

3	3
---	---