


Mounting Dimensions (For Reference Only)

AML11/12 and 21/22 SWITCHES
AML41C/D and AML42C INDICATORS

Note: Top of full guard bezel housing
.19/5.0 from panel.


PUSHBUTTONS

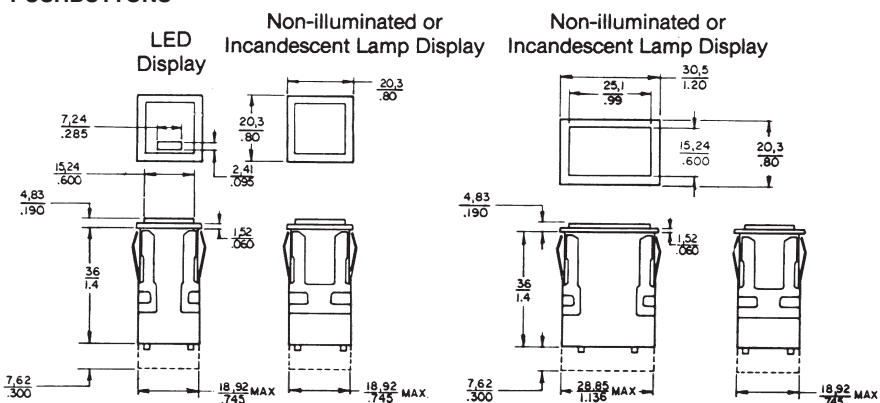

For terminal locations, see page 61.

AML27 SWITCHES


KEYLOCK

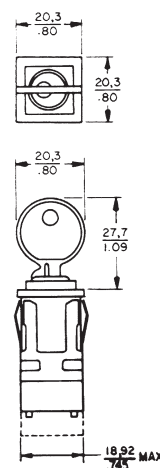

For terminal locations, see page 62.

AML14/16 and AML24/26 SWITCHES


ROCKERS

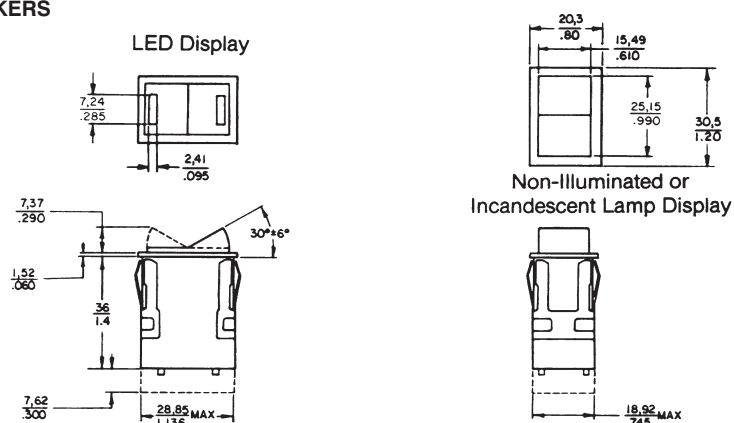

For terminal locations, see page 61, 62.

AML13/15 and 23/25 SWITCHES


PADDLES

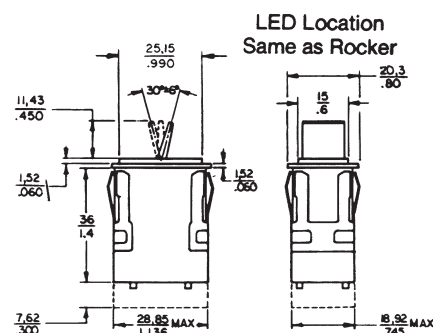

For terminal locations, see page 61, 62.

AML41 INDICATOR


LENS STYLE

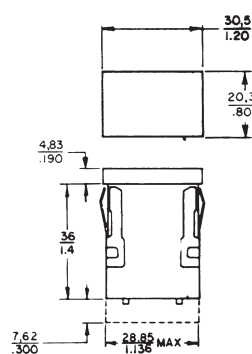


For terminal locations, see page 62.

AML42 INDICATOR


MINIATURE

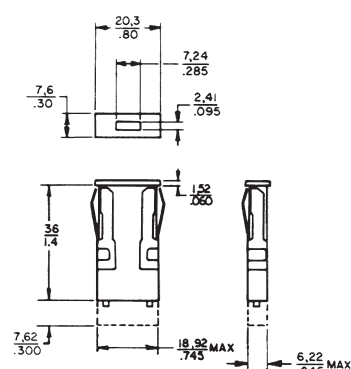

TERMINAL TYPES

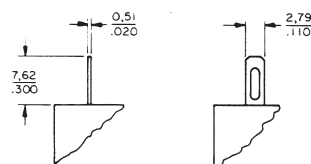

Solder or Quick Connect

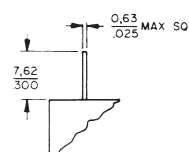

Printed Circuit


Solder Hole will accept two #22 AWG
Stranded Conductor (per NEMA publication
DC-2 1976)

Manual Switches

Mounting Dimensions (For Reference Only)

AML Series

TERMINAL LOCATIONS FOR AML20 SWITCHES

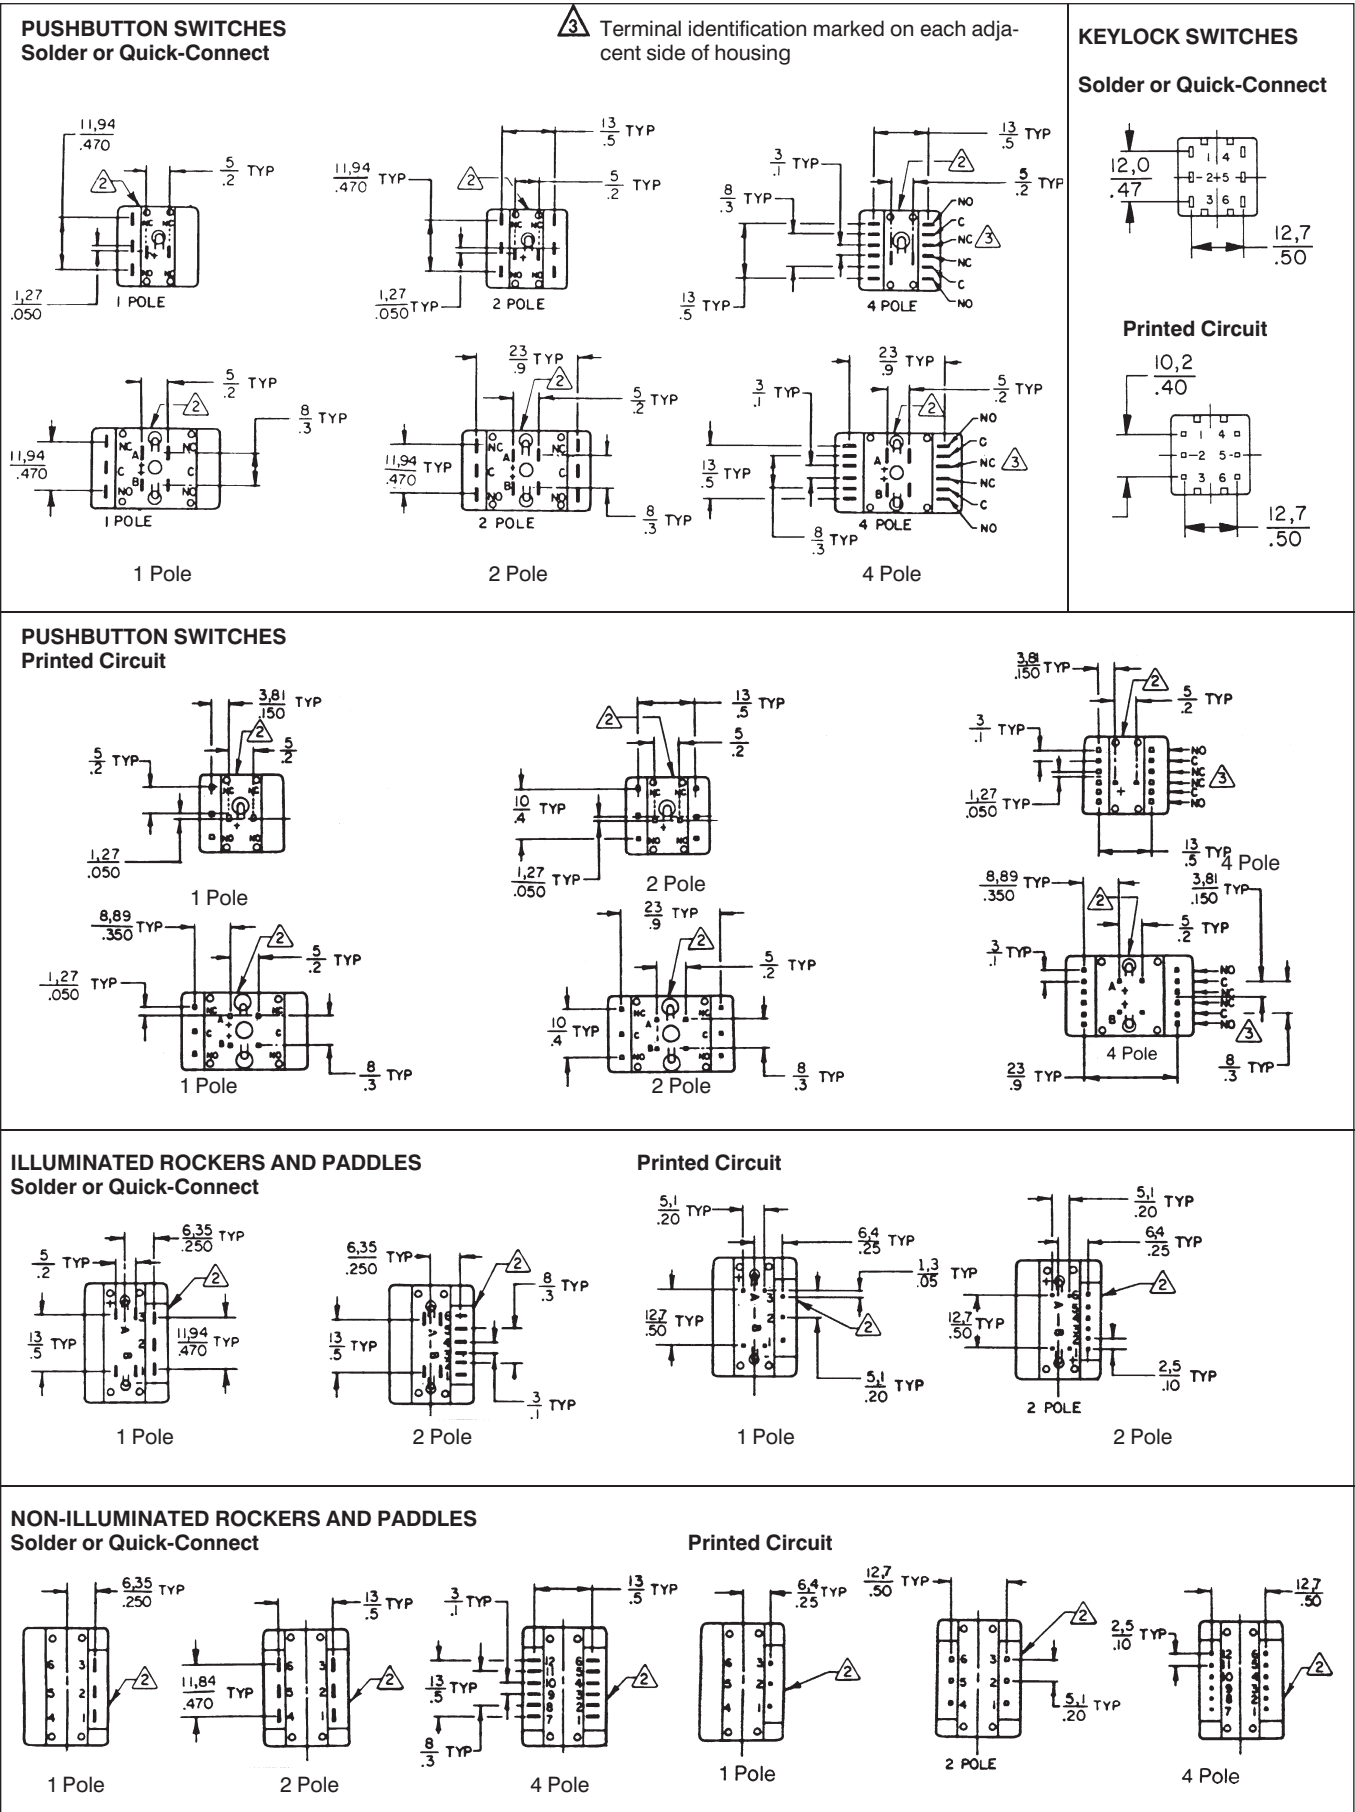


Manual Switches

Mounting Dimensions (For Reference Only)

AML Series

ANNUNCIATORS




AML45 SERIES

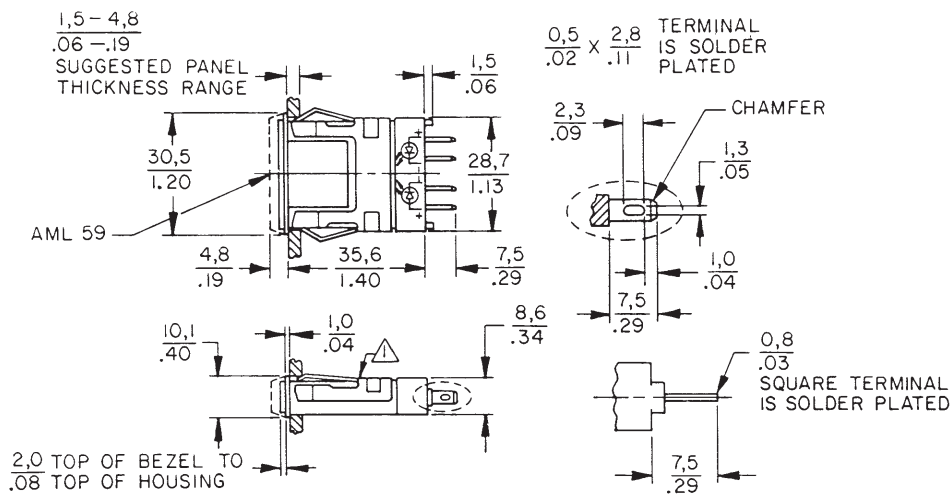

PANEL CUTOUT

PANEL CUTOUT FOR MOUNTING TWO ANNUNCIATORS IN ONE CUTOUT (USING ONE 30PAI-AML)

PANEL CUTOUT FOR AML 45 ABUTTING AML SWITCH (USING ONE 30PAI-AML)

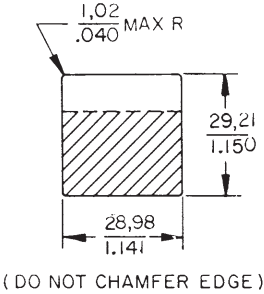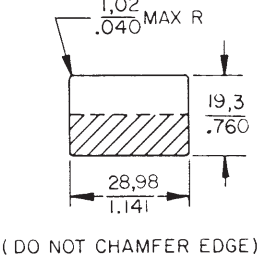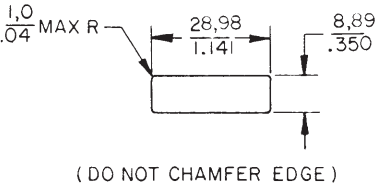

 Manufacturer's logo on this side of housing

For panel punch manufacturer, see page 60.

Manuals

Manual Switches

Mounting Dimensions (For Reference Only)

AML Series

MULTI-STATION FRONT-PANEL MOUNTING

Panel cutouts (See page 61 for panel punch manufacturer.)

Square Switches & Indicators	Rect. Switches & Indicators	Annunciator
(.8) (No. of units) — .045* (20,3) (No. of units) — 1,14*	(1.20) (No. of units) — .045* (30,5) (No. of units) — 1,14*	(.40) (No. of units) — .045* (10,1) (No. of units) — 1,14*

For each barrier, add .053/1,35

* Note: If barriers are used, do not subtract .045 in./1,14 mm from the panel cutout formula. (.045 in./1,14mm is the allowance for the width of the bezel.)

AML61 MULTI-STATION SUBPANEL MOUNTING

Panel cutouts for AML61


Mounting Bracket Orientation	Width	Length
A* in. mm	.810 20,57	(.810)(No. of units)
B in. mm	.810 20,57	(1.210)(No. of units)
C or D* in. mm	1.210 27,94	(.810)(No. of units)

* More than two cans with mounting brackets required for strips of more than 10 units.

AML61 MOUNTING CENTERS

Mounting Bracket Orientation		Mounting Centers/Number of Cans											
		1	2	3	4	5	6	7	8	9	10	11	12
"A" or "C"	in. mm	1.285 32,64	2.095 53,21	2.905 73,79	3.715 94,36	4.525 114,94	5.335 135,51	6.145 156,08	6.955 176,66	7.765 197,23	8.575 217,81	9.385 238,38	10.195 258,95
"B"	in. mm	1.685 42,80	2.895 73,53	4.105 104,27	5.315 135,00	6.525 165,74	7.735 196,48	8.945 227,20	10.155 257,94				
"D" or "E"	in. mm	on C _L on C _L	.807 20,50	1.614 41,00	2.421 61,49	3.228 81,99	4.035 102,49	4.842 122,99	5.649 143,48	6.456 163,98	7.263 184,48	8.070 204,98	8.877 225,48

Tolerance = ±.015

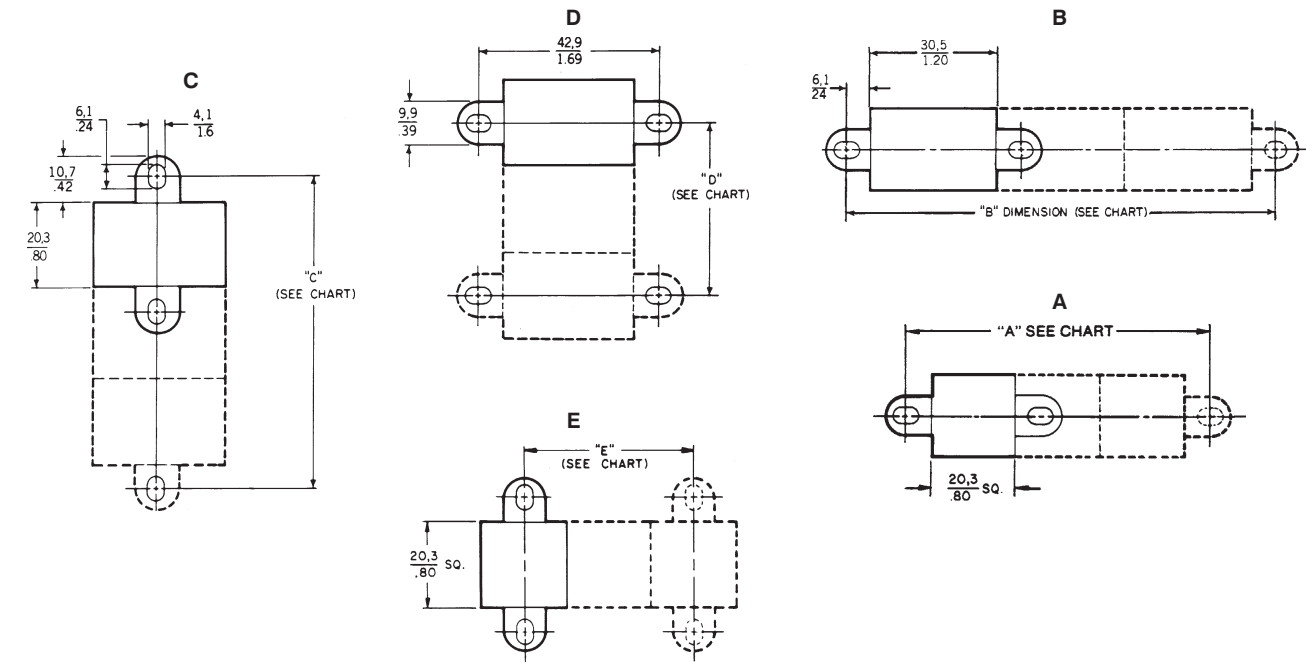


Manual Switches

Mounting Dimensions (For Reference Only)

AML Series

AML75 PANEL SEAL ACCESSORY

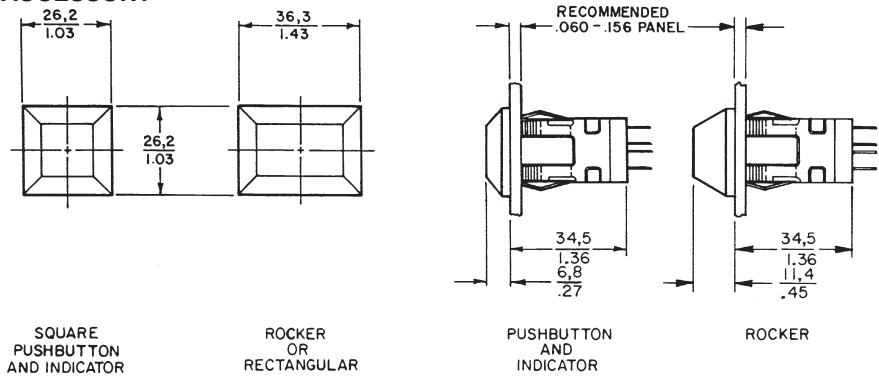


Panel cutouts

Multiple panel sealed units should not be mounted together in a single elongated slot, since this would create an unsealed space between each unit.



Side-by-side mounting can be achieved, per the center-to-center dimensions shown in the drawing. (Dotted lines indicate the seal bases which are abutting at front of panel.)

AML75 seals are not designed for use with the AML61 mounting system.

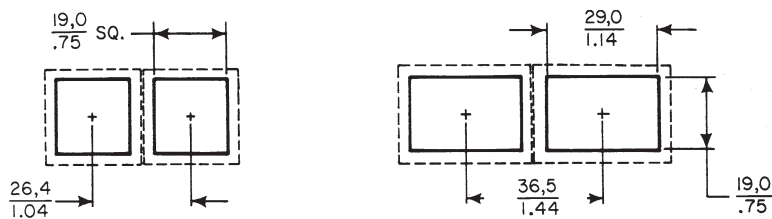


NOTE: Suggested cutout dimensions are based on an .125"/3,18 mm panel thickness. Individual preferences for inpanel fit may require measurement of assemblies before panels are cut.

AML76 SWITCH GUARD ACCESSORY

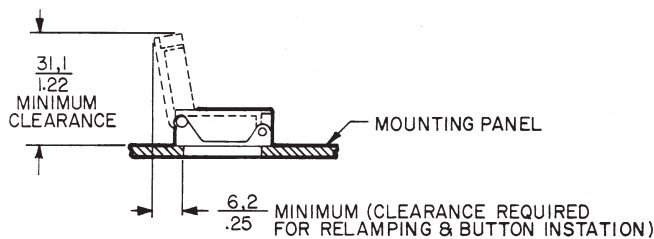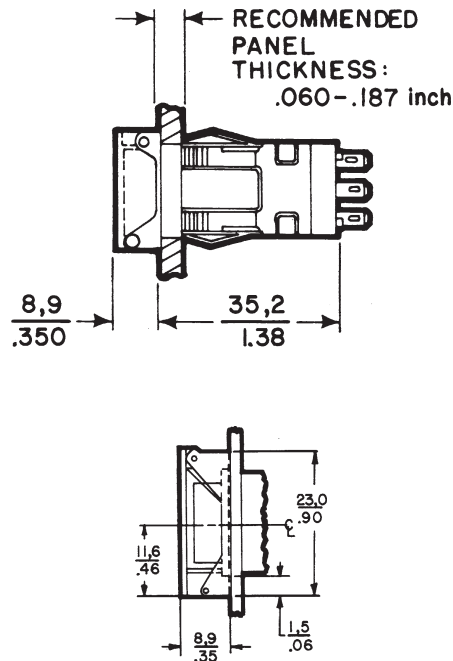

PANEL CUTOUTS

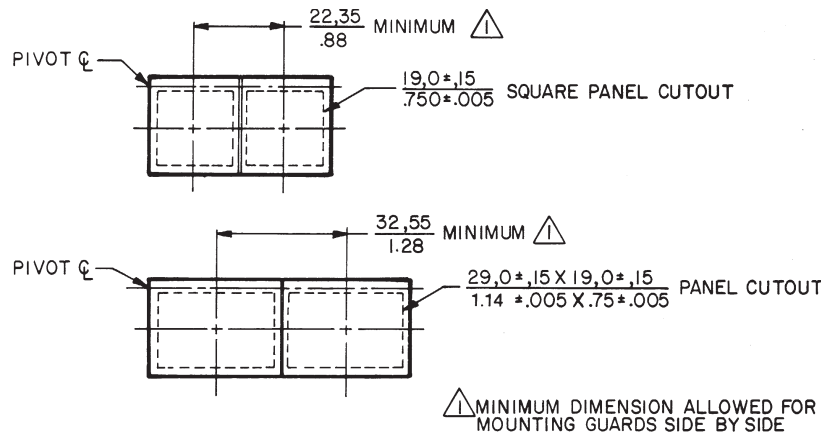

Manuals