

energystyle

welcomelight fitting & operating instructions

Product: 780A-1

The welcome light is part of the Elkay family of switches, timers and detectors which save energy and increase convenience in and around your home, garden or premises.

RATING	250W	~	240\
---------------	------	---	------

Voltage	~ 240V	
Current	1A	
Power	250W	



MOUNTING THE UNIT

The unit is compatible with a standard single gang, BS accessory plate. Turn off power to lights and remove existing single gang switch from the wall. Using the 2 wires supplied, connect the existing switch to welcome light as shown in the wiring diagrams below. (Fig 1: For single switch operation. Fig 2: For two-way switch operation. Take the existing wires and connect to welcomelight, as shown in the appropriate diagram. Use the longer screws provided to fit welcome light, along with the original light switch, back to the wall plate as shown.

OPERATION

Your welcome light has three modes of operation each are described below, with setting instructions.

1. PIR MODE

With the switch set to the left position, marked * welcome light switches the lights on, for a set period of time, when it detects movement. The lights are activated only when the light level is low. The 'lights on' period is fully adjustable between 5 seconds and 20 mins by using the rotary adjuster 🖈 🕜 Rotate clockwise to increase time to maximum. Note: For welcome light to operate in this mode the original light switch must be left in the on position.

2. STANDARD OPERATION

With the switch in the centre position, marked I, welcome light is disabled and the original switch can be used as a standard light switch.

3. SECURITY MODE

With the switch in the right position, marked , welcome light switches the lights on for a set time period when the ambient light level falls below a set level. The 'lights on' time period can be adjusted from 1 min to 4 hours by using the rotary adjuster, marked Rotate clockwise to increase time to maximum.

LUX LEVEL ADJUSTMENT


To set the light level at which welcome light operates, the lux level needs to be adjusted accordingly. With the unit in PIR mode (see 1 above) the ambient light level can be set by rotating the knob marked O clockwise until the lights come on. This has now predetermined the light level when both the PIR and security functions will activate. This can be adjusted by rotating clockwise for darker conditions and anti-clockwise for lighter conditions.


IMPORTANT NOTICE

All wiring should be carried out by a qualified Electrician in accordance with the current IEE Wiring Regulations. If unit is faulty return to place of purchase.

TECHNICAL HELPLINE

For further help, or information on this and the other products in the Elkay range visit www.elkay.co.uk or call 01675 468222.

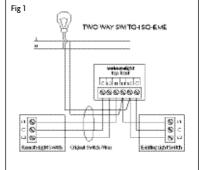

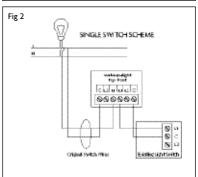



Elkay Electrical, Colestini, Britishing, 200, 200.
Tel: +44 (0) 1675 468222 www.elkay.co.uk Elkay Electrical, Coleshill, Birmingham, England.