

Fig. 1

## 1. INTRODUCTION

This instruction sheet covers the use of the AMP Extraction Tools 91156-1, -2, and -3, which are used to extract AMP Box Connector contacts from their connectors. See Figure 1. Read these instructions carefully before extracting any contacts.

**NOTE**

All dimensions on this instruction sheet are in inches.

## 2. DESCRIPTION (Figure 1)

The extraction tool tip is designed to enter the contact cavity in the front of the connector and depress the locking lance of the contact.

The extraction tip, located at the front of the tool, fits inside the contact to release the locking lance. The contact is then pulled from the BACK of connector.

## 3. EXTRACTION PROCEDURES (Figure 1)

**NOTE**


If the contact is soldered to the printed circuit (pc) board, remove all solder from contact before extraction.

### A. Pin Contacts

1. Determine which contact is to be removed. Looking straight into FRONT (mating face) of connector, notice the contact channel.
2. Start the extraction tip inside the contact channel until the tip bottoms and causes the locking lance to close.
3. Maintaining pressure on the locking lance, partially remove contact from contact cavity.
4. Remove extraction tip and pull contact from BACK of connector.

### B. Socket Contacts

1. Determine which contact is to be removed. Looking straight into FRONT of connector, notice the locking lance on the side of the contact.
2. Start the extraction tip along the side of contact to release locking lance.
3. Maintaining pressure on the locking lance, partially pull contact from contact cavity.
4. Remove extraction tip and pull contact from BACK of connector.

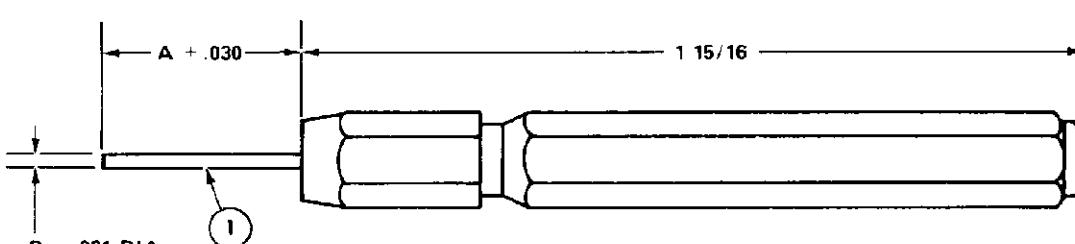

EXTRACTION TOOL	DIMENSIONS		PRODUCT DESIGNED FOR	REPLACEABLE PARTS					
	A	B		ITEM	TOOL NUMBER	91156-1	91156-2	91156-3	DESCRIPTION
91156-1	.500	.015	AMP Box Connector Contacts	1	311694-1	311694-2	311694-1	311694-1	TIP, Extraction
2	.500	.022		Engineering Approval					Date
3	.900	.015		<i>On Approval</i>				12/9/81	

Fig. 2

#### 4. TOOL CERTIFICATION

The tools listed on this instruction sheet should be certified with the information provided in Figure 2. We recommend that you inspect the tool immediately upon arrival in your factory, and at regularly scheduled intervals, to ensure that the tool has not been damaged.

Additional tools can be purchased from:

AMP Incorporated  
Eisenhower Boulevard  
Harrisburg, PA 17105

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[TE Connectivity:](#)

[91156-1](#) [91156-2](#)