
# Simple Fiber Amplifiers

E3X-SD/NA Series




# Simplicity and High Performance


The Series now includes models with digital displays and direct key setting.

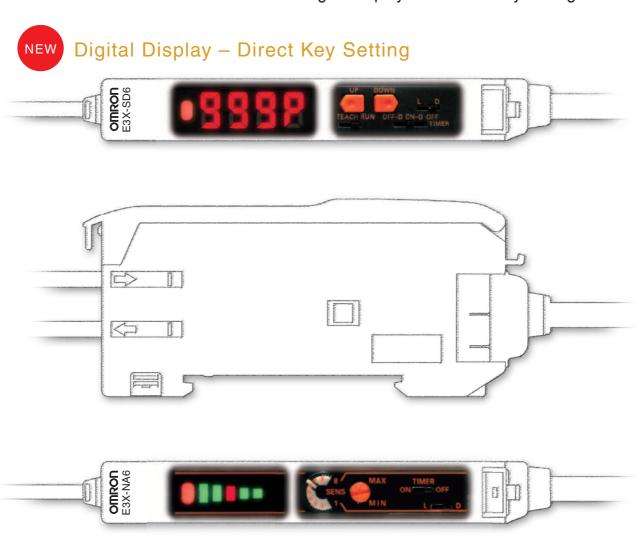

Bar Display - Manual Setting

# Simplicity and High Performance

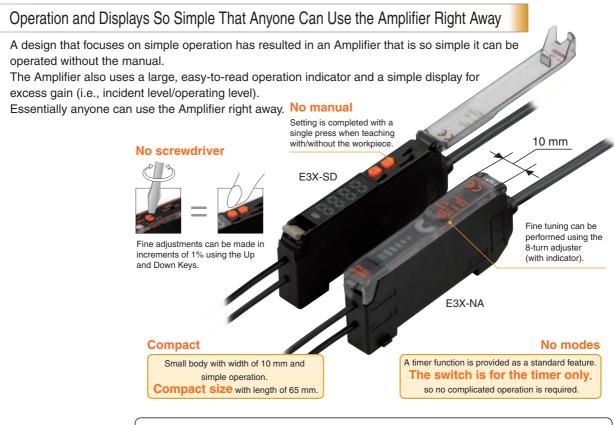


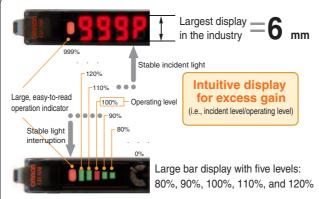


Immediately determine operation and amount of light with a simple, bright display.

With the E3X-SD, settings and management can be performed reliably using the digital display ranging from 0% to 999% (10 times), and with the E3X-NA, the same can be performed intuitively using the large 5-level bar display.

#### Wire-saving Connector to Reduce Work and Stock Management

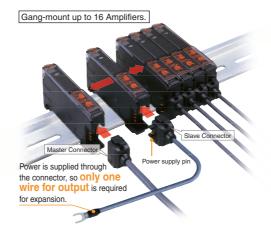


- Large reduction in wiring work
- Simple management: No distinction between master and slaves

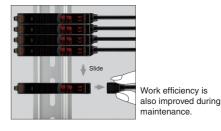

3

#### General-purpose Performance for Simple Use

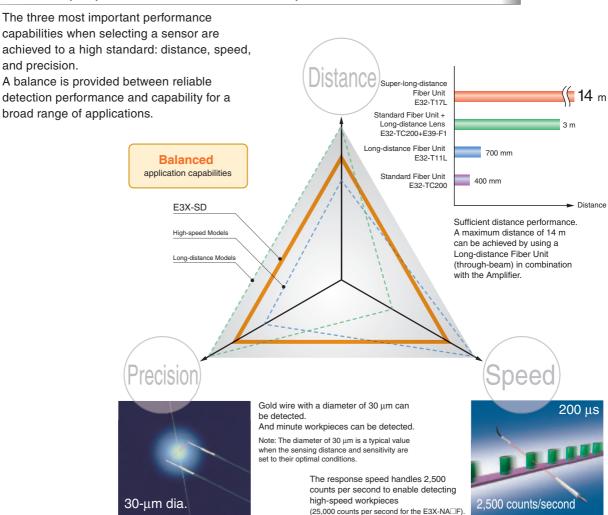

Optical Communications to Prevent Mutual Interference for Up to Five Amplifiers

Optical communications is used between Amplifiers.


Interference is reliably prevented for up to five Amplifiers by mutually staggering the light emission timing (except for the E3X-NA $\square$ F).



## Selecting Fiber Amplifiers

# Simple

For simple operation: Select a Simple Fiber Amplifier.

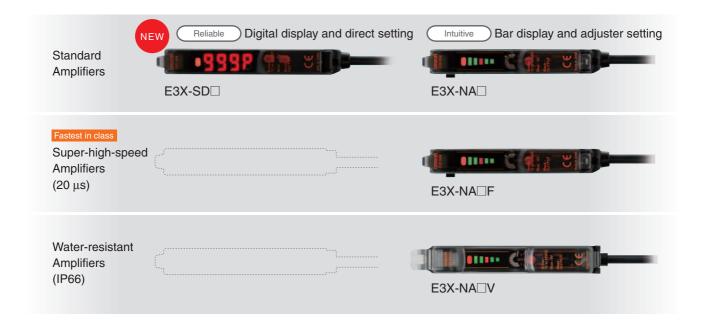

# All in One For multifunctional capability: Select an Advanced Fiber Amplifier.





# Simple Fiber Amplifier E3X-SD/-NA

# The Standard for Fiber Amplifiers with Simple Operation and High Performance

- Operation so simple that essentially anyone can use the amplifier right way.
- Immediately determine operation and amount of light with a simple, bright display.
- General-purpose capabilities to simply handle a broad range of applications.



CE

#### **Ordering Information**

#### **Amplifier Units**

**Digital Display and Direct Key Setting** 

Item	Appearance	Connection	Ratings and	Model	
iteiii	Appearance	method Specifications		NPN output	PNP output
Standard models		Pre-wired		E3X-SD11	E3X-SD41
		Wire-saving connector		E3X-SD6	E3X-SD8

#### **Bar Display and Adjuster Setting**

Item	Appearance	Connection	Ratings and	Model	
iteiii	Appearance	method	Specifications	NPN output	PNP output
Standard models		Pre-wired		E3X-NA11	E3X-NA41
Ciandara modelo		Wire-saving connector		E3X-NA6	E3X-NA8
High-speed detection models		Pre-wired	Response time: 20 μs	E3X-NA11F	E3X-NA41F
Water-resistant models		Pre-wired	Degree of protection:	E3X-NA11V	E3X-NA41V
		Connector (M8)	IP66	E3X-NA14V	E3X-NA44V

#### Amplifier Unit Connectors (Order Separately) Note: Stickers for Connectors are included as accessories.

Item	Appearance	Cable length	No. of conductors	Model
Master Connector		2 m	3	E3X-CN11
Slave Connector		2 m	1	E3X-CN12

#### **Combining Amplifier Units and** Connectors

(Basically, Amplifier Units and Connectors are sold separately)
Refer to the following tables when placing an order.

Amplifier Units				
Type NPN PNP				
Standard models	E3X-SD6	E3X-SD8		
	E3X-NA6	E3X-NA8		

**Applicable Connectors (Order Separately) Master Connector Slave Connector** E3X-CN11 (3-wire) E3X-CN12 (1-wire)

#### When Using 5 Amplifier Units

5 Amplifier Units

1 Master Connector + 4 Slave Connectors

#### **Sensor I/O Connectors (Order Separately)**

Size	Cable specifications	Appearance		Cab	le type	Model
		Straight		2 m		XS3F-M421-402-A
M8	Standard cable	connector		5 m	Four-	XS3F-M421-405-A
IVIO	Standard Cable	L-shaped		2 m	conductor	XS3F-M422-402-A
		connector		5 m		XS3F-M422-405-A

#### **Accessories (Order Separately)**

#### **Mounting Brackets**

Appearance	Applicable models	Model	Quantity
	E3X-SD□ E3X-NA□ E3X-NA□F	E39-L143	1
	E3X-NA□V	E39-L148	'

#### **End Plate**

Appearance	Model	Quantity
5	PFP-M	1

#### **Ratings and Specifications**

#### **Amplifier Units**

		Digital display and direct key setting	Ва	r display and adjuster set	ting	
	Туре	Standard models	Standard models	High-speed detection models	Water-resistant models	
Item	Model	E3X-SD□	E3X-NA□	E3X-NA□F	E3X-NA□V	
Light source (wavelength) Red		Red LED (620 nm)	Red LED (680 nm)	L		
Power supply	y voltage	12 to 24 VDC ±10%, ripple (p-p): 10% max.	·			
Current cons	umption	960 mW max. (Power supply: 24 V, Current consumption: 40 mA max.)	35 mA max.			
Control outp	ut	Open-collector output (NPN or PNP) Load power supply: 26.4 V max., Load current: 50 Light-ON/Dark-ON mode selector	50 mA max. (Residual voltage: 1.5 V max.) (*1)			
Response tin	ne	Operate or reset: 200 μs max. (*2)		Operate: 20 μs max. Reset: 30 μs max.	Operate or reset: 200 μs max. (*2)	
Sensitivity adjustment UP/DOWN direct key setting, teaching 8-turn sensitivity ad		8-turn sensitivity adjuster (	with indicator)			
Protection ci	rcuits	Power supply reverse polarity protection, output short-circuit protection, output reverse polarity protection (*3)				
Timer function	ON/OFF-delay timer: 10 ms (each fixed)  OFF-delay timer: 40 ms (fixed)					
Mutual interference prevention	erence	Up to 5 Amplifiers (optically synchronized)	Up to 5 Amplifiers (optically synchronized)			
Ambient illun	nination	Receiver side Incandescent lamp: 10,000 lux max. Sunlight: 20,000 lux max.				
Ambient tem range	perature					
Ambient hum	idity range	Operating and storage: 35% to 85% (with no cond	lensation)			
Insulation res	sistance	20 MΩ. min. (at 500 VDC)				
Dielectric str	ength	1,000 VAC at 50/60 Hz for 1 minute (*4)				
Vibration res	istance	Destruction: 10 to 55 Hz with a 1.5-mm double an	plitude for 2 hrs each in X,	Y and Z directions		
Shock resista	ance	Destruction: 500 m/s <sup>2</sup> , for 3 times each in X, Y and	d Z directions			
Degree of protection		IEC 60529 IP50 (with Protective Cover attached)  IEC 60529 IP50 (with Protective Cover attached)  IEC 60529 IP60 (with Protective Cover attached)			(with Protective Cover at-	
Connection r	nethod	Pre-wired (standard cable length: 2 m), or connector				
Weight (pack	ed state)	Pre-wired model: Approx. 100 g, Model with connector: Approx. 55 g (*5)				
Material	Case	Polybutylene terephthalate (PBT)				
material	Cover	Polycarbonate			Polyethersulfone (PES)	
Accessories		Instruction manual				

#### **Amplifier Unit Connectors**

Item	Model	E3X-CN11	E3X-CN12			
Rated current 2.5 A						
Rated vol	oltage 50 V					
Contact r	esistance	20 mΩ max. (20 mVDC max., 100 mA max.) (The above figure is for connection to the Amplifier Unit and the adjacent Connector. It does not include the conductor resistance of the cable.)				
Number o	of insertions	Destruction: 50 times (for connection to the Amplifier Unit and the ac	djacent Connector)			
Material	Housing	Polybutylene terephthalate (PBT)				
Contact Phosphor bronze/gold-plated nickel						
Weight (p	packed state)	Approx. 55 g	Approx. 25 g			


<sup>\*1.</sup> For the E3X-NA, residual voltage is 1 V max.
\*2. When there are 8 or more E3X-NA Amplifiers mounted side-by-side, the response time will be 350 μs max.
\*3. The E3X-NA does not have output reverse polarity prevention.
\*4. Water-resistant models and models with connectors have a dielectric strength of 500 VAC.
\*5. Add 10 g for water-resistant models.


#### **Fiber Unit Overview**


#### No snagging, no breaking: Right-angle (L-shaped) Models





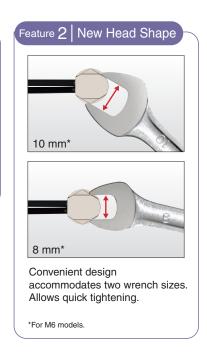

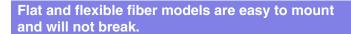

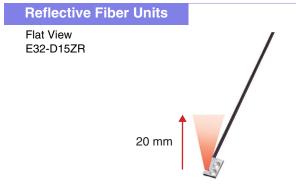


Size:  $15 \times 10 \times 3$  mm

# Conventional fiber Flexible fiber



A large number of ultrafine cores are all surrounded by cladding. As a result, the fiber is flexible and can be bent without significantly reducing the light intensity. This helps solve problems, such as fiber being broken by getting caught on other objects.

#### **Through-beam Fiber Units**

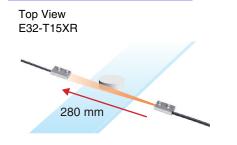

Size:  $15 \times 8 \times 3$  mm



#### **Sensing Distance**

**Through-beam Models** 

(Unit: mm)

		Model	E3X-SD□ E3X-NA□	E3X-NA□F
уре			Standard models	High-speed detection models
		E32-T11R/E32-T12R/E32-T15XR/E32-TC200BR (B4R)	280	80
	Flexible	E32-T14LR/E32-T15YR/E32-T15ZR	110	33
	(new standard)	E32-T21R/E32-T22R/E32-T222R/E32-T25XR/	60	18
	(	E32-TC200FR (F4R)		
		E32-T24R/E32-T25YR/E32-T25ZR	30	9
		E32-TC200/E32-T12/E32-T15X/E32-TC200B (B4)	400	120
Standard		E32-T14L/E32-T15Y/E32-T15Z	240	70
models	Standard	E32-TC200A	360	100
		E32-TC200E/E32-T22/E32-T222/E32-T25X/E32-TC200F (F4)	100	30
		E32-T24/E32-T25Y/E32-T25Z	90	27
		E32-T11/E32-T12B/E32-T15XB	360	100
	Break resistant	E32-T21/E32-T221B/E32-T22B	100	30
		E32-T25XB	75	20
	Fluorine coating	E32-T11U	360	100
		E32-T17L	14000	4200
		E32-TC200 + E39-F1	3000	900
		E32-T11R + E39-F1	2100	630
		E32-T11 + E39-F1	2000	600
	Long distance, high power	E32-T14	1800	540
		E32-T11L/E32-T12L	700	210
		E32-T11L + E39-F2	500	150
		E32-T11R + E39-F2	220	65
		E32-T11 + E39-F2	360	100
		E32-T21L/E32-T22L	200	60
	Ultracompact, ultrafine sleeve	E32-T223R	60	18
Special-		E32-T33-S5	20	6
beam		E32-T333-S5	5	1.5
models		E32-T334-S5	2.5	0.8
	Fine beam	E32-T22S	1000	300
	(narrow vision field)	E32-T24S	700	210
	( 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	E32-T16PR	450	130
		E32-T16P	600	180
		E32-T16JR	390	110
		E32-T16J	520	150
	Area sensing	E32-T16WR	690	200
		E32-T16W	920	270
		E32-T16	1500	450
		E32-M21	300	90
		E32-T51	400	120
		E32-151	130	35
		E32-T81R-S	180	50
	Heat resistant	E32-T61-S + E39-F2	390	130
	neat resistant			
		E32-T61-S + E39-F1 E32-T84S-S	3000 700	900 210
		E32-T61-S	300	90
Environment		E32-T11F	1050	380
resistive	Chemical	E32-T12F	1600	480
models	resistant	E32-T14F	200	60
		E32-T51F	700	200
		E32-T81F-S	350	100
		E32-T51V	100	
	Vacuum	E32-T51V + E39-F1V	600	
	resistant	E32-T54V	65	
	iooiotant	E32-T54V + E39-F1V	390	
		E32-T84SV	250	


For information on Fiber Units, refer to the E32 Series Fiber Sensor Best Selection (Cat. No. E354).

Reflective Models (Unit: mm)


		Model	E3X-SD□ E3X-NA□	E3X-NA□F
Туре			Standard models	High-speed detection models
		E32-D11R/E32-D12R/E32-D15XR/E32-DC200BR (B4R)	90	30
		E32-D14LR	16	5
		E32-D15YR/E32-D15ZR	20	5
(	Flexible (new standard)	E32-D211R/E32-D21R/E32-D22R/E32-D25XR/ E32-DC200FR (F4R)	15	5
		E32-D24R	7	2.3
		E32-D25YR/E32-D25ZR	4	1.2
			150	50
		E32-DC200/E32-D15X/E32-DC200B (B4)		
		E32-D12	120	40
Standard		E32-D14L	40	13
models	Standard	E32-D15Y/E32-D15Z	50	15
		E32-D211/E32-DC200E/E32-D22/E32-D25X/ E32-DC200F (F4)	36	12
		E32-D24	15	5
		E32-D25Y/E32-D25Z	10	3.3
		E32-D11/E32-D15XB	90	30
		E32-D21B/E32-D221B	35	10
	Break resistant	E32-D21/E32-D22B	15	5
		E32-D25XB	25	8
	Fluorine coating	E32-D11U	90	30
	r identife deating	E32-D16	40 to 400	55 to 70
	Long distance,	E32-D11L	200	
	high power			65
	Ultracompact, ultrafine sleeve	E32-D21L/E32-D22L	50	17
		E32-D33	10	3.3
		E32-D331	1.5	0.5
		E32-CC200R	75	25
		E32-CC200	150	50
		E32-D32L	80	25
		E32-C31/E32-D32	40	13
		E32-C42 + E39-F3A	Spot diameter of 0.1 to 0.6 mm 6 to 15 mm.	
	Coaxial, small spot	E32-D32 + E39-F3A	Spot diameter of 0.5 to 1 mm a 6 to 15 mm.	
Special-		E32-C41 + E39-F3A-5	Spot diameter of	f 0.1 mm at 7 mm.
beam		E32-C31 + E39-F3A-5	Spot diameter of	f 0.5 mm at 7 mm.
models		E32-C41 + E39-F3B	Spot diameter of	0.2 mm at 17 mm.
		E32-C31 + E39-F3B	-	0.5 mm at 17 mm.
		E32-C31 + E39-F3C	Spot diameter	of 4 mm max. at 20 mm.
	Area sensing	E32-D36P1	75	25
		E32-R21 + E39-R3 (provided)	10	to 250
	Retro-reflective	E32-R16 + E39-R1 (provided)	150 to 1500	150 to 1000
		E32-L25/E32-L25A		3.3
		E32-L24S		to 4
	Convergent	E32-L24L		(center 4)
	Convergent- reflective	E32-L25L		(center 7.2)
	renective			
		E32-L86		to 10
		E32-L16	0 to 15	0 to 13
Environ-		E32-D51	120	40
ment	Heat resistant	E32-D81R/E32-D61	45	15
resistive		E32-D73	30	10
models	Chemical resistant	E32-D12F	50	16
	i Chemicai resistant	E32-D14F	20	6.5

For information on Fiber Units, refer to the E32 Series Fiber Sensor Best Selection (Cat. No. E354).


#### I/O Circuit Diagrams

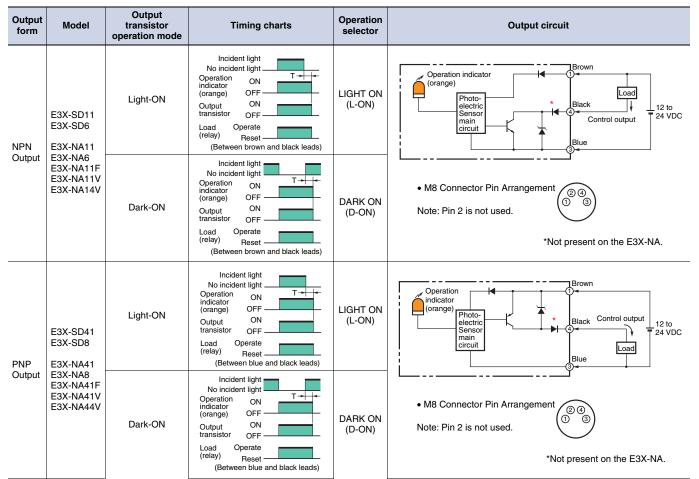

Note: Timing Charts for Timer Settings (T: Set Time)

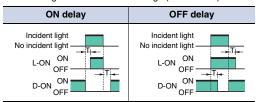

#### Plug (Sensor I/O Connector)

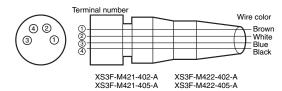


Classification	Wire color Connection pin		Application
DC	Brown	1	Power supply (+V)
	White	2	
	Blue	3	Power supply (0 V)
	Black	4	Output


Note: Pin 2 is not used.

#### **Nomenclature**

#### **Amplifier Units**

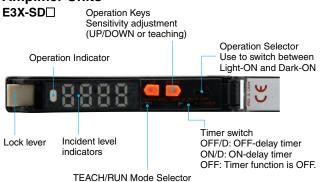

#### E3X-NA

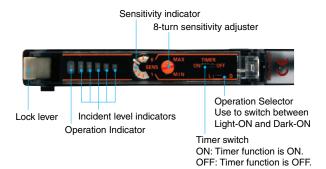

#### **Safety Precautions**



Used to select TEACH or RUN mode.

This product is not designed or rated for ensuring safety of persons either directly or indirectly.



Do not use it for such purposes.



Do not exceed the rated voltage. Excess voltage may result in malfunction or fire.



Do not use an AC power supply.
Using an AC power supply may result in rupturing.



High-temperature environments may result in burn injury.



#### **Precautions for Safe Use**

The following precautions must be observed to ensure safety.

- 1. Do not use the product in locations where flammable or explosive gas is present.
- 2. Do not use the product in locations subject to splashing water, oil, or chemicals, or in locations subject to steam.
- 3. Do not attempt to disassemble, repair, or modify the product.
- Do not apply voltage or current in excess of the rated ranges.
- 5. Do not use the product in atmospheres or environments that exceed product ratings.
- 6. Do not wire the product incorrectly, such as using incorrect power supply polarity.
- 7. Connect the load properly.
- 8. Do not short-circuit both ends of the load.
- 9. Do not use the product if the case is damaged.
- 10. When disposing of the product, dispose of it as industrial waste.
- 11. Do not use the product in locations subject to direct sunlight.
- 12. The surface temperature of the product may rise as a result of the ambient temperature, power supply, or other usage conditions. Use caution when performing maintenance and washing. Failure to do so may result in burn injury.

#### **Precautions for Correct Use**

Do not use the product in atmospheres or environments that exceed product ratings.

#### **Amplifier Units**

#### Designing

#### **Communications Hole**

The hole on the side of the Amplifier Unit is a communications hole for preventing mutual interference when Amplifier Units are mounted side-by-side. The E3X-MC11 Mobile Console (order separately) cannot be used.

If an excessive amount of light is received via the Sensor, the mutual interference prevention function may not work. In this case, make the appropriate adjustments using the sensitivity adjuster.


The mutual interference prevention function will not operate when the E3X-SD/NA is used side-by-side with E3X-DA-N models.

#### Mounting


#### **DIN Track Mounting/Removal**

#### **Mounting Amplifier Units**

1. Mount the Amplifier Units one at a time onto the DIN track.

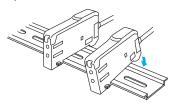

2. Slide the Amplifier Units together, line up the clips, and press the Amplifier Units together until they click into place.

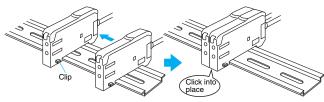

#### **Removing Amplifier Units**

Slide Amplifier Units away from each other, and remove from the DIN track one at a time. (Do not attempt to remove Amplifier Units from the DIN track without separating them first.)


- **Note 1.** The specifications for ambient temperature will vary according to the number of Amplifier Units used together. For details, refer to *Ratings and Specifications*.
  - Always turn OFF the power supply before mounting or removing Amplifier Units.

#### **Fiber Connection and Disconnection**

The E3X Amplifier Unit has a lock lever. Connect or disconnect the fibers to or from the E3X Amplifier Unit using the following procedures:


#### 1. Connection

Open the Protective Cover, insert the fibers according to the fiber insertion marks on the side of the Amplifier Unit, and lower the lock lever.

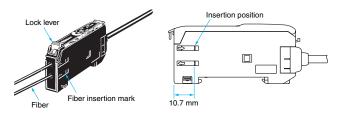

#### 2. Disconnection

Remove the Protective Cover and raise the lock lever to pull out the fiber.

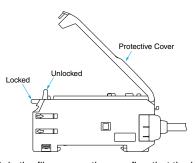

Note:To maintain the fiber properties, confirm that the lock is released before removing the fiber.

#### 3. Precautions for Fiber Connection/Disconnection

Be sure to lock or unlock the lock lever within an ambient temperature range between  $-10^{\circ}C$  and  $40^{\circ}C.$ 

#### Operating Environment

#### **Ambient Conditions**

If dust or dirt adhere to the hole for optical communications, it may prevent normal communications. Be sure to remove any dust or dirt before using the Units.

#### Other

#### **Protective Cover**


Be sure to mount the Protective Cover before use.

#### **Amplifier Units with Connectors**


#### Mounting

#### **Mounting Connectors**

1. Insert the Master or Slave Connector into the Amplifier Unit until it clicks into place.

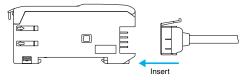


- Join Amplifier Units together as required after all the Master and Slave Connectors have been inserted.
- Attach the stickers (provided as accessories) to the sides of Master and Slave Connectors that are not connected to other Connectors.

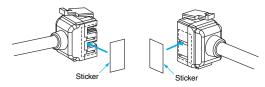

Note: Attach the stickers to the sides with grooves.


#### **Removing Connectors**

- 1. Slide the slave Amplifier Unit for which the Connector is to be removed away from the rest of the group.
- After the Amplifier Unit has been separated, press down on the lever on the Connector and remove it. (Do not attempt to remove Connectors without separating them from other Amplifier Units first.)

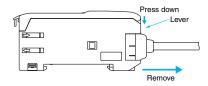


#### **Mounting End Plate (PFP-M)**

Depending on how it is mounted, an Amplifier Unit may move during operation. In this case, use an End Plate. Before mounting an End Plate, remove the clip from the master Amplifier Unit using a nipper or similar tool.

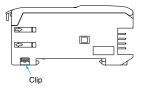


The clip can also be removed using the following mechanism, which is incorporated in the construction of the section underneath the clip.

1. Insert the clip to be removed into the slit underneath the clip on another Amplifier Unit.

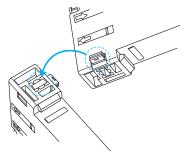


2. Remove the clip by rotating the Amplifier Unit.

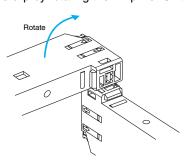



#### **Pull Strengths for Connectors (Including Cables)**


E3X-CN11: 30 N max. E3X-CN12: 12 N max. Dimensions (Unit: mm)

#### **Amplifier Units**

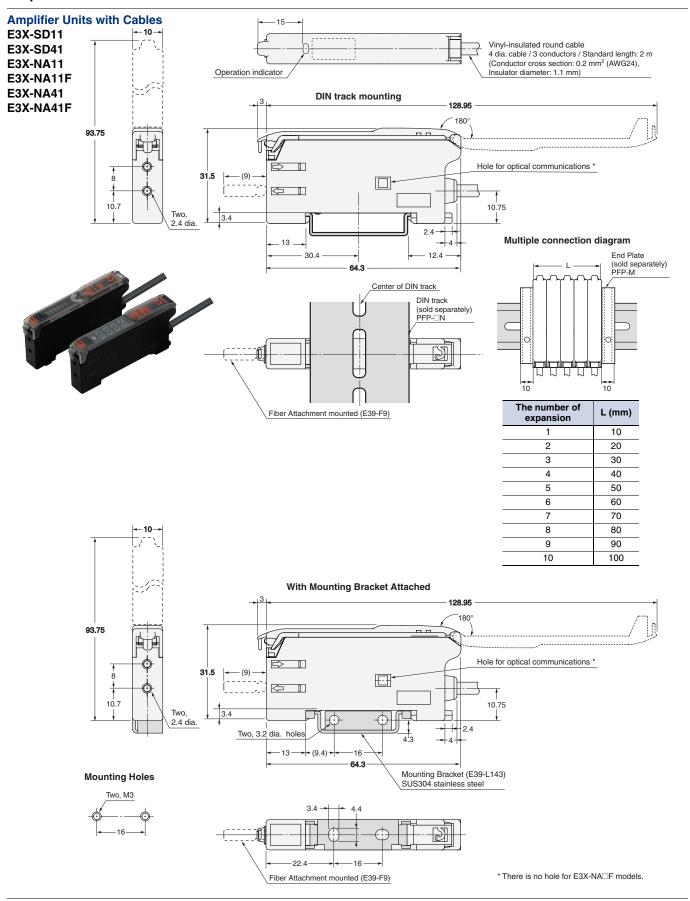

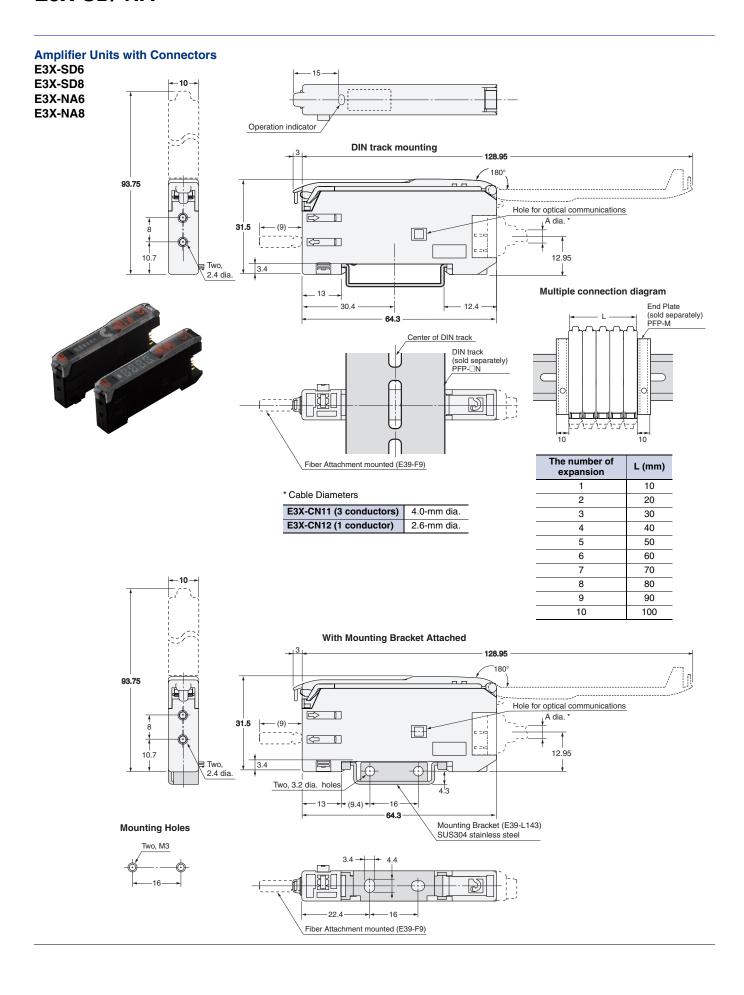

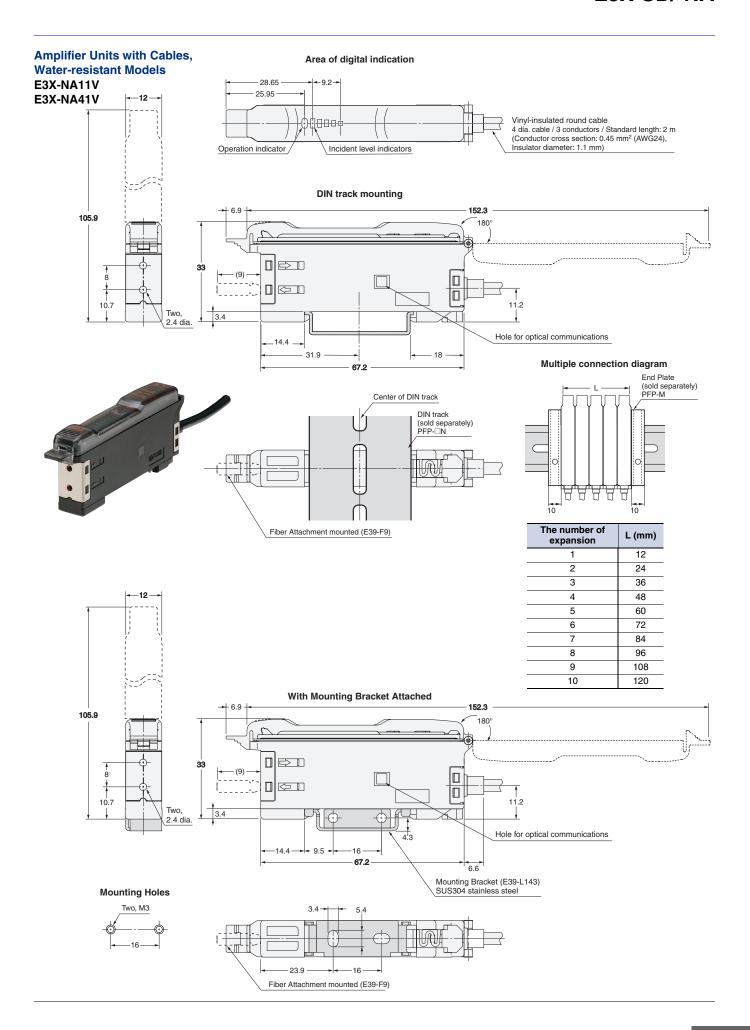


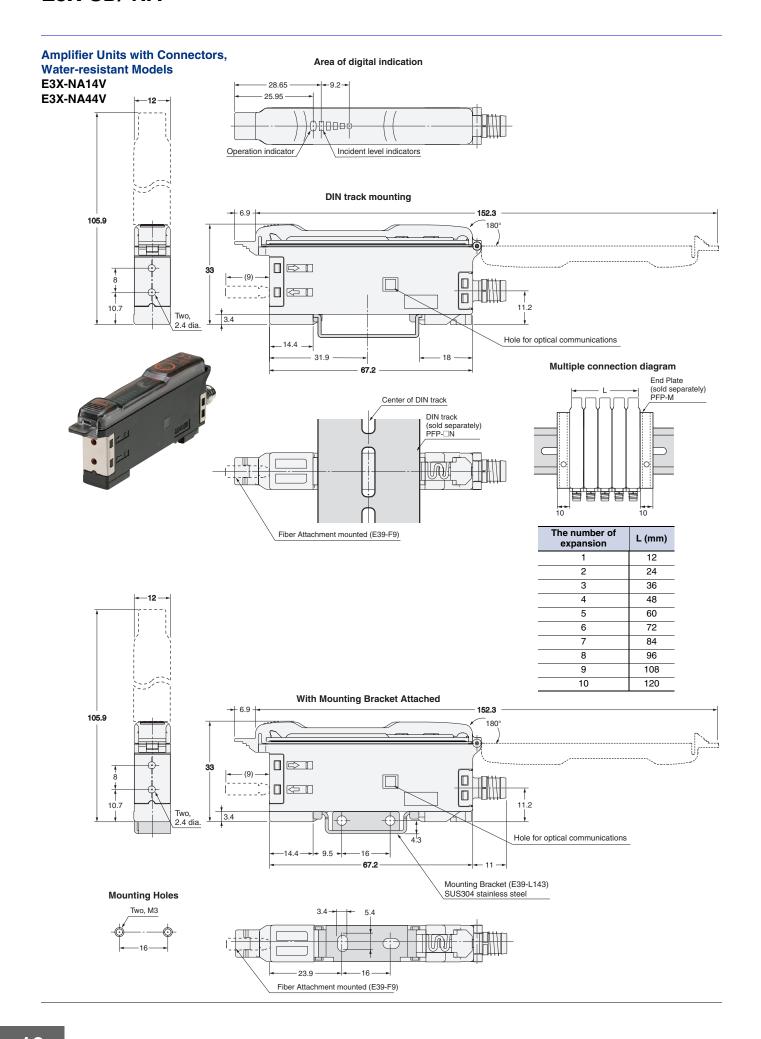

#### **Amplifier Unit Connectors**

# Master Connector E3X-CN11




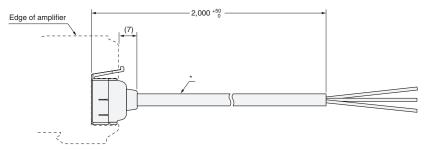

\* E3X-CN11: 4 dia, cable / 3 conductors / Standard length: 2 m (Conductor cross section: 0.2 mm2 (AWG24), Insulator diameter: 1.1 mm)

#### Slave Connector E3X-CN12



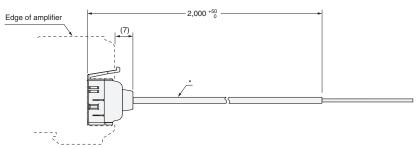


\* E3X-CN12: 2.6 dia. cable / 1 conductor / Standard length: 2 m (Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)

#### **Accessories (Order Separately)**

# **Mounting Brackets** E39-L143



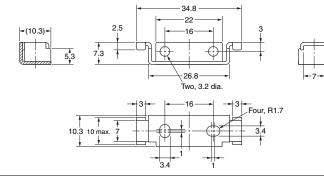





Material: Stainless steel (SUS304)

#### End Plates PFP-M



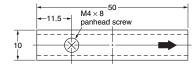

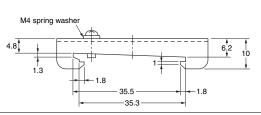

For information on Fiber Units, refer to the E32 Series Fiber Sensor Best Selection (Cat. No. E353).

#### **Operating Procedure**

#### E3X-SD□

#### 1 Displays

A 7-segment display showing excess gain is provided in addition to the orange operation indicator.

Use these when adjusting the light axis and setting the sensitivity at setup.

Display/indicator status (for L/ON)	Excess gain	Description
Operation indicator  Excess gain display	999% (10 times)	110% min. Stable incident light
•8888	100%	90% to 110% Unstable incident light or Unstable interrupted light
•8888	0%	90% max. Stable interrupted light

#### 2 Sensitivity Setting

The sensitivity can be set with the UP and DOWN Keys similar to using an adjuster knob. The sensitivity can also be easily set by using the following three teaching functions.

#### 2-1. Maximum Sensitivity Setting

The sensitivity can be set to the maximum. This is the optimal setting for resistance against the effects of dust.

Operation description	Switch/Key	Display
Set the TEACH/RUN selector switch to TEACH.	TEACH RUN	0 <u>EEch</u> ◆► 0 (039
Press the UP Key for 3 s min.	UP	OFULL
Set the TEACH/RUN selector switch to RUN (start of measurement).	TEACH RUN	0 run > 0103P

#### 2-2. Teaching with/without a Workpiece

Two points (one with the workpiece and the other without) are detected, and the operating level is set to the midpoint.

Operation description	Switch/Key	Display
Set the TEACH/RUN selector switch to TEACH.	TEACH RUN	0 <u>EEch</u> ◆ 0 (039
Press the UP Key with the workpiece present.	UP	0
Press the UP Key with the workpiece not present.	UP	ozpaŁ
Set the TEACH/RUN selector switch to RUN (start of measurement).	TEACH RUN	0 run > 0 (03P

#### 2-3. Automatic Teaching

Changes within a time are detected, and the operating level is set to the midpoint between the maximum and the minimum values of the changes. This setting is optimal for when the workpieces cannot be stopped.

Operation description	Switch/Key	Display
Set the TEACH/RUN selector switch to TEACH.	TEACH RUN	0 <u>E c h</u> ◆ 0 103P
Press the UP Key.	UP	0

Operation description	Curitale/Var	Diamley
Operation description	Switch/Key	Display
Hold down the UP Key during detection. Let the workpiece pass while the key is held down.	UP	ORULO
Set the TEACH/RUN selector switch to RUN (start of measurement).	TEACH RUN	0 run > 0 (03P

#### E3X-NA□

#### 1 Displays

A bar display (with four green and one red) showing excess gain is provided in addition to the orange operation indicator. Use these when adjusting the light axis and setting the sensitivity at setup.

Display/indicator status (for L/ON)	Excess gain level	Description
Operation indicator  Excess gain level display	Approx. 120% min.	Stable incident light
	Approx. 110% to 120%	
	Approx. 90% to 110%	Unstable incident light or Unstable interrupted light
	Approx. 80% to 90%	Stable interrupted light
	Approx. 80% max.	

MEMO	
IVILIVIO	

М	EMO

#### **READ AND UNDERSTAND THIS DOCUMENT**

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments

#### **WARRANTY**

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### **LIMITATIONS OF LIABILITY**

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **SUITABILITY FOR USE**

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- · Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **PERFORMANCE DATA**

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

#### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

This document provides information mainly for selecting suitable models. Please read the Instruction sheet carefully for information that the user must understand and accept before purchase, including information on warranty, limitations of liability, and precautions.

## OMRON Corporation Industrial Automation Company

Sensing Devices Division H.Q. Industrial Sensors Division Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan Tel: (81)75-344-7022/Fax: (81)75-344-7107

Regional Headquarters

OMRON EUROPE B.V.

#### **OMRON ELECTRONICS LLC**

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711 83 Clemenceau Avenue,

#### OMRON (CHINA) CO., LTD.

 Sensor Business Unit,
 Room 2211, Bank of China Tower,

 Carl-Benz-Str. 4 D-71154 Nufringen,
 200 Yin Cheng Zhong Road,

 Germany
 Pu Dong New Area, Shanghai, 200120, China

 Tel: (49) 7032-811-0/Fax: (49) 7032-811-199
 Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2220
 Note: Specifications subject to change without notice.

#### **Authorized Distributor:**

Cat. No. E388-E1-01

1007

CSM\_1\_1\_0409