



BATTERY MODULES

A modular concept allows the user to meet individual application demands and is available with two different options:

You can order the module with an assembled battery or you can choose only the bracket allowing the mounting of individual batteries such as long life or higher current which achieves a longer buffer-time. The mounting bracket allows the battery to be assembled just in time avoiding outdated batteries due to limited shelf life.

- Two mounting options:
DIN-Rail or panel/wall mounting
- Easy access to the terminals and the fuse
- Heavy duty fuse holder and spare fuse included

DATA

Battery

Maintenance free valve regulated lead acid battery

Battery voltage	nom	12Vdc
Battery capacity	nom	7Ah
Self-discharge	typ	3%/ month at 20°C
Design life (EUROBAT)		3 to 5 years

Fuse

Blade terminal fuse	nom	30A ATO® (257 030 Littelfuse)
---------------------	-----	----------------------------------

Terminals and Wiring

Type		Screw terminals
Solid wire	nom	2.5-4mm ²
Stranded wire	nom	2.5-4mm ²
American wire gauge	max	12 AWG
Wire stripping length	nom	7mm / 0.275"
Tightening torque	nom	0.8Nm / 7lb.in

Ambient Temperature

Operation	min	+0°C to +40°C
Storage and transport	min	-20°C to +50°C

Dimensions and Weight (UZX12.071)

Width	nom	155mm / 6.1"
Height	nom	124mm / 4.88"
Depth	nom	112mm / 4.41"
Weight	max	3200g / 7.06lb
The DIN-rail height when used must be added to the depth to calculate the total required installation unit depth.		

DATA

Instructions for Use and Disposal of the Battery

- Place the battery module outside the cabinet or in the coolest area when used inside the cabinet.
- Use wires no smaller than 2.5mm² (or 12 AWG) and not longer than 2x1.5m (cord length 1.5m).
- Disconnect battery fuse before working on the battery or on the DC-UPS.
- To replace battery, loosen screw with only one turn and slide the mounting bracket up.
- For storage, installation and operation, the requirements of the EN 50272-2 as well as other national regulations must be observed.
- Ensure sufficient ventilation for the battery.
- Always dispose the batteries through a recycling organisation. Batteries must be completely discharged before recycling.



Warranty

3 Year limited warranty except battery as battery is considered as a service part. Special conditions are part of our general terms and conditions. Do not store the battery longer than 9 month without supplementary charge or performance might change.

ORDER NUMBERS

UZX12.071	Battery module with battery
UZO12.07	Mounting kit without battery
UZB12.071	Battery replacement

MARKINGS



Marine, pending

Battery, terminal block, cables, fuse and fuse holder are **UL**-approved components.

PHYSICAL DIMENSIONS

Fig. 1 **Front view**



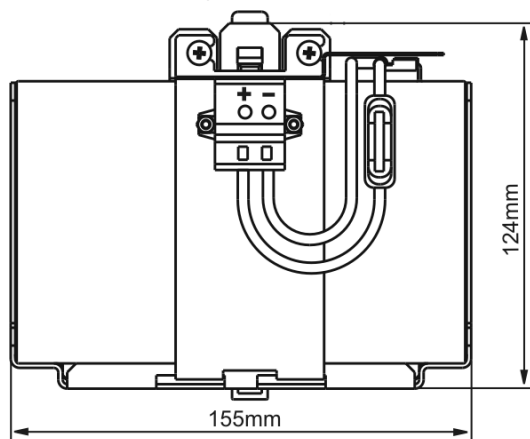


Fig. 2 **Side view**

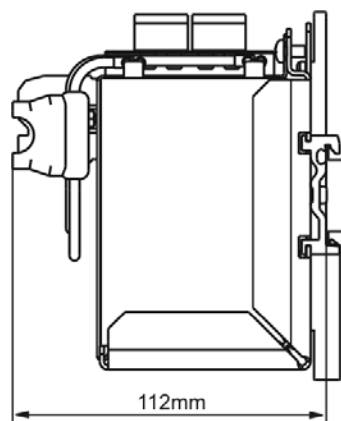


PANEL/WALL MOUNTING

Fig. 3 **Detaching DIN-Rail brackets**

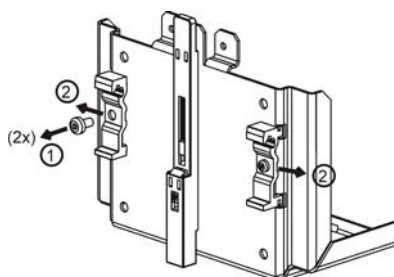


Detach the two aluminium brackets by removing the two screws with a Torx screwdriver (Torx 10).

Fig. 4 **Detach slide**

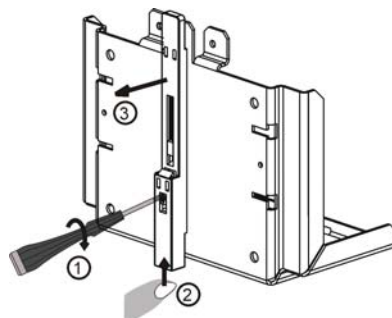

Remove the plastic lock mechanism by using a flat-blade screwdriver to press the lock downwards while pushing the plastic slide upwards at the same time. Detach the plastic slide.

Fig. 5 **Panel/wall mount**

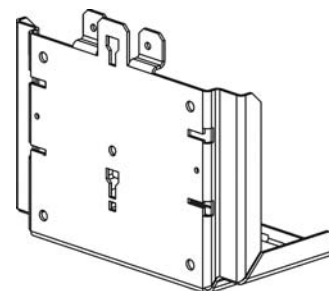

Panel/wall mounting is possible by using either the four holes on the rear or the bottom of the unit. See hole pattern below.

Fig. 6 **Rear hole pattern**

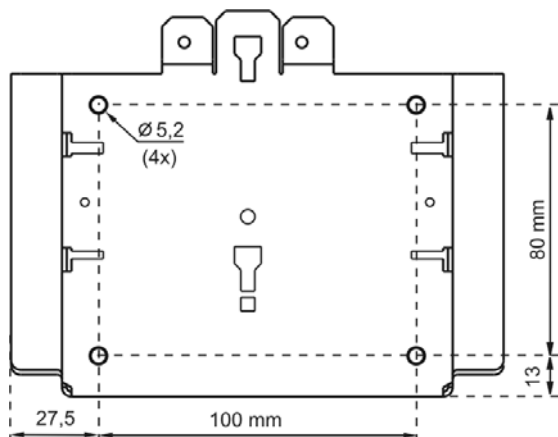


Fig. 7 **Bottom hole pattern**

