

Emic 2 Text-to-Speech Module (#30016)

Designed in conjunction with Grand Idea Studio (www.grandideastudio.com), the Emic 2 Text-to-Speech Module is an unconstrained, multi-language voice synthesizer that converts a stream of digital text into natural sounding speech output. Using the universally recognized DECTalk text-to-speech synthesizer engine, Emic 2 provides full speech synthesis capabilities for any embedded system via a simple command-based interface.

Features



- High-quality speech synthesis for English and Spanish languages
- Nine pre-defined voice styles comprising male, female, and child
- Dynamic control of speech and voice characteristics, including pitch, speaking rate, and word emphasis
- Industry-standard DECTalk text-to-speech synthesizer engine (5.0.E1)
- On-board audio power amplifier and 1/8" (3.5 mm) audio jack
- Single row, 6-pin, 0.1" header for easy connection to a host system

Key Specifications

- Power requirements: +5 VDC, 30 mA idle, 46-220 mA active (depending on speech parameters and output load)
- Communication: asynchronous 9600 bps serial
- Operating temperature: -20 to +70 °C (-4 to +158 °F)
- Dimensions: 1.25" W x 1.5" L x 0.37" H (3.17 W x 3.81 L x 0.94 H cm)

Application Ideas

- Reading Internet-based data streams (such as e-mails or Twitter feeds)
- Conveying status or sensor results from robots, scientific equipment, or industrial machinery
- Language learning or speech aids for educational environments

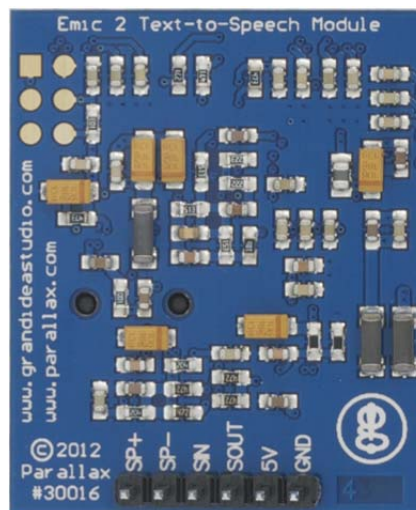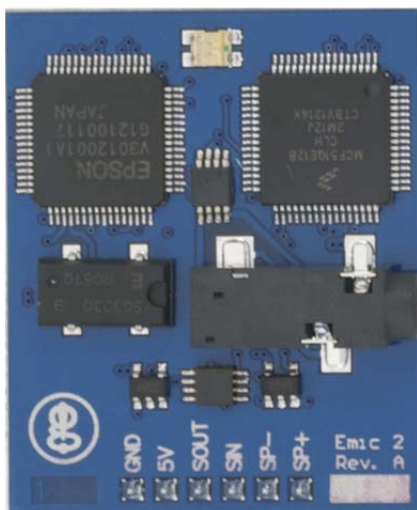


Connections

Emic 2 interfaces to a host microcontroller or computer system using only four connections (GND, 5V, SOUT, SIN). Additional connections (SP+, SP-) are available for direct interfacing to an 8Ω speaker. A 1/8" (3.5mm) audio jack provides a single-ended, monaural output for easy connection to headphones, amplified speakers, or other audio equipment.

Pin	Pin Name	Type	Function
1	GND	G	System ground. Connect to power supply's ground (GND) terminal.
2	5V	P	System power, 5 VDC input.
3	SOUT	O	Serial output to host. 5 V TTL-level interface, 9600 bps, 8 data bits, no parity, 1 stop bit, non-inverted.
4	SIN	I	Serial input from host. 3.3 V to 5 V TTL-level interface, 9600 bps, 8 data bits, no parity, 1 stop bit, non-inverted.
5	SP-	O	Differential audio amplifier output, bridge-tied load configuration, negative side. Connect directly to 8 Ω speaker.
6	SP+	O	Differential audio amplifier output, bridge-tied load configuration, positive side. Connect directly to 8 Ω speaker.

Type: I = Input, O = Output, P = Power, G = Ground

Use the following example circuit for connecting the Emic 2 Text-to-Speech Module:

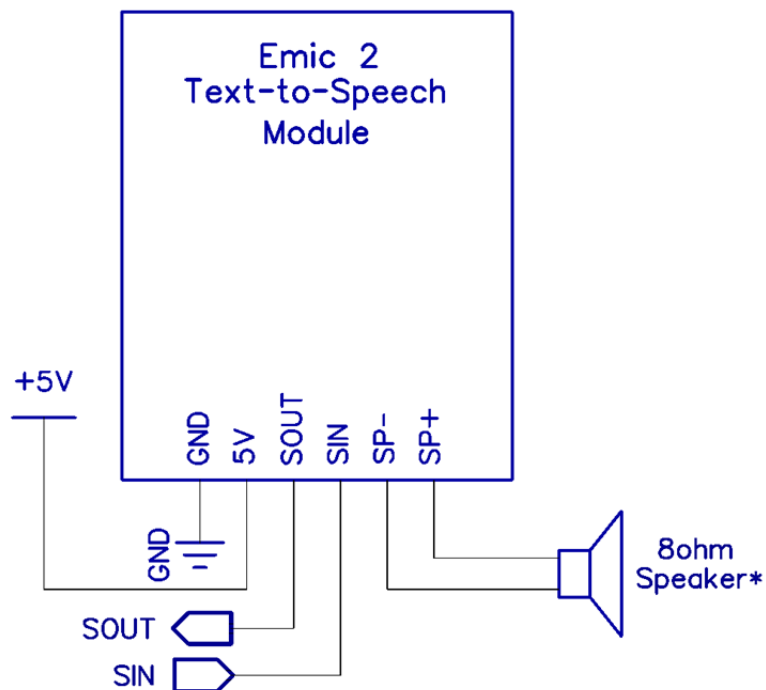

*Note: For audio output, a connection needs to be made to either SP+/SP- or the 1/8" audio jack. Audio quality may be affected if both outputs are used at the same time.

Usage

Emic 2 is controlled by the host via a serial communications interface. To use, simply send the desired command to Emic 2 and listen for audio output from the SP+/SP- speaker connection or 1/8" audio jack.

The serial interface is configured for 9600 bps, 8 data bits, no parity, 1 stop bit (8N1). When Emic 2 is ready to receive commands, it will send a ":" to the host. It will then wait in an idle state until it receives a valid command, at which time it performs the command and returns any command-specific response. Emic 2 will return a "?" upon receiving an invalid command.

On power-up, Emic 2 loads its default text-to-speech settings consisting of voice type, audio volume, speaking rate, language, and parser. These settings can be configured by the user to vary the audio output. See the Command Set section below for more details.

Status Indicator

A visual indication of Emic 2's operating state is given with the on-board light-emitting diode (LED):

1. **Green:** Idle state. Waiting for a valid command to be sent by the host.
2. **Red:** Active state. For example, during a text-to-speech conversion.
3. **Orange (Solid):** Initialization state. Occurs on power-up only. Emic 2 takes approximately three seconds to properly initialize on power-up before it is ready to receive commands.
4. **Orange (Blinking):** Error state. Emic 2 has malfunctioned due to an on-board communication error. If a power cycle of Emic 2 does not remedy the situation, please contact Parallax technical support for further assistance.

If the LED is OFF, Emic 2 may not be receiving power.

Command Set

All commands are ASCII-based printable characters and are not case-sensitive (upper case and lower case will both work). Each command must be terminated with a CR or LF.

Sx	Convert text-to-speech: x = message (1023 characters maximum)
Dx	Play demonstration message: x = 0 (Speaking), 1 (Singing), 2 (Spanish)
X	Stop playback (while message is playing)
Z	Pause/un-pause playback (while message is playing)
Nx	Select voice: x = 0 to 8
Vx	Set audio volume (dB): x = -48 to 18
Wx	Set speaking rate (words/minute): x = 75 to 600
Lx	Select language: x = 0 (US English), 1 (Castilian Spanish), 2 (Latin Spanish)
Px	Select parser: x = 0 (DECTalk), 1 (Epson)
R	Revert to default text-to-speech settings
C	Print current text-to-speech settings
I	Print version information
H	Print list of available commands

Command Details

Sx: Convert text-to-speech

Convert the passed text string into synthesized speech. The text string is limited to 1023 characters and should terminate on a clause or sentence boundary as indicated by a full stop '.' or comma ',' punctuation mark. If the text is longer than the allowable limit, it will be truncated and may result in unintelligible speech output.

Emic 2 expects characters that conform to the ISO-8859-1 Latin character set (http://en.wikipedia.org/wiki/ISO/IEC_8859-1). See the Special Characters section (p. 9) for details on entering accents, foreign characters, and symbols.

The audio will be output from both the SP+/SP- speaker connection and 1/8" audio jack. The LED will remain RED while the text-to-speech message is being played.

Example:

```
:SHello there! My name is Emic 2. Nice to meet you.  
<audio output>  
:
```

Dx: Play demonstration message

Play one of Emic 2's built-in demonstration messages:

- 0: English Introduction
- 1: Singing "Daisy Bell" (http://en.wikipedia.org/wiki/Daisy_Bell)
- 2: Spanish Introduction

Note that each demonstration message is fixed with specific voice, audio volume, speaking rate, language, and parser settings and cannot be modified by the user. All user-configured settings will be saved prior to demonstration playback and restored afterwards.

See the Sample Text Strings section (p. 9) for the actual text strings used for these demonstration messages.

Example:

```
:D0  
<audio output>  
:
```

X: Stop playback (while message is playing)

Immediately stop the currently playing text-to-speech message. This command is only valid while a message is playing.

Example:

```
:D0  
<audio output>  
X  
:
```

Z: Pause/unpause playback (while message is playing)

Immediately pause or unpause the currently playing text-to-speech message. Emic 2 will respond with a "." indicating that the command has successfully been received. While the playback is paused, the LED will remain RED. This command is only valid while a message is playing.

Example:

```
:D0
<audio output>
Z.
<playback paused>
Z.
<audio output>
:
```

Nx: Select voice

Select the speaking voice:

- 0: Perfect Paul (Paulo)
- 1: Huge Harry (Francisco)
- 2: Beautiful Betty
- 3: Uppity Ursula
- 4: Doctor Dennis (Enrique)
- 5: Kit the Kid
- 6: Frail Frank
- 7: Rough Rita
- 8: Whispering Wendy (Beatriz)

Each voice has a different baseline amplitude. As such, your volume settings may need to be adjusted to suit your particular application.

This setting will remain in effect until another value is entered or Emic 2 is powered off. Upon power-up, the default value is 0 (Paul).

Example:

```
:N5
:
```

Vx: Set audio volume (dB)

Set the audio output volume in decibels from -48 (softest) to 18 (loudest).

This setting will remain in effect until another value is entered or Emic 2 is powered off. Upon power-up, the default value is 0.

Example:

```
:V-10
:
```

Wx: Set speaking rate (words/minute)

Set the speaking rate in words per minute from 75 (slowest) to 600 (fastest).

This setting will remain in effect until another value is entered or Emic 2 is powered off. Upon power-up, the default value is 200.

Example:

```
:W150  
:
```

Lx: Select language

Select the language and/or dialect to be used for text-to-speech conversion:

- 0: US English
- 1: Castilian Spanish
- 2: Latin Spanish

This setting will remain in effect until another value is entered or Emic 2 is powered off. Upon power-up, the default value is 0 (US English).

Example:

```
:L2  
:
```

Px: Select parser

Select the text parsing engine to be used during text-to-speech conversion:

- 0: DECTalk
- 1: Epson

See the Parser Selection section (p. 8) for usage information and parser details.

This setting will remain in effect until another value is entered or Emic 2 is powered off. Upon power-up, the default value is 1 (Epson).

Example:

```
:P0  
:
```

R: Revert to default text-to-speech settings

Resets the user-configurable text-to-speech settings to their default, power-up configuration:

Voice = 0 (Paul)
Volume = 0 dB
Rate = 200 words/minute
Language = 0 (US English)
Parser = 1 (Epson)

Example:

```
:R  
:
```

C: Print current text-to-speech settings

Displays the current values of the user-configurable text-to-speech settings.

Example:

```
:C  
Emic 2 Text-to-Speech Settings:  
Voice = 3 (Ursula)  
Volume = 0 dB  
Rate = 160 words/minute  
Language = 0 (US English)  
Parser = 0 (DECTalk)  
:
```

V: Print version information

Displays version information for the Emic 2 Text-to-Speech Module. This data is useful for troubleshooting and debugging.

- EMIC FW: Firmware version (major.minor)
- S1V30120 HW and FW: Hardware and firmware version (major.minor.revision) of the Epson S1V30120 Voice Guidance IC used on-board Emic 2

Example:

```
:V  
Parallax Emic 2 Text-to-Speech Module  
Designed by Grand Idea Studio [www.grandideastudio.com]  
Manufactured and distributed by Parallax [support@parallax.com]  
EMIC FW = 1.0  
S1V30120 HW = 4.2  
S1V30120 FW = 2.1.6 [0x2551_25]  
:
```

H: Print list of available commands

Lists all available commands for the Emic 2 Text-to-Speech Module.

Example:

```
:H  
Emic 2 Command List:  
Sx Convert text-to-speech: x = message (1023 byte maximum)  
Dx Play demonstration message: x = 0 (Speaking), 1 (Singing), 2 (Spanish)  
< more commands listed, but not shown in this example >  
:
```

Parser Selection

Emic 2 provides a choice of text parsing engines: Epson or DECTalk.

Both will process incoming text strings and generate synthesized speech, but there are differences in control and customization of the resulting output. Each parser's specific functionality is incompatible with the other. Choosing which parser to use ultimately depends on what sort of speech output you desire for a particular text string.

See the Sample Text Strings section (p. 9) using specific features of the Epson and DECTalk parsers.

Epson Parser

The Epson parser is the default setting upon Emic 2 power-up. It allows on-the-fly, dynamic changes of emphasis, pitch, voice selection, and speaking rate to take place within a text using embedded mark-up control symbols:

\ /	Decrease pitch
/ \	Increase pitch
>>	Increase speaking rate
<<	Decrease speaking rate
—	Emphasize the next word
##	Whisper the next word
: -) x	Select voice (x = 0-8) (See the "Nx" command in the Command Set section (p. 5) for corresponding voice names)

DECTalk Parser

The DECTalk parser is intended for advanced users and allows the finest control and customization of speech output by providing direct access to the internal parameters of the DECTalk 5.0.E1 text-to-speech synthesizer engine.

Dynamic customization using the DECTalk parser requires the correct usage of specialized commands and their associated parameters. Incorrect usage of the DECTalk commands may result in improper or unintelligible speech output. Please refer to the Epson/Fonix DECTalk 5.0.E1 User Manual available on the Emic 2 product page for full command details and phonetic symbols.

Only a subset of the DECTalk commands are supported by the Emic 2 Text-to-Speech Module:

[: comma]	Set the length of a comma pause (in milliseconds)
[: dv]	Customize voice parameters (save option not supported)
[: mode]	Set how text is processed/parsed (no e-mail parsing supported)
[: name]	Set the current speaking voice (numbers only: 0-8)
[: period]	Set the length of a period pause (in milliseconds)
[: phoneme]	Enable phonemic interpretation of subsequent text
[: pitch]	Modify the pitch of uppercase letters
[: pronounce]	Set the type of pronunciation for the subsequent word
[: punct]	Set how punctuation marks are handled
[: rate]	Set speaking rate
[: say]	Specify when speaking begins
[: skip]	Skip a selected part of text pre-processing
[: sync]	Makes a command synchronous to allow it to be processed before synthesis continues

A large archive of songs intended for use with the DECTalk 4.40 or earlier text-to-speech synthesizer engine can be found at www.theflameofhope.co/SONGS.html. Some commands and/or phonemes used in the text strings may need to be modified in order to work properly with the newer DECTalk 5.0.E1 version implemented by Emic 2.

Special Characters

Emic 2 expects characters that conform to the ISO-8859-1 Latin character set (http://en.wikipedia.org/wiki/ISO/IEC_8859-1). Along with standard alphanumeric characters, the character set also contains accents, symbols, and foreign characters (ranging from 0xA0 to 0xFF) that may not have specific keyboard keys assigned to them.

Emic 2 provides an easy method to enter single-byte hexadecimal character codes from any host by using an escape sequence "\xhh" (where hh is two hex digits). For example, to use the letter ñ (n-tilde, which has a hexadecimal value of 0xF1), enter the text "\xF1" within your text string.

On the Windows operating system, if the desired character is unavailable on your keyboard, you can insert the character directly by pressing a special key combination: Hold down the ALT key and enter the four digit decimal equivalent of the character in the numeric keypad section of the keyboard. For example, for the letter ñ (n-tilde), press ALT-0241.

On the Mac OS X operating system, most of the special character codes in its default MacRoman character set are not compatible with the ISO-8859-1 character set. Thus, if you try to enter special characters directly from a keyboard using OS X, Emic 2 may return an error or speak characters you were not expecting. In this case, it is recommended to use the above-mentioned escape sequence.

Other operating systems may also support direct insertion of special characters. Please refer to the specific operating system documentation for details.

Sample Text Strings

This section contains sample text strings that demonstrate the configurability and varied speech outputs of the Emic 2 Text-to-Speech Module. To use, first ensure that the correct parser is selected. Then, copy the desired text string and pass it to Emic 2 with the "S" command.

Epson Parser

All 9 voices in a single text string

My Emic has a :->0 voice :->1 voice :->2 voice :->3 voice:->4 voice :->5 voice:->6 voice :->7 voice:->8 voice.

English Introduction

(Built-in demonstration message #0)

:->0 Hello everyone. My name is Emic 2. I am the next generation text-to-speech module created by Grand Idea Studio. I can ##whisper ##very ##quietly. I can change to 1 of 9 voices. For example, from Paul :->1 to Harry :->4 to Dennis :->8 to Wendy. :->0 I can also /\ increase my pitch. /\ And increase my pitch again. >>>> Then speak faster >>>> and even faster >>>> and even faster again. <<<<<<<<<< \V\V\V And then go back to normal.

Spanish Introduction

(Built-in demonstration message #2) (Language must be set to Castilian Spanish)

:-)0 Hola. Me llamo Emic numero 2. Ahora puedo hablar espa\xF1ol! Soy la pr\xF3xima generacion de texto a voz modulo creado por Grand Idea Studio. Yo puedo ##susurrar ##en ##voz ##muy ##baja. Yo puedo cambiar a una de las nueve voces. Por ejemplo, de Paulo :->1 a Francisco :->4 a Enrique :->8 a Beatriz. :->0 Tambien puedo /\ y aumentar mi tono. /\ y aumentar mi tono otra vez. >> Entonces hablar mas r\xE1pido. >> y aun mas r\xE1pido >> y aun mas r\xE1pido otra vez. <<<<<< \V\V\V Y luego volver a la normalidad.

DECTalk Parser

Robotic monotone

[rate 200][:n0][:dv ap 90 pr 0] All your base are belong to us.

Singing "Daisy Bell"

(Built-in demonstration message #1), http://en.wikipedia.org/wiki/Daisy_Bell

[phone arpa speak on][rate 200][:n0][dey<650,22>ziy<600,19> dey<650,15>ziy<600,10> gih<200,12>v miy<200,14> yurr<200,15> ae<400,12>nsax<200,15>r duw<750,10> _<400,10>][:n0][ay<600,17>m hxae<500,22>f kr ey<650,19>ziy<600,15> ao<200,12>ll fao<200,14>r dhax<200,15> llah<400,17>v ao<200,19>v yu<750,17> _<400,17>][:n0][ih<200,19>t wow<200,20>nt biy<200,19> ax<200,17> stay<500,22>llih<200,19>sh mae<350,17>rih<400,15>jh<150,15>][:n0][ay<200,17> kae<400,19>nt ax<200,15>fow<400,12>rd ax<200,15> kae<350,12>rih<400,10>jh<150,10>][:n0][bah<200,10>t yu<500,15>d lluh<200,19>k swiy<400,17>t ah<200,10>p ao<500,15>n dhax<200,19> siy<200,17>t ao<200,17>v ah<200,19> bay<200,22>six<200,19>kel<200,15> bih<400,17>llt fao<200,10>r tuw<800,15>][:n0]

Singing "Happy Birthday"

[phone arpa speak on][rate 200][:n0][hxae<300,10>piy<300,10> brrrx<600,12>th<100>dey<600,10>tuw<600,15> yu<1200,14> _<300> hxae<300,10>piy<300,10> brrrx<600,12>th<100>dey<600,10> tuw<600,17>yu<1200,15> _<300> hxae<300,10>piy<300,10> brrrx<600,22>th<100>dey<600,19> dih<600,15>r eh<600,14>m<100,12>ih<350,12>k _<120> _<300> hxae<300,20>piy<300,20> brrrx<600,19>th<100>dey<600,15> tuw<600,17> yu<1200,15>][:n0]

Singing "The Star-Spangled Banner"

(The text exceeds the maximum allowable 1023 characters per message, so it must be split into two messages)

[phone arpa speak on][rate 100][:n0][ow<200,18>ow<200,15> sey<400,11> kae<400,15>n yu<400,18>w siy<600,23> _<300> bay<350,27> dhah<50,25> dao<400,23>nz rr<400,15>ll iy<400,17> llay<600,18>t _<300> wah<200>t sow<200> praw<600,27>dlli<200,25> wiy<400,23> hxe<400,22>eld _<300> ae<300,20>t dhah<100,22> tway<400,23> llay<400>ts llae<400,18>st glli<400,15>m iy<200,11>nx _<300> hxuw<300,18>z brao<100,15>d stray<400,11>ps ae<400,15>nd bray<400,18>t stah<600,23>rz _<300> thruw<300,27> dhah<100,25> peh<400,23> rrel<400,15> ah<400,17>s fay<600,18>t _<300> ow<200,18>r dhah<200,18> rrae<600,27>mpah<200,25>rts wiy<400,23> waa<600,22>cht wr<300,20> sow<100,22> gae<400,23>llah<400>ent lli<400,18> striy<400,15>miy<200,11>nx _<300>][:n0]

[:phone arpa speak on][:rate 100][:n0][ae<300,27>nd dhah<100> raa<400> keh<400,28>ts r eh<400,30>d glley<700>r _<300> dhah<100,28> baa<400,27>mz brr<400,25>stih<400,27>nx ih<400,28>n ey<600>r _<300> gey<400>v pruw<600,27>f thruw<200,25> dhah<400,23> nay<900,22>t dhae<300,20>d aw<100,22>rr filae<400,23>g wah<400,15> stih<400,17>ll dheh<600,18>r _<300> ow<400> sey<400,23> dah<400>z dhae<200,23>ae<200,22>t stah<400,20>r spae<400>ngel<400>d bae<400,25>nrr<200,28>rr<200,27> yxeh<200,25>eh<200,23>t wey<800,23>ey<150,25>ey<150,23>ey<1200,22>v _<900> fow<300,18>rdhah<300> llae<900,23>ae<400,25>nd ah<300,27>v dhah<300,28> friy<1000,30>iy<1000,35> _<900> ae<300,23>nd dhah<300,25> hxow<1000,27>m _<600> ah<300,28>v dhah<1000,25> brrey<1500,23>v _<900>][:n0]

Certain characters are not spoken

The following characters are not spoken by Emic 2 during a text-to-speech conversion. If you'd like any of these specific characters to be spoken, simply use the text equivalent in your text string (For example, "less than" instead of "<").

Character	ISO-8859-1 Hex Code	Description
(	0x28	Left parenthesis
<	0x3C	Less than
[	0x5B	Left square bracket
{	0x7B	Left curly bracket
	0x7C	Vertical bar
	0xA0	No-break space
¤	0xA4	Currency sign
¡	0xA6	Broken bar
¨	0xA8	Diaeresis
¬	0xAC	Not sign
SHY	0xAD	Soft hyphen

Character	ISO-8859-1 Hex Code	Description
®	0xAE	Registered sign
—	0xAF	Macron
´	0xB4	Acute accent
¸	0xB8	Cedilla
º	0xBA	Masculine ordinal indicator
Ð	0xD0	Latin capital letter eth
×	0xD7	Multiplication sign
Þ	0xDE	Latin capital letter thorn
÷	0xF7	Division sign
þ	0xFE	Latin small letter thorn
ÿ	0xFF	Latin small letter y with diaeresis

Electrical Characteristics

At VCC = +5.0V and TA = 25°C unless otherwise noted

Parameter	Symbol	Test Conditions	Specification			Unit
			Min.	Typ.	Max.	
Supply Voltage	V _{CC}	---	3.6	5.0	5.5	V
Supply Current, Idle	I _{IDLE}	---	---	30	---	mA
Supply Current, Active	I _{CC}	Demo #0, R _L = 8 Ω	---	---	46	mA
		Volume = -38dB	---	---	65	
		Volume = 0dB	---	---	220	
SP+/SP- Continuous Average Output Power	P _O	R _L = 8 Ω	---	---	300	mW
Audio Jack Impedance	J _L	No load	---	10	---	Ω
Audio Jack Peak-to-Peak Output Voltage	J _{VPP}	Demo #0, No load	---	---	0.85	V
		Volume = -38dB	---	---	1.75	
		Volume = 0dB	---	---	4.1	
Audio Jack Peak Output Voltage	J _{VPK}	Demo #0, No load	---	---	0.4	V
		Volume = -38dB	---	---	1.0	
		Volume = 0dB	---	---	2.5	

Absolute Maximum Ratings

Condition	Value
Operating Temperature	-20°C to +70°C (-4°F to +158°F)
Storage Temperature	-55°C to +125°C (-67°F to +257°F)
Supply Voltage (V _{CC})	+6.0V
Ground Voltage (V _{SS})	0V

NOTICE: Stresses above those listed under *Absolute Maximum Ratings* may cause permanent damage to the device. This is a stress rating only and functional operation of the device at those or any other conditions above those indicated in the listings of this specification is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability.

Open Source Files and Example Code

The following engineering materials are released as open source under a Creative Commons Attribution 3.0 United States license (<http://creativecommons.org/licenses/by/3.0/us/>), allowing free distribution and reuse. The materials are posted on the Emic 2 product page; search "30016" at www.parallax.com:

- Schematic
- Bill-of-Materials
- Assembly Drawing
- Example Code for BASIC Stamp 2, Propeller P8X32A, and Arduino Uno

Revision v1.1: Updated note below connection diagram and added row 6 to Connections table; page 2.



Emic 2 Text-to-Speech Module (Parallax #30016)


Bill-of-Materials

HW A, Document 1.0, March 8, 2012

Notes:




1) Do not populate: J3

Item	Quantity	Reference	Manufacturer	Manuf. Part #	Distributor	Distrib. Part #	Description
1	20	C1, C2, C6, C7, C8, C10, C15, C16, C17, C18, C19, C20, C21, C23, C31, C32, C33, C34, C35, C36	Kemet	C0603C104K4RACTU	Digi-Key	399-1096-1-ND	0.1uF ceramic capacitor, 16V, X7R, 0603
2	5	C3, C22, C24, C27, C37	TDK	C1608X7R1C105K	Digi-Key	445-1604-1-ND	1.0uF ceramic capacitor, 16V, X7R, 0603
3	6	C4, C5, C14, C25, C26, C28	Kemet	T491A106M016AS	Digi-Key	399-3687-1-ND	10uF capacitor, 20%, 16V, tantalum, size A
4	2	C9, C29	TDK	C1608X7R1H471K	Digi-Key	445-1307-1-ND	470pF ceramic capacitor, 50V, X7R, 0603
5	2	C11, C30	TDK	C1608X7R1H103K	Digi-Key	445-1311-1-ND	10000pF ceramic capacitor, 50V, X7R, 0603
6	1	C12	TDK	C1608X7R1H102K	Digi-Key	445-1308-1-ND	1000pF ceramic capacitor, 50V, X7R, 0603
7	2	C13, C38	Kemet	C0603C224K4RACTU	Digi-Key	399-5619-1-ND	0.22uF ceramic capacitor, 16V, X7R, 0603
8	1	C39	Murata	GRM188R71H473KA61D	Digi-Key	490-3287-1-ND	0.047uF ceramic capacitor, 50V, X7R, 0603
9	1	D1	Kingbright	APB3025ESGC-F01	Mouser	604-APB3025ESGC-F01	Red/Green Bi-Color LED, 1201W SMT
10	1	J1	Molex	22-28-4060	Digi-Key	WM6406-ND	Header, Single row, Vertical, 6-pin, 0.1" P
11	1	J2	CUI	SJ-3523-SMT	Digi-Key	CP-3523SJCT-ND	Connector, Audio Jack, 3.5mm, Stereo, SMD
12	3	L1, L2, L3	Murata	BLM41PF800SN1L	Digi-Key	490-1059-1-ND	Ferrite Chip, 80R @ 100MHz, 1A, 1806
13	1	L4	TDK	MLZ2012A3R3W	Digi-Key	445-6394-1-ND	Inductor, 3.3uH, 340mR, 200mA, 0805
14	2	R1, R9	Any	Any	Digi-Key	P200KGCT-ND	200k, 5%, 1/10W, 0603
15	4	R2, R3, R4, R5	Any	Any	Digi-Key	P4.7KGCT-ND	4.7k, 5%, 1/10W, 0603
16	1	R6	Any	Any	Digi-Key	P10KGCT-ND	10k, 5%, 1/10W, 0603
17	1	R7	Any	Any	Digi-Key	P270GCT-ND	270 ohm, 5%, 1/10W, 0603
18	1	R8	Any	Any	Digi-Key	P470GCT-ND	470 ohm, 5%, 1/10W, 0603
19	2	R10, R19	Any	Any	Digi-Key	P47KGCT-ND	47k, 5%, 1/10W, 0603
20	1	R11	Any	Any	Digi-Key	P22KGCT-ND	22k, 5%, 1/10W, 0603
21	2	R12, R16	Any	Any	Digi-Key	P51KGCT-ND	51k, 5%, 1/10W, 0603
22	1	R13	Any	Any	Digi-Key	P1.5KGCT-ND	1.5k, 5%, 1/10W, 0603
23	1	R14	Any	Any	Digi-Key	P15KGCT-ND	15k, 5%, 1/10W, 0603
24	1	R15	Any	Any	Digi-Key	P2.2KGCT-ND	2.2k, 5%, 1/10W, 0603
25	1	R17	Any	Any	Digi-Key	P220KHCT-ND	220k, 1%, 1/10W, 0603
26	1	R18	Any	Any	Digi-Key	P100KHCT-ND	100k, 1%, 1/10W, 0603
27	1	R20	Any	Any	Digi-Key	P10GCT-ND	10 ohm, 5%, 1/10W, 0603
28	1	U1	Freescall	MCF51QE128CLH	Future	N/A	Microcontroller, Coldfire, TQFP-64
29	1	U2	Texas Instruments	PCA9306DCTR	Digi-Key	296-18509-1-ND	Voltage-Level Translator, SM8
30	1	U3	Micrel	MIC5205-3.3YM5	Digi-Key	576-1259-1-ND	Linear Regulator, LDO, 3.3V, 150mA, SOT23-5
31	1	U4	Micrel	MIC5205YM5	Digi-Key	576-1262-1-ND	Linear Regulator, LDO, Adjustable, 150mA, SOT23-5
32	1	U5	Epson	S1V30120F01A100	Future	N/A	IC, Text-to-Speech Synthesizer, TQFP-64
33	1	U6	National	LM4864MM	Digi-Key	LM4864MMTR-ND	IC, Audio Amplifier, 300mW typical, MSOP-8
34	1	Y1	Epson	SG-3030JC 32.7680KB3:ROHS	Future	N/A	Oscillator, 32.768kHz, +/-23ppm, 1.5V-5.5V, SMD
35	1	PCB	e-Teknet	EMIC2	N/A	N/A	PCB, Fabrication

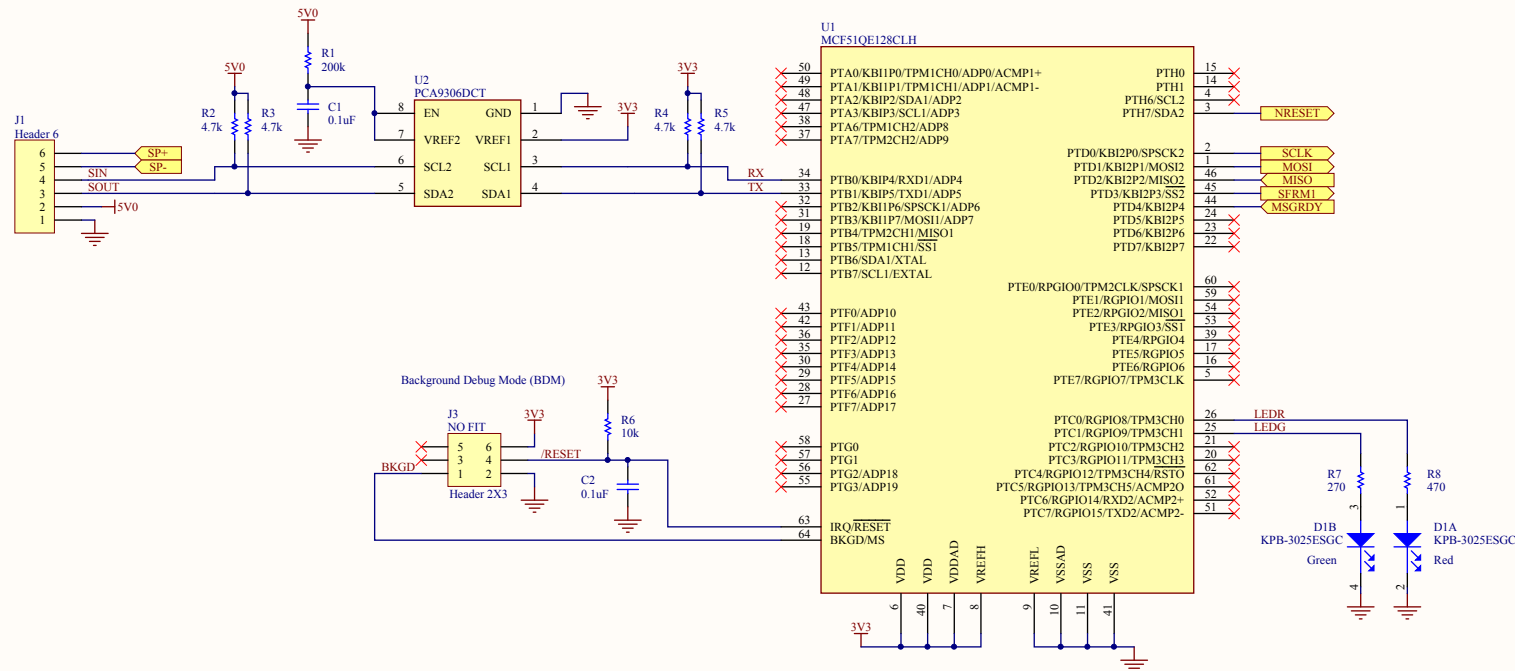

10mS delay from power-up to EN @ 2V = 0.5RC

 Rail must go high > 10uS after 1V8
per Epson S1V30120 Power-On/Reset Timing spec.

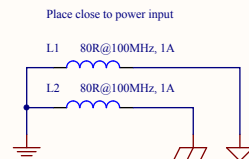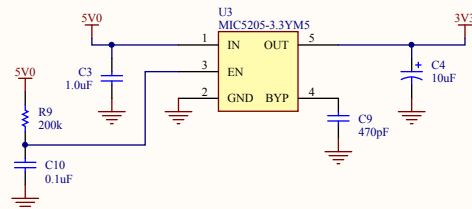

NOTE: RESISTORS ARE IN OHMS +/- 5% AND CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE NOTED. SEE BOM FOR ACTUAL VOLTAGE AND SPECIFICATION.



TITLE					
Emic 2 Text-to-Speech Module (#30016)					
DATE	FILENAME	SIZE	DRAWN BY		REV
3/23/2012		B	SHT	1 OF 2	Joe Grand
					A

Distributed under a Creative Commons Attribution 3.0 US license

