

Nose Assembly to Tool

Adapter Matrix and Drawings







For each Adapter Assembly, a reference drawing is supplied on the following pages unless otherwise stated. If a Stroke Limiter is required, the part number is listed under "Comments". If no part number is listed, and a Stroke Limiter is required, please contact your local distributor, or contact us directly to obtain the correct part number.

PART NO.	NOSE ASSEMBLY TYPE	TOOL TYPE	COMMENTS	PAGE
102460	5901 & 2620	585 & 586	OGMINIE IVIO	3
102463	352 style Inline	353, 245, 255		4
103553	505, 585, 586	506		5
103554	506 style	507		6
104406	350, 352 Inline	200		7
104627	352 Rotatable Adapter	352	Allows 352 Noses to Rotate	8
104632	353 Rotatable Adapter	353	Allows 353 Noses to Rotate	9
113272	Offset for UNIMATIC BR	212, 2480	7 move dec ridede to ridiate	10-11
117831	99-1500s Rotatable Adapter	245 style	Stroke Limiter 118362 Req'd	12
	99-1500s Rotatable Adapter	2502-625	Stroke Limiter Req'd (call for Part No.)	!
İ	99-1500s Rotatable Adapter	2580	Stroke Limiter Req'd (call for Part No.)	į
119327	352 style	G743		13
119400-1	99-3700s & 1700s -05,06,08 Offset	245, 255 style	Stroke Limiter 118362 Req'd	14
	99-3700s & 1700s -05,06,08 Offset	2580 style	Stroke Limiter PR2344 Reg'd	
120804	99-1500s Rotatable Adapter	245 style	Stroke Limiter 118362 Reg'd	15
	99-1500s Rotatable Adapter	2580	Stroke Limiter Req'd (call for Part No.)	
121395	Spindle/Piston to fit 230 style Noses	245, 255 style		16
121991		HK-150	Connects to TM6CC and TM8CC	n/a
122134	99-1700s -10,12 Lockbolt	2502-625		17
	99-1700s -10 Lockbolt	245, 255 style		
122140	99-1700s -05,06 Rotatable Adapter	230		18
122140-1	99-3700s	230		19
122140-G83	99-1700s	G83		20
122140-G83-1	99-3700s	G83		21
122145	99-1700s -05,06,08 Rotatable Adap	2480		22
122145-1	99-1700s Offs -05,06 BB/BR Rot.Ad	202, 2012		23
122145-3	99-3700s	244, 2480, 202, 2012		24
122145-4	99-3700s	244		25
122587	99-S456	HK-150		26
122921	99-A, 99-1100, & Olympic series	194, 227		27
123065	353 style	230	1/2" Stroke max	28
123065-1	353 style	244	3/8" Stroke max	29
123437	99-1100s Offset BR	230 ONLY		30
123437-1	99-1100s Offset BR	202, 2012		31
123437-2	HUCKLINCH Offset	202, 2012		32
123437-3	HUCKLINCH Offset	230 ONLY		33
124113	352 style Inline; 1/4 max	206-375, 206-625		34
124113-1	3/8 Pass Thru 353 style noses	208-625		35
124164	99-1700s Offset	252		36
124977	353 style	5901, 2620 style		37
125770	99-1500s Offset	208-625	formerly PR2022	38
126358	Anvil & Collet Extension 352 style	202	length 6.00"	39
126361	Anvil & Collet Extension 352 style	202	length 3.00"	40
127671	244 352 style noses	PT4000	up to & including -06 dia.	41
127715	352 & 2480 style noses	HK-150	with pass thru cap	42
127723	244 352 style noses	PT4000	up to & including -08 dia.	43
127863	Self-Releasing L-suffix noses only	HK-150		44
PR1227	586 style nose Extension		length 6.00"	45




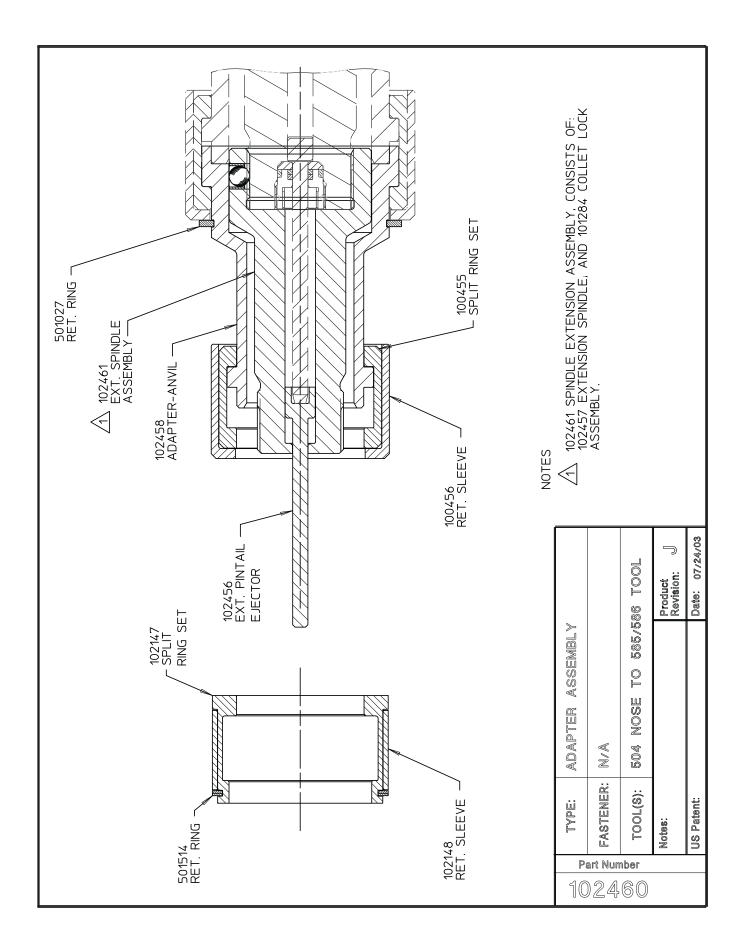




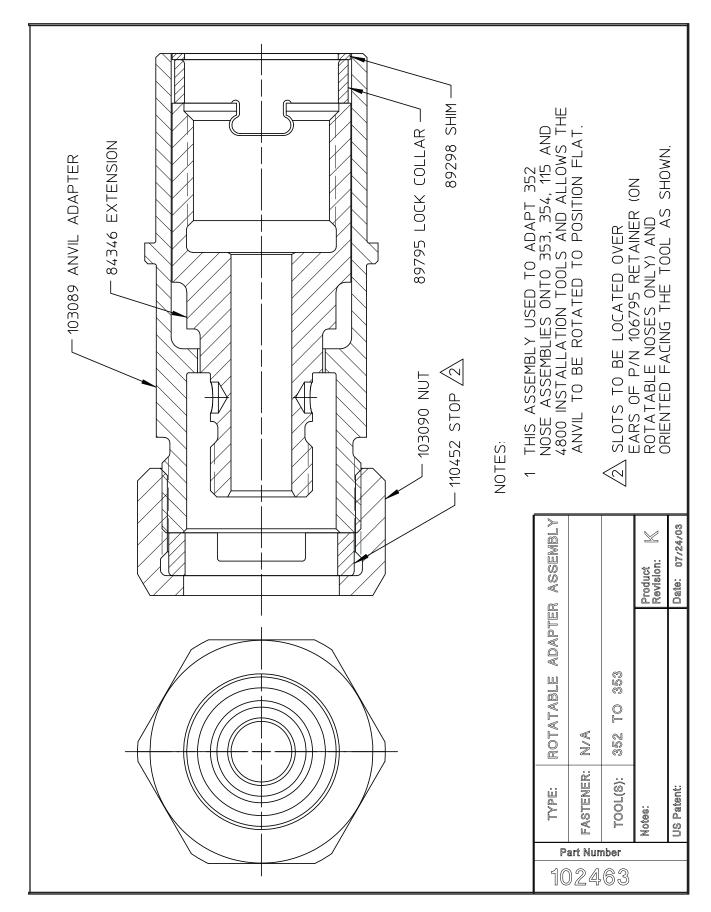



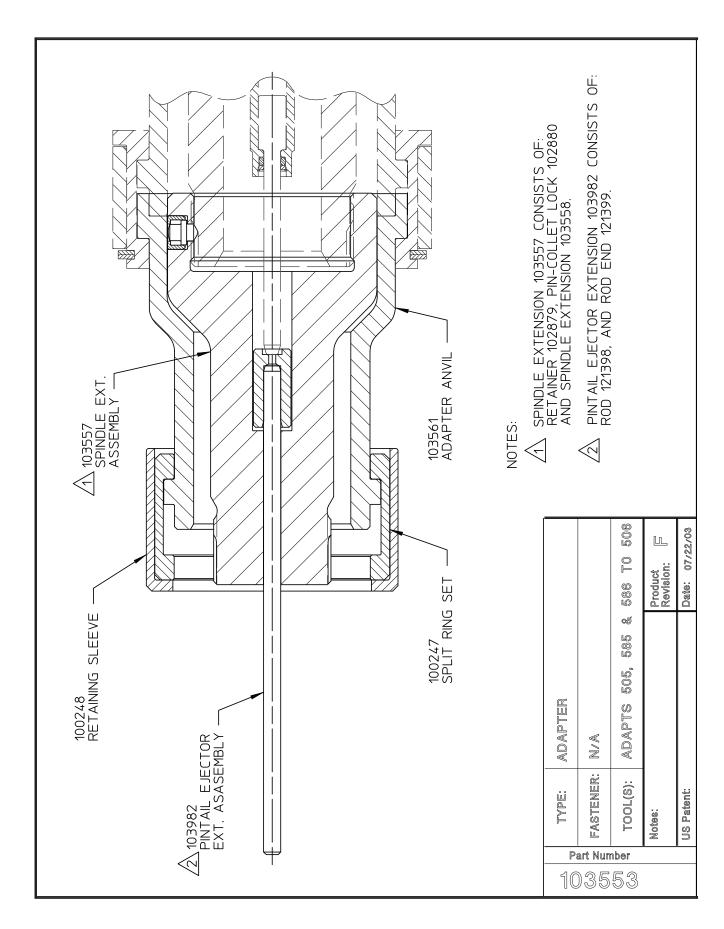




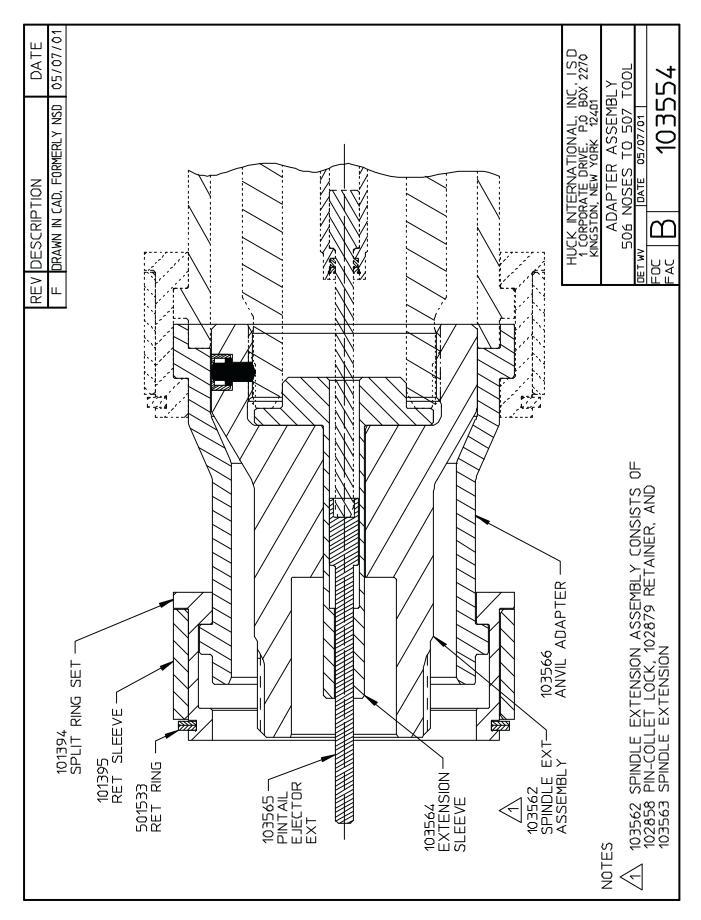



DATA SHEET

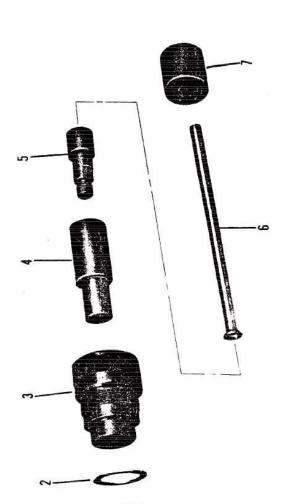

Retaining Nut	Stop - Retaining Nut	Nose Adapter	Shift Sleeve	Spindle Reducer	Pintail Tube	Outer Anvil Adapter
-	_	-	_	-	-	1
100530	101280	100533	100532	100531	100534	100536
5-1	5-2	5-3	5-4	5-5	5-6	5-7
	100530 1	100530 1	100530 1 101280 1 100533 1	100530 1 101280 1 100533 1	100530 1 101280 1 100533 1 100532 1	100530 1 101280 1 100533 1 100531 1

Use Ref. Nos. 1 (& 6 as applicable) for Series 200 Nose Assemblies (Double Action).

Use Ref. Nos. 1 & 2 (& 6 as applicable) & 7 for Series 352 Nose Assemblies (Single Action).

Use Ref. Nos. 1, 2, 3, 4, 5 (& 6 as applicable) for Series 350 Nose Assemblies (Double Action.)

104406

FOR: 350-352 Nose Assems. on 200 TOOL: 200 HIT


TYPE: Spindle Adapter

9/19/01


PRODUCT REVISION: REVISED:

STHER



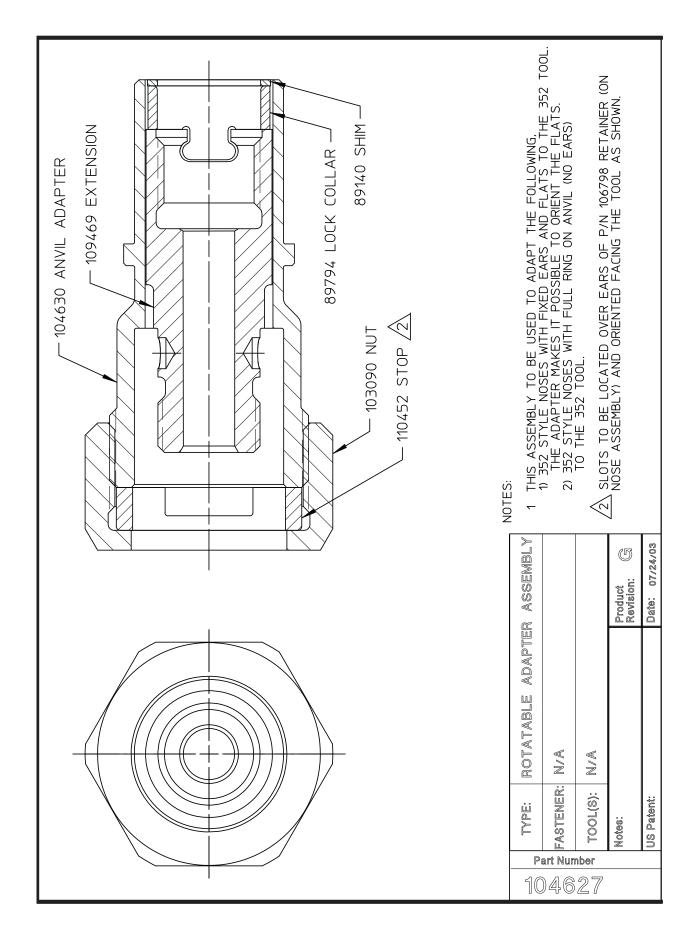




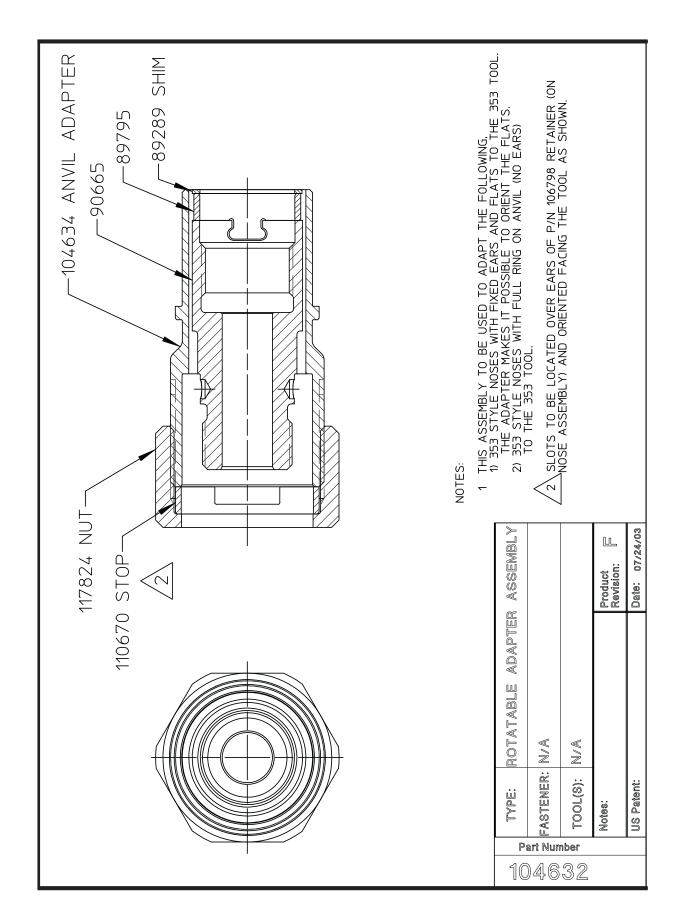



DATA SHEET


113272 Sheet 1 of 2

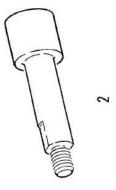



-	_	7		
		1	3	
9			ľ	_
1	V/=		2)	
				

REPLACEMENT PARTS	ART NO. PRO DESCRIPTION	13136 1 Housing - Adapter	00535 1 Reducer - Spindle	OFF OFFICE OFFICE AND ASSEMBLY MICTISTICS
R	PART NO.	113136	100535	TOIL OTHER
	臣	-	2	

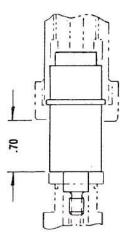

.70 in. = 18 mm

950	H339	plies	00	Model	
99-1097;	19-1097; 99-1098; 99-1099	99-1099	210; 211; 212;	; 212;	223
99-1100;	99-1101;	99-1102	230; 240	0; 2702	
			•Europe o	ylu	

TYPE: Offset Nose Assembly Adapter FOR: UNIMATIC B/R Offset N/A

PRODUCT 11-83 REVISION: 9/20/01 Obsoleted Replaced By 123437 TOOL: ** **A**∃HTO


113272



HOW TO ATTACH NOSE ASSEMBLY. AND ADAPTER ASSEMBLY TO INSTALLATION TOOL


Inspect parts for wear and damage, and replace where required. Wash parts in mineral spirits or isopropyl alcohol only. Use a small pick to clean grooves in jaws. Part numbers on parts must match parts list numbers.

- 1. Disconnect tool from power source. Use Huck Installation Tool that has been properly prepared per applicable instruction Manual. Remove retaining nut; remove any shims from piston rod with small pick.
- 2. Screw Spindle Reducer (2) onto tool piston rod and tighten.
- 3. Slide Housing Adapter (1) over spindle reducer. Slide tool retaining nut over adapter. Do not screw retaining nut on tool.
- 4. Screw nose assembly housing locknut to back of threads. Hold front face of collet against inside face of anvil housing; screw assembled anvil housing and collet onto housing adapter and spindle reducer until snug avoid overtightening. Overtightening pushes piston rearward, thereby reducing tool stroke. See Figure 1 for proper housing adapter position. Position anvil housing and tighten housing locknut; tighten retaining nut.
- Connect tool to power source. Install fastener in test plate of proper thickness with proper size holes. Inspect installed fastener.

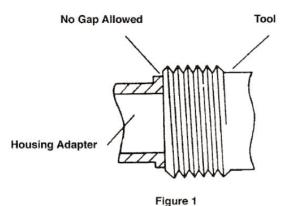


113272 Sheet 2 of 2




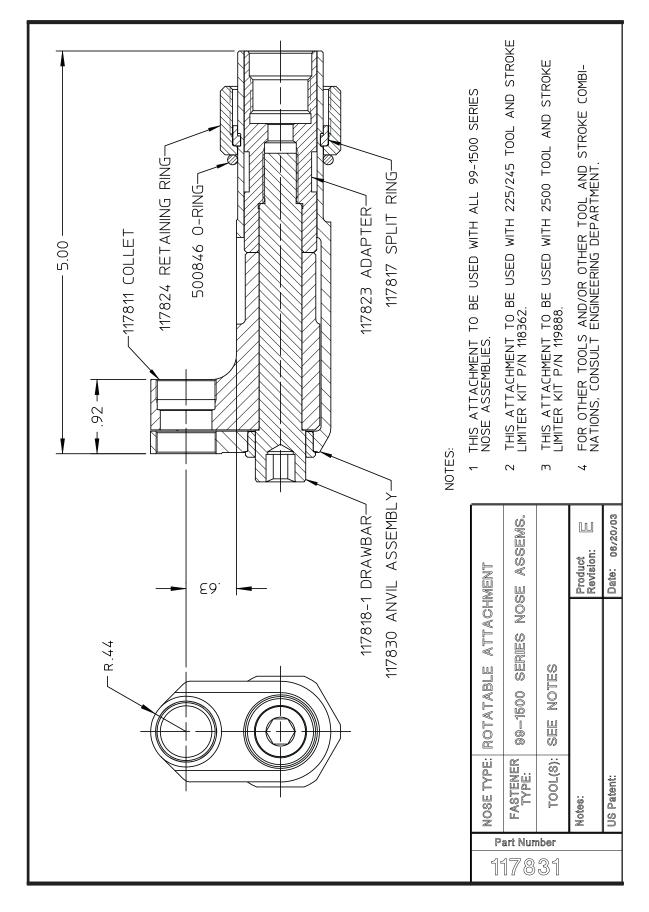




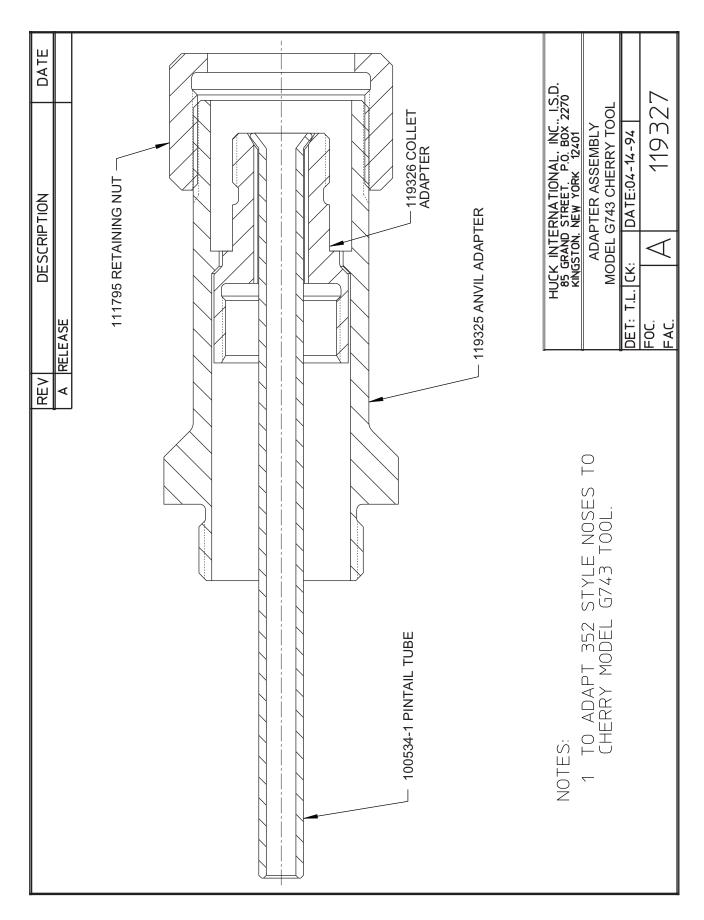




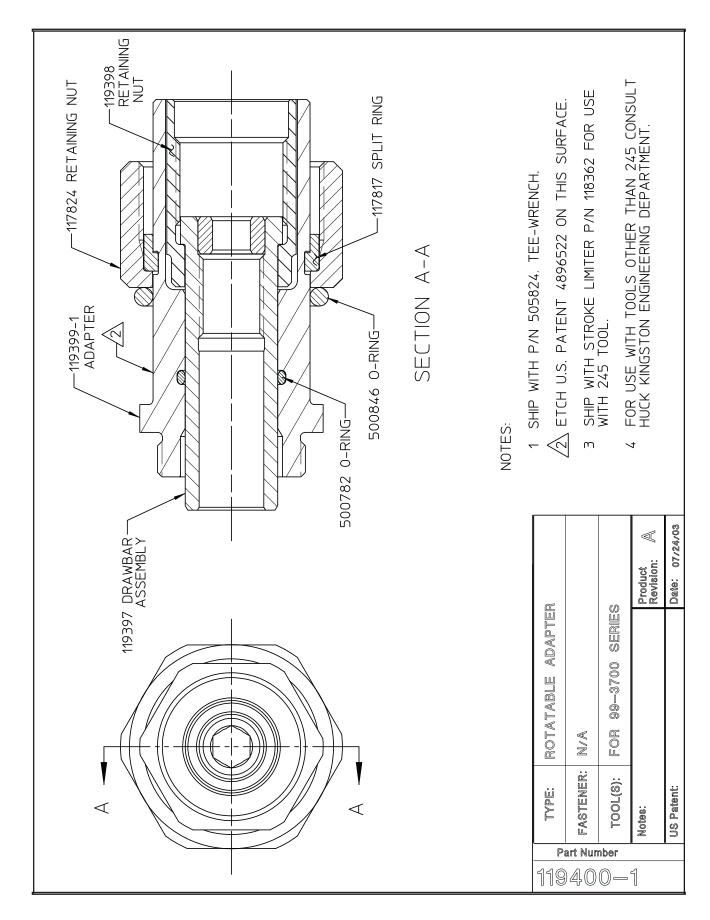




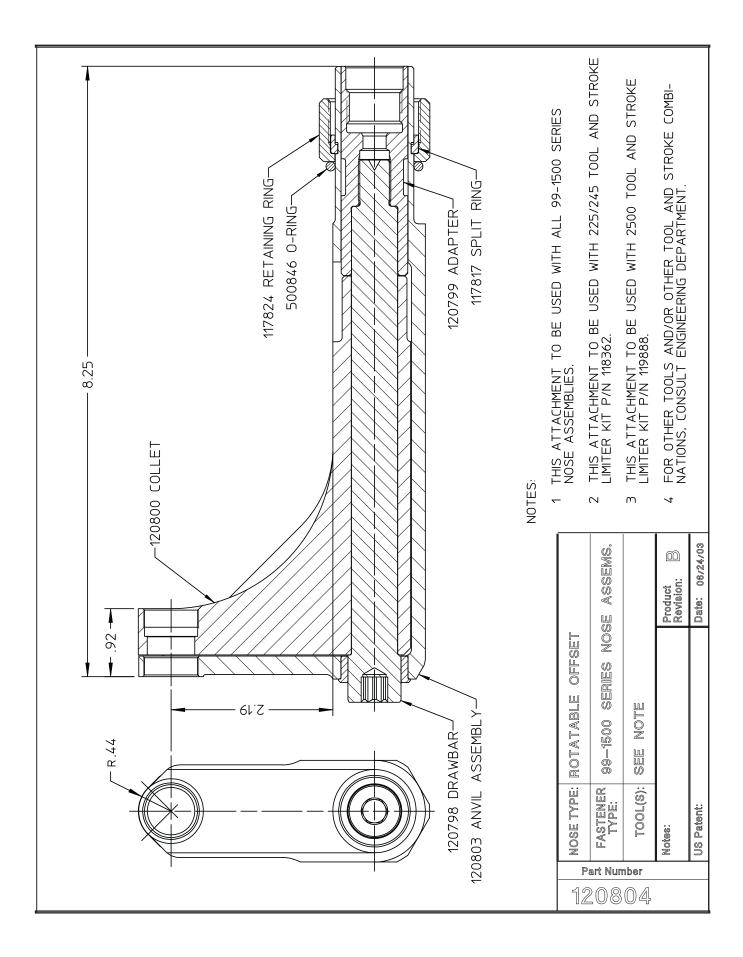




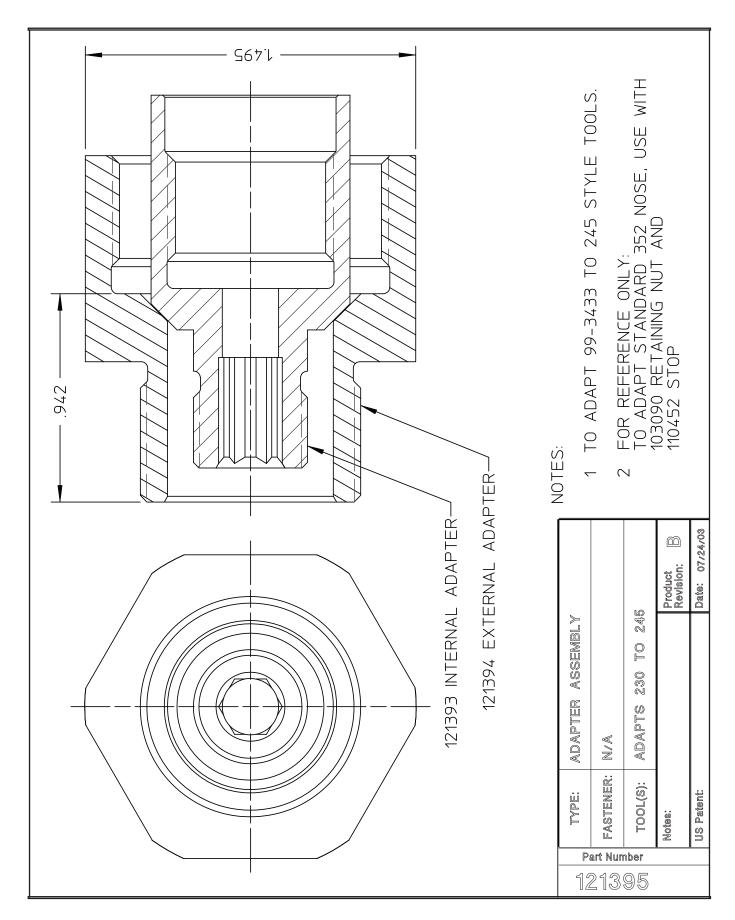




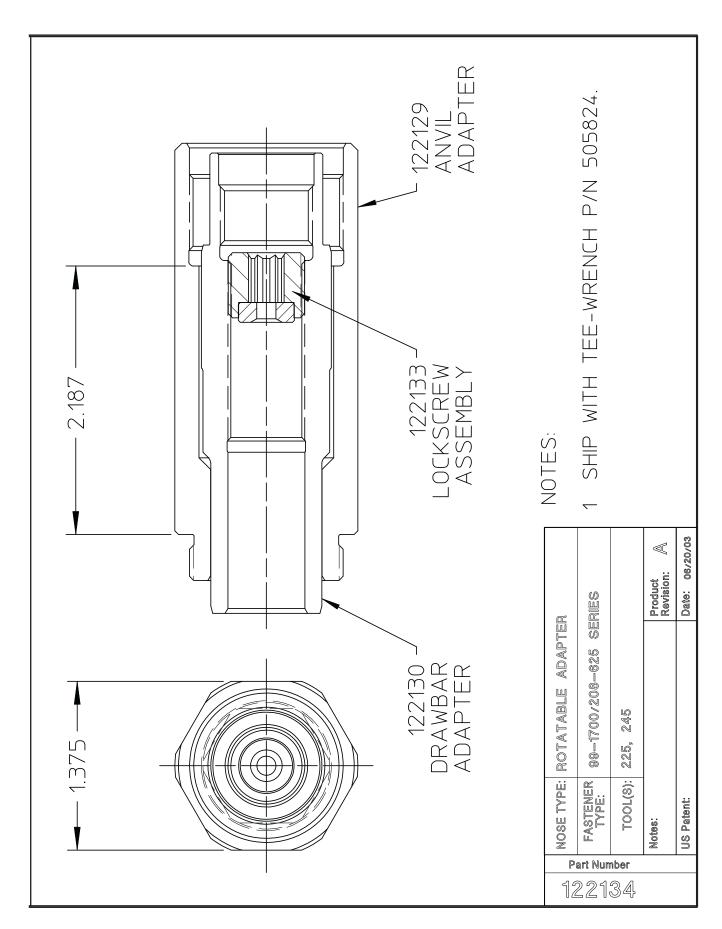




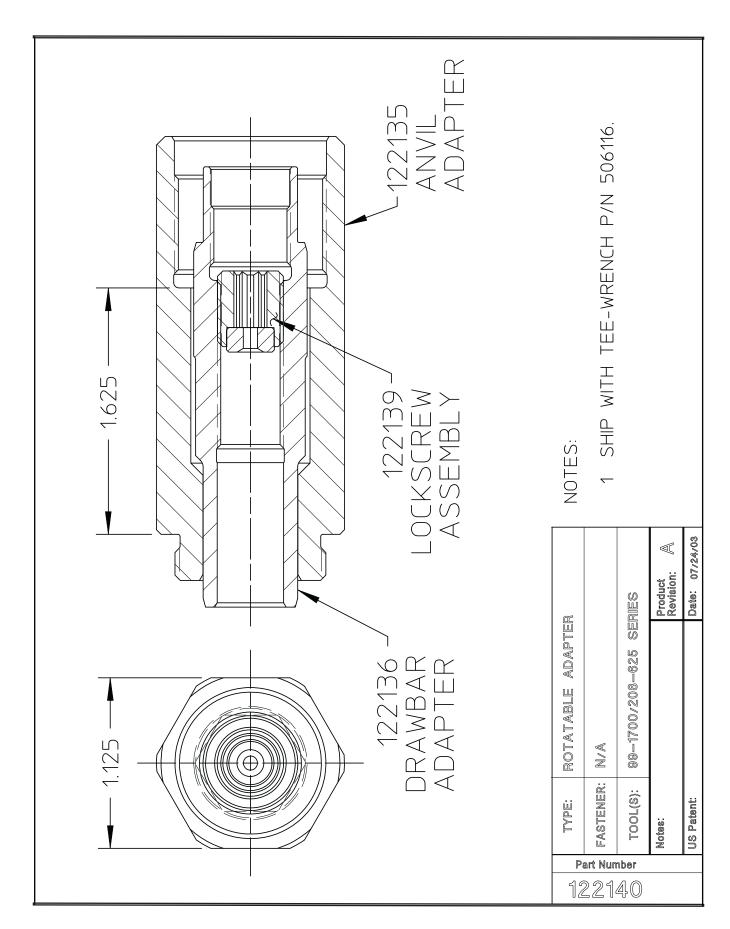




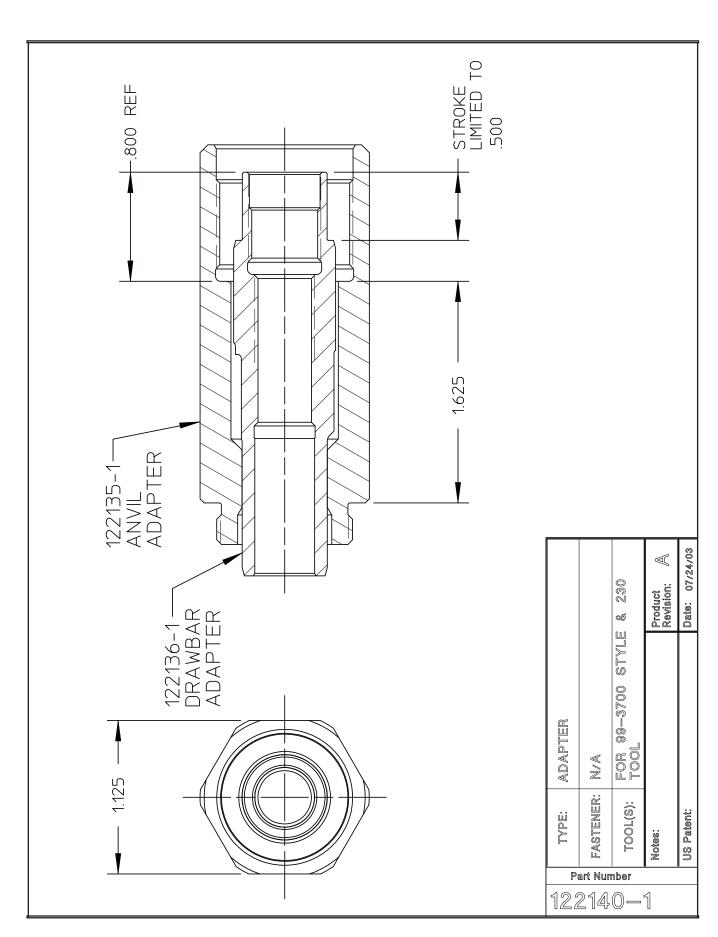




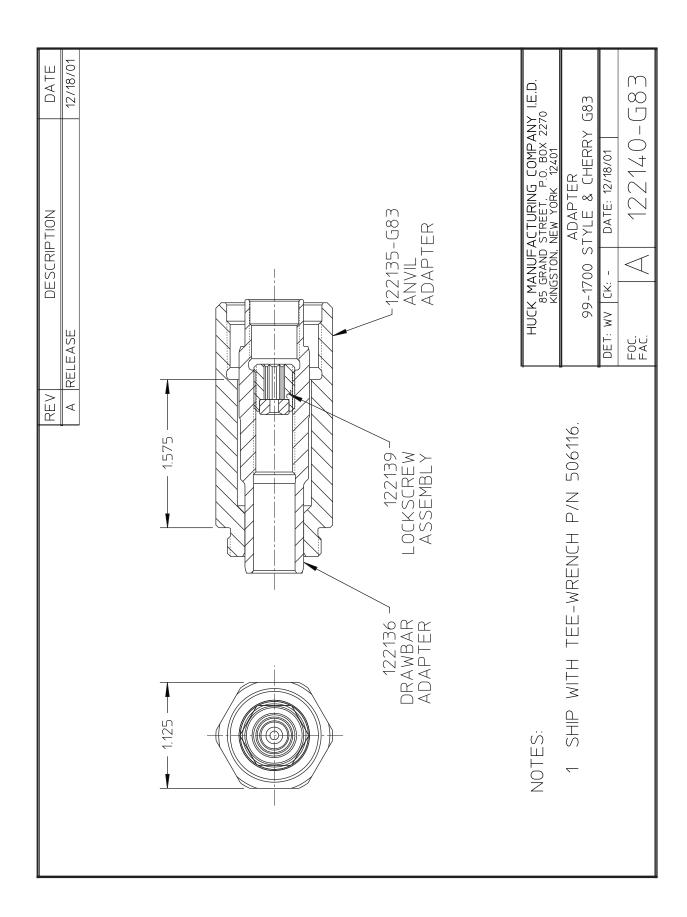




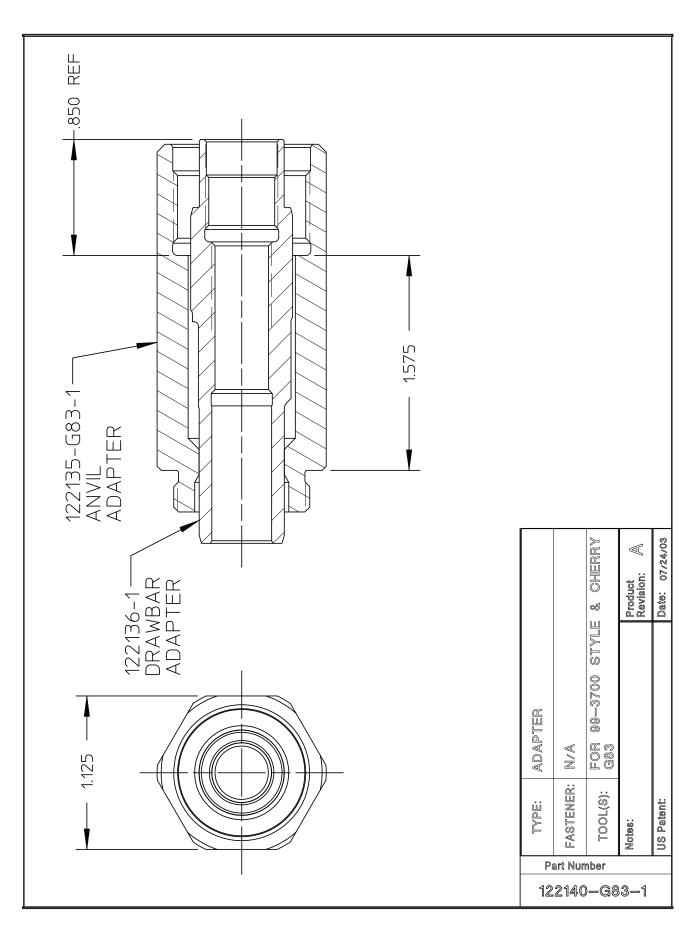




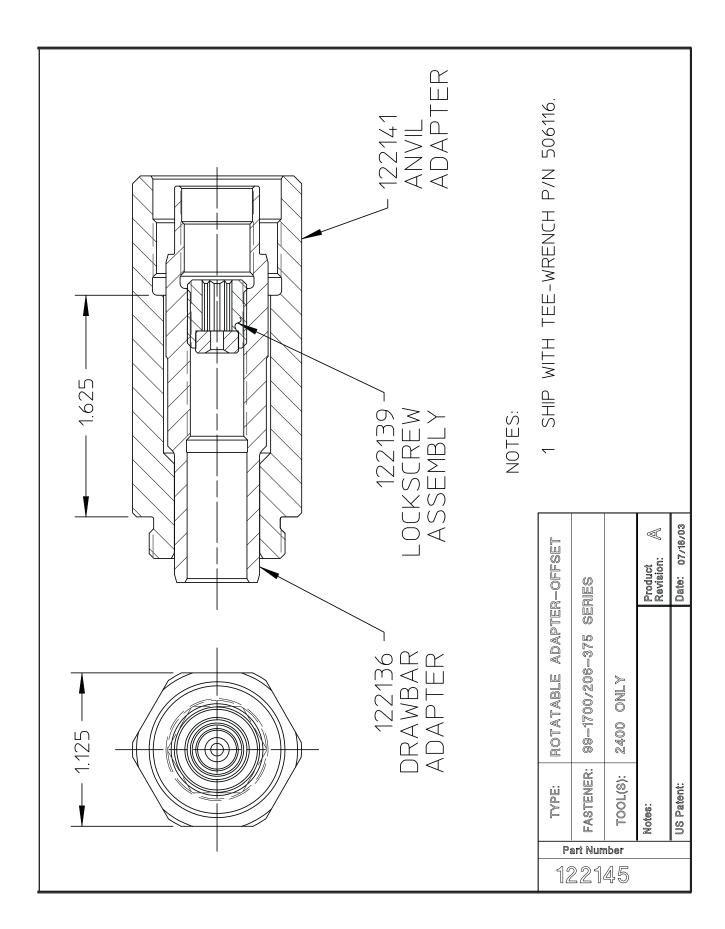




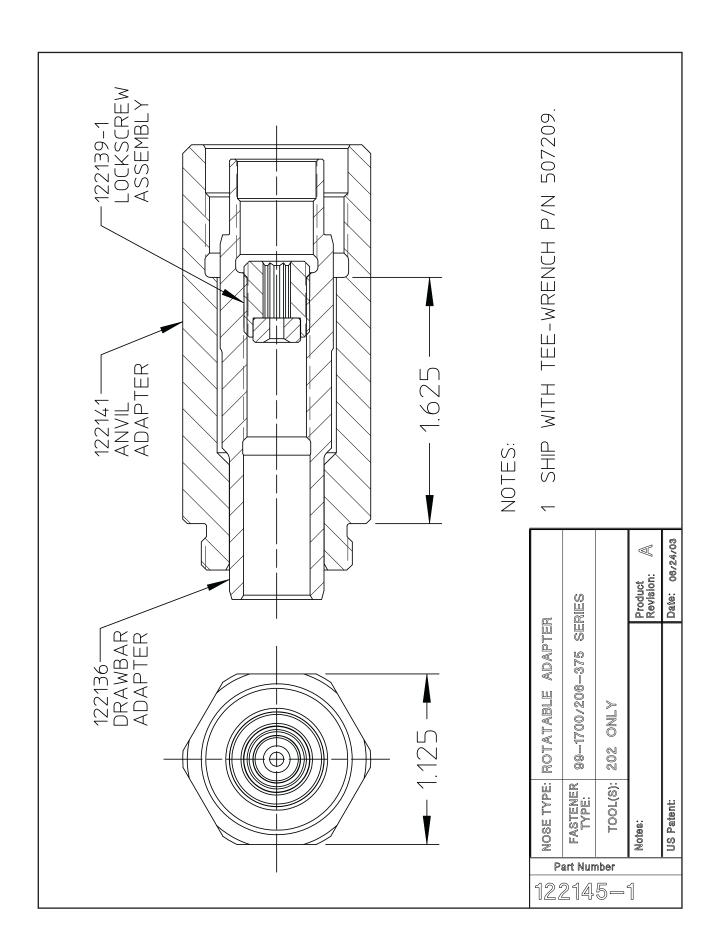




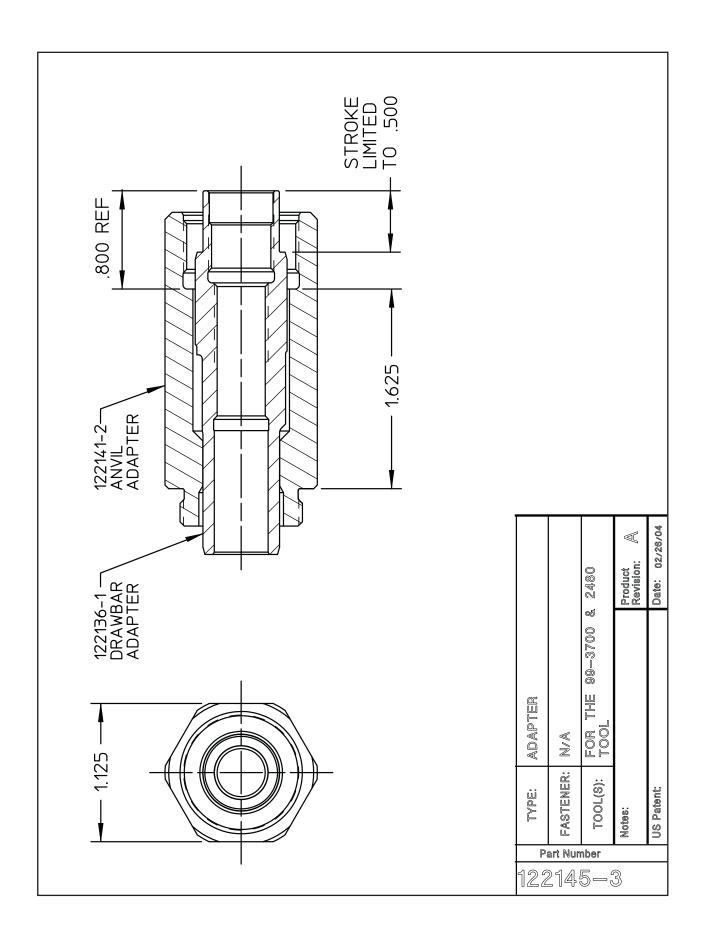




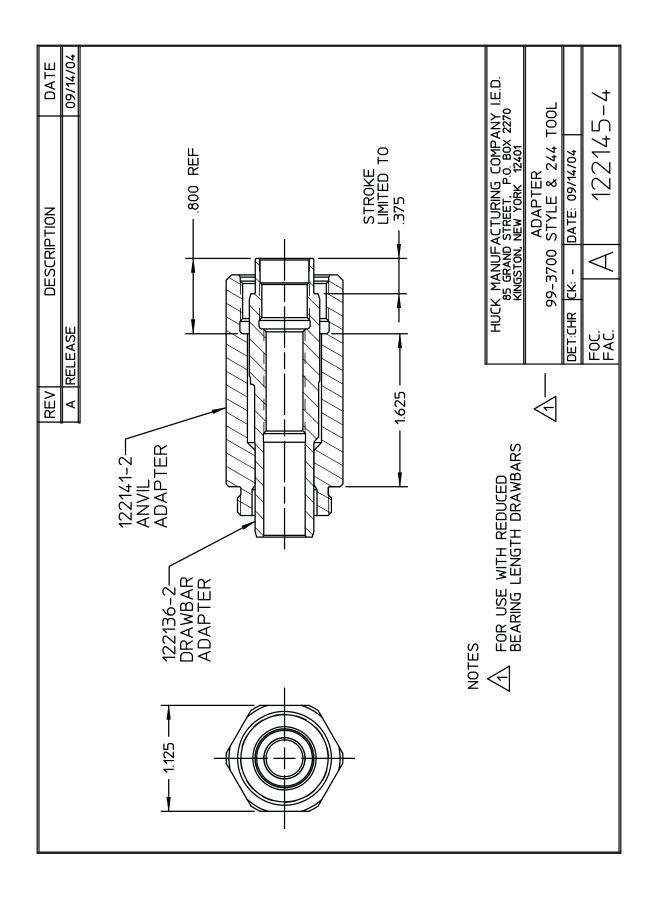




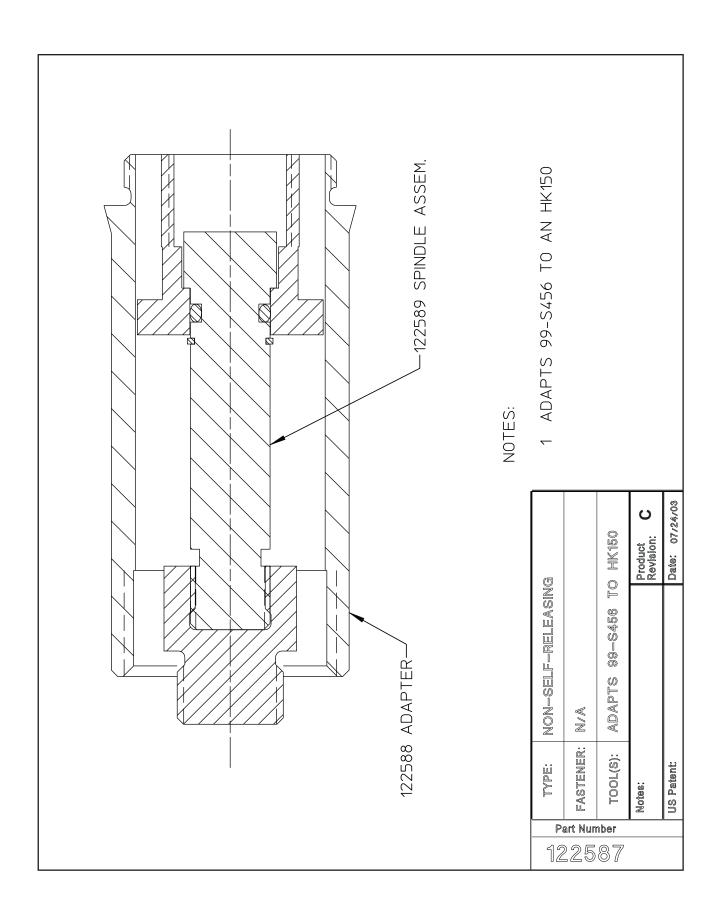




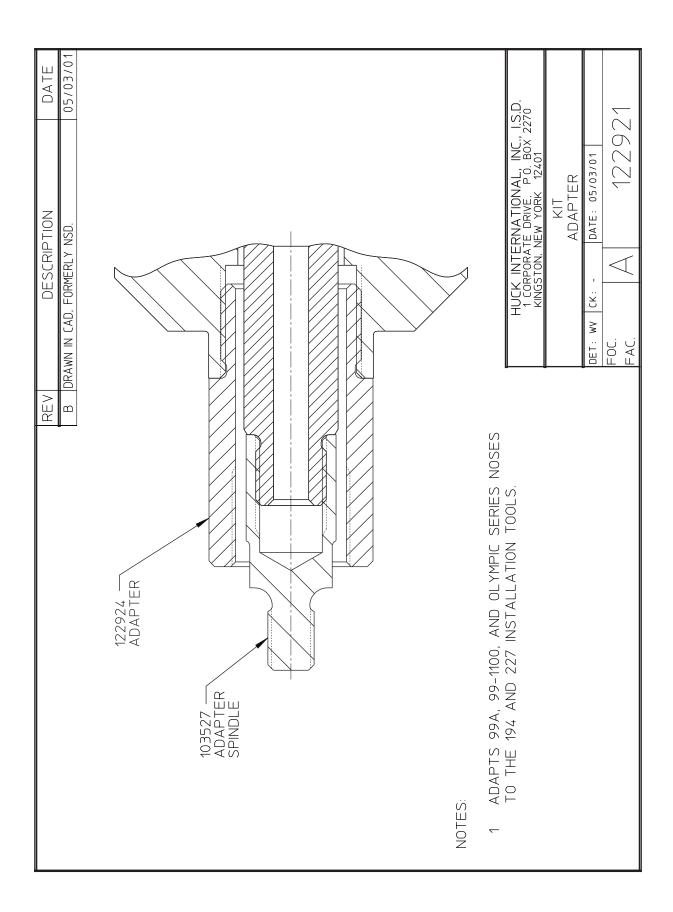




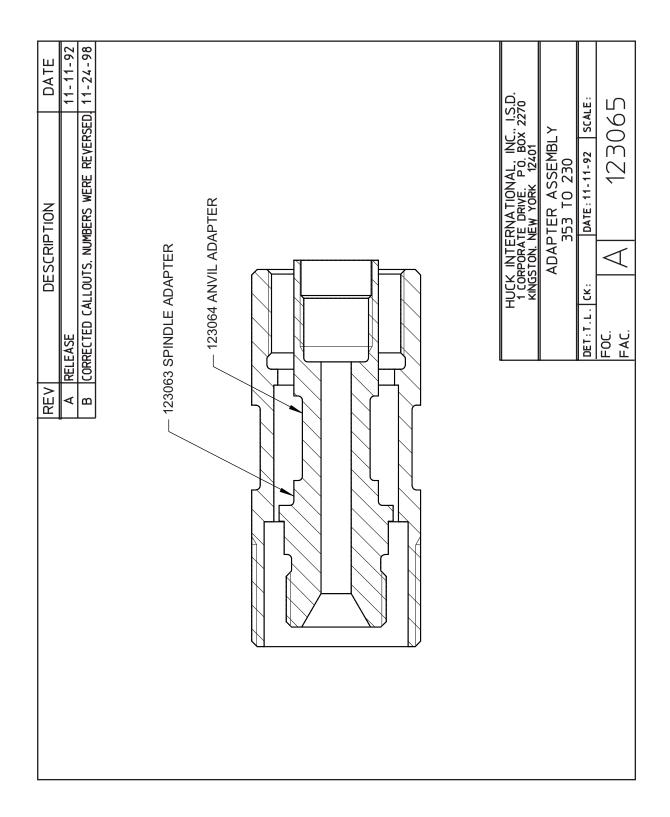




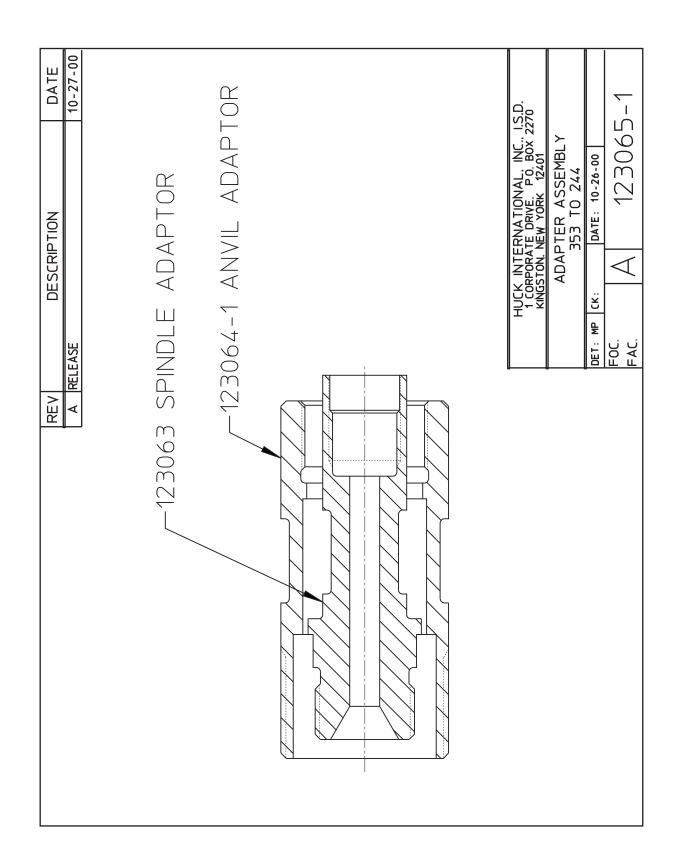




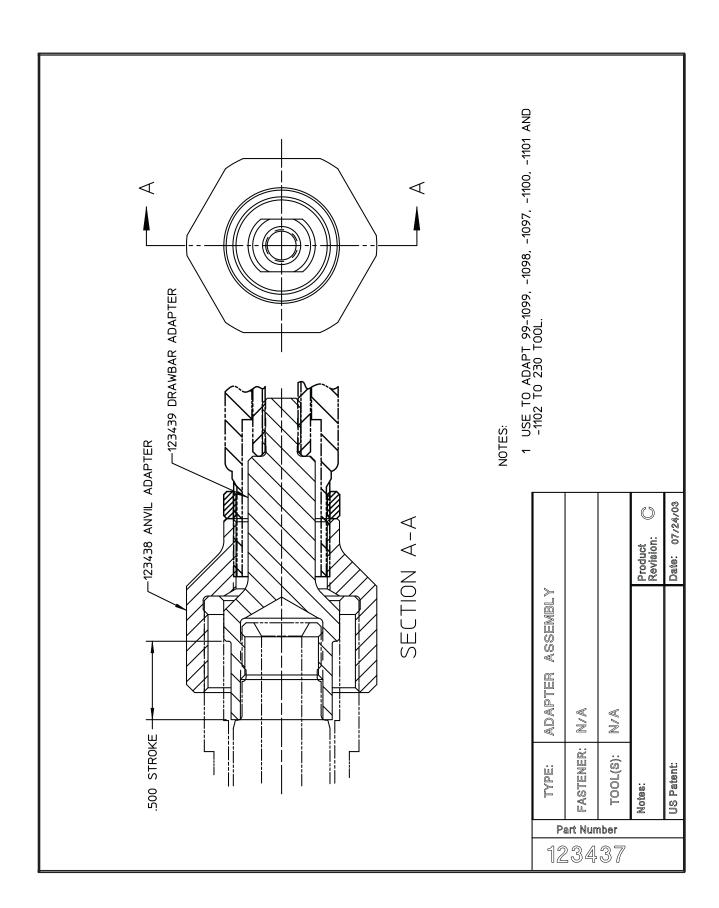




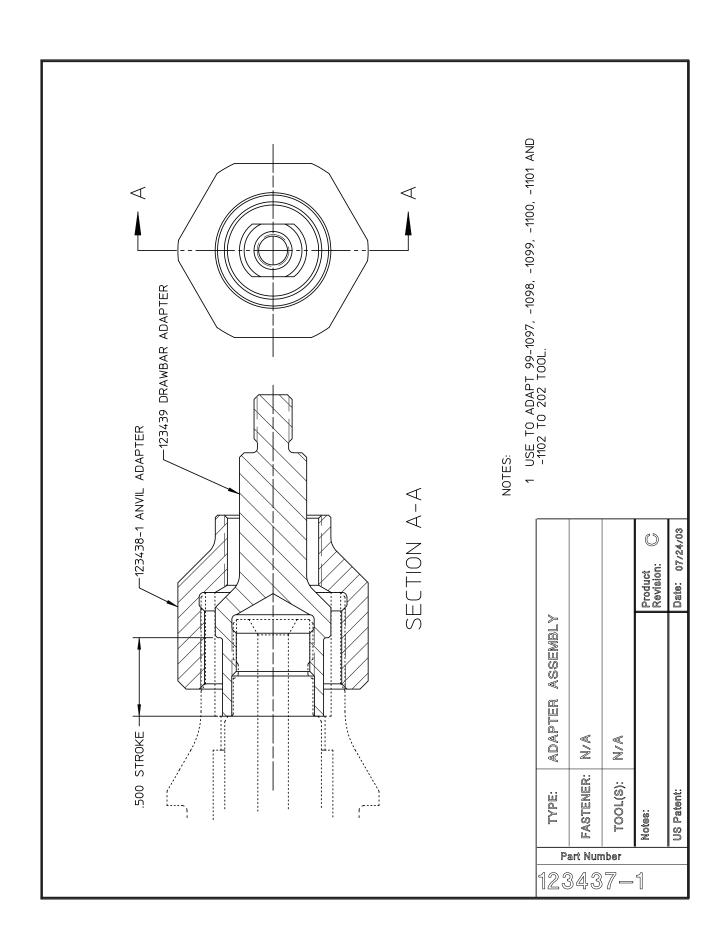




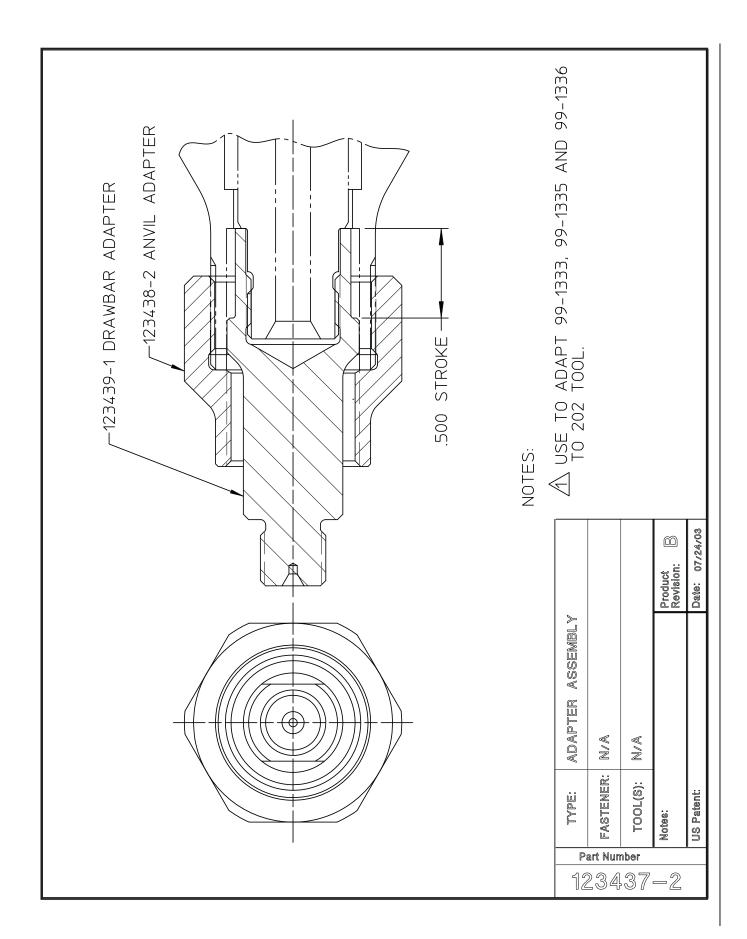




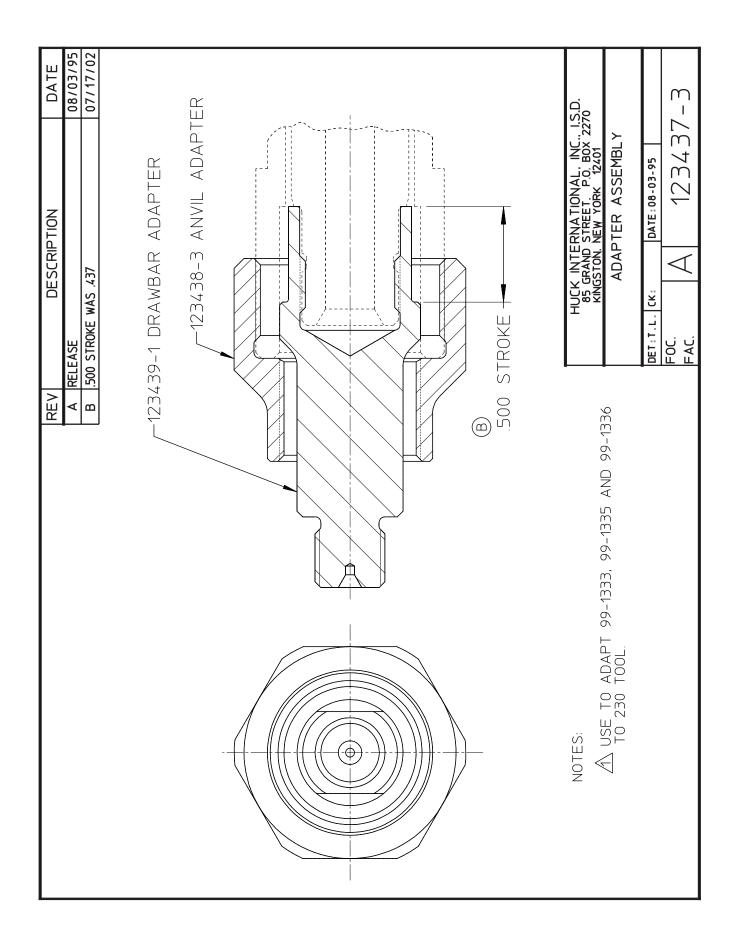




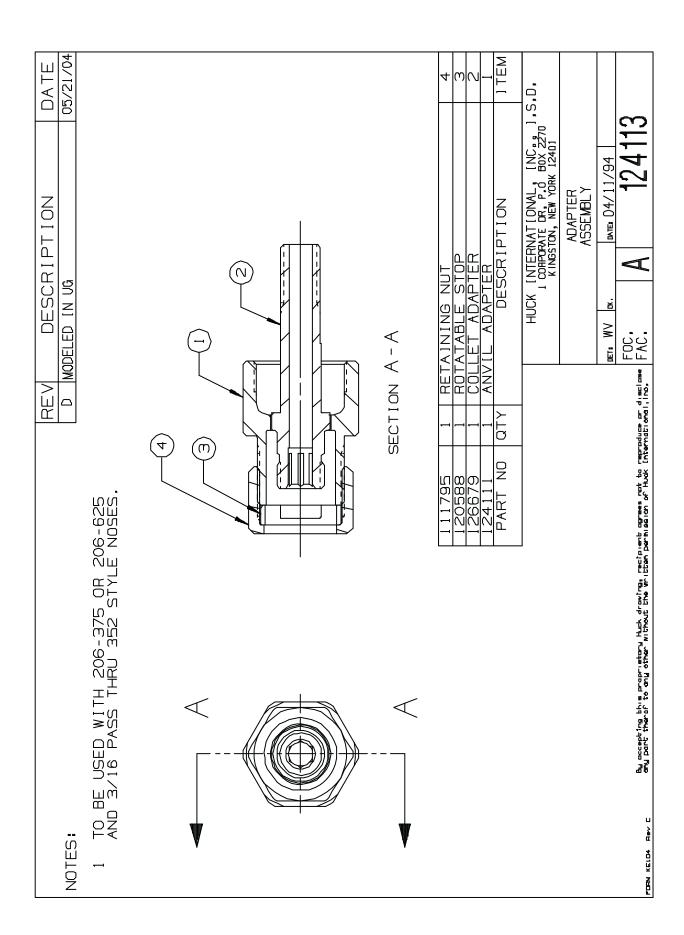




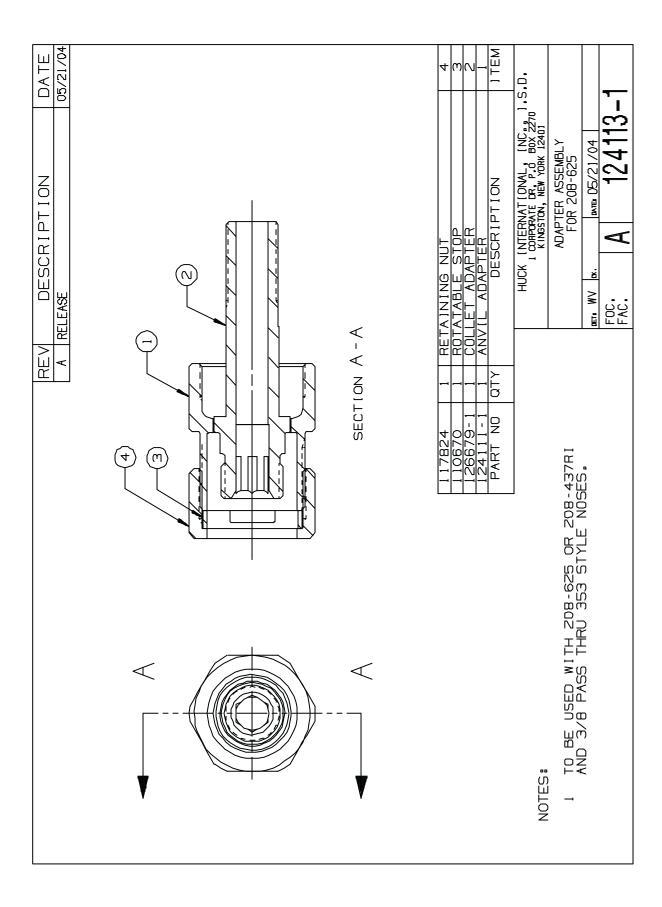




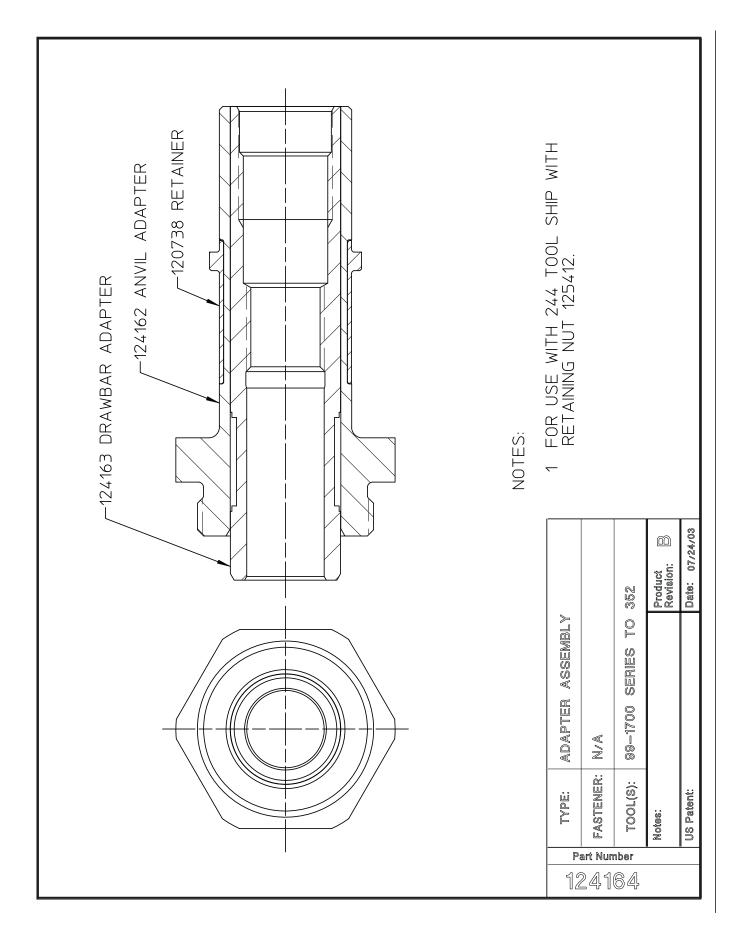




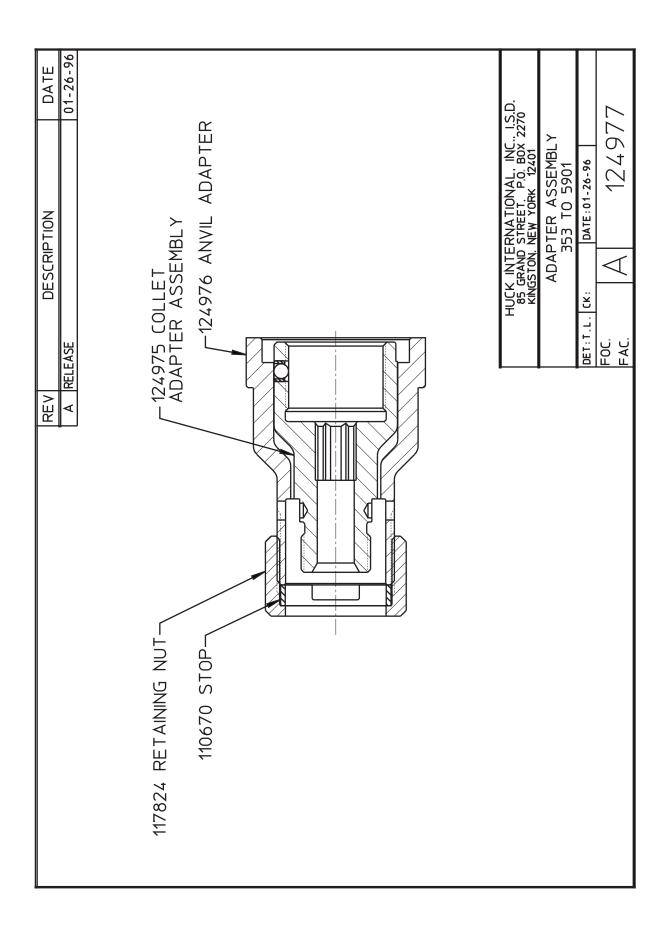




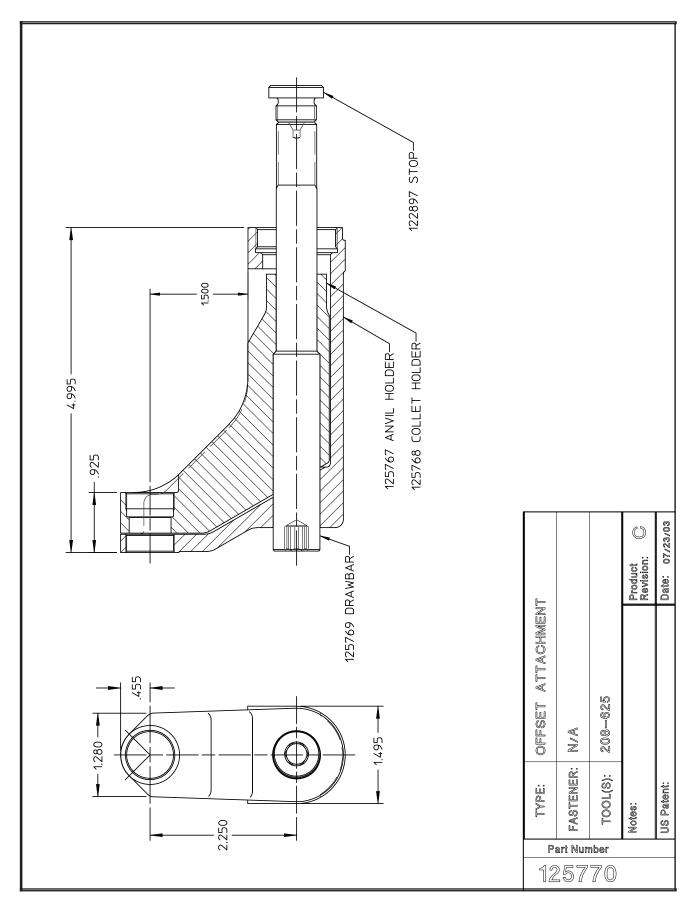




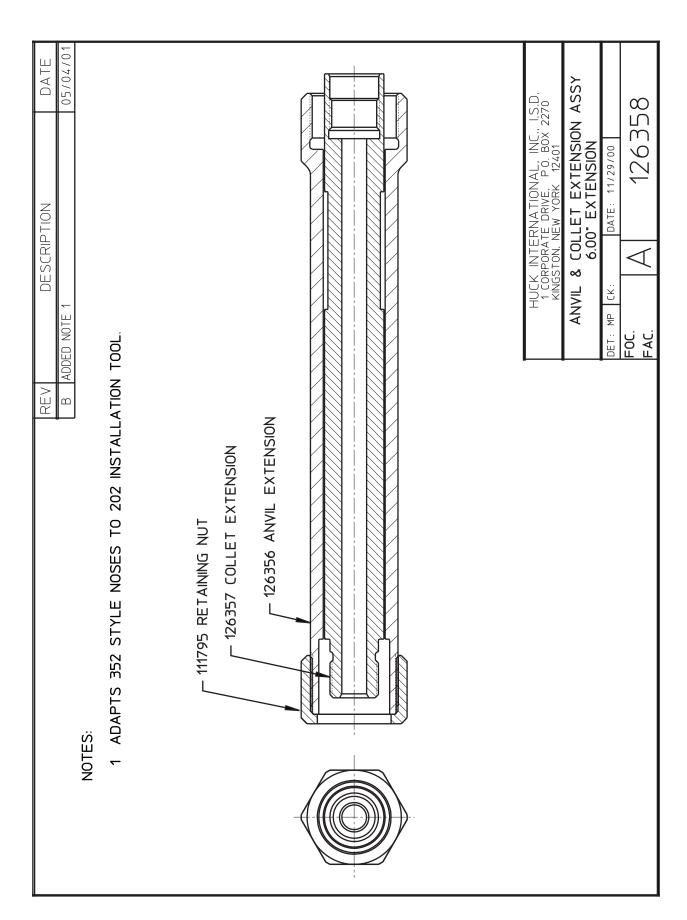




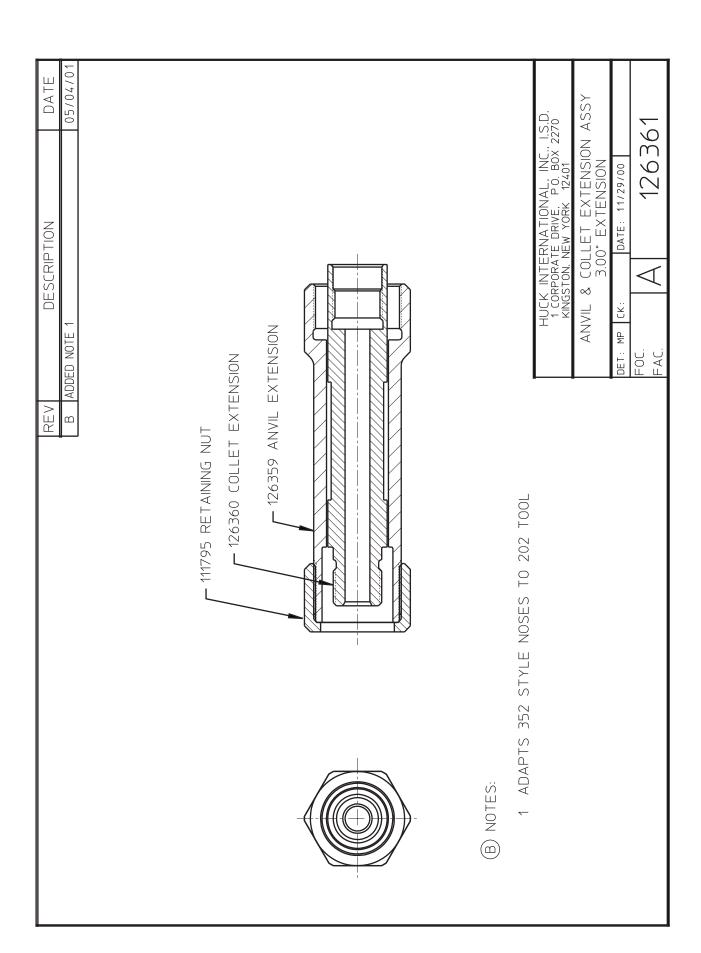




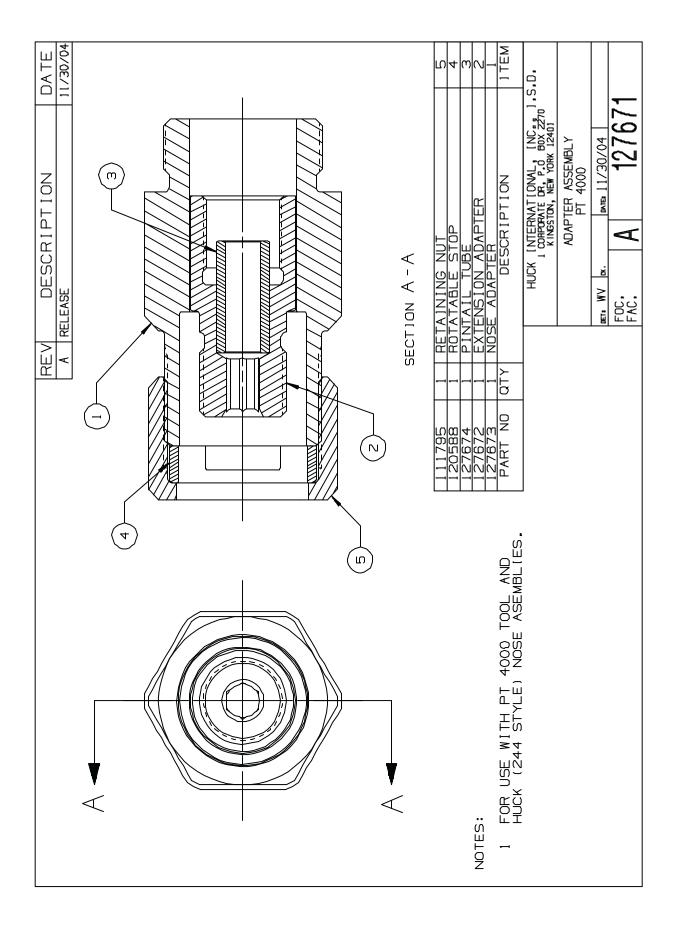




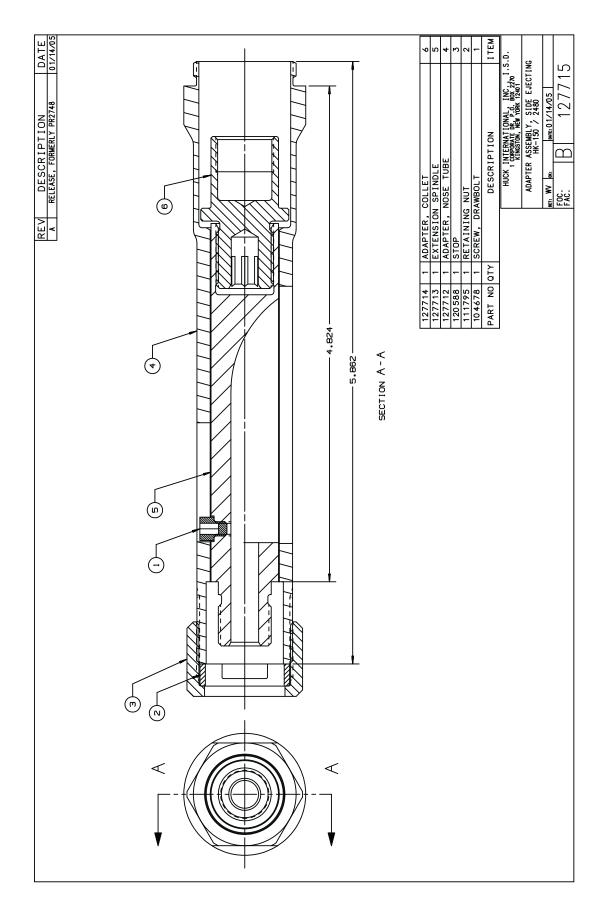




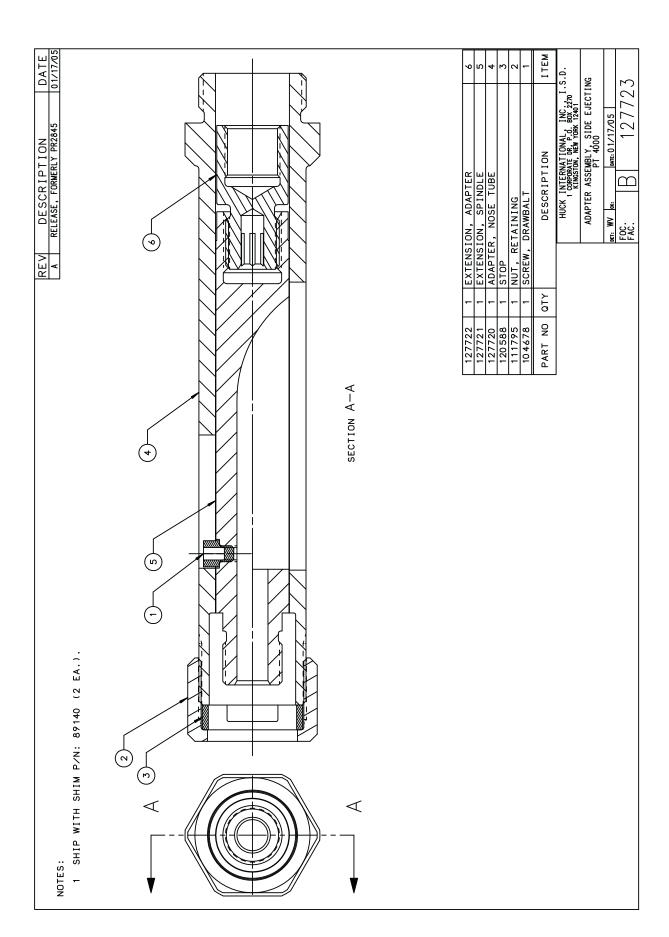



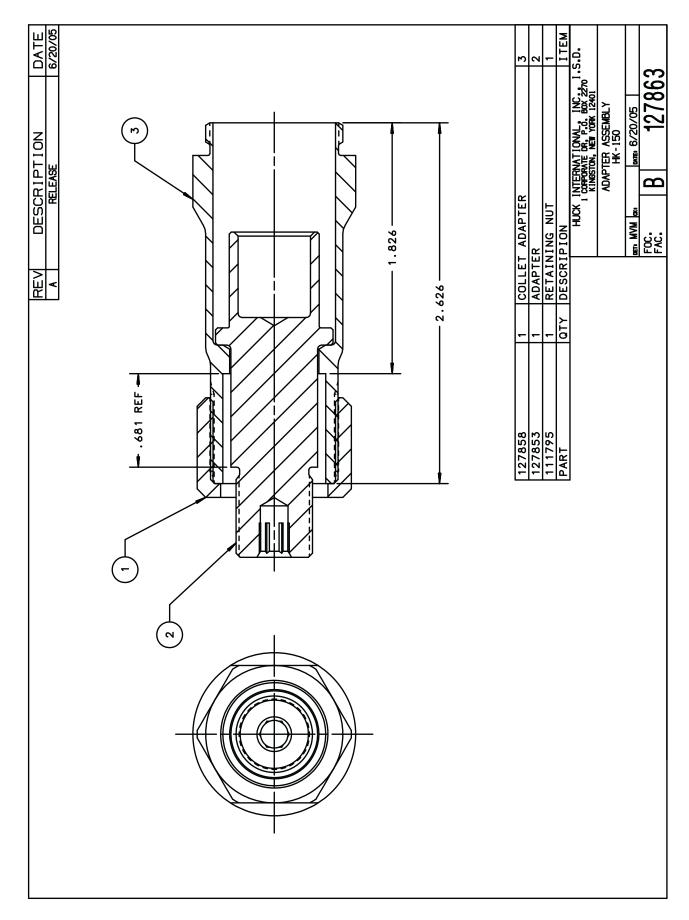



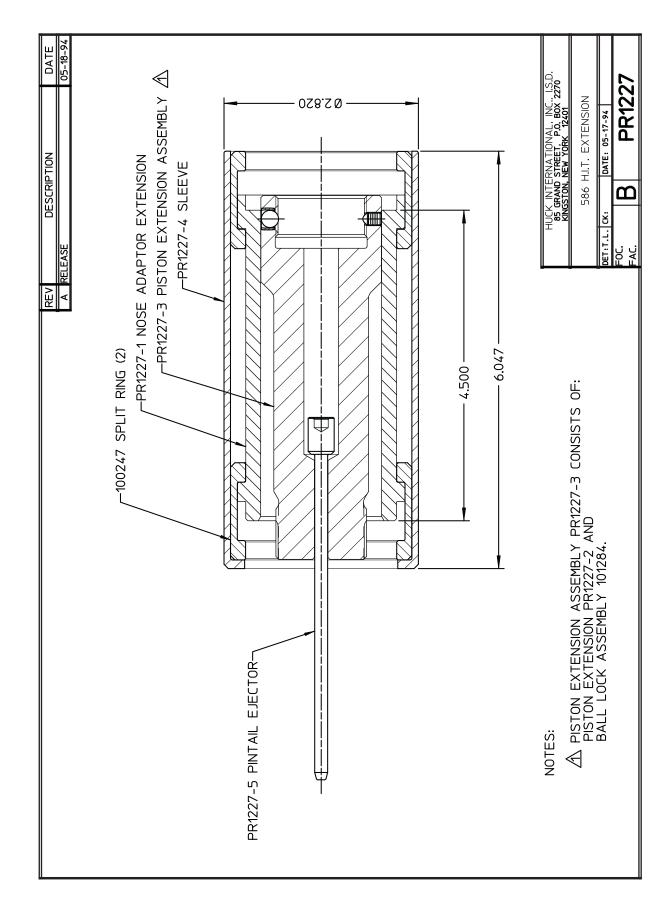



Limited Warranties

Limited Lifetime Warranty on BobTail® Tools:

Huck International, Inc. warrants to the original purchaser that its BobTail® installation tools manufactured after 12/1/2016 shall be free from defects in materials and workmanship for its useful lifetime. This warranty does not cover special order / non-standard products, or part failure due to normal wear, tool abuse or misapplication, or user non-compliance with the service requirements and conditions detailed in the product literature.

Two Year Limited Warranty on Installation Tools:

Huck International, Inc. warrants that its installation tools and Powerig® hydraulic power sources manufactured after December 1, 2016 shall be free from defects in materials and workmanship for a period of two years from date of purchase by the end user. This warranty does not cover special order / non-standard products, or part failure due to normal wear, tool abuse or misapplication, or user non-compliance with the service requirements and conditions detailed in the product literature.

90 Day Limited Warranty on Nose Assemblies and Accessories:

Huck International, Inc. warrants that its nose assemblies and accessories shall be free from defects in materials and workmanship for a period of 90 days from date of purchase by the end user. This warranty does not cover special clearance noses, or special order / non-standard product, or part failure due to normal wear, abuse or misapplication, or user non-compliance with the service requirements and conditions detailed in the product literature.

Useful lifetime is defined as the period over which the product is expected to last physically, up to the point when replacement is required due to either normal in-service wear, or as part of a complete overhaul. Determination is made on a case-by case basis upon return of parts to Huck International, Inc. for evaluation.

Tooling, Part(s) and Other Items not manufactured by Huck:

HUCK makes no warranty with respect to the tooling, part(s), or other items manufactured by third parties. HUCK expressly disclaims any warranty expressed or implied, as to the condition, design, operation, merchantability, or fitness for use of any tool, part(s), or other items thereof not manufactured by HUCK. HUCK shall not be liable for any loss or damage, directly or indirectly, arising from the use of such tooling, part(s), or other items or breach of warranty or for any claim for incidental or consequential damages.

Huck shall not be liable for any loss or damage resulting from delays or non-fulfillment of orders owing to strikes, fires, accidents, transportation companies or for any reason or reasons beyond the control of the Huck or its suppliers.

Huck Installation Equipment:

Huck International, Inc. reserves the right to make changes in specifications and design and to discontinue models without notice.

Huck Installation Equipment should be serviced by trained service technicians only.

Always give the serial number of the equipment when corresponding or ordering service parts.

Complete repair facilities are maintained by Huck International, Inc. Please contact one of the offices listed below.

Eastern

One Corporate Drive Kingston, New York 12401-0250 Telephone (845) 331-7300 FAX (845) 334-7333

Outside USA and Canada

Contact your nearest Huck International location (see reverse).

In addition to the above repair facilities, there are Authorized Tool Service Centers (ATSC's) located throughout the United States. These service centers offer repair services, spare parts, Service Parts Kits, Service Tool Kits and Nose Assemblies. Please contact your Huck Representative or the nearest Huck International location (see reverse) for the ATSC in your area.



Arconic Inc. (NYSE: ARNC) creates breakthrough products that shape industries. Working in close partnership with our customers, we solve complex engineering challenges to transform the way we fly, drive, build and power. Through the ingenuity of our people and cutting-edge advanced manufacturing, we deliver these products at a quality and efficiency that ensures customer success and shareholder value.

Arconic Fastening Systems Tooling Support Locations

INDUSTRIAL NORTH AMERICA

Kingston Operations 1 Corporate Drive Kingston, NY 12401 Tel: +1-800-278-4825 Fax: +1-845-334-7333 afs.sales.kingston@arconic.com Tracy Operations (IDG) 1925 North MacArthur Drive Tracy, CA 95376 Tel: +1-800-826-2884 Fax: +1-800-573-2645 afs.sales.idg@arconic.com Waco Operations PO Box 8117 8001 Imperial Drive Waco, TX 76714-8117 Tel: +1-800-388-4825 Fax: +1-800-798-4825 afs.sales.waco@arconic.com

INDUSTRIAL GLOBAL

Kolkata Operations Unit No. 28, 2nd Floor, 55/1, Chowringhee Road, Kolkata 700071, West Bengal, India Tel: +91-33-40699170 Tel: +91-33-40699180 Fax +91-33-40699184

Suzhou Operations 58 Yinsheng Road, SIP Suzhou, Jiangsu 215126 China Tel: +86-512-62863800-8888 Melbourne Operations 1508 Centre Road Clayton, Victoria Australia 3168 Tel: +613-8545-3333 Fax: +613-8545-3390 afs.sales@arconic.com

Telford Operations Unit C, Stafford Park 7 Telford, Shropshire England TF3 3BQ Tel: +44-(0)-1952-290011 Fax: +44-(0)-1952-207701 thisales@arconic.com São Paulo Operations Rodovia Anhanguera, s/n, KM 17 Parque São Domingos - Complexo Anhanguera - Galpão 1 Seção III (Módulo III) Box 11 CEP 05112-000 São Paulo – SP Brazil Tel: +55-11-3583-7061

Tokyo Operations (Japan and Korea) 1013 Hibiya U-1 Bldg. Uchisaiwai-cho 1-1-7 Chiyoda-ku, Tokyo 100-0011 Japan Tel: +81-3-3539-6594 Fax: +81-3-3539-6585

AEROSPACE NORTH AMERICA

Kingston Operations 1 Corporate Drive Kingston, NY 12401 Tel: +1-800-278-4825 Fax: +1-845-334-7333 afs.sales.kingston@arconic.com Simi Valley Operations 3990A Heritage Oak Court Simi Valley, CA 93063 Tel: +1-805-527-3600 Fax: +1-805-527-0900 www.afs-simivalley.com

AEROSPACE GLOBAL

Aichach Operations Robert-Bosch Str. 4 Aichach 86551 Germany Tel: +49-8251-8757-0

aicafswelcomedl@arconic.com

Cergy Operations 15 Rue du Petit Albi F-95611 Cergy Pontoise

Tel: +33-1-34-33-98-00 Fax: +33-1-34-33-97-77 Hong Kong Operations 27th Floor, 88 Hing Fat Street Causeway Bay Hong Kong, China Tel: +852-2864-2012



© 2019 Huck International, Inc.

Arconic Fastening Systems Kingston Operations

1 Corporate Drive, Kingston, NY 12401 Tel: 800-431-3091 • Fax: 845-334-7333

www.afshuck.net/us



Huck provides technical assistance regarding the use and application of Huck fasteners and tooling. NOTICE: The information contained in this publication is only for general guidance with regard to properties of the products shown and/or the means for selecting such products, and the crosto any warranty express.

and is not intended to create any warranty, express, implied, or statutory; all warranties are contained only in Huck's written quotations, acknowledgments, and/or purchase orders. It is recommended that the user secure specific, up-to-date data and information regarding each application and/or use of such products.