

ARTESYN[®]
T E C H N O L O G I E S

1

-


File Name: NFS COVER KITS.PDF Rev: 08 Oct 2002

- **NFS110**
- **Assembly instructions**
- **Mounting screws**
- **Crimp terminals and mating connectors**

The 'NFS110 COVER KIT' is manufactured in Europe with metric screw threads and the kit includes assembly screws and installation instructions.

MECHANICAL SPECIFICATIONS

NFS110

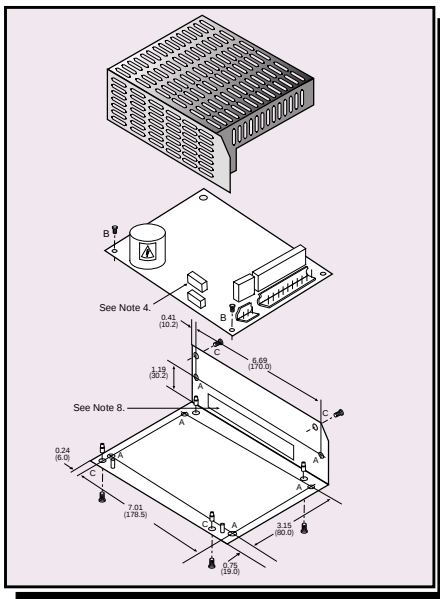

Assembly Notes

- 1 Before assembly, ensure unit has been turned off for at least 10 minutes.
- 2 Cover cable exit area with grommet strip provided (optional). Not required for the NFS110.
- 3 Maximum screw penetration into customer mounting holes is 3mm.
- 4 Cover fuse with fuse cover provided.
- 5 "A" denotes customer M3 mounting holes.
- 6 "B" denotes PCB fixing screws.
- 7 "C" denotes case assembly points and screws.
- 8 Apply tape in location shown.
- 9 Dimensions are in inches (mm).

Note: When a cover or other sheetmetal option is added, it is the user's responsibility to ensure that the requirements of the relevant safety agency, or agencies, are satisfied.

MODEL NUMBER: NFS110 COVER KIT

Bracket outside dim: 7.5" x 4.57" x 2.38" (190.5 x 116 x 60.5mm)


Cover outside dim: 7.5" x 4.51" x 2.32" (190.5 x 114.5 x 59mm)

- **NFS110 cover**
- **Assembly instructions**
- **Mounting screws**

The 'NFS110C' is manufactured in Asia with imperial screw threads and the kit includes assembly screws and installation instructions.

MECHANICAL SPECIFICATIONS

NFS110

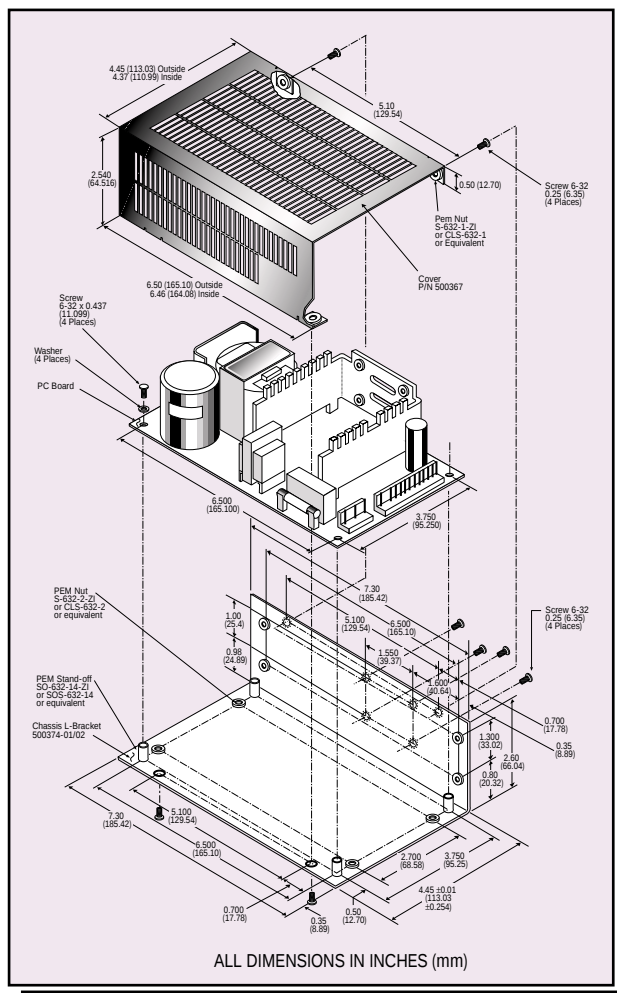

MODEL NUMBER: NFS110C

Bracket outside dim: 7.3" x 4.45" x 2.6" (185.42 x 113.03 x 66.04mm)
Cover outside dim: 6.5" x 4.45" x 2.54" (165.10 x 113.03 x 64.52mm)