

# Application Note

## Button Connection on ViewStream™ Player

(for M3-100/VS-100/M3-300/VS-300/M3-320/VS-320/VS-500/VS-520/RM-DN5)

Version 2.1

## Table of Contents

1	Introduction .....	3
	1.1 What you need? .....	3
2	Button Connection .....	4
	2.1 Connection with M3-100 & VS-100 .....	4
	2.1.1 Connect 8-button with M3-100 .....	4
	2.1.2 Connect 8-button with VS-100 .....	5
	2.2 Connection with M3-300 & VS-300 .....	6
	2.2.1 Connect 8-button with M3-300 .....	6
	2.2.2 Connect 16-button with M3-300 .....	7
	2.2.3 Connect 8-button with VS-300 .....	8
	2.3 Connection with M3-320 & VS-320 .....	9
	2.3.1 Connect 8-button with M3-320 .....	9
	2.3.2 Connect 16-button with M3-320 .....	10
	2.3.3 Connect 8-button with VS-320 .....	11
	2.4 Connection with RM-DN5, VS-500 & VS-520 .....	12
	2.4.1 Connect 8-button with RM-DN5 .....	12
	2.4.2 Connect 16-button with RM-DN5 .....	13
	2.4.3 Connect 8-button with VS-500 & VS-520 .....	14
3	Playlist configuration .....	15
	3.1 Simple playback mode .....	15
	3.2 Playlist mode .....	16
	3.2.1 Playlist Creation .....	16
4	Pin Assignments .....	18
	4.1 Button Circuit diagram .....	18
	4.2 Switch and Button connector .....	18

# 1 Introduction

This application note explains the use of buttons with the ViewStream™ media player and the M3-100, M3-300, M3-320 and RM-DN5 OEM media player boards. It also includes the button connection and playlist configuration using DV Studio.

## 1.1 What you need?

Before setup, please make sure have the following parts:

For ViewStream™ 100, 300, 320, 500 & 520 (VS-100, VS-300, VS-320 VS-500 & VS-520)

- VS-100, VS-300, VS-320, VS-500 or VS-520
- Remote extension cable (P/N 426631800-3)
- Switch mount board (P/N 416101300-3)

For OEM player board M3-100, M3-300, M3-320 and RM-DN5

- M3-100, M3-300, M3-320 or RM-DN5
- 9-ways button cable (P/N 426450100-3, 140mm or P/N 426450110-3, 300mm)
- Switch mount board (P/N 416101300-3)

For both you will need a copy of DV Studio which can be downloaded from:


<http://www.digitalview.com/products/software>

# 2 Button Connection

## 2.1 Connection with M3-100 & VS-100


### 2.1.1 Connect 8-button with M3-100

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)

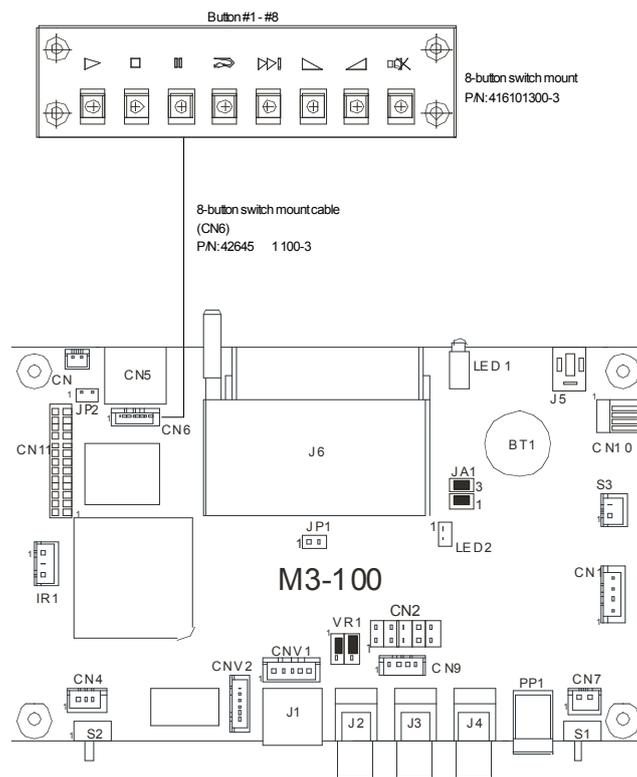

### 2.1.2 Connect 8-button with VS-100

Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the Remote Ext. socket (CN5) via the standard cable (P/N:426631800-3)

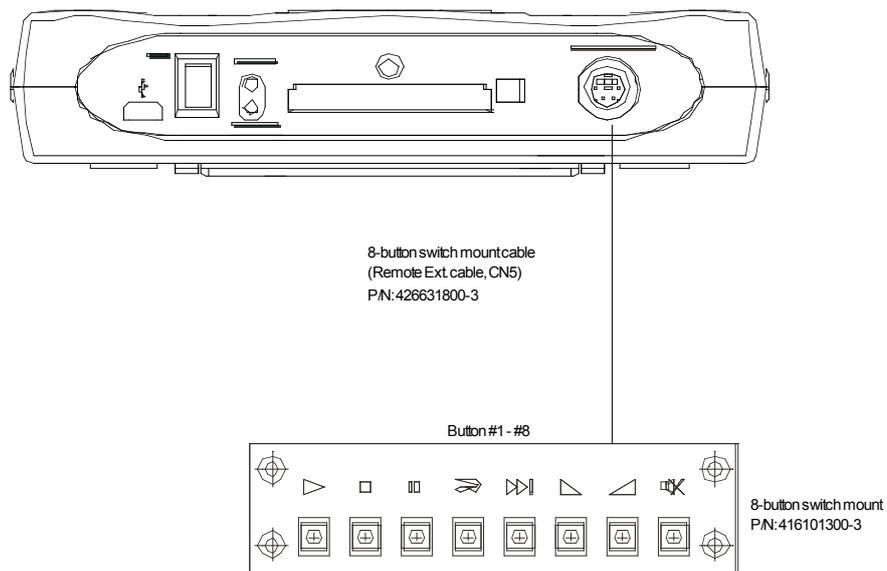


**Important note:** There is no additional button connector for #9 - #16 available on M3-100 and VS-100.

## 2.2 Connection with M3-300 & VS-300


### 2.2.1 Connect 8-button with M3-300

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)

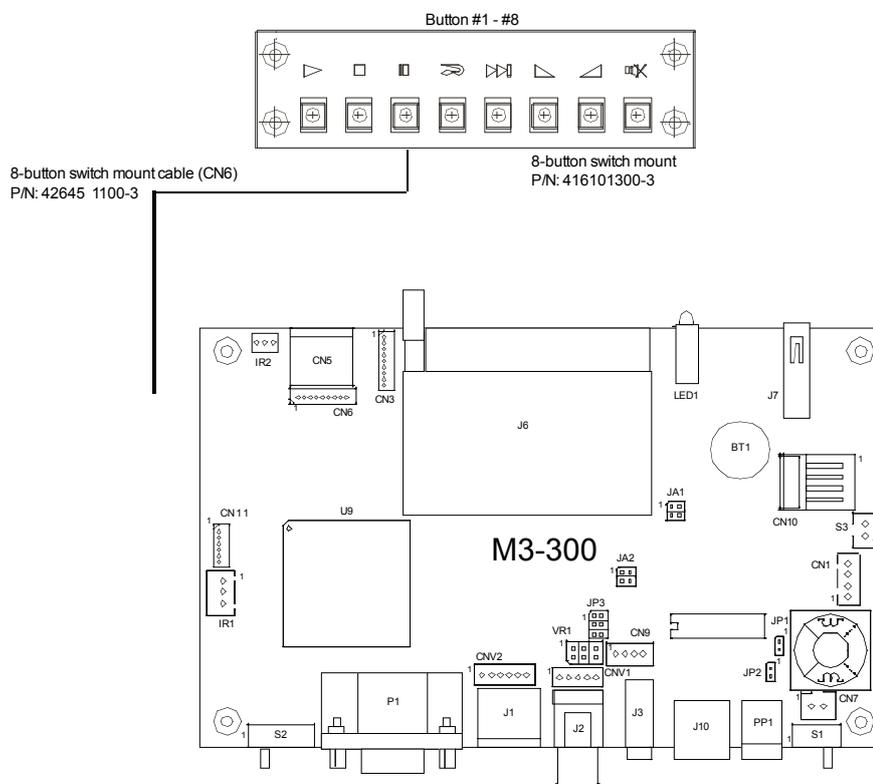


### 2.2.2 Connect 16-button with M3-300

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)
- Use the switchmount (P/N:416101300-3) for 9-16 buttons when connected to the button connector CN3 via the standard switchmount cable (P/N:426450100-3)

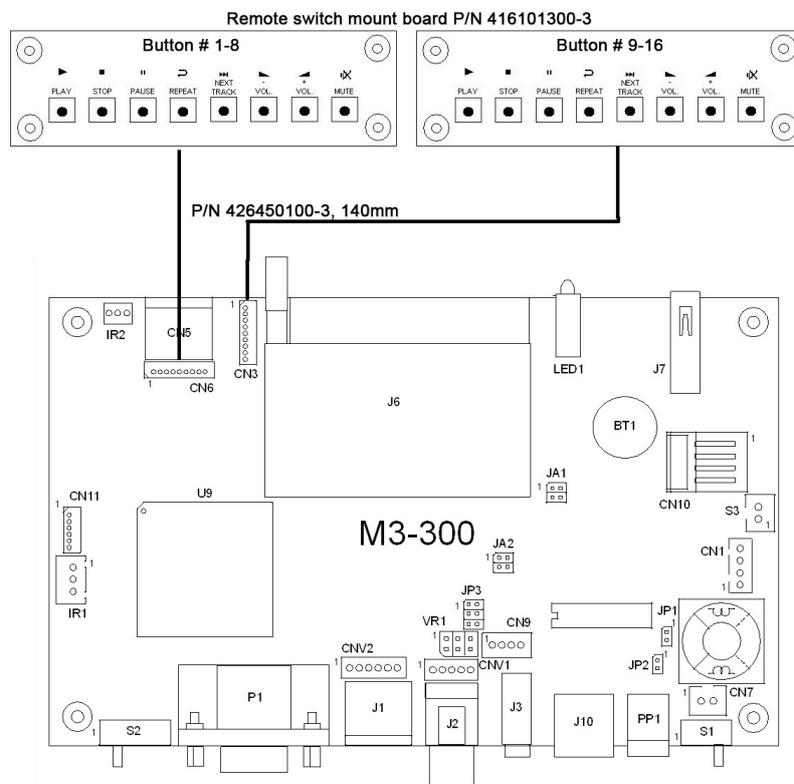

### 2.2.3 Connect 8-button with VS-300

Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the Remote Ext. socket (CN5) via the standard cable (P/N:426631800-3)

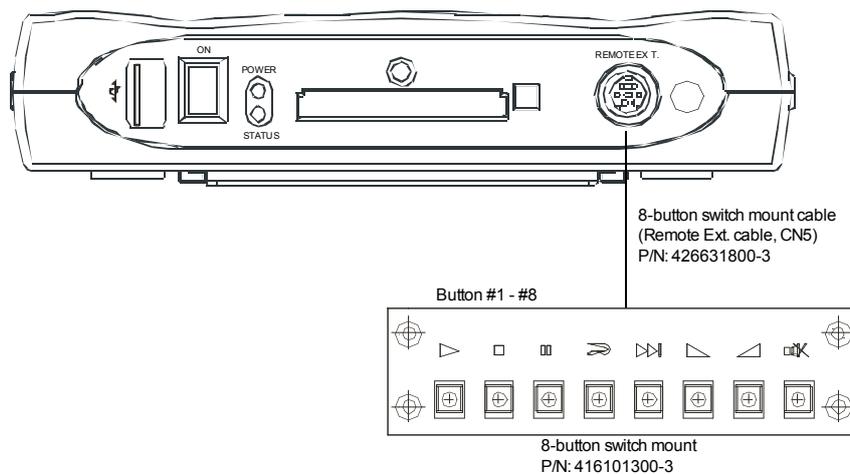


**Important note:** There is no additional button connector for #9 - #16 available on VS-300. However, it is possible to access button #9 - #16 on VS-300 but a custom-made housing design is required. Please contact your local Digital View distributors for more details.

## 2.3 Connection with M3-320 & VS-320


### 2.3.1 Connect 8-button with M3-320

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)

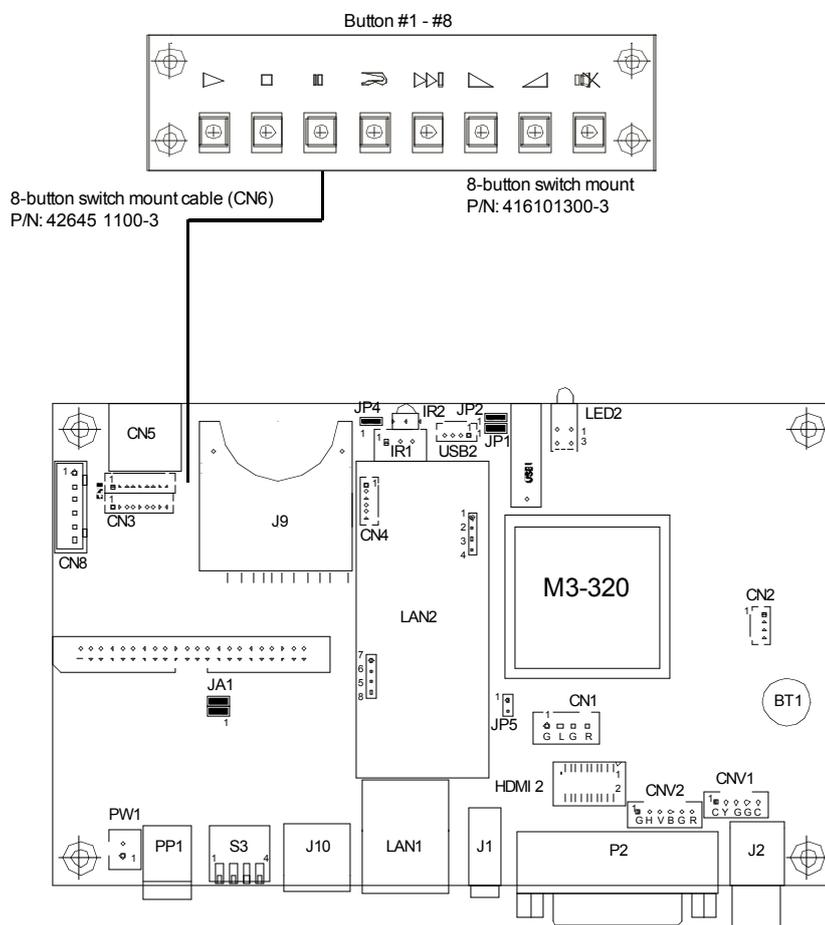


## 2.3.2 Connect 16-button with M3-320

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)
- Use the switchmount (P/N:416101300-3) for 9-16 buttons when connected to the button connector CN3 via the standard switchmount cable (P/N:426450100-3)

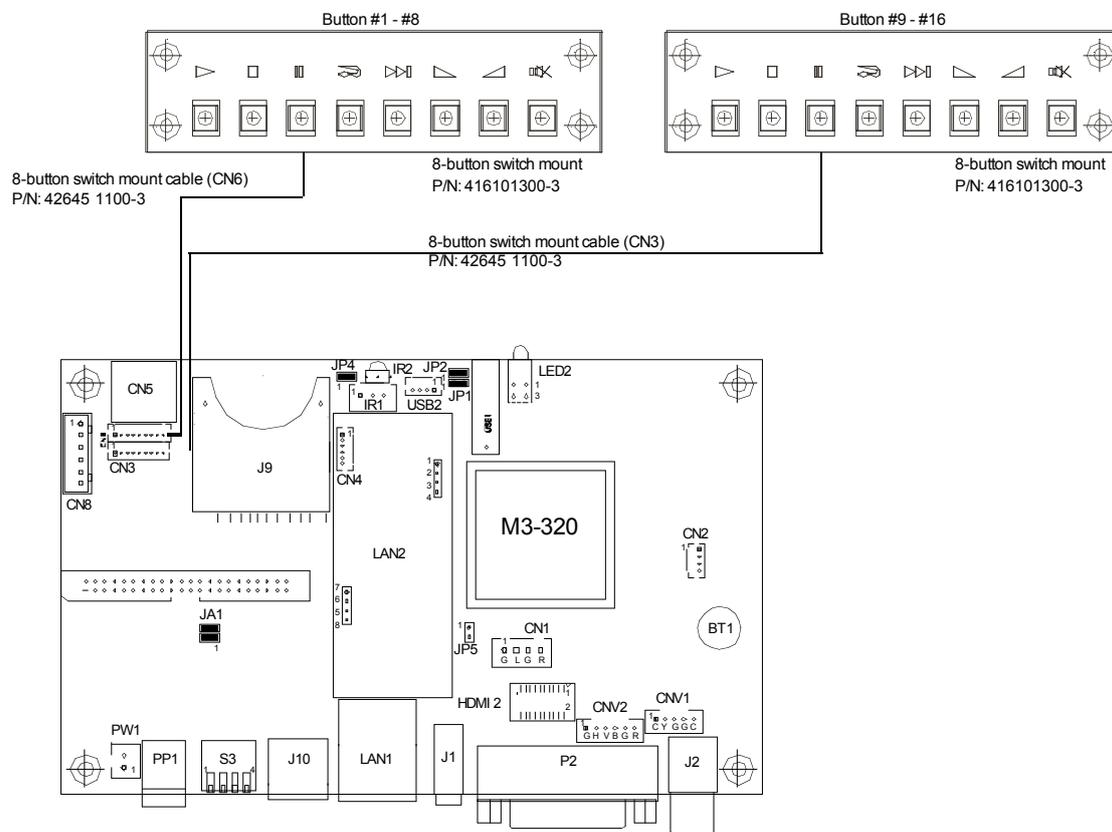

### 2.3.3 Connect 8-button with VS-320

Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the Remote Ext. socket (CN5) via the standard cable (P/N:426631800-3)

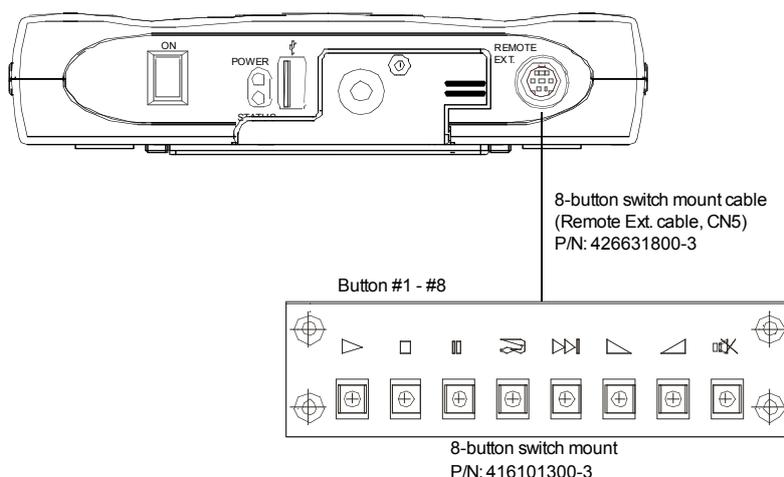


**Important note:** There is no additional button connector for #9 - #16 available on VS-320. However, it is possible to access button #9 - #16 on VS-320 but a custom-made housing design is required. Please contact your local Digital View distributors for more details.

## 2.4 Connection with RM-DN5, VS-500 & VS-520


### 2.4.1 Connect 8-button with RM-DN5

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)

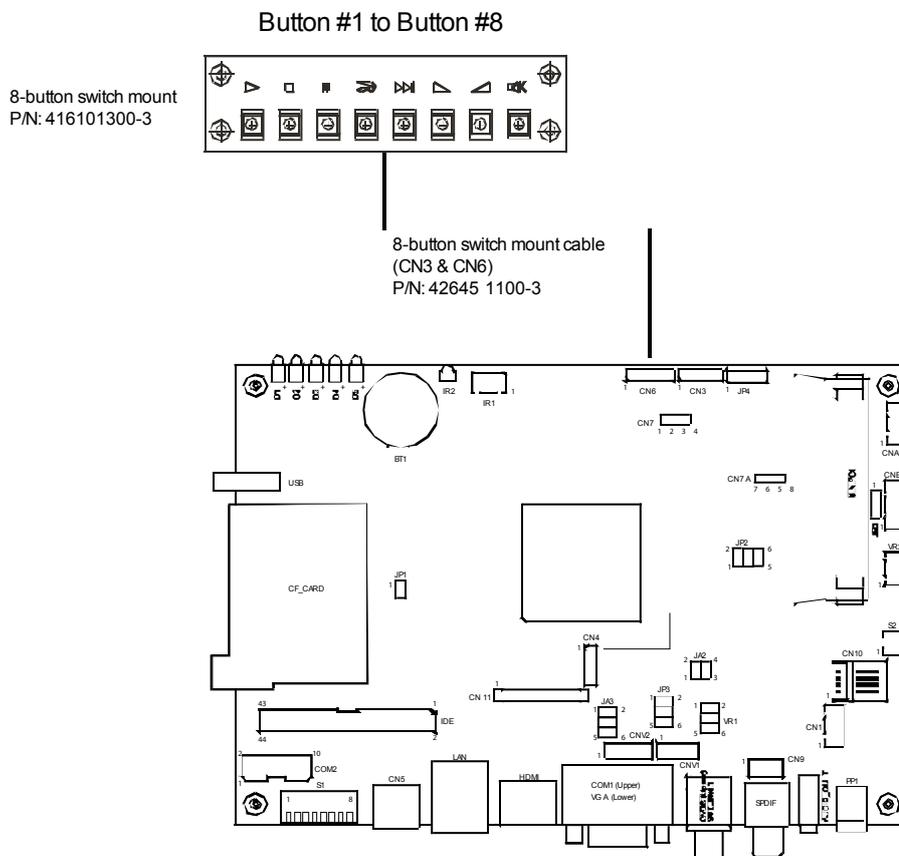


### 2.4.2 Connect 16-button with RM-DN5

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the button connector CN6 via the standard switchmount cable (P/N:426450100-3)
- Use the switchmount (P/N:416101300-3) for 9-16 buttons when connected to the button connector CN3 via the standard switchmount cable (P/N:426450100-3)

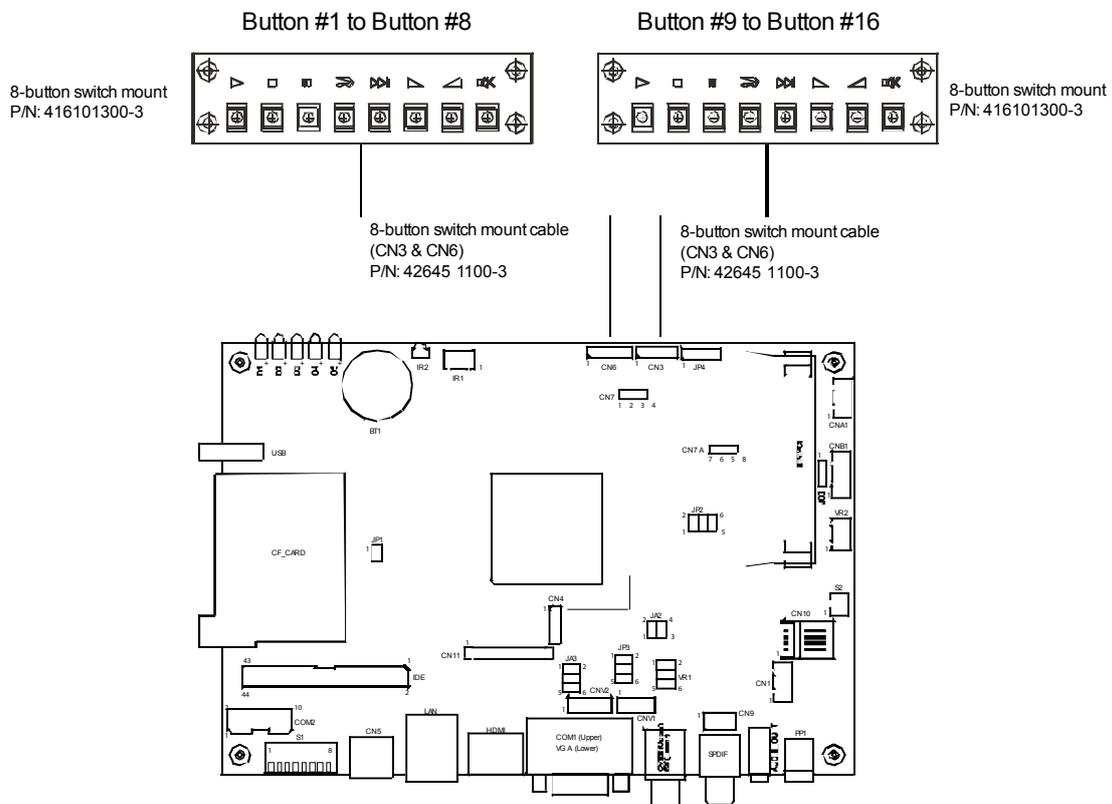

### 2.4.3 Connect 8-button with VS-500 & VS-520

- Use the switchmount (P/N:416101300-3) for 1-8 buttons when connected to the Remote Ext. socket (CN5) via the standard cable (P/N:426631800-3)

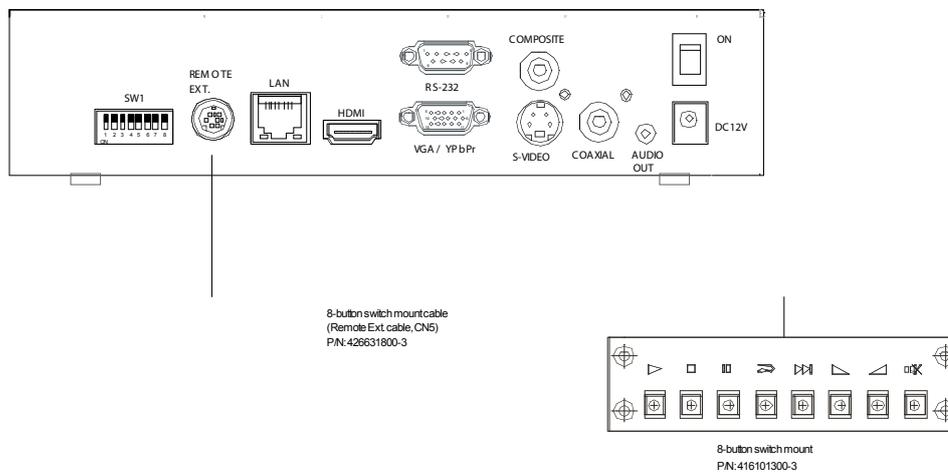

**Important note:** There is no additional button connector for #9 - #16 available on VS-500. However, it is possible to access button #9 - #16 on VS-500 but a custom-made housing design is required. Please contact your local Digital View distributors for more details.

# 3 Playlist configuration

For whatever type of buttons are used including the ITO touch screen type, each button function can be programmed with **DV Studio** to perform a video player mode function or specific track select function.

The button control has two modes of operation - simple playback mode and playlist mode.

## 3.1 Simple playback mode

When using simple playback mode, the function of all buttons 1 to 8 has been preset.

The preset function for button (#1-#8) is:

Button	#1	#2	#3	#4	#5	#6	#7	#8
Function	Play	Stop	Pause	Repeat	Next	Vol -	Vol +	Mute

Note: There are no functions for buttons 9-16 in simple playback mode.



We have pre-defined two button profiles (8 buttons and 16 buttons) in DV Studio.

The following is the default settings in device function for these two profiles.

#### 8 Buttons Profile

	No function	Play track	Player mode
Push button # 1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Play
Push button # 2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Stop
Push button # 3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Pause
Push button # 4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Repeat/Continue toggle
Push button # 5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Next track
Push button # 6	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Volume Down
Push button # 7	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Volume Up
Push button # 8	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Mute

#### 16 Buttons Profile


	No function	Play track	Player mode
Push button # 1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Play
Push button # 2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Stop
Push button # 3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Pause
Push button # 4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Repeat/Continue toggle
Push button # 5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Next track
Push button # 6	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Volume Down
Push button # 7	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Volume Up
Push button # 8	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/> Mute
Push button # 9	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 10	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 11	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 12	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 13	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 14	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 15	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Push button # 16	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Step 5: After finishing all the required settings ensure you deploy the Playlist and/or save the playlist so it can be amended at a later date.

# 4 Pin Assignments


## 4.1 Button Circuit diagram

The following circuit diagram illustrates each button connection on CN3, CN5 and CN6.

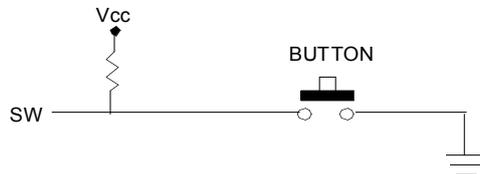

## 4.2 Switch and Button connector

CN5 – Remote Ext. connector (#1 - #8)

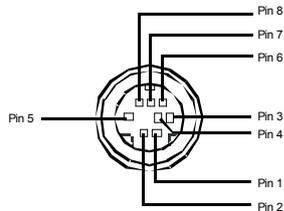

PIN	SYMBOL	DESCRIPTION
1	SW1	Button 1
2	SW2	Button 2
3	SW3	Button 3
4	SW4	Button 4
5	SW5	Button 5
6	SW6	Button 6
7	SW7	Button 7
8	SW8	Button 8
The shielding of connector is grounded.		

CN6 - Switches and buttons connector (#1 - #8)

PIN	SYMBOL	DESCRIPTION
1	SW1	Button 1
2	SW2	Button 2
3	SW3	Button 3
4	SW4	Button 4
5	SW5	Button 5
6	SW6	Button 6
7	SW7	Button 7
8	SW8	Button 8
9	GND	Ground

CN3 - Switches and buttons connector (#9 - #16)

PIN	SYMBOL	DESCRIPTION
1	SW9	Button 9
2	SW10	Button 10
3	SW11	Button 11
4	SW12	Button 12
5	SW13	Button 13
6	SW14	Button 14
7	SW15	Button 15
8	SW16	Button 16
9	GND	Ground

---

**CONTACT DETAILS**

**USA:** Digital View Inc.  
18440 Technology Drive  
Building 130  
Morgan Hill, CA 95037  
**Tel:** (1) 408-782 7773      **Fax:** (1) 408-782 7883  
**Sales:** [ussales@digitalview.com](mailto:ussales@digitalview.com)

**EUROPE:** Digital View Ltd  
6 Marylebone Passage  
London  
W1W 8EX  
UK  
**Tel:** (44) (0)20 7631 2150      **Fax:** (44) (0)20 7631 2156  
**Sales:** [uksales@digitalview.com](mailto:uksales@digitalview.com)

**ASIA:** Digital View Ltd  
16<sup>th</sup> floor Millennium City 3  
370 Kwun Tong Road  
Kwun Tong  
Hong Kong  
**Tel:** (852) 2861 3615      **Fax:** (852) 2520 2987  
**Sales:** [hksales@digitalview.com](mailto:hksales@digitalview.com)

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Digital View:](#)

[416101300-3](#)