



TG RACEWAY SYSTEM INSTALLATION INSTRUCTIONS


FITTINGS continued END CAP (WITH CONDUIT DRILL GUIDE)

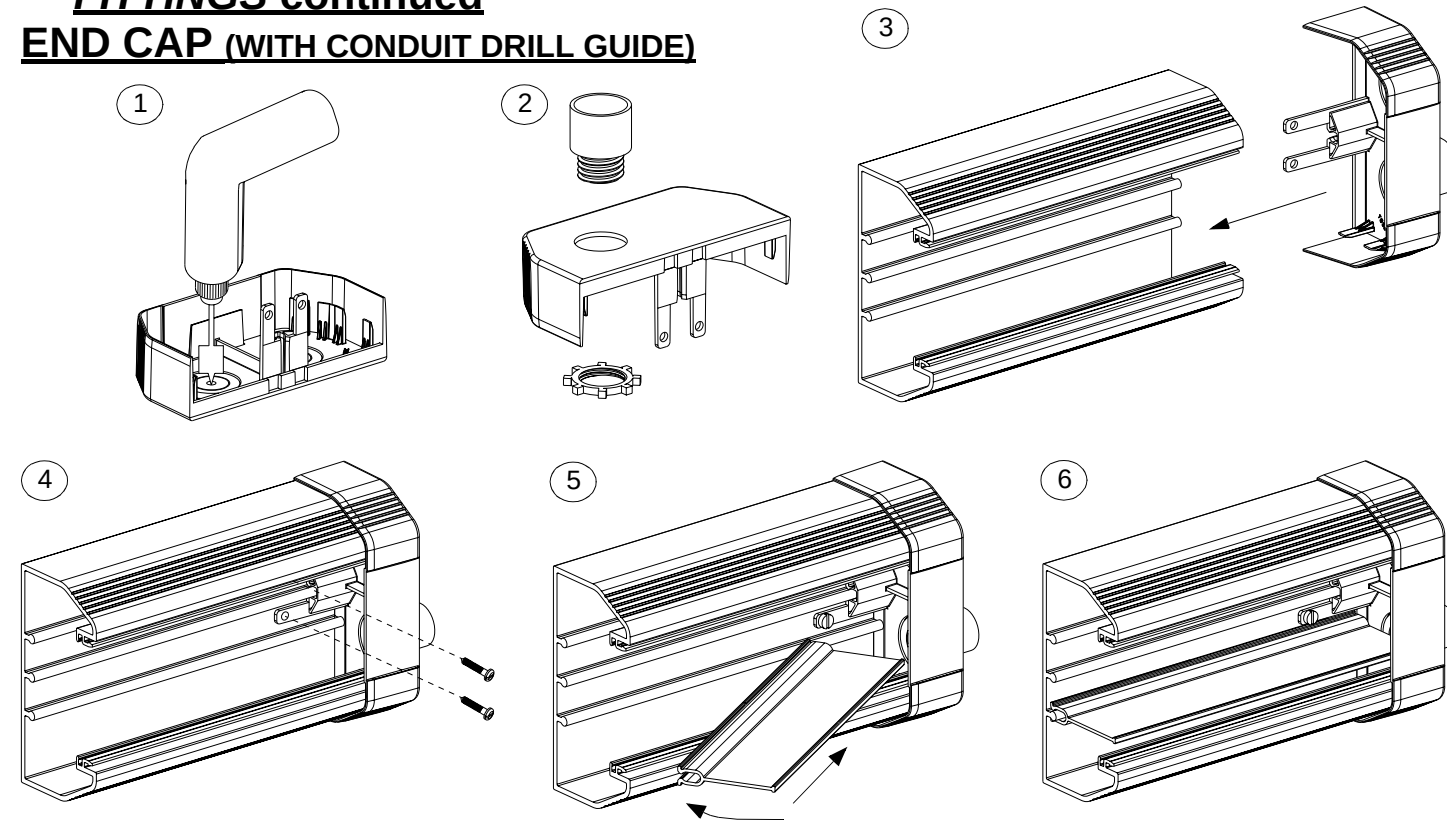

ACCESSORIES DIVIDER WALL

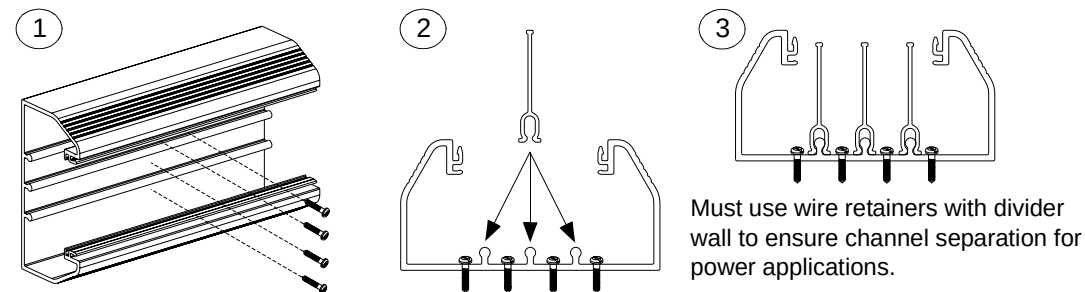

WIRE RETAINER

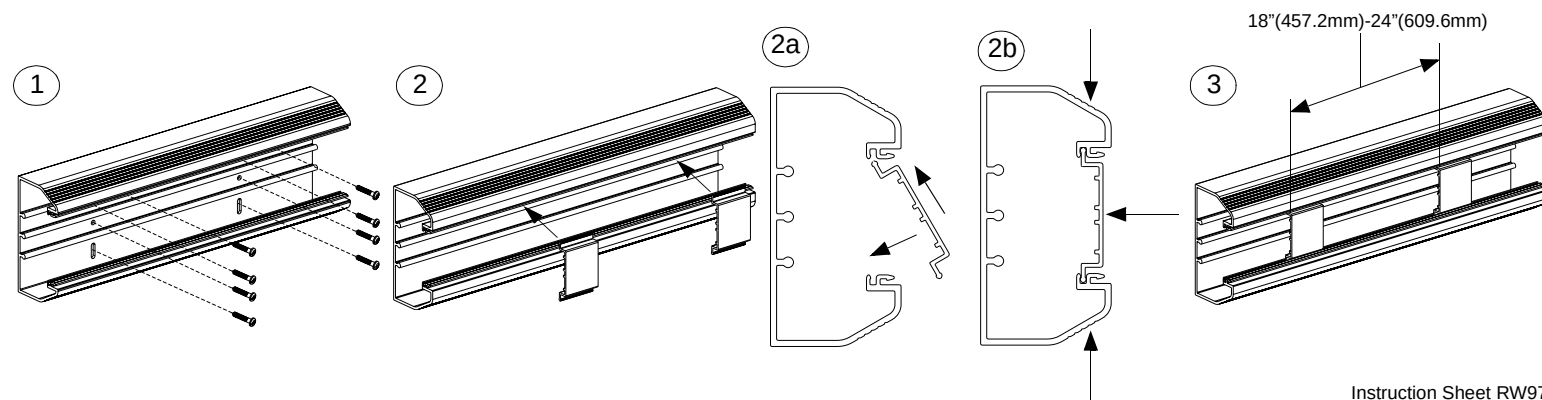

Instruction Sheet RW97

WORLDWIDE SUBSIDIARIES AND SALES OFFICES

17301 Ridgeland Avenue
Tinley Park, IL 60477-3091
Web Site: www.panduit.com



Technical Support: 866-405-6656
Fax: 866-449-1702
Email: netconnsupport@panduit.com



TG RACEWAY SYSTEM

Part Numbers: TG70B, T70C, TG70BC, T70CC, TG70WR
TG80B, TEC80, TG80BC, TECFC80, TG80WR
TG86B, TG86C, TG86BC, TCFC105, TG86WR
TGRA, TGE C, TGDW


FOR USE WITH **PANDUIT** SURFACE RACEWAY ROUTING SYSTEM

INSTALLATION INSTRUCTIONS

©Panduit Corp. 2000

Printed in U.S.A.

TG70 WIREFILL PROFILES

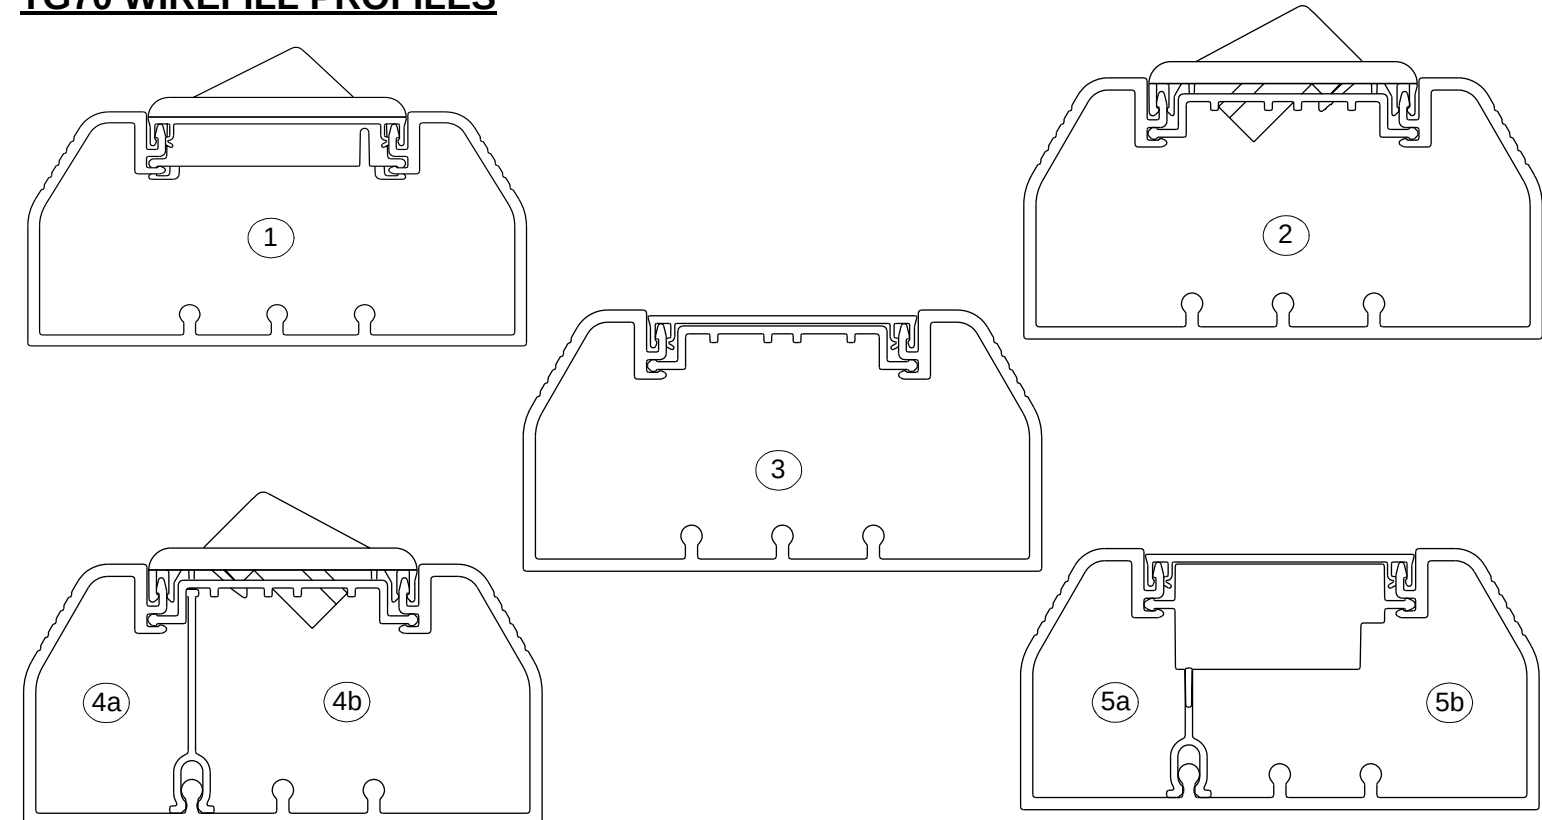

TG70 WIREFILL CHART


Raceway Channel Wirefill Configurations	See Fill #	*Electrical Cables AWG		
		14	12	10
		THHN/T90	THHN/T90	THHN/T90
		0.105 MAX	0.122 MAX	0.153 MAX
Wirefill #1: Data only using "Screw-On" Faceplates	1	**	**	**
Wirefill #2: Data only using "Snap-On" Bezels	2	**	**	**
Wirefill #3: TG-70 Raceway with no Devices	3	40	40	38
Wirefill #4: Power and Data using "Snap-On" Bezels and 3-Sided Power Box	4A	28	28	26
	4B	**	**	**
Wirefill #5: Power and Data using "Snap-On" Bezels and 3-Sided Power Box	5A	28	28	26
	5B	**	**	**

* WIRES NOT BUNDLED


For Technical Assistance call: 866-405-6656

TG RACEWAY SYSTEM INSTALLATION INSTRUCTIONS

 
BASE & COVER




The mounting hardware used to secure the raceway shall be appropriate for the mounting

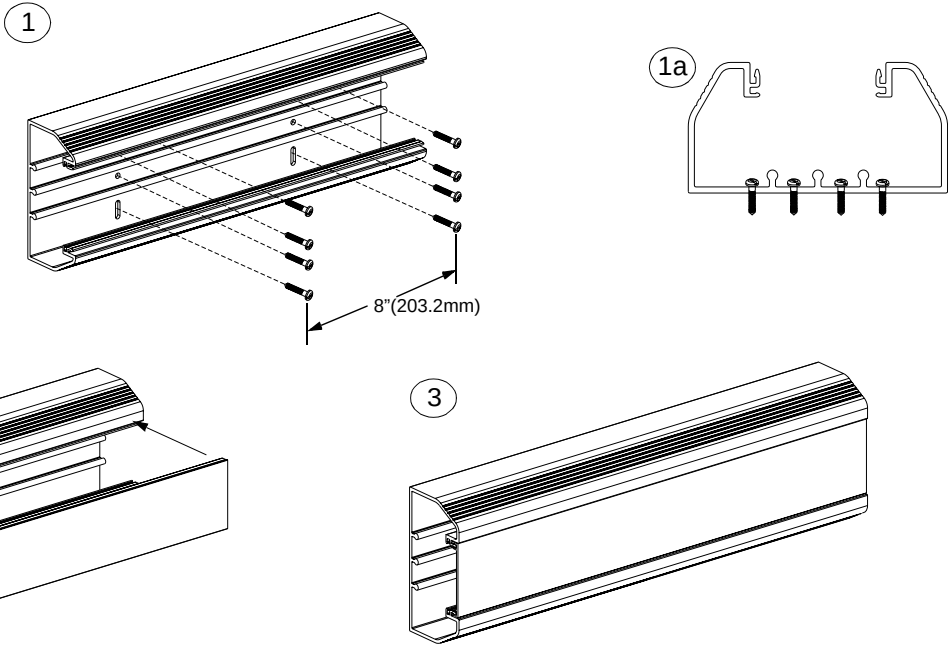

FITTINGS
BASE COUPLER

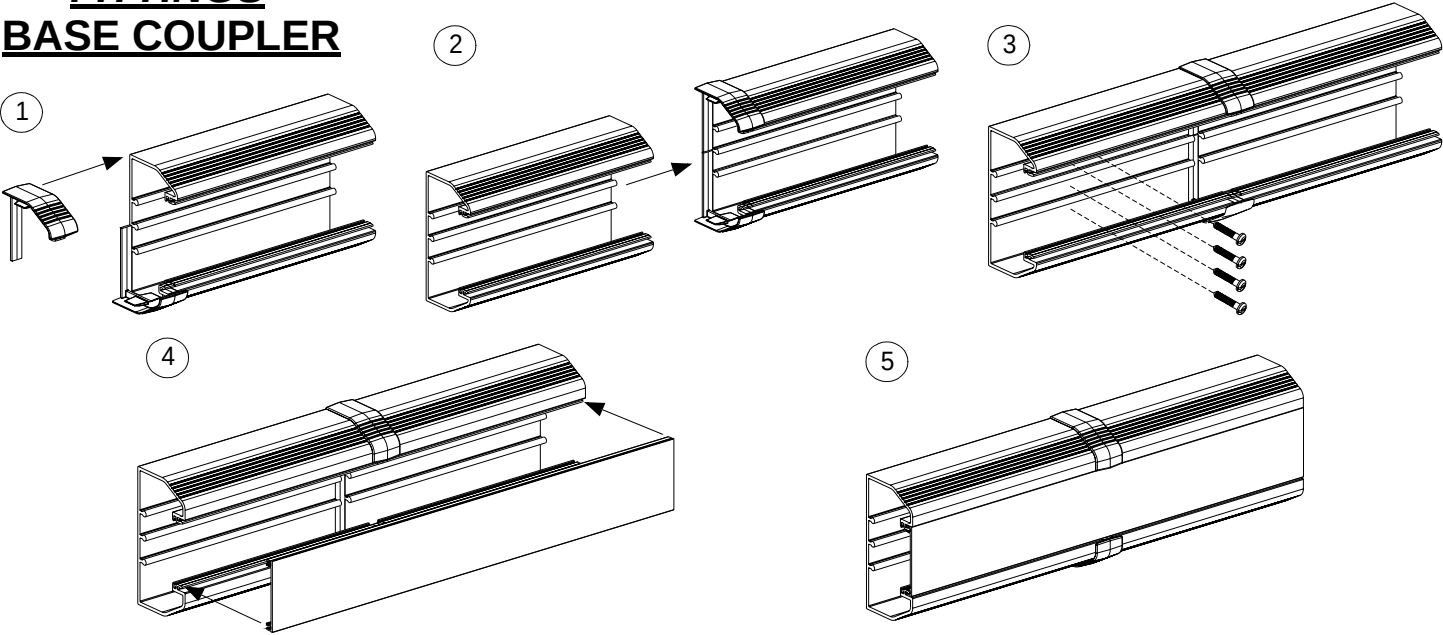


COVER COUPLER

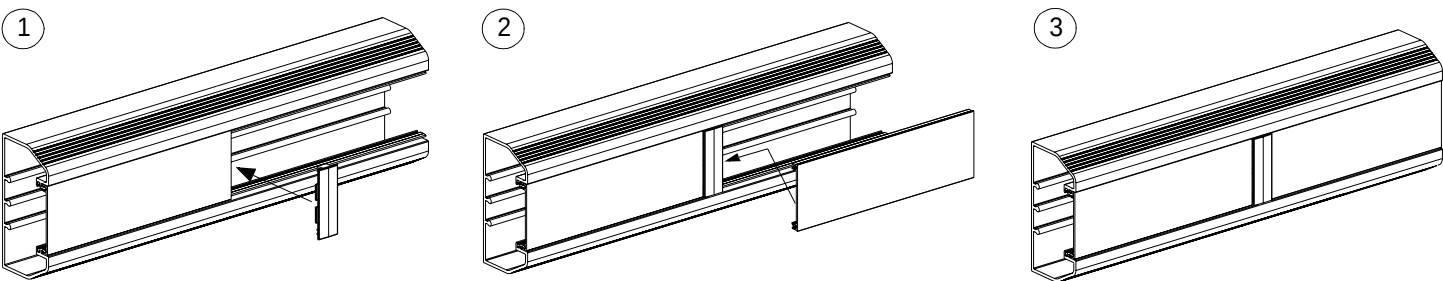

TG RACEWAY SYSTEM INSTALLATION INSTRUCTIONS

FITTINGS continued
RIGHT ANGLE

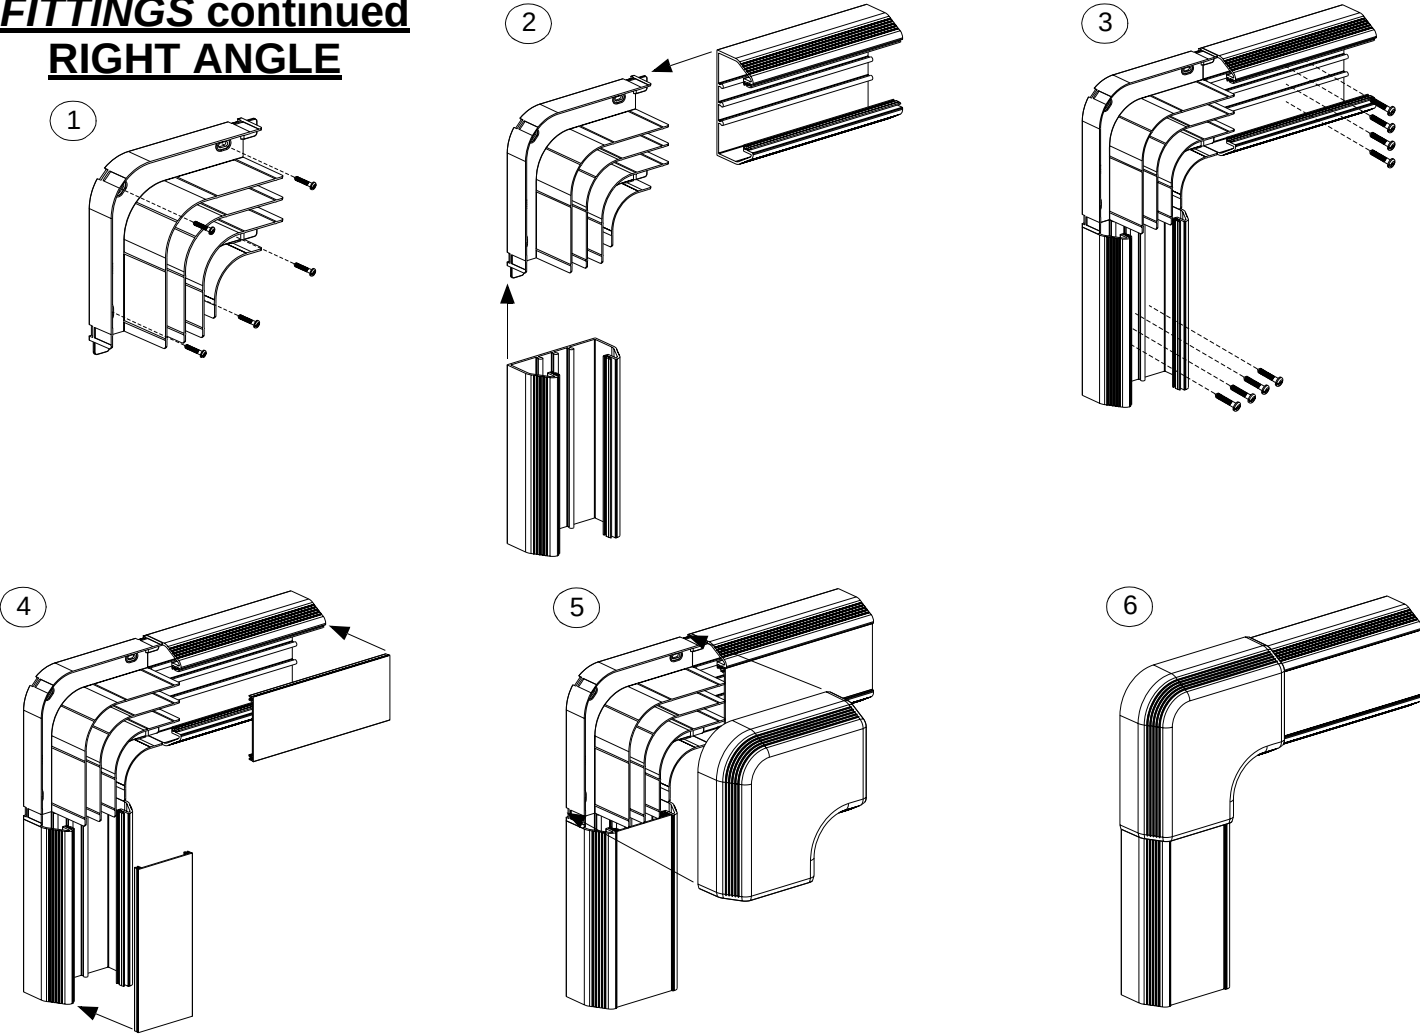

END CAP

