


85.590.-916.00

MELLERT SLT®

- D** Bedienungsanleitung
- GB** Instruction manual
- F** Mode d'emploi
- E** Manual de instrucciones

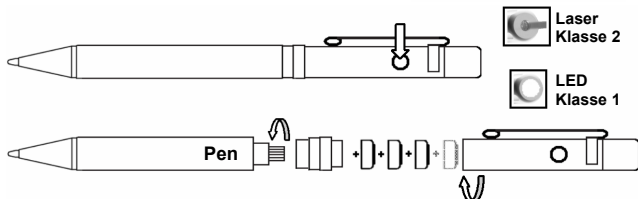

Laser
Klasse 2



LED
Klasse 1

Batterien LR 41-AG3-1,5 V enthalten / Batteries LR 41-AG3-1,5 V included
Piles LR 41-AG3-1,5 V fournies / Pilas LR 41-AG3-1,5 V incluidas

ACHTUNG / ATTENTION / ATTENZIONE!

Laserstrahlung nicht in den Laserstrahl blicken!

Laser radiation don't look into the laser beam!

Rayon laser ne pas regarder dans le faisceau!

Laser haz, no mirar directamente al haz de laser!

2 Jahre Garantie/2 Year-Guarantee/2 Ans de Garantie/2 Años de Garantia



Laserstrahlung
nicht in den Strahl blicken
Laser Klasse 2
Laser radiation
don't look into the laser beam
laser class 2

Mellert SLT GmbH & Co. KG · Langenmorgen 2 · D-75015 Bretten / Germany

Tel. +49 (0)7252 / 505 - 0 · Fax +49 (0)7252 / 505 -10 · www.mellert-slt.com