

Digital Temperature Controllers

E5GN

Compact and Intelligent Temperature Controllers

1/32 DIN with Communications Function

- Various temperature inputs: Thermocouple, platinum resistance thermometer, non-contact temperature sensor, and analog inputs.
- Auto-tuning and self-tuning available. Auto-tuning is possible even while self-tuning is being executed.
- Heating or heating/cooling control is available.
- Water-resistant construction (NEMA4X: equivalent to IP66).
- Conforms to UL, CSA, and IEC safety standards as well as CE marking.



48(W) x 24(H) x 100(D) mm

Ordering Information

■ E5GN Standard Models

Size	Power supply voltage	No. of alarm points	Output	Thermocouple model	Platinum resistance thermometer model
1/32 DIN 48(W) x 24(H) x 100(D) mm	100 to 240 VAC	---	Relay	E5GN-RTC	E5GN-RP
			Voltage output (for driving SSR)	E5GN-QTC	E5GN-QP
		1 (see note 1)	Relay	E5GN-R1TC	E5GN-R1P
			Voltage output (for driving SSR)	E5GN-Q1TC	E5GN-Q1P
	24 VAC/VDC	---	Relay	E5GN-RTC	E5GN-RP
			Voltage output (for driving SSR)	E5GN-QTC	E5GN-QP
		1 (see note 1)	Relay	E5GN-R1TC	E5GN-R1P
			Voltage output (for driving SSR)	E5GN-Q1TC	E5GN-Q1P

- Note:**
1. If the heating/cooling function is used, ALM1 will be used for control output and so alarm output will not be available.
 2. Control output 2 for heating/cooling control is relay output.
 3. Specify the power supply specifications when ordering.

■ E5GN Communication Models

Size	Power supply voltage	Communication function	Output	Thermocouple model	Platinum resistance thermometer model
1/32 DIN 48(W) x 24(H) x 100(D) mm	100 to 240 VAC	RS-485	Relay	E5GN-R03TC-FLK	E5GN-R03P-FLK
			Voltage output (for driving SSR)	E5GN-Q03TC-FLK	E5GN-Q03P-FLK
	24 VAC/VDC		Relay	E5GN-R03TC-FLK	E5GN-R03P-FLK
			Voltage output (for driving SSR)	E5GN-Q03TC-FLK	E5GN-Q03P-FLK

- Note:** Specify the power supply specifications when ordering.

■ Input Ranges

Platinum Resistance Thermometer Input/Thermocouple Input

Platinum resistance thermometer input				
Input type	Platinum resistance thermometer			
Name	Pt100		JPt100	
Temperature range	1800 1700 1600 1500 1400 1300 1200 1100 1000 900 800 700 600 500 400 300 200 100 0 -100 -200	850 500.0 100.0 0.0 -200	500.0 100.0 0.0 -199.9	500.0 100.0 0.0 -199.9
Set value	0	1	2	3

	Thermocouple input																		
Input type	Thermocouple											ES1A Non-contact Temperature Sensor				Analog input			
Name	K		J		T		E	L	U	N	R	S	B	K10 to 70°C	K60 to 120°C	K115 to 165°C	K160 to 260°C	0 to 50 mV	
Temperature range	1800										1700	1700	1800					Usable in the following ranges by scaling: –1999 to 9999 or –199.9 to 999.9	
	1700																		
	1600																		
	1500																		
	1400																		
	1300	1300								1300									
	1200																		
	1100																		
	1000																		
	900																		
800			850					850											
700																			
600																			
500	500.0																		
400																			
300				400.0															
200					400														
100						400.0													
0							600												
–100																			
–200	–200	–20.0	–100	–20.0	–200	–199.9	0	–100	–200	–199.9	–200	0	100	0	0	0	0		
Set value	0	1	2	3	4	17	5	6	7	18	8	9	10	11	12	13	14	15	16

Applicable standards by input type are as follows:

K, J, T, E, N, R, S, B: JIS C1602-1995

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985

JPt100: JIS C1604-1989, JIS C1606-1989

Pt100: JIS C1604-1997, IEC751

Shaded ranges indicate default settings.

Specifications

■ Ratings

Supply voltage		100 to 240 VAC, 50/60 Hz	24 VAC, 50/60 Hz/24 VDC
Operating voltage range		85% to 110% of rated supply voltage	
Power consumption		7 VA	4 VA/2.5 W
Sensor input		Thermocouple: K, J, T, E, L, U, N, R, S, B Platinum resistance thermometer: Pt100, JPt100 Non-contact temperature sensor: 10 to 70°C, 60 to 120°C, 115 to 165°C, 160 to 260°C Voltage input: 0 to 50 mV	
Control output	Relay output	SPST-NO, 250 VAC, 2 A (resistive load), electrical life: 100,000 operations	
	Voltage output	12 VDC (PNP), max. load current: 21 mA, with short-circuit protection circuit	
Alarm output		SPST-NO, 250 VAC, 1 A (resistive load), electrical life: 100,000 operations	
Control method		2-PID or ON/OFF control	
Setting method		Digital setting using front panel keys	
Indication method		7-segment digital display and single-lighting indicator Character height: PV: 7.0 mm; SV: 3.5 mm	
Other functions		According to controller model	
Ambient temperature		-10 to 55°C (with no condensation or icing)	
Ambient humidity		25% to 85%	
Storage temperature		-25 to 65°C (with no condensation or icina)	

■ Characteristics

Indication accuracy	Thermocouple: ($\pm 0.5\%$ of indicated value or $\pm 1^\circ\text{C}$, whichever greater) ± 1 digit max. (see note) Platinum resistance thermometer: ($\pm 0.5\%$ of indicated value or $\pm 1^\circ\text{C}$, whichever greater) ± 1 digit max. Analog input: $\pm 0.5\%$ FS ± 1 digit max. CT input: $\pm 5\%$ FS ± 1 digit max.	
Hysteresis	0.1 to 999.9 EU (in units of 0.1 EU)	
Proportional band (P)	0.1 to 999.9 EU (in units of 0.1 EU)	
Integral time (I)	0 to 3999 s (in units of 1 s)	
Derivative time (D)	0 to 3999 s (in units of 1 s)	
Control period	1 to 99 s (in units of 1 s)	
Manual reset value	0.0% to 100.0% (in units of 0.1%)	
Alarm setting range	-1999 to 9999 (decimal point position depends on input type)	
Sampling period	500 ms	
Insulation resistance	20 M Ω min. (at 500 VDC megger)	
Dielectric strength	2000 VAC, 50 or 60 Hz for 1 min (between different charging terminals)	
Vibration resistance	10 to 55 Hz, 10 m/s ² for 2 hours each in X, Y and Z directions	
Shock resistance	300 m/s ² , 3 times each in 3 axes, 6 directions (relay: 100 m/s ²)	
Weight	Approx. 90 g	Mounting bracket: approx. 10 g
Protective structure	Front panel: NEMA4X for indoor use (equivalent to IP66), rear case: IP20, terminals: IP00	
Memory protection	EEPROM (non-volatile memory) (number of writes: 100,000)	
EMC	Emission Enclosure: Emission AC Mains: Immunity ESD: Immunity RF-interference: Immunity Conducted Disturbance: Immunity Burst:	EN55011 Group 1 class A EN55011 Group 1 class A EN61000-4-2: 4 kV contact discharge (level 2) 8 kV air discharge (level 3) 10 V/m (amplitude modulated, 80 MHz to 1 GHz) (level 3) 10 V/m (pulse modulated, 900 MHz) 10 V (0.15 to 80 MHz) (level 3) EN50141: 2 kV power-line (level 3) EN61000-4-4: 2 kV I/O signal-line (level 4)
Approved standards	UL3121-1, CSA22.2 No. 14, E.B.1402C Conforms to EN50081-2, EN50082-2, EN61010-1 (IEC61010-1) Conforms to VDE0106/part 100 (Finger Protection), when the terminal cover is mounted.	


Note: The indication of K thermocouples in the -200 to 1300°C range, and T and N thermocouples at a temperature of -100°C or less, and U and L thermocouples at any temperature is $\pm 2^{\circ}\text{C} \pm 1$ digit maximum. The indication of B thermocouples at a temperature of 400°C or less is unrestricted.
The indication of R and S thermocouples at a temperature of 200°C or less is $\pm 3^{\circ}\text{C} \pm 1$ digit maximum.

■ Communications Specifications

Transmission path connection	Multiple points
Communications method	RS-485 (two-wire, half duplex)
Synchronization method	Start-stop synchronization
Baud rate	1,200/2,400/4,800/9,600/19,200 bps
Transmission code	ASCII
Data bit length (see note)	7 or 8 bits
Stop bit length (see note)	1 or 2 bits
Error detection	Vertical parity (none, even, odd) Frame check sequence (FCS): with SYSMAC WAY Block check character (BCC): with CompoWay/F
Flow control	Not available
Interface (see note)	RS-485
Retry function	Not available
Communications buffer	40 bytes




Note: The baud rate, data bit length, stop bit length, or vertical parity can be individually set using the communications setting level.

Nomenclature

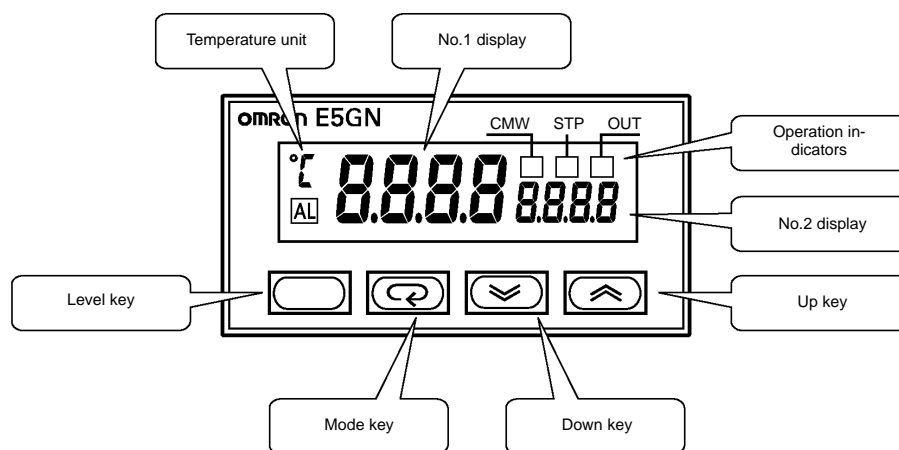

Dimensions


Note: All units are in millimeters unless otherwise indicated.

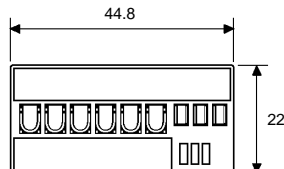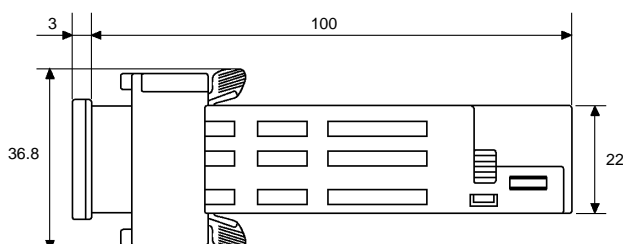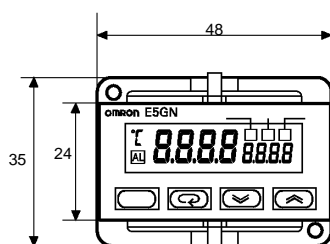


* When carrying out maintenance on the E5GN, only the terminal plate can be drawn out with the terminal leads still attached.

Panel Cutout

Mounted Separately

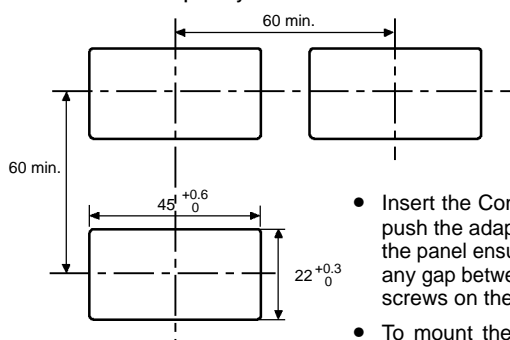

Group Mounted

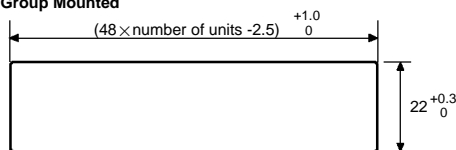

Mounting separately does not allow waterproofing.


- Insert the Controller through the hole in the panel from the front and push the adapter on from the rear. Push the adapter up to the back of the panel ensuring that the controller is pushed all the way in, removing any gap between the Controller, panel, and adapter. Finally, use the two screws on the adapter to secure the unit in place.
- To mount the E5GN so that it is waterproof, insert the waterproof packing onto the E5GN.
- When two or more E5GN Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature given in the specifications.

Wiring Terminals

- The voltage output (control output) is not electrically insulated from the internal circuits. When using a grounding thermocouple, do not connect the control output terminals to the ground. If the control output terminals are connected to the ground, errors will occur in the measured temperature values as a result of leakage current.

- Standard insulation is applied to the power supply I/O sections. If reinforced insulation is required, connect the input and output terminals to a device without any exposed current-carrying parts or to a device with standard insulation suitable for the maximum operating voltage of the power supply I/O section.

■ E5GN

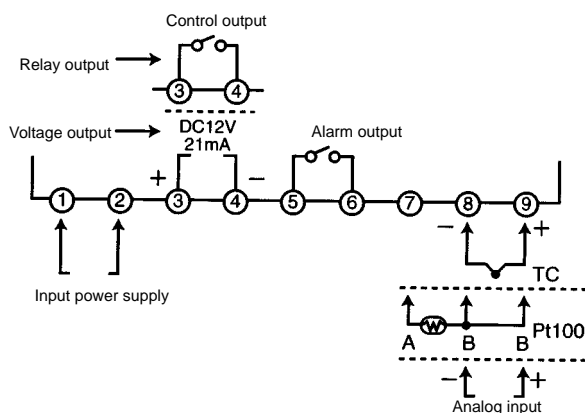

Two input power supplies are available:
100 to 240 VAC or 24 VAC/VDC (no polarity).

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Nomenclature

E5AN

Operation Indicators

1. ALM1 (alarm 1)
Lights when alarm 1 output is ON.
ALM2 (alarm 2)
Lights when alarm 2 output is ON.
ALM3 (alarm 3)
Lights when alarm 3 output is ON.
2. HB (heater burnout alarm display)
Lights when a heater burnout is detected.
The heater burnout alarm remains ON by setting the heater burnout latch. To reset, turn the power supply OFF and then ON or set the heater burnout alarm value to "0.0A."
3. OUT1, OUT2 (control output 1, control output 2)
Lights when control output 1 and/or control output 2 (cool) are ON.
However, if control output 1 is current output, OUT1 will always be unlit.
4. STOP (stop)
Lights when control of the E5AN has been stopped.
During control, this indicator lights when an event or the run/stop function has become stopped. Otherwise, this indicator is out.
5. CMW (communications writing control)
Lights when communications writing is enabled and is out when it is disabled.

Temperature Unit

The temperature unit is displayed when the display unit parameter is set to a temperature. Indication is determined by the currently selected "temperature unit" parameter set value. When this parameter is set to "°C," "C" is displayed, and when set to "°F," "F" is displayed.

No. 1 Display

Displays the process value or parameter type.

No. 2 Display

Displays the set point, manipulated variable, or set value (setup) of the parameter.

Up Key

Each press of this key increases values displayed on the No.2 display. Holding down this key continuously increases values.

Down Key

Each press of this key decreases values displayed on the No.2 display. Holding down this key continuously decreases values.

Mode Key

Press this key to select parameters within each level.

Level + Mode Keys

This key combination sets the E5AN to the "protect level."

Level Key

Press this key to select the setup level. The setup level is selected in order "operation level" ↔ "adjustment level," "initial setting level" ↔ "communications setting level."

E5EN

Operation Indicators

1. ALM1 (alarm 1)
Lights when alarm 1 output is ON.
ALM2 (alarm 2)
Lights when alarm 2 output is ON.
ALM3 (alarm 3)
Lights when alarm 3 output is ON.
2. HB (heater burnout alarm display)
Lights when a heater burnout is detected.
The heater burnout alarm remains ON by setting the heater burnout latch. To reset, turn the power supply OFF and then ON or set the heater burnout alarm value to "0.0A."
3. OUT1, OUT2 (control output 1, control output 2)
Lights when control output 1 and/or control output 2 (cool) are ON.
However, if control output 1 is current output, OUT1 will always be unlit.
4. STOP (stop)
Lights when control of the E5EN has been stopped.
During control, this indicator lights when an event or the run/stop function has become stopped. Otherwise, this indicator is out.
5. CMW (communications writing control)
Lights when communications writing is enabled and is out when it is disabled.

Temperature Unit

The temperature unit is displayed when the display unit parameter is set to a temperature. Indication is determined by the currently selected "temperature unit" parameter set value. When this parameter is set to "°C," "C" is displayed, and when set to "°F," "F" is displayed.

No. 1 Display

Displays the process value or parameter type.

No. 2 Display

Displays the set point, manipulated variable, or set value (setup) of the parameter.

Up Key

Each press of this key increases values displayed on the No.2 display. Holding down this key continuously increases values.

Down Key

Each press of this key decreases values displayed on the No.2 display. Holding down this key continuously decreases values.

Level Key

Press this key to select the setup level. The setup level is selected in order "operation level" ↔ "adjustment level," "initial setting level" ↔ "communications setting level."

Level + Mode Keys

This key combination sets the E5EN to the "protect level."

Mode Key

Press this key to select parameters within each level.

E5CN

Operation Indicators

1. AL1 (alarm 1)
Lights when alarm 1 output is ON.
AL2 (alarm 2)
Lights when alarm 2 output is ON.
2. HB (heater burnout alarm display)
Lights when a heater burnout is detected.
The heater burnout alarm remains ON by setting the heater burnout latch. To reset, turn the power supply OFF and then ON or set the heater burnout alarm value to "0.0A."
3. OT1, OT2 (control output 1, control output 2)
Lights when control output 1 and/or control output 2 (cool) are ON. However, if control output 1 is current output, OT1 will always be unlit.
4. STP (stop)
Lights when control of the E5CN has been stopped.
During control, this indicator lights when an event or the run/stop function has become stopped. Otherwise, this indicator is out.
5. CMW (communications writing control)
Lights when communications writing is enabled and is out when it is disabled.

Temperature Unit

The temperature unit is displayed when the display unit parameter is set to a temperature. Indication is determined by the currently selected "temperature unit" parameter set value. When this parameter is set to "°C," "°C" is displayed, and when set to "°F," "°F" is displayed.

No. 1 Display

Displays the process value or parameter type.

No. 2 Display

Displays the set point, manipulated variable, or set value (setup) of the parameter.

Up Key

Each press of this key increases values displayed on the No.2 display. Holding down this key continuously increases values.

Down Key

Each press of this key decreases values displayed on the No.2 display. Holding down this key continuously decreases values.

Mode Key


Press this key to select parameters within each level.

Level + Mode Keys

This key combination sets the E5CN to the "protect level."

Level Key

Press this key to select the setup level. The setup level is selected in order "operation level" ↔ "adjustment level," "initial setting level" ↔ "communications setting level."

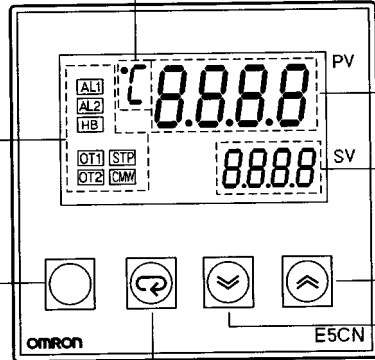

E5GN

Operation Indicators

1. AL (alarm)
Lights when alarm output is ON.
2. CMW (communications writing control)
Lights when communications writing is enabled and is out when it is disabled.
3. STP (stop)
Lights when control of the E5GN has been stopped.
During control, this indicator lights when an event or the run/stop function has been stopped. Otherwise, this indicator is out.
4. OUT (control output)
Lights when control output is ON.

Temperature Unit

The temperature unit is displayed when the display unit parameter is set to a temperature. Indication is determined by the currently selected "temperature unit" parameter set value. When this parameter is set to "°C," "°C" is displayed, and when set to "°F," "°F" is displayed.

No. 1 Display

Displays the process value or parameter type.

No. 2 Display

Displays the set point, manipulated variable or set value (setup) of the parameter.

Up Key

Each press of this key increases values displayed on the No.2 display. Holding down this key continuously increases values.

Down Key

Each press of this key decreases values displayed on the No.2 display. Holding down this key continuously decreases values.

Level + Mode Key


This key combination sets the E5GN to the "protect level."

Level Key

Press this key to select the setup level. The setup level is selected in order "operation level" ↔ "adjustment level," "initial setting level" ↔ "communications setting level."

Mode Key

Press this key to select parameters within each level.

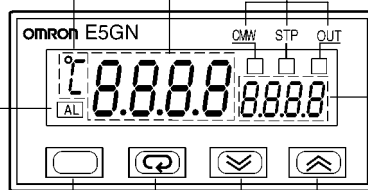


Installation

■ E5AN/E5EN


Mounting

1. Insert the E5AN/E5EN into the mounting hole in the panel from the front.
2. Push the mounting bracket along the E5AN/E5EN body from the terminals up to the panel, and secure it temporarily.
3. Tighten the fixing screw on each mounting bracket alternately until the ratchet stops tightening.

E5AN

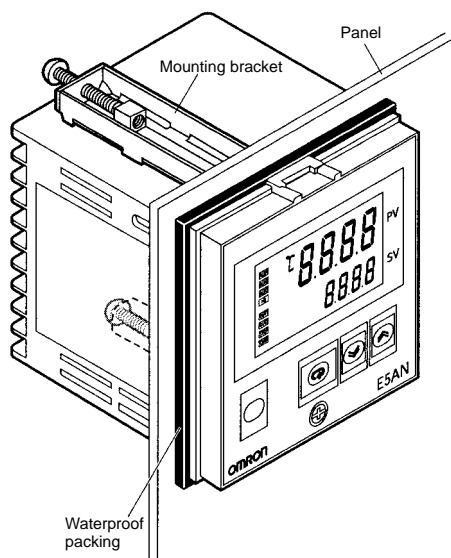


E5EN

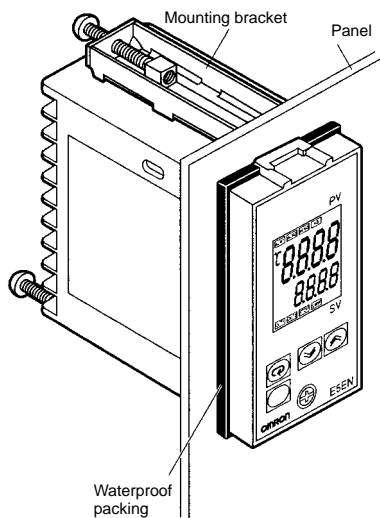

Drawing Out

For drawing out the Unit, use a suitable Philips screwdriver for the screw located at the bottom on the front panel.

1. While pressing down on the hook located at the top of the front panel, turn the screw (located at the bottom on the front panel) counterclockwise using a Philips screwdriver.
2. Hold both sides of the front panel and draw out the Unit towards you.
3. When inserting the Unit, confirm that the waterproof packing is in place. While pressing down on the hook located at the top of the front panel, turn the screw (located at the bottom on the front panel) clockwise using a Philips screwdriver and tighten to a torque of 0.3 to 0.5 N·m. Make sure that electronic parts do not come in contact with the case.

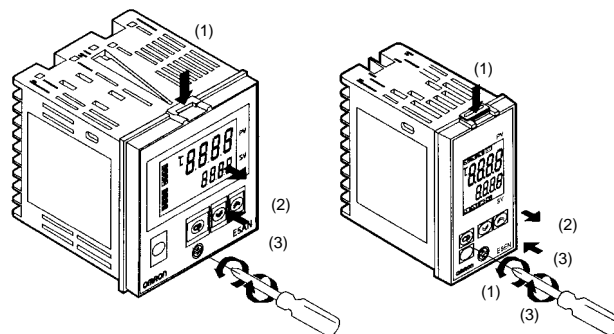

■ E5CN

Setting Up Option Units


If communications, event input, or heater burnout functions are required, mount the E53-CNH03 Communications Unit or the E53-CNHB Event Input Unit. The heater burnout function is supported on either of these two Option Units.

Option Units

Name	Model	Function
Communications Unit	E53-CNH03	RS-485 communications
Event Input Unit	E53-CNHB	Event inputs


Note: Terminal label: x1

Assembling a Unit

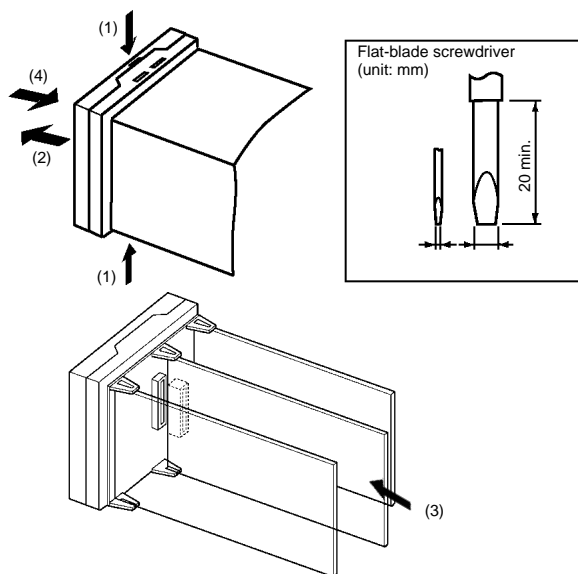

1. Insert the tools (see drawing above) into the slots (one on the top and one on the bottom) and release the hooks.
2. Insert the tool in the space between the front and rear panels and slightly pull out the front panel. Hold the top and bottom of the front panel and pull toward yourself to remove it.
3. Match up the upper and lower claws with the connection points and insert the Option Unit. Mount the Option Unit in the center.
4. Before inserting the Unit, confirm that the waterproof packing is in place. Insert the Unit into the rear case until you hear a click. When inserting the Unit, press down the hooks on the top and bottom of the rear case so that they firmly hook on the inserted Unit. Make sure that electronic parts do not come in contact with the case.

Mounting

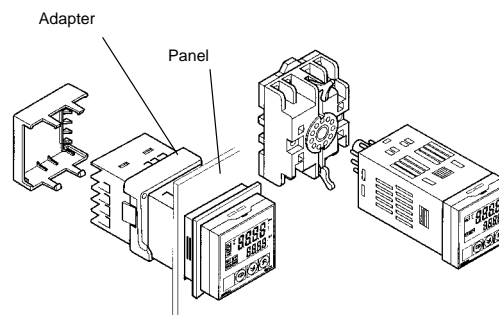

Attaching the E5CN to a Panel

1. Insert the E5CN into the mounting hole in the panel.
2. Push the adapter along the E5CN body from the terminals up to the panel, and secure it temporarily.
3. Tighten the two fixing screws on the adapter. When tightening screws, tighten the two screws alternately keeping the torque to between 0.29 and 0.39 N·m (2.9 kgf·cm to 3.9 kgf·cm).


Attaching the Terminal Cover

Make sure that the "UP" mark is facing up, and then fit the Terminal Cover (E53-COV10) into the holes on the top and bottom. A E5CN-□-500 Controller is provided with a Terminal Cover.

■ E5GN

Mounting


1. Insert the E5GN into the mounting hole in the panel from the front.
2. Push the adapter along the E5GN body from the terminals up to the panel, and secure it temporarily.
3. Tighten the two fixing screws on the adapter. When tightening screws, tighten the two screws alternately keeping the torque to within approximately 0.29 to 0.39 N•m.

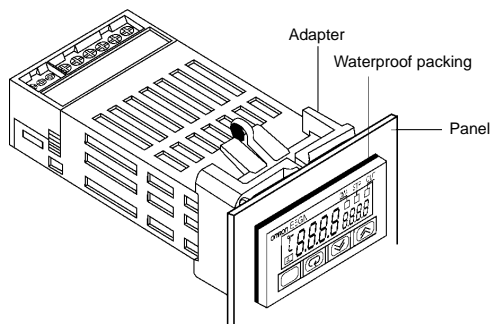

Removing and Attaching the Terminal Plate

The E5GN can be replaced by removing the terminal plate.


1. Press down hard on the fasteners on both sides of the terminals to unlock the terminal plate and pull upwards.

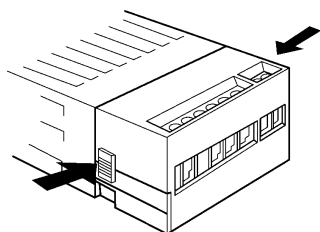


■ Wiring Precautions

E5AN/E5EN/E5CN


- Separate input leads and power lines to protect the E5AN/E5EN/E5CN and its lines from external noise.
- We recommend using solderless terminals when wiring the E5AN/E5EN/E5CN.
- Tighten the terminal screws using a torque between 0.74 and 0.90 N • m.
- Use the following type of solderless terminals for M3.5 screws.

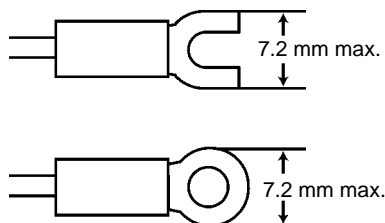

2. Draw out the terminal plate as it is.

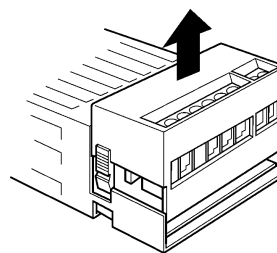

3. Before you insert the terminal plate again, make sure that the pins match the positions of the holes in the terminal plate.

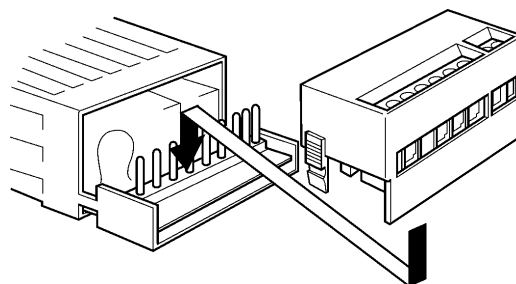


E5GN

- Connect the terminals as specified below.

Terminal No.	Cables	Pin terminals
1 to 6	AWG24 to AWG14	2.1 dia. max.
7 to 9	AWG28 to AWG22	1.3 dia. max.

- The exposed current-carrying part to be inserted into terminals must be 5 to 6 mm.

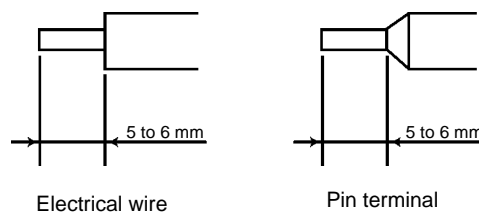





- Tighten the terminal screws to the torque specified below.

Terminal No.	Screw	Maximum tightening torque
1 to 6	M2.6	0.23 to 0.25 N • m
7 to 9	M2	0.12 to 0.14 N • m

Operation


Initial Setup

On previous Controllers, sensor input type, alarm type and control period were set on DIP switches. These hardware settings are now set in parameters in setup menus. The  and  keys are used to switch between setup menus, and the amount of time that you hold the keys down for determines which setup menu you move to. This section describes two typical examples.

Note: On the E5EN/E5GN, the  Key is the  Key.

1. ON/OFF Control


Typical Application Examples

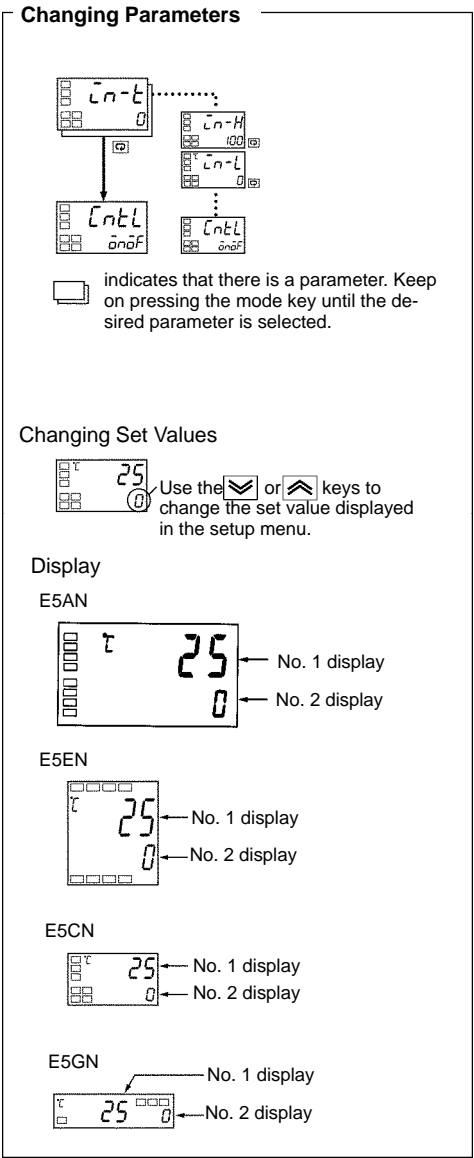

Typical Example


Input type:	0 K thermocouple -200 to 1300°C
Control method:	ON/OFF control
Alarm type:	2 upper limit
Alarm value 1:	20°C (For setting deviation)
Set point:	100°C

Change only the alarm value 1 and set point.
The rest must be left as default settings.

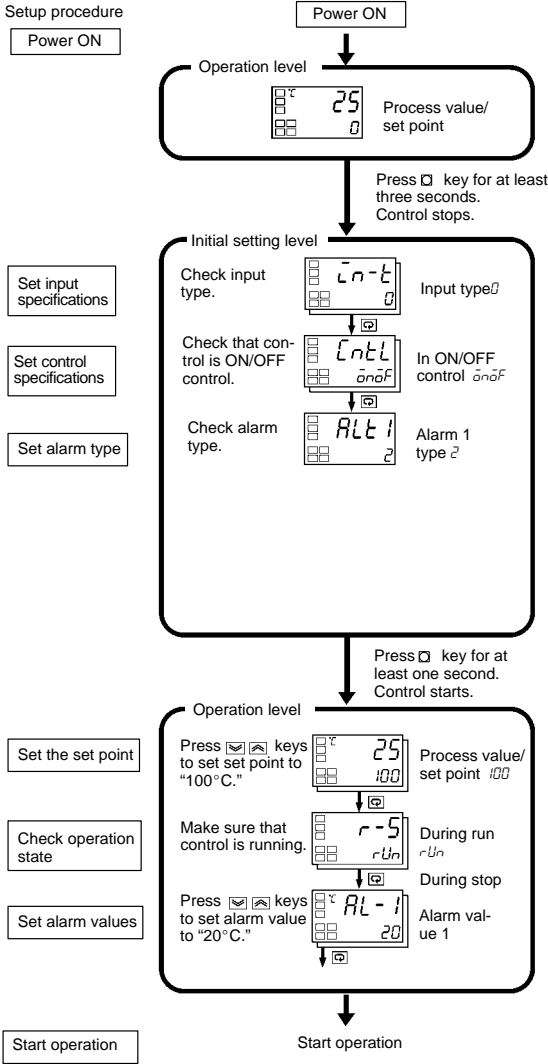


2. PID Control Using Auto-tuning

Changing Parameters

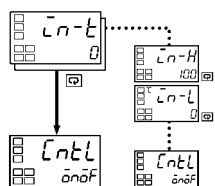


indicates that there is a parameter. Keep on pressing the mode key until the desired parameter is selected.

Changing Set Values




Display


E5AN




E5EN



E5CN

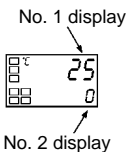

E5GN

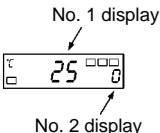

Typical Example

Input type: 4 T thermocouple -200 to 400°C
Control method: PID control
ST (self-tuning): OFF
Calculate PID constants by AT (auto-tuning).
Alarm type: 2 upper limit
Alarm value 1: 30°C (For setting deviation)
Set point: 150°C

Setup procedure

Power ON

Power ON

Operation level

25
0

Process value/
set point

Press key for at least three seconds. Control stops.

Initial setting level

Press keys to select input type.

Cn-t
4

Input type 4

Press keys to select PID control.

Cn-t
PID

In PID control

Press keys to set ST to OFF.

St
OFF

To cancel ST

Check the control period.

CP
20

Control period (heat) (unit: seconds)

Check alarm type.

AL-1
2

Alarm 1 type 2 (upper-limit alarm)

When set to ON, self-tuning operates. Recommended settings: 20 seconds for the relay output and 2 seconds for the SSR output.

Press key for at least one second.

Operation level

Press keys to set set point to "150°C."

25
150

Process value/
set point 150

Press key for less than one second.

Adjustment level

Execute AT (auto-tuning).

At
ON

To execute AT

Set to ON for executing AT and to OFF for stopping AT.

Press key for less than one second.

Operation level

Make sure that set point is "150°C."

25
150

Process value/
set point 150

Make sure that control is running.

r-S
run

During run

Press keys to set alarm value to "30°C."

AL-1
30

Alarm value 1 30

Set operation status

Set alarm values

Start operation

Start program execution

PV/SP

After AT execution.

25
150

During AT execution.

25
150

While AT is being executed, SP will flash.

After AT execution.

At
OFF

During AT execution.


At
ON

Specification Setting after Turning ON Power

■ Outline of Operation Procedures

Key Operation

In the following descriptions, all the parameters are introduced in the display sequence. Some parameters may not be displayed depending on the protect settings and operation conditions.

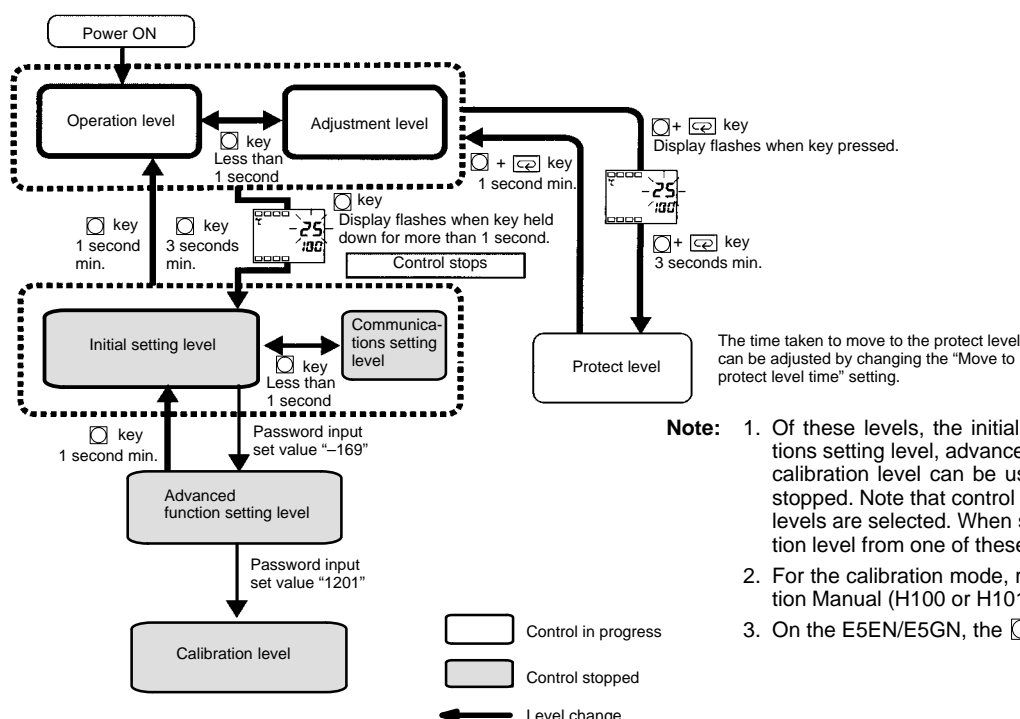

The time taken to move to the protect level can be adjusted by changing the “Move to protect level time” setting.

- Note:**
1. Of these levels, the initial setting level, communications setting level, advanced function setting level and calibration level can be used only when control has stopped. Note that control is stopped when these four levels are selected. When switched back to the operation level from one of these levels, control will start.
 2. For the calibration mode, refer to the relevant Operation Manual (H100 or H101).
 3. On the E5EN/E5GN, the ☒ Key is the ☐ Key.

■ Description of Each Level

Operation Level

This level is displayed when you turn the power ON. You can move to the protect level, initial setting level and adjustment level from this level.




Normally, select this level during operation. During operation, the process value, set point and manipulated variable can be monitored, and the alarm value and upper- and lower-limit alarms can be monitored and modified.

Adjustment Level



To select this level, press the key once for less than one second.

This level is for entering set values and offset values for control. This level contains parameters for setting the set values, AT (auto-tuning), communications writing enable/disable, hysteresis, multi-SP, input shift values, heater burnout alarm (HBA) and PID constants. You can move to the top parameter of the operation level or initial setting level from here.


Initial Setting Level

To select this level, press the  key for at least three seconds in the operation level. This level is for specifying the input type, selecting the control method, control period, setting direct/reverse action and alarm type. You can move to the advanced function setting level or communications setting level from this initial setting level. To return to the operation level, press the  key for at least one second. To move to the communications setting level, press the  key once for less than one second.

Protect Level

To select this level, simultaneously press the  and  keys for at least 3 seconds. This level is to prevent unwanted or accidental modification of parameters. Protected levels will not be displayed, and so the parameters in that level cannot be modified.

Communications Setting Level

To select this level, press the  key once for less than one second in the initial setting level. When the communications function is used, set the communications conditions in this level. Communicating with a personal computer (host computer) allows set points to be read and written, and manipulated variables to be monitored.

Advanced Function Setting Level

To select this level, you must enter the password ("-169") in the initial setting level.

You can move only to the calibration level from this level.

This level is for setting the automatic return of display mode, MV limiter, event input assignment, standby sequence, alarm hysteresis, ST (self-tune) and to move to the user calibration level.

Calibration Level

To select this level, you must enter the password ("1201") in the advanced function setting level. This level is for offsetting deviation in the input circuit.

You cannot move to other levels by operating the keys on the front panel from the calibration level. To cancel this level, turn the power OFF then back ON again.

■ Input Type

When using a thermocouple input type, follow the specifications listed in the following table.

	Input Type	Specifications	Set Value	Input Temperature Range
Thermocouple input type	Thermocouple	K	0	–200 to 1300 (°C) /–300 to 2300 (°F)
			1	–20.0 to 500.0 (°C) /0.0 to 900.0 (°F)
		J	2	–100 to 850 (°C) /–100 to 1500 (°F)
			3	–20.0 to 400.0 (°C) /0.0 to 750.0 (°F)
		T	4	–200 to 400 (°C) /–300 to 700 (°F)
		E	5	0 to 600 (°C) /0 to 1100 (°F)
		U	17	–199.9 to 400.0 (°C)/–199.9 to 700 (°F)
		L	6	–100 to 850 (°C) /–100 to 1500 (°F)
		U	7	–200 to 400 (°C) /–300 to 700 (°F)
		U	18	–199.9 to 400.0 (°C)/–199.9 to 700 (°F)
		N	8	–200 to 1300 (°C) /–300 to 2300 (°F)
		R	9	0 to 1700 (°C) /0 to 3000 (°F)
		S	10	0 to 1700 (°C) /0 to 3000 (°F)
		B	11	100 to 1800 (°C) /300 to 3200 (°F)
	Non-contact temperature sensor ES1A	K10 to 70°C	12	0 to 90 (°C) /0 to 190 (°F)
		K60 to 120°C	13	0 to 120 (°C) /0 to 240 (°F)
		K115 to 165°C	14	0 to 165 (°C) /0 to 320 (°F)
		K160 to 260°C	15	0 to 260 (°C) /0 to 500 (°F)
	Analog input	0 to 50mV	16	One of following ranges depending on the results of scaling: 1999 to 9999, 199.9 to 999.9

Note: The initial settings are: 0: –200 to 1300°C/–300 to 2300°F.

When using the platinum resistance thermometer input type, follow the specifications listed in the following table.

	Input Type	Specifications	Set Value	Input Temperature Range
Platinum resistance thermometer input type	Platinum resistance thermometer	Pt100	0	–200 to 850 (°C) /–300 to 1500 (°F)
			1	–199.9 to 500.0 (°C)/–199.9 to 900.0 (°F)
			2	0.0 to 100.0 (°C) /0.0 to 210.0 (°F)
		JPt100	3	–199.9 to 500.0 (°C)/–199.9 to 900.0 (°F)
			4	0.0 to 100.0 (°C) /0.0 to 210.0 (°F)

Note: The initial settings are: 0: Pt100 –200 to 850°C/–300 to 1500°F.
The ES1A Non-contact Temperature Sensor is now available.

■ Alarm 1 and Alarm 2


For the alarm 1 and alarm 2, select alarm types out of the 12 alarm types listed in the following table. (The alarm 3 for E5AN/E5EN, which has three alarms, can also be selected from this table.)

Set Value	Alarm Type	Alarm Output Operation	
		When X is positive	When X is negative
0	Alarm function OFF	Output OFF	
1*1	Upper- and lower-limit (deviation)		*2
2	Upper-limit (deviation)		
3	Lower-limit (deviation)		
4*1	Upper- and lower-limit range (deviation)		*3
5*1	Upper- and lower-limit with standby sequence (deviation)		*4
6	Upper-limit with standby sequence (deviation)		
7	Lower-limit with standby sequence (deviation)		
8	Absolute-value upper-limit		
9	Absolute-value lower-limit		
10	Absolute-value upper-limit with standby sequence		
11	Absolute-value lower-limit with standby sequence		

*1: With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."

Following operations are for cases when an alarm set point is "X" or negative.


*2: Set value: 1, Upper- and lower-limit alarm

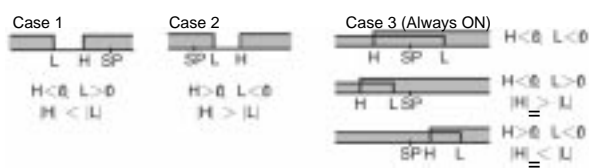

*3: Set value: 4, Upper- and lower-limit range



*4: Set value: 5, Upper- and lower-limit with standby sequence

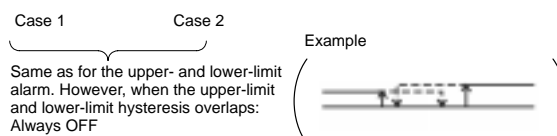


*5: Set value: 5, Upper- and lower-limit with standby sequence alarm. Always OFF when the upper-limit and lower-limit hysteresis overlaps.

Set the alarm types for alarm 1 and alarm 2 independently in the initial setting level. The default setting is 2 (upper limit). With the E5AN/E5EN, perform settings similarly for alarm 3.

Example: When the alarm is set ON at 110°C/°F or higher.


When an alarm type other than the absolute-value alarm is selected

(For alarm types 1 to 7)
The alarm value is set as a deviation from the set point.

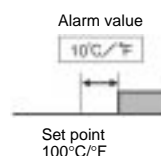


When the absolute-value alarm is selected

(For alarm types 8 to 11)
The alarm value is set as an absolute value from the alarm value of 0°C/F.

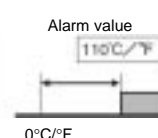


Parameters

Parameters related to setting items for each level are marked in boxes in the flowcharts and brief descriptions are given as required. At the end of each setting item, press the mode key to return to the beginning of each level.

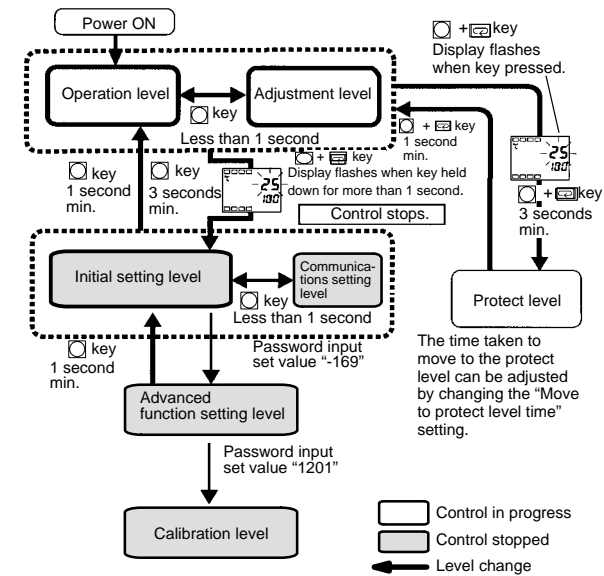


Display


E5AN





E5EN



E5CN


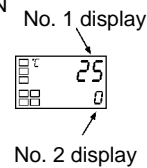


E5GN

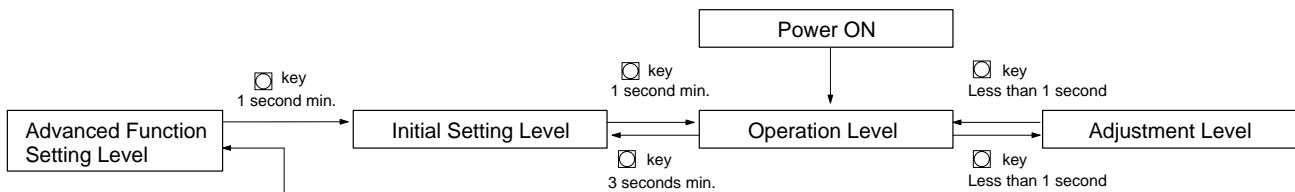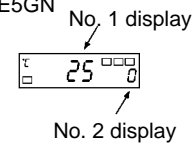

Note: To select advanced function setting level, you must enter the password ("169") in the initial setting level.


Advanced Function Setting Level

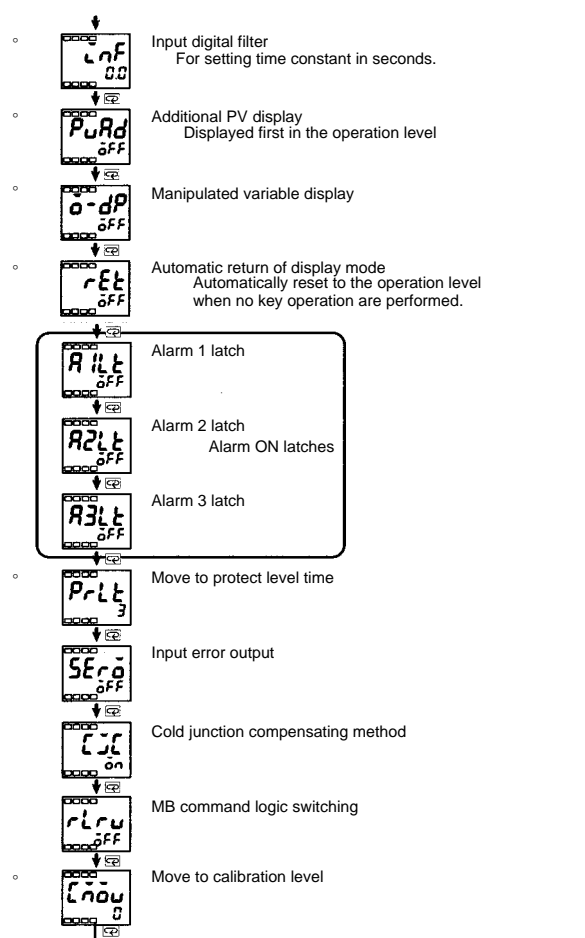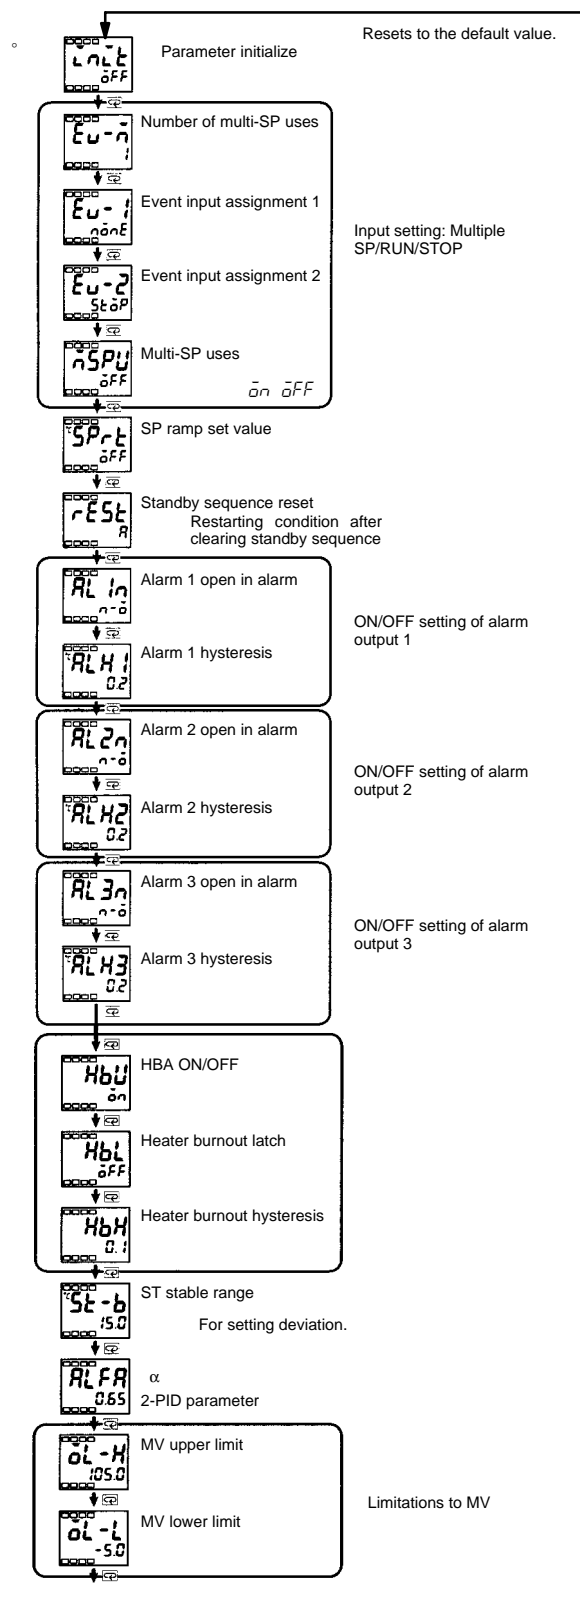

Note: These diagrams show all the parameters that may be displayed. Depending on the specifications of the model used, there may be some parameters that are not displayed. The following symbols are used to distinguish between these parameters.


- : Displayed for all models regardless of the settings of other parameters.
- : Not displayed for some models.
- : Depending on the settings of other parameters, may not be displayed.

Initial Setting Level

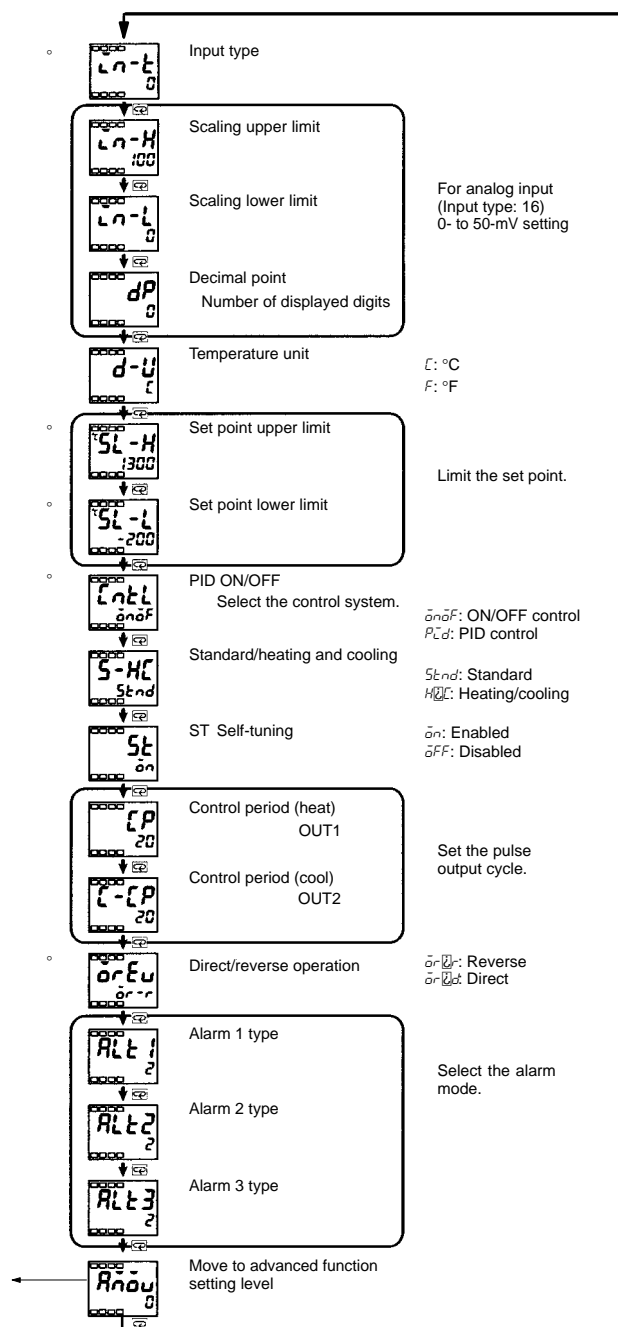

Note: To select advanced function setting level, you must enter the password ("169") in the initial setting level.

Operation Level

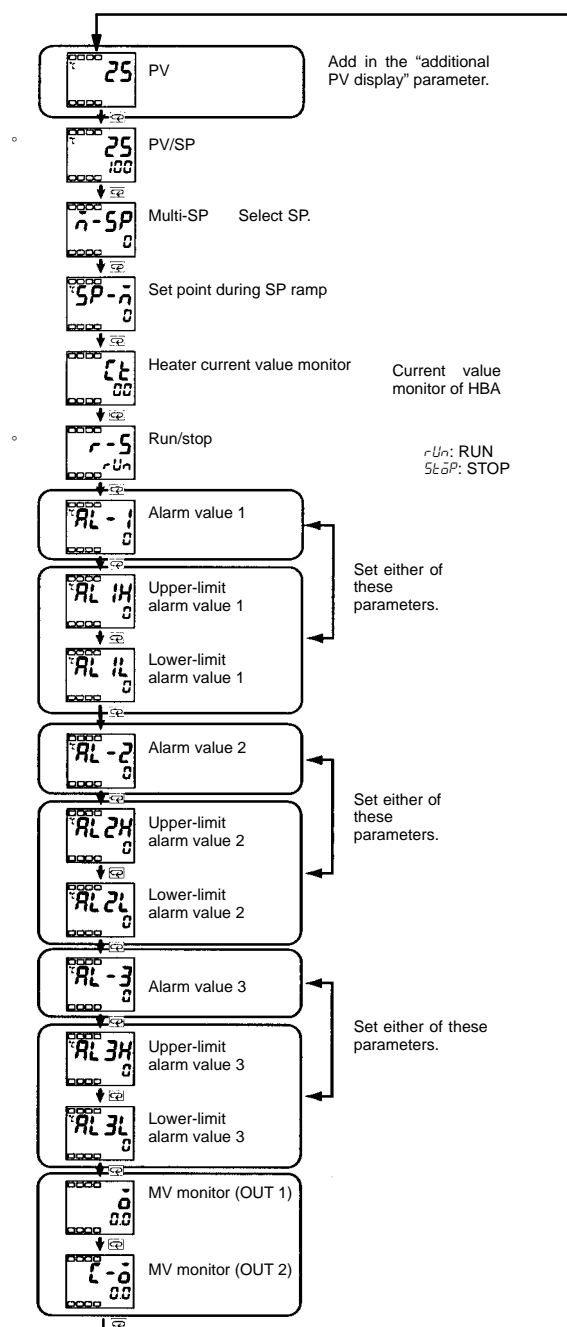


The displays for parameters which can be switched (i.e., parameters other than simply numerical ones) show the contents of those parameters.

Note: These diagrams show all the parameters that may be displayed. Depending on the specifications of the model used, there may be some parameters that are not displayed. The following symbols are used to distinguish between these parameters.

- : Displayed for all models regardless of the settings of other parameters.
- : Not displayed for some models.
- : Depending on the settings of other parameters, may not be displayed.

Adjustment Level

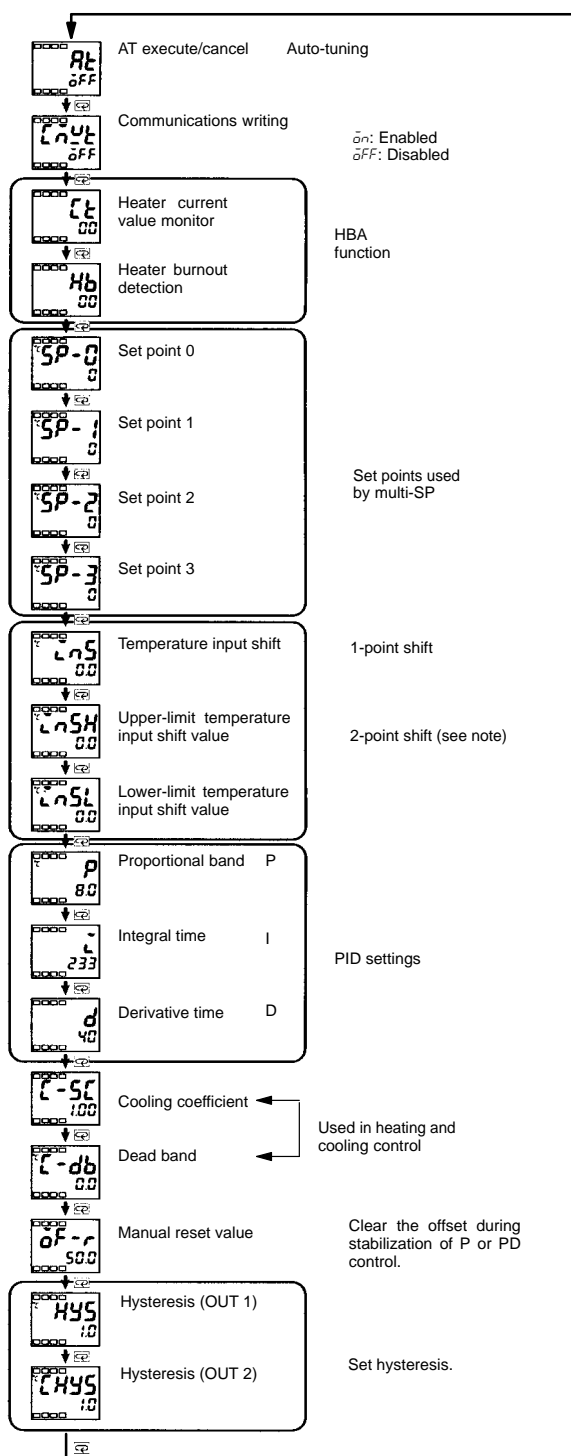

The 2-point shift setting is only possible when the input type is a non-contact temperature sensor.

Note: These diagrams show all the parameters that may be displayed. Depending on the specifications of the model used, there may be some parameters that are not displayed. The following symbols are used to distinguish between these parameters.

- : Displayed for all models regardless of the settings of other parameters.
- : Not displayed for some models.
- ⊙ : Depending on the settings of other parameters, may not be displayed.

Protect Level



Operation/adjustment protection

Restricts display and modification of menus in the operation and adjustment levels.



Initial setting/communications protection

Restricts display and modification of menus in the initial setting, operation level and adjustment levels.



Setting change protection

Protects changes to setups by operating the front panel keys.

Operation/Adjustment Protection

The following table shows the relationship between set values and the range of protection.

Level		Set value			
		0	1	2	3
Operation level	PV	◦	◦	◦	◦
	PV/SP	⊙	⊙	⊙	◦
	Other	⊙	⊙	X	X
Adjustment level		⊙	X	X	X

When this parameter is set to "0," parameters are not protected.

Default setting: 0

⊙ : Can be displayed and changed

◦ : Can be displayed

X : Cannot be displayed and move to other levels not possible

Initial Setting/Communications Protection

This protect level restricts movement to the initial setting level, communications setting level and advanced function setting level.

Set value	Initial setting level	Communications setting level	Advanced function setting level
0	◦	◦	◦
1	◦	◦	X
2	X	X	X

Default setting: 1

◦ : Move to other levels possible

X : Move to other levels not possible

Setting Change Protection

This protect level protects setup from being changed by operating the keys on the front panel.

Set value	Description
OFF	Setup can be changed by key operation.
ON	Setup cannot be changed by key operation. (The protect level, can be changed.)

Default setting: OFF






Communications Setting Level


Set the E5AN/E5EN/E5CN/E5GN communications specifications in the communications setting level. For setting communications parameters, use the E5AN/E5EN/E5CN/E5GN panel. The communications parameters and their settings are listed in the following table.

Parameter	Displayed characters	Set (monitor) value	Set value
Communications unit No.	U-nō	0 to 99	0.1 to 99
Baud rate	P5	1.2/2.4/4.8/9.6/19.2 (kbps)	1.2/2.4/4.8/9.6/19.2
Data bits	n	7/8 (bit)	7/8 (bit)
Stop bits	5 Ąt	1/2	1.2 (bit)
Parity	P-rŁ	None, even, odd	nōn / U-n/ōdd

Note: The highlighted values indicate default settings.

Before executing communications with the E5AN/E5EN/E5CN/E5GN, set the communications unit No., baud rate, etc., through key operations as described below. As for other operations, refer to relevant Operation Manual.

- Press the  key for at least three seconds in the "operation level." The level moves to the "initial setting level."
- Press the  key for less than one second. The "initial setting level" moves to the "communications setting level."
- Pressing the  key advances the parameters as shown in the following figure.
- Press the  or  keys to change the parameter setups.

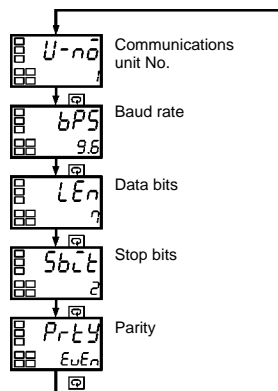

Note: On the E5AN/E5EN/E5GN, the  Key is the  Key.

Set each communications parameter to match those of the communicating personal computer.

Troubleshooting

When an error occurs, an error code will be displayed on the No. 1 display. Check the contents of an error and take appropriate countermeasures.

No. 1 display	Type of error	Countermeasures
5 rr	Input error	Check the wiring of inputs for miswiring, disconnections, short-circuits, and the input type.
!!!	Memory error	First, turn the power OFF then back ON again. If the display remains the same, the Unit must be repaired. If the display is restored, then a probable cause can be external noise affecting the control system. Check for external noise.
cccc	Display range over	Though not error, this is displayed when the process value exceeds the display range when the control range is larger than the display range.
cccc		<ul style="list-style-type: none"> When less than "−1999" (−199.9) cccc When larger than "9999" (999.9) cccc
H rr	HB error	First, turn the power OFF then back ON again. If the display remains the same, the E5EN/E5CN/E5GN must be repaired. If the display is restored, then a probable cause can be electrical noise affecting the control system. Check for electrical noise.

Note: Error will be displayed only when the display is set for the PV or PV/SP.

Communications Unit No. (U-nō)

When communicating with the host computer, the unit number must be set in each Temperature Controller so that the host computer can identify each Temperature Controller. The number can be set in a range from 0 to 99 in increments of 1. The default setting is 1. When using more than one Unit, be careful not to use the same number twice. Duplicate settings will cause malfunction. This value becomes valid when the power is turned OFF and ON again.

Baud Rate (P5)

Use this parameter to set the speed of communications with the host computer. It can be set to one of the following values; 1.2 (1200 bps), 2.4 (2400 bps), 4.8 (4800 bps), 9.6 (9600 bps), and 19.2 (19200 bps).

This setting becomes valid when the power is turned OFF and ON again.

Data Bits (n)

Use this parameter to change the communications data bit length to 7 bits or 8 bits.

Stop Bits (5 Ąt)

Use this parameter to change the communications stop bit to 1 or 2.

Parity (P-rŁ)

Use this parameter to set the communications parity to None, Even, or Odd.

Fuzzy Self-tuning

The fuzzy self-tuning (ST) is a function that automatically calculates an optimum PID constant depending on items to be controlled.

■ Feature

The Temperature Controller determines when to execute this fuzzy self-tuning.

■ Functions

SRT: Performs PID tuning according to the step response method when the SP is changed.

Requirements for SRT Functionality

The ST will be executed according to the step response method when the following conditions are satisfied when operation is started or when the SP is changed.

When operation is started	When SP is changed
<ol style="list-style-type: none"> 1. The SP at the startup is different from the SP at the time the previous SRT was executed. (See note.) 2. The temperature upon startup is smaller than the SP in the reverse operation and larger than the SP in the direct operation. 3. Restarting of operation is not due to an input error. <p>Note: The "SP that existed when the previous SRT was executed" refers to the SP used for obtaining the PID constant in the previous SRT.</p>	<ol style="list-style-type: none"> 1. The SP after change is different from the SP at the time the previous SRT was executed. (See note.) 2. In the reverse operation, the value obtained by deducting the SP before change from the SP after change is larger than the ST stable range. In the direct operation, the value obtained by deducting the SP after change from the SP before change is larger than the ST stable range. 3. The SP change width is larger than the current proportional band $\times 1.27 + 4$. 4. The temperature is in the stable state. (It can be in the balanced state if no output is generated when the power is turned ON.)


If the SP is changed while SRT is being executed and if SRT completion conditions are satisfied, no PID change will take place.

Stabilization State

Measured values remain in the stable range for a certain period of time.


Balanced State

Output is 0% for 60 seconds and measured values fluctuate within the width of the stable range.

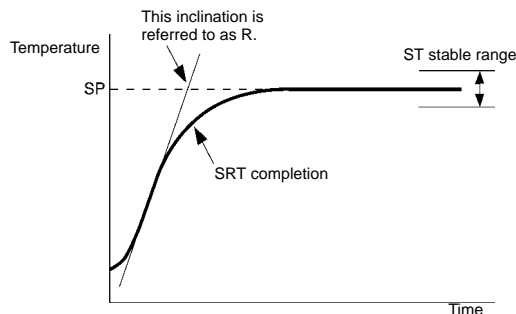

Peripheral Devices

■ Temperature Sensor / SSR
Connection Example with SSR

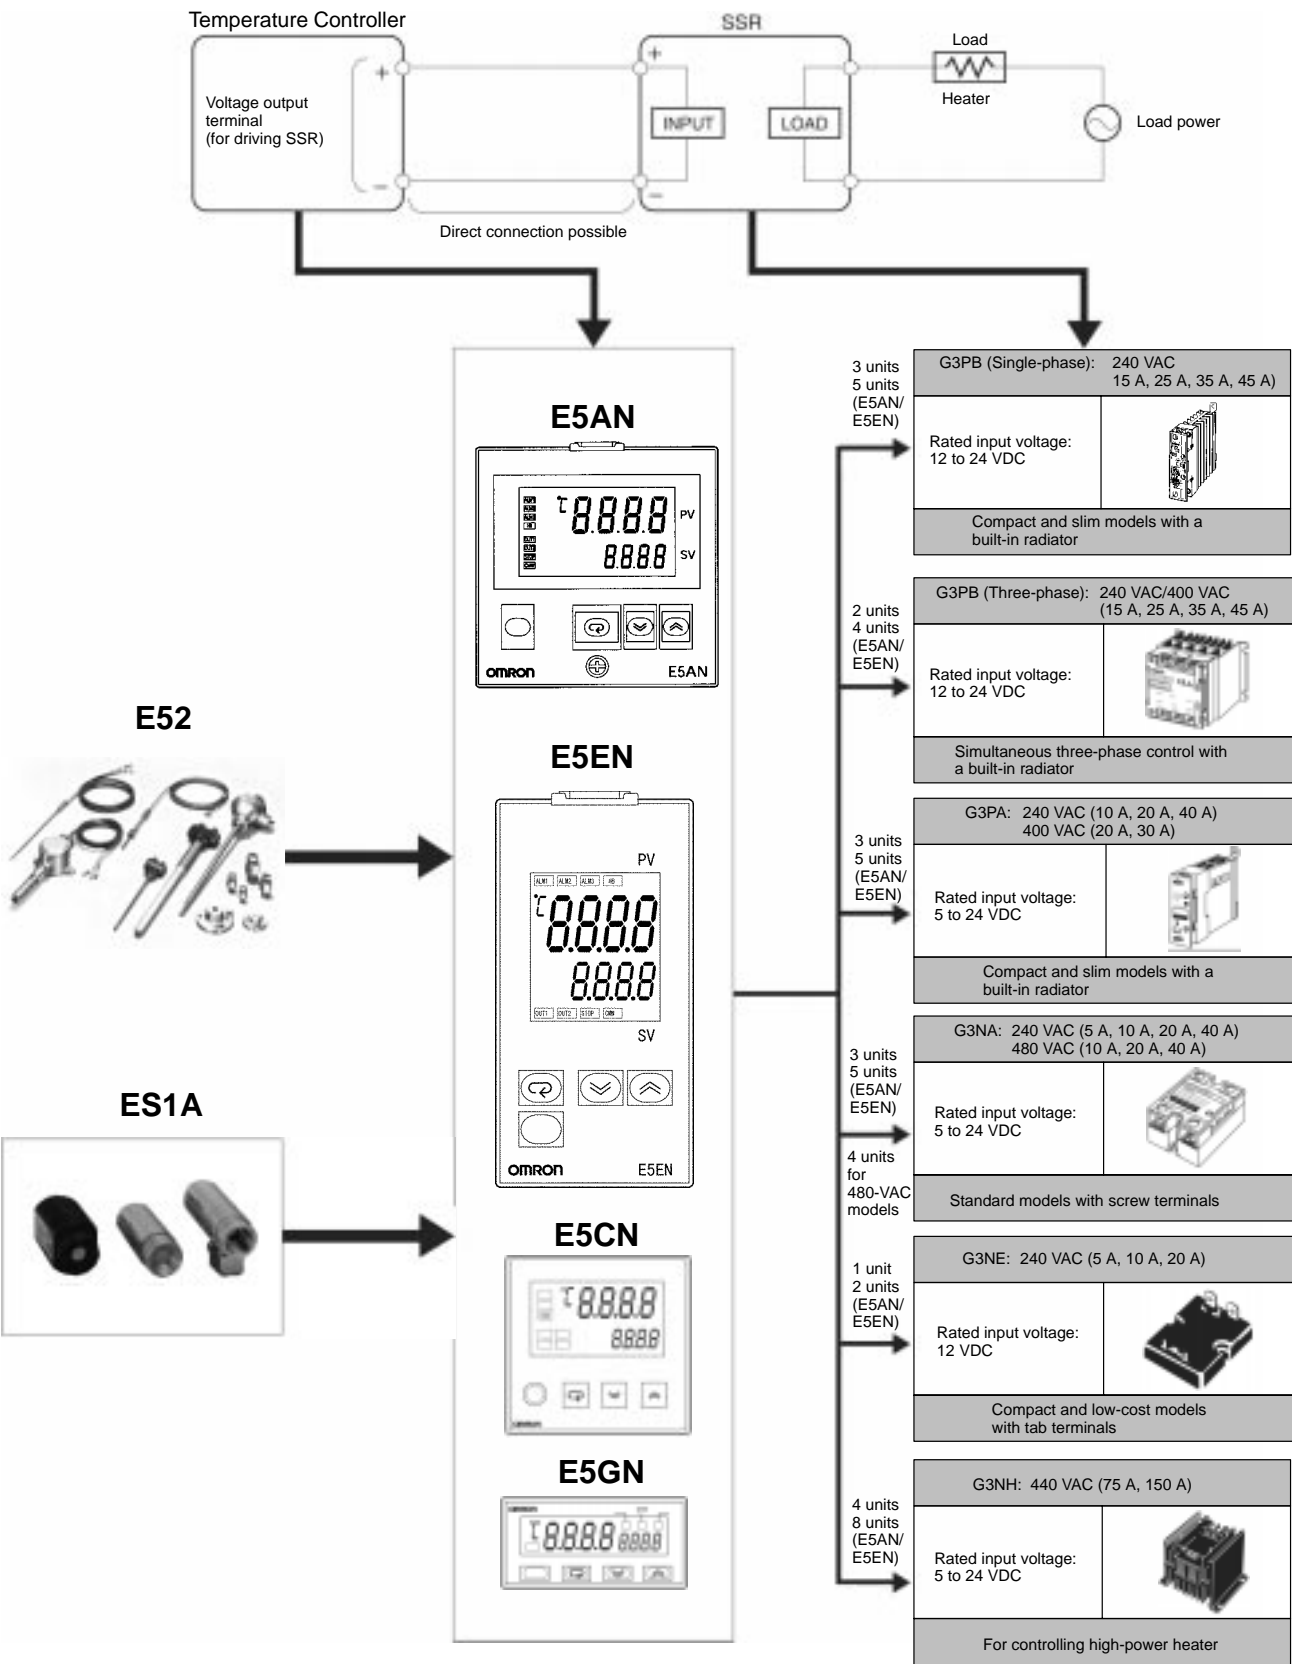

Responding to All Demands for Temperature Control in Wide Application Range

■ ES1A Non-contact Temperature Sensor

Replaces the K-type thermocouple with no modification required.

Available soon.



Note: Refer to the ES1A Datasheet (H106) for more details.

Only One-tenth the Size of OMRON's Conventional Model

The ES1A-A is as compact as 14 x 18.6 x 34 (W x H x D) mm and can be built into machines and equipment with ease.

No Power Supply Required

The ES1A Series has electromotive output that is as high as the output of the thermocouple, thus allowing direct connection to the thermocouple input terminal of the Temperature Controller without requiring any external power supply.

Available for High Ambient Temperatures

The ES1A Series performs accurate measurement without being influenced by the ambient temperature. In particular, the ES1A-C with air purge function can operate at an ambient temperature of up to 120°C.

ES1A-A	-25 to 70°C
ES1A-B	-25 to 100°C
ES1A-C with air purge function	-25 to 120°C

■ G3PB SSC for Three-phase Heaters

Compact, low-cost model for three-phase heater control.



Note: Refer to the G3PB Datasheet (J112) for more details.

Saves 40% on Installation Space

The G3PB is dedicated to three-phase heater control and saves 40% on installation space compared with three single-phase models mounted closely side-by-side.

(This comparison is based on the use of three G3PA-240B-VD models and one G3PB-245B-3-VD.)

■ E52-series Temperature Sensors

Offers a Wide Variety of High-precision Temperature Sensors

- Used as Sensors for Temperature Controllers.
- Ensures easy selection of the most suitable model according to the temperature, place, and environment.
- Offers a wide variety of models that are different in type, appearance, length, and terminal shape.
- Low-cost models and dedicated models, as well as general-purpose models, are available.

Note: Refer to the E52 Datasheet (H097) for more details.



Precautions

■ General Precautions


The user must operate the product according to the performance specifications described in the operation manuals.


Before using the product under conditions which are not described here or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems, machines, and equipment that may have a serious influence on lives and property if used improperly, consult your OMRON representative.


Make sure that the ratings and performance characteristics of the product are sufficient for the systems, machines, and equipment, and be sure to provide the systems, machines, and equipment with double safety mechanisms.

■ Safety Precautions


Definition of Precautionary Information


 **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.


 **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.


 **Caution** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.


Installation Precautions


 **WARNING** Do not attempt to take any Temperature Controller apart while the power is being supplied. Doing so may result in electric shock.


 **WARNING** Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.


 **WARNING** Do not allow pieces of metal or wire cuttings to get inside the Temperature Controller. Failure to do so may result in malfunction, electric shock or fire.


 **WARNING** Do not attempt to disassemble, repair, or modify the Temperature Controller. Any attempt to do so may result in malfunction, fire, or electric shock.

 **Caution** Do not use the Temperature Controller in locations subject to flammable gases. Doing so may result in an explosion.

 **Caution** The switching capacity and switching conditions will have a great effect on the longevity of the output relays. Use the Temperature Controller within the rated load and do not use the Temperature Controller beyond the number of operations specified under electrical life. Using the Temperature Controller beyond its electrical life may result in contact welding or burning.

 **Caution** Do not use the Temperature Controller at loads greater than the rated value. Doing so may result in burning or other damage.

 **Caution** Use a power supply voltage within the specified range. Failure to do so may result in burning or other damage.

 **Caution** Tighten the terminal screws to the following torques:
E5AN, E5EN, E5CN: 0.74 to 0.90 N•m
E5GN: Terminals 1 to 6: 0.23 to 0.25 N•m
Terminals 7 to 9: 0.12 to 0.14 N•m
Failure to tighten terminal screws to the correct torque may result in fire or malfunction.



Caution

Make settings for the Temperature Controller that are suitable for the controlled system. Failure to do so may cause unexpected operation resulting in damage to equipment or personal injury.



Caution

Prepare a circuit with an overheating prevention alarm and take other safety measures to ensure safe operation in the event of a malfunction. Loss of operational control due to malfunction may result in a serious accident.

■ Operating Environment Precautions



Caution

In order to ensure the safe operation, observe the following precautions.

- Do not use the Temperature Controller in the following places:
 - Locations exposed to radiated heat from heating devices
 - Locations subject to direct sunlight
 - Locations subject to temperatures or humidity outside the range specified in the specifications
 - Locations subject to condensation as the result of severe changes in temperature
 - Locations subject to corrosive or flammable gases
 - Locations subject to dust (especially iron dust) or salts
 - Locations subject to exposure to water, oil, or chemicals
 - Locations subject to shock or vibration
- Use and store the Temperature Controller within the rated temperature and humidity specified for each model. When two or more Temperature Controllers are mounted horizontally close to each other or vertically next to one another, the internal temperature will increase due to heat radiated by the Temperature Controllers and the service life will decrease. In such a case, forced cooling by fans or other means of air ventilation will be required to cool down the Temperature Controllers. When providing forced cooling, however, be careful not to cool down the terminal sections alone to avoid measurement errors.
- Allow enough space around the Temperature Controller to ensure proper heat dissipation. Do not block the ventilating holes.
- Check polarities and orientation when connecting terminals. Not doing so may result in malfunction.
- When wiring the E5AN, E5EN, or E5CN, use crimp terminals with the specified dimensions (M3.5, width 7.2 mm max.).
- When wiring the E5GN, use cables of a thickness AWG24 (0.205 mm²) to AWG14 (2.081 mm²) for terminals 1 to 6 and use cables of a thickness AWG28 (0.081 mm²) to AWG22 (0.326 mm²) for terminals 7 to 9. The exposed current-carrying part to be inserted into terminals must be 5 to 6 mm.
- Do not use empty terminals.
- To avoid inductive noise, keep the wiring for the Temperature Controller's terminal board away from power cables carry high voltages or large currents. Also, do not wire power lines together with or parallel to Temperature Controller wiring. Using shielded lines to separate pipes and ducts is recommended. Attach surge absorbers or noise filters to peripheral devices that may generate noise, such as inductance devices (e.g., motors, transformers, solenoids, magnetic coils etc.). If using a noise filter with the power supply, in addition to confirming the voltage and the current, mount the power supply as near as possible to the Temperature Controller. Set up the Temperature Controller, along with its power supply, as far away as possible from devices that generate strong, high-frequency waves (high-frequency welders, high-frequency machines etc.) and devices that generate surges.
- Set up the power supply so that the voltage will reach the rated voltage within 2 seconds after turning ON.
- Allow at least 30 minutes for the Temperature Controller to warm up.
- When using auto-tuning, turn ON power for the load (e.g., heater) at the same time as or before supplying power to the Temperature Controller. If power is turned ON for the Temperature Controller before turning ON power for the load, auto-tuning will

not be performed properly and optimum control will not be achieved.

- In order that power can be turned OFF in an emergency by the person operating the Temperature Controller, install the appropriate switches and circuit breakers and label them accordingly.
- With the E5AN, E5EN, or E5CN, when drawing out the Temperature Controller body, do not touch or apply excessive force. After the body is drawn out do not touch the terminals or electronic parts. When inserting, make sure that electronic parts do not come in contact with the case.
- When the terminal block for the E5GN is detached, do not touch or apply excessive force to any electronic parts.
- Use alcohol to clean the Temperature Controller. Do not use thinner or other solvent-based substances.

■ Correct Use

Service Life

Use the Temperature Controller within the following temperature and humidity ranges:

Temperature: -10°C to 55°C (with no icing or condensation)

Humidity: 25% to 85%

When the Temperature Controller is installed inside a control panel, ensure that the temperature around the Temperature Controller, not the temperature around the control panel, does not exceed 55°C .

The service life of relays used for the control output or alarm output largely varies depending on switching conditions. Be sure to confirm their performance under actual operating conditions and do not use them beyond the allowable number of switchings. If they are used in a deteriorated condition, insulation between circuits may be damaged and, as a result, the Temperature Controller itself may be damaged or burnt.

The service life of electronic devices such as Temperature Controllers is determined not only by the number of switchings of relays but also by the service life of internal electronic components. Component service life is affected by the ambient temperature: the higher the temperature becomes, the shorter the service life becomes and, the lower the temperature becomes, the longer the service life becomes. Therefore, the service life can be extended by lowering the temperature of the Temperature Controller using fans or other means of air ventilation. When providing forced cooling, however, be careful not to cool down the terminals sections alone to avoid measurement errors.

Measurement Accuracy

When extending or connecting the thermocouple lead wire, be sure to use compensating wires that match the thermocouple types.

When extending or connecting the lead wire of the platinum resistance thermometer, be sure to use wires that have low resistance.

When wiring the platinum resistance thermometer to the Temperature Controller, keep the wire route as short as possible. Separate this wiring away from the power supply wiring and load wiring to avoid inductive or other forms of noise.

Mount the Temperature Controller so that it is horizontally level.

If the measurement accuracy is low, check that input shift has been set correctly.

Waterproofing

The degree of protection is as shown below. Sections without any specification on their degree of protection or those with IP⁰ 0 have not been waterproofed.

Front panel: NEMA4 indoor use (equivalent to IP 66)

Rear case: IP 20

Terminal section: IP 00

Operating Precautions

It takes approximately four seconds for the outputs to turn ON from the moment the power is turned ON. Due consideration must be given to this time when incorporating Temperature Controllers in a sequence circuit.

When using auto-tuning, supply power to the load (e.g., heater) at the same time as or before supplying power to the Temperature Controller. If power is turned ON for the Temperature Controller before turning ON power for the load, auto-tuning will not be performed properly and optimum control will not be achieved.

When starting operation after the Temperature Controller has warmed up, turn OFF the power and then turn it ON again at the same time as turning ON power for the load. (Instead of turning the Temperature Controller OFF and ON again, switching from STOP mode to RUN mode can also be used in this case.)

If the Temperature Controller is used close to radios, television sets or wireless devices it may affect reception.


In the case of Temperature Controllers with alarm outputs, alarm output may not be generated properly when an abnormality occurs in the device. It is suggested that a separate alarm device be incorporated in the system.

To ensure proper performance, parameters of the Temperature Controllers are set to default values before they are shipped. Change these parameters depending on actual applications. If left unchanged, the Temperature Controller will operate under the default settings.

Crimp Terminal Connection

Use crimp terminals that match M3.5 screws. M3.5 x 8 self-rising screws are used.


E5AN/E5EN/E5CN



Be careful not to excessively tighten the terminals screws.

Soldering Connection

The self-rising screws provide easy soldering connection. Strip the lead wire by a length of 6 to 8 mm and properly treat the terminal tip.



ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. H107-E1-6 **In the interest of product improvement, specifications are subject to change without notice.**

OMRON Corporation

Industrial Automation Company

Measuring and Supervisory Controls Division
28th Fl., Crystal Tower Bldg.,
1-2-27, Shiromi, Chuo-ku,
Osaka 540-6028 Japan
Tel: (81)6-6949-6035/Fax: (81)6-6949-6069

Printed in Japan
0300-2M (1098)