



JST

12

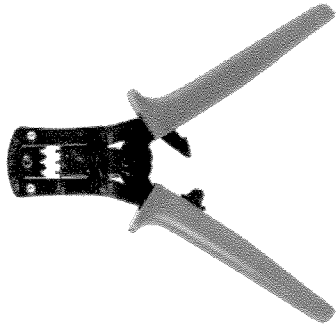

Open the tool.

13

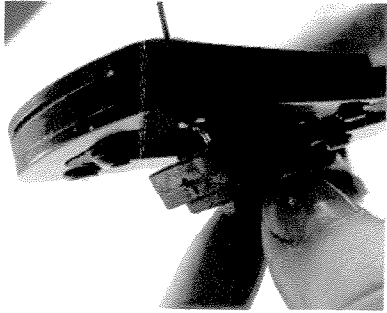

Loosen the flap locator.

14




Remove the crimped contact.

JST

Instruction Manual

Crimp Tool CS 10 – WC 1091

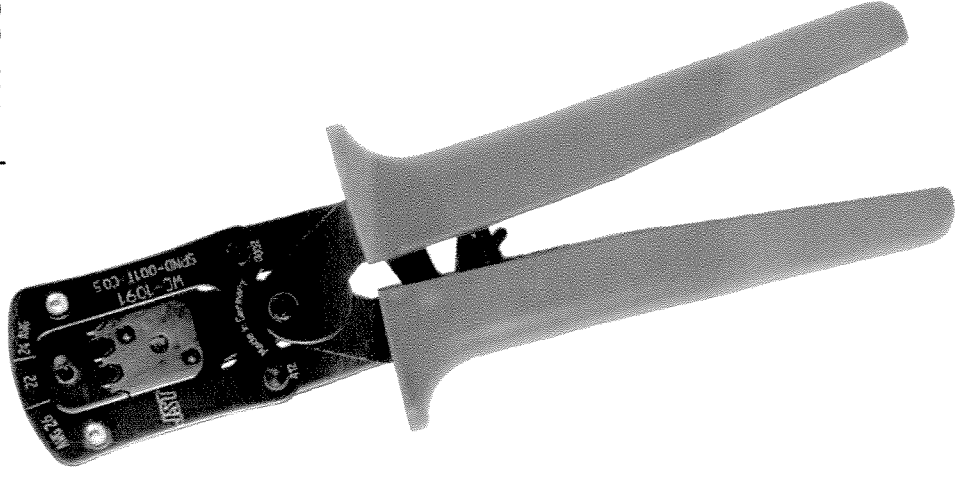



Application:

For processing of JST contacts


SPND-001T-C0.5 AWG 26-22

JST


JST

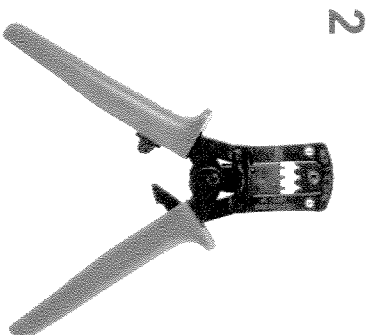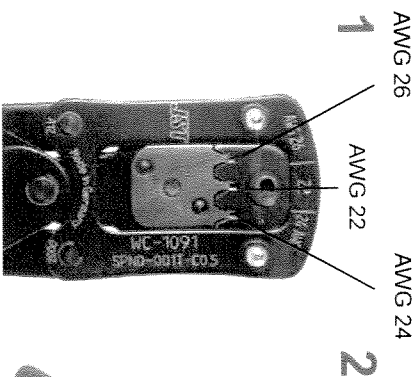


Open the tool.

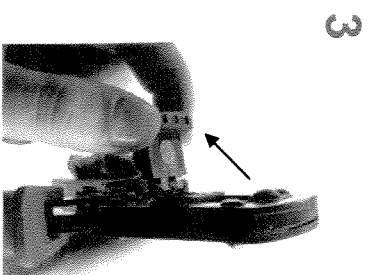



Click out the flap locator.

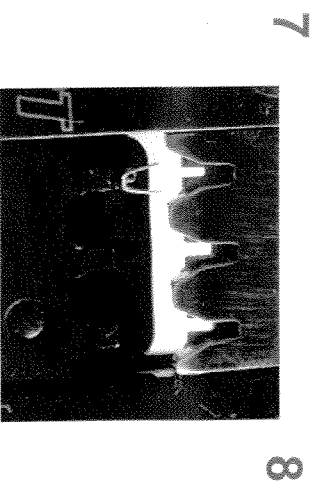

The contact lies in the centre of the respective profile.

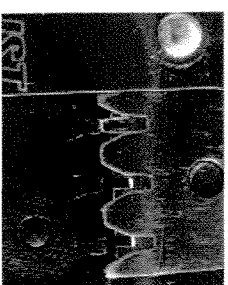


Close the tool slightly until the contact is held (1. Ratchet Lever)

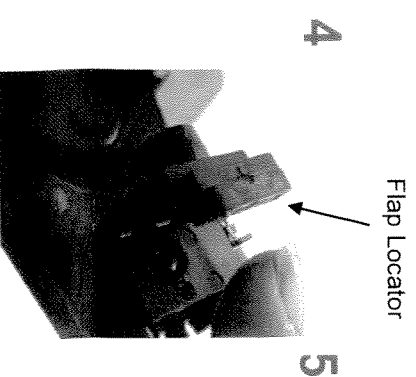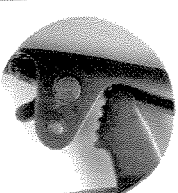


Flap Locator




Contact has to be inserted until stop. Please pay attention to the cross section.

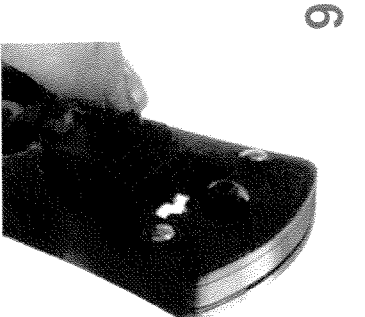

Close the flap locator.

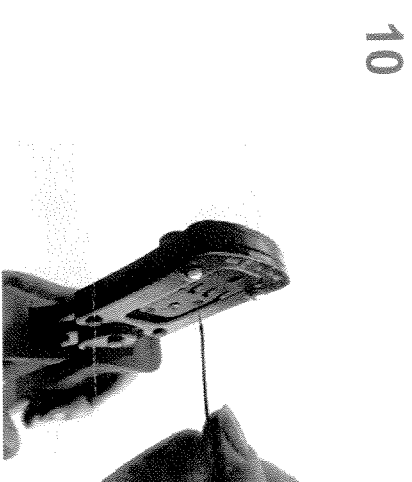

Insert the cable until insulation stop blade.

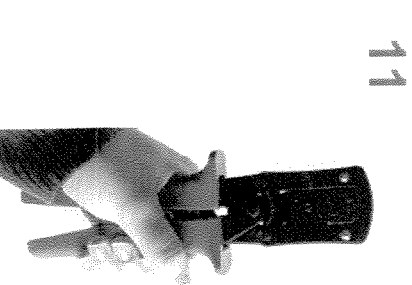

Close the tool.