


# A01 SERIES

## INDUSTRIAL CONTROLS

### Accessories

#### FLUSH MOUNTING BEZELS

Dark grey plastic material – supplied with sealing washer

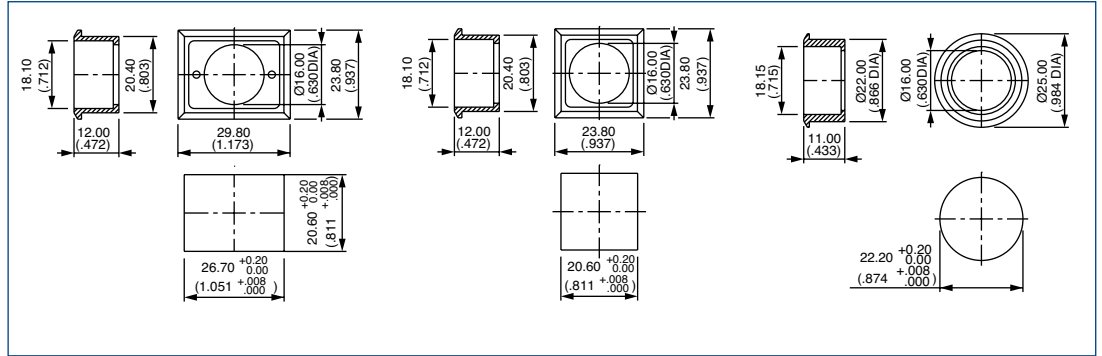


Rectangular **A01FM1**

Square **A01FM**

Round **A01FM2 \***

#### FLUSH MOUNTING BEZELS


Anodised aluminium/matt black

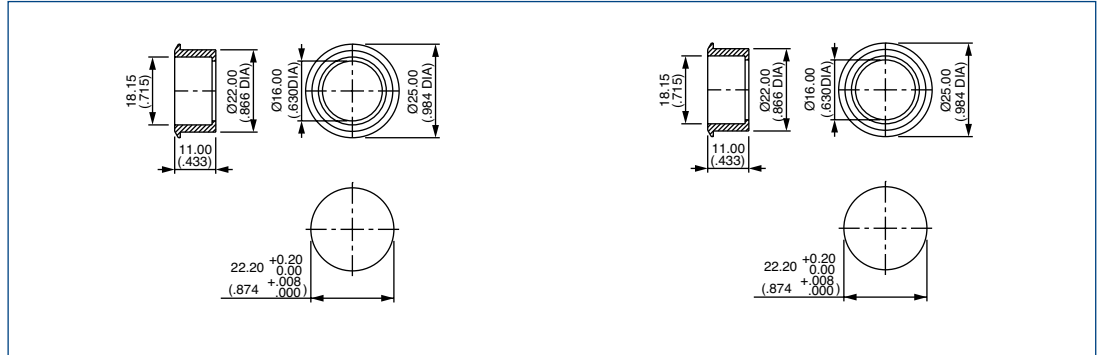

Round **A01FMM**


Round **A01FMMG**

#### PCB SOCKET

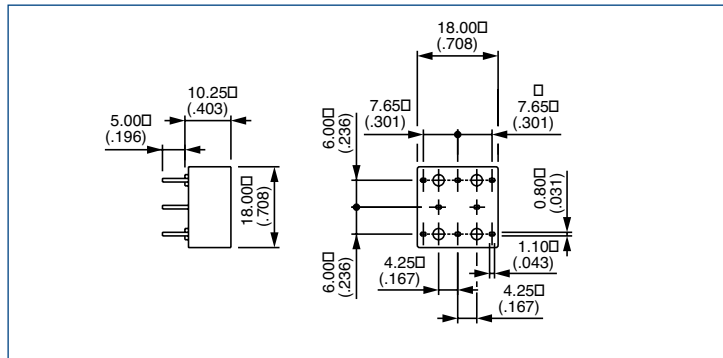

| No of poles                  | Part No       |
|------------------------------|---------------|
| Single pole, non illuminated | <b>A01PC1</b> |
| Double pole, non illuminated | <b>A01PC2</b> |
| Single pole, illuminated     | <b>A01PC3</b> |
| Double pole, illuminated     | <b>A01PC4</b> |
| Indicator                    | <b>A01PC5</b> |
| Single pole, E-stop          | <b>A01PC6</b> |
| Double pole, E-stop          | <b>A01PC7</b> |

#### FLAPGUARDS

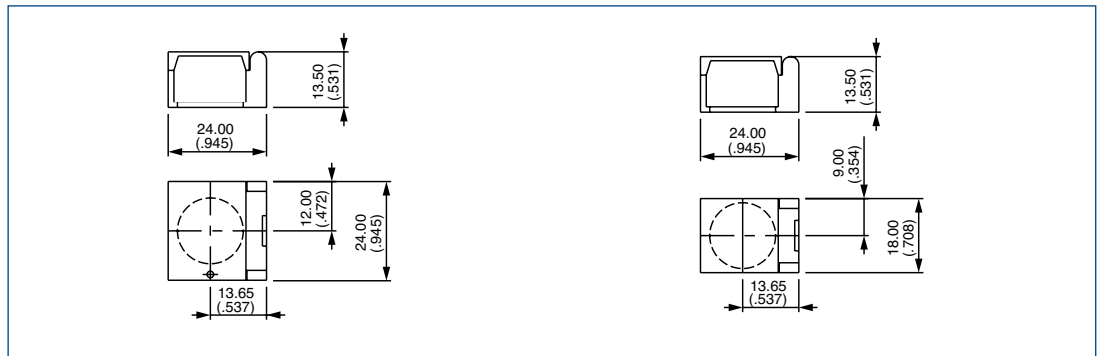

Rectangular **A01FG1**


Square/round **A01FG2**

# A01 SERIES

## Accessories


### METAL GUARDS

→ Slot as alternative to Ø2mm hole. Material : 1mm thick aluminium.

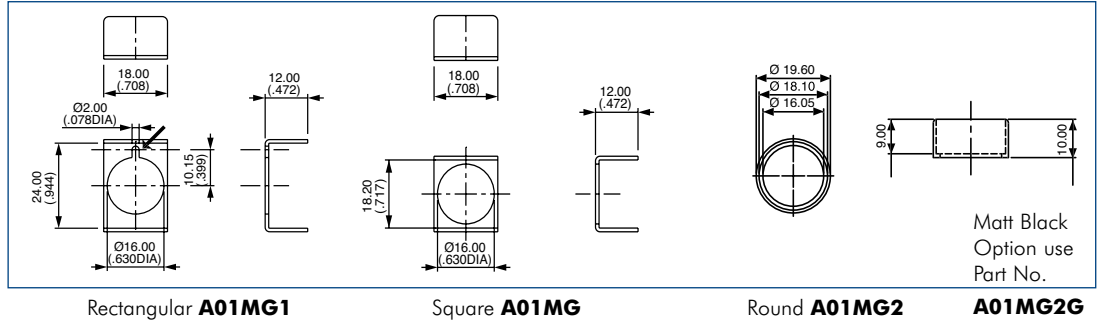


### ANTI ROTATION RING


Recommended to prevent product rotation

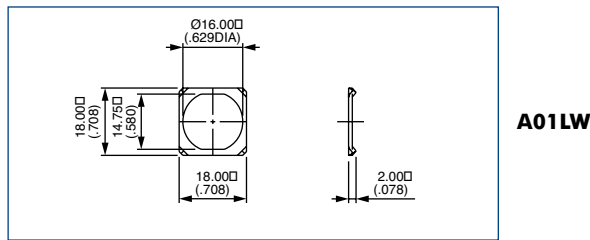

### SWITCHBLOCK TERMINAL GUARDS

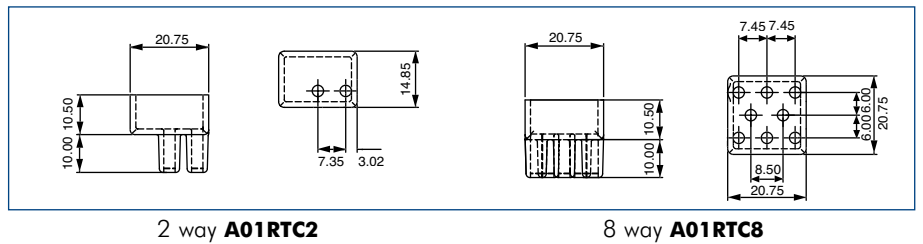

### BLANKING PLUGS

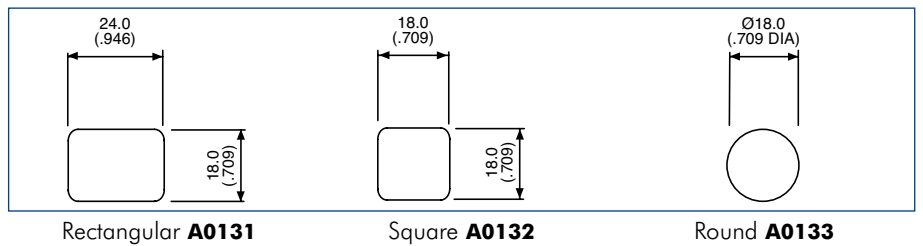

### RESISTOR ASSEMBLY


Resistor assembly – 2 stage illumination



# A01 SERIES


## INDUSTRIAL CONTROLS

### Installation – tools

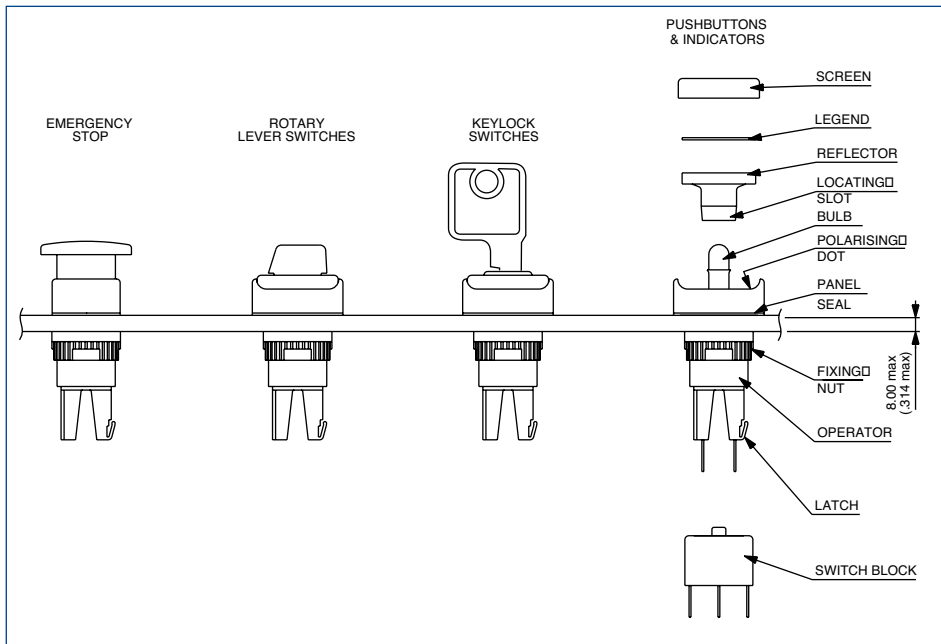


#### PANEL CUT-OUT

##### Round & square operators only

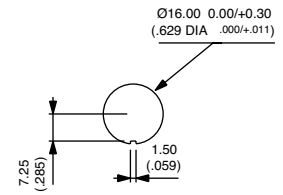

##### Rectangular operators only

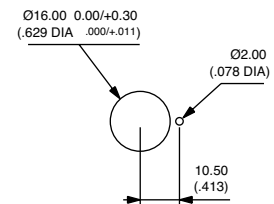

Max. panel thickness : 8mm (.314)

#### PANEL MOUNTING ASSEMBLY

- Drill/punch hole shaped as above.
- Assemble front operator through hole, fit fixing nut and tighten to a maximum torque of 0.8Nm using tool No. 30-0001.
- Wire chosen switch block as required and slide onto operator until latch engages.
- Fit bulb if required using tool No. 30-0002.
- Snap screen onto reflector assembly with legend in between if required and snap onto front operator TAKING CARE TO LINE UP THE LOCATING SLOT WITH THE POLARISING DOT, and not to damage the seal.

#### TO REMOVE BULB

Remove reflector/screen assembly. Use the bulb extractor 30-0002 to remove the bulb.

#### SWITCH BLOCK

To assemble switch block to front operator, firstly, TAKE CARE TO LINE UP SWITCH BLOCK WITH FRONT OPERATOR. Once in position slide on to front operator. N.B. Ensure latch is fully engaged correctly onto the switch block.

To remove switch block, depress the latch and slide the switch block off the operator.

#### FIXING NUT KEY



#### BULB REMOVER



30-0001

30-0002