


# High Performance Miniature Connectors

## HR11Series

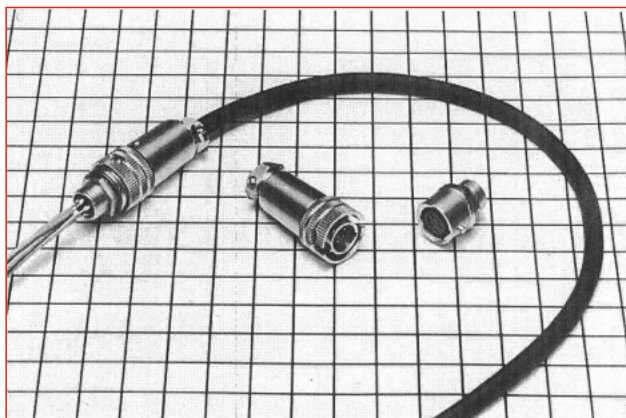

### ■General

HR11 Series circular connectors have been developed for applications with compact sized electronic equipment. Small size and reliability are key features of the HR11. The applications include communications devices, instrumentation, broadcasting studios, and other electronic equipment.

HR11 connectors employ a bayonet sleeve locking method, which provides excellent mating and unmating operability - especially where connectors are mounted in high density. This miniature but sophisticated connector design is suitable for many types of applications, and is particularly good fit for small electronic devices.

### ■Features

1. A five-key mating guide helps to guide the connector into the specified position .
2. Contacts are located at safe positions to prevent the contact pins from being damaged when trying to fit the mating guide (fine keys) blindly.
3. Connector is easy to insert and extract due to the bayonet locking mechanism.
4. High density mounting is applicable by using hexagon headed nut tightening system to fix the receptacle to the panel.
5. Each model of the connectors is available in male and female, to suit all requirements.
6. Slim and streamlined design with satin finish sureface matches compact devices without spoiling the appearance.

### ■Materials

| Part            | Materials            | Finish                           |
|-----------------|----------------------|----------------------------------|
| Shell           | Zinc-alloy and brass | Nickel plated and satin-finished |
| Insulation      | Polyamide resin      | Black                            |
| Male terminal   | Brass                | Silver plated                    |
| Female terminal | Phosphor bronze      | Silver plated                    |

### ■Ordering information

**HR11 - 9 B P A - 6 P (01)**


① ② ③ ④ ⑤ ⑥ ⑦ ⑧

|                                                                                   |                                                                                                    |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| ① Model name: HR11                                                                | ⑤ Shell variation: Variation of the same connector configuration is shown by A, B, C, D.....       |
| ② Shell size: The shell size is the outer diameter of the mating end of the plug. | ⑥ Number of Contacts                                                                               |
| ③ Type of lock mechanism: B: Bayonet Lock                                         | ⑦ Contact form<br>P: Male contact S: Female contact                                                |
| ④ Shell type: P: Plug<br>R: Receptacle<br>J: Jack                                 | ⑧ Other specifications: A two-digit character is added to indicate other specifications as needed. |

■Plug



HR11-9BP-6P(73)

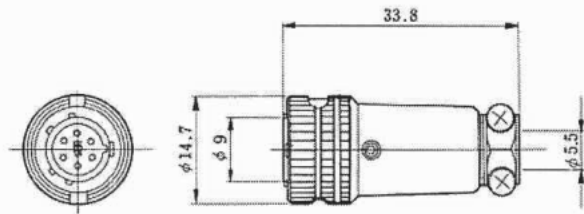


(Representative example)


| HRS No.       | Part No.        | No. of Contacts | Weight |
|---------------|-----------------|-----------------|--------|
| 111-0012-1 73 | HR11-9BP-4P(73) | 4               | 20gr   |
| 111-0013-4 73 | HR11-9BP-4S(73) | 4               | 20gr   |
| 111-0001-5 73 | HR11-9BP-6P(73) | 6               | 20gr   |
| 111-0003-0 73 | HR11-9BP-6S(73) | 6               | 20gr   |

Remark: Fasten a screw by using a torque wrench at 0.3 to 0.4N·m.

■Plug (with Rubber boot)

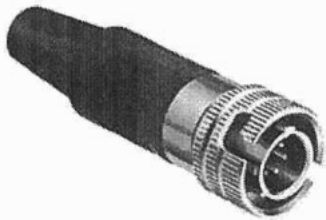

HR11-9BPB-6P(73)

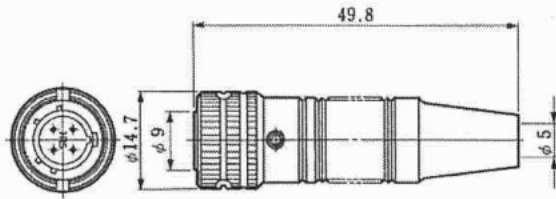

(Representative example)


| HRS No.       | Part No.         | No. of Contacts | Weight |
|---------------|------------------|-----------------|--------|
| 111-0101-0 73 | HR11-9BPB-4P(73) | 4               | 18gr   |
| 111-0102-2 73 | HR11-9BPB-4S(73) | 4               | 18gr   |
| 111-0109-1 73 | HR11-9BPB-6P(73) | 6               | 18gr   |
| 111-0110-0 73 | HR11-9BPB-6S(73) | 6               | 18gr   |

Remark: Fasten a screw by using a torque wrench at 0.3 to 0.4N·m.

■Receptacle



HR11-9BR-6S(73)

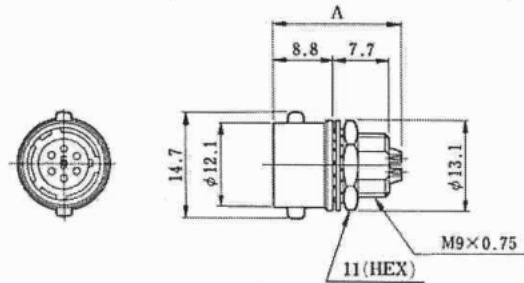


(Representative example)


| HRS No.       | Part No.        | No. of Contacts | Weight | A    |
|---------------|-----------------|-----------------|--------|------|
| 111-0103-5 73 | HR11-9BR-4P(73) | 4               | 5gr    | 18   |
| 111-0104-8 73 | HR11-9BR-4S(73) | 4               | 5gr    | 18.3 |
| 111-0004-3 73 | HR11-9BR-6P(73) | 6               | 6gr    | 18   |
| 111-0002-8 73 | HR11-9BR-6S(73) | 6               | 6gr    | 18.3 |

Remark: Fasten a screw by using a torque wrench at 0.3 to 0.4N·m.

■Jack (with Rubber boot)

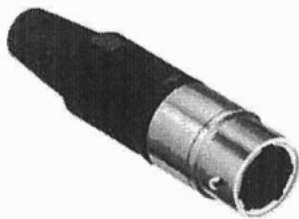

HR11-9BJB-6S(73)

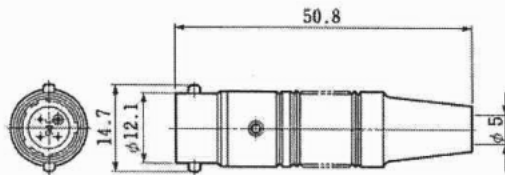


(Representative example)

| HRS No.       | Part No.         | No. of Contacts | Weight |
|---------------|------------------|-----------------|--------|
| 111-0106-3 73 | HR11-9BJB-4S(73) | 4               | 17gr   |
| 111-0108-9 73 | HR11-9BJB-6P(73) | 6               | 17gr   |
| 111-0107-6 73 | HR11-9BJB-6S(73) | 6               | 17gr   |

Remark: Fasten a screw by using a torque wrench at 0.3 to 0.4N·m.

## ◆ Mounting Cutout

- Applicable panel thickness: 1 to 3.5mm
- Mounting Method: Fastening a Hexagon Nut

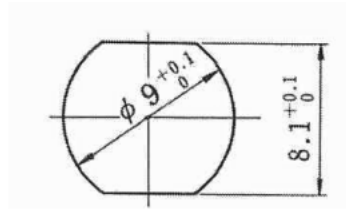

## ◆ Tools

Clamping Tool (For use with Rubber boot type)



Use for applicable dia.  $\phi 5\text{mm}$ .

| HRS No.    | Part No.    | Remarks                 |
|------------|-------------|-------------------------|
| 150-0041-2 | HR10A-TC-02 | Use tool indication 5.3 |

## ◆ Contact arrangement

| No. of Contacts       | 4                                 | 6 |
|-----------------------|-----------------------------------|---|
| Contact Arrangement   |                                   |   |
| Withstanding Voltage  | AC300V for a minute               |   |
| Current Rating        | 2A                                |   |
| Insulation Resistance | MIN. 200M $\Omega$ at DC100V      |   |
| Contact Resistance    | MAX. 10m $\Omega$ at DC1A         |   |
| Solder Pot Diameter   | $\phi 0.8\text{mm}$               |   |
| Applicable Cable Dia. | $\phi 4.5$ to $\phi 5.5\text{mm}$ |   |

Notes:

- The Contact Arrangement shown here is the mating surface of socket insert assembled in a receptacle.  
The contact number is shown 1 and 6 on the wiring side.
- The Withstanding Voltage is the test value.

## ◆ Precautions

- Switch off the power of the circuit before disconnecting or plugging-in the connector.
- Use a connector with socket contacts at the power side of the circuit.
- Make sure that the coupling is in completely locked position.
- Cable clamping, cable rotation, and other forces may vary with the cable construction. Please make sure that your cable is suitable for use with these connectors before usage and production.

**USA:**

**HIROSE ELECTRIC (U.S.A.), INC. HEADQUARTERS**

2688 Westhills Court, Simi Valley, CA 93065-6235  
Phone : +1-805-522-7958  
Fax : +1-805-522-3217  
<http://www.hirose.com/us/>

**USA:**

**HIROSE ELECTRIC (U.S.A.), INC. DETROIT OFFICE (AUTOMOTIVE)**

37677 Professional Center Drive, Suite #100C  
Livonia, MI 48154  
Phone : +1-734-542-9963  
Fax : +1-734-542-9964  
<http://www.hirose.com/us/>

**GERMANY:**

**HIROSE ELECTRIC EUROPE B.V. NUERNBERG OFFICE**

Muggenhofer Str. 136 90429 Nuernberg  
Phone : +49-911 32 68 89 63  
Fax : +49-911 32 68 89 69  
<http://www.hirose.com/eu/>

**CHINA:**

**HIROSE ELECTRIC (SHANGHAI) CO.,LTD. BEIJING BRANCH**

A1001, Ocean International Center, Building 56# East 4th  
Ring Middle Road, ChaoYang District, Beijing, 100025  
Phone : +86-10-5165-9332  
Fax : +86-10-5908-1381  
<http://www.hirose.com/cn/>

**TAIWAN:**

**HIROSE ELECTRIC TAIWAN CO., LTD.**

103 8F, No.87, Zhengzhou Rd., Taipei  
Phone : +886-2-2555-7377  
Fax : +886-2-2555-7350  
<http://www.hirose.com/cn/>

**INDIA:**

**HIROSE ELECTRIC SINGAPORE PTE. LTD. DELHI LIAISON OFFICE**

Office NO.519, Regus-Green Boulevard, Level5, Tower C,  
Sec62, Plot B-9A, Block B, Noida, 201301, Uttar Pradesh, India  
Phone : +91-12-660-8018  
Fax : +91-120-4804949  
<http://www.hirose.com/sg/>

**USA:**

**HIROSE ELECTRIC (U.S.A.), INC. SAN JOSE OFFICE**

3255 Scott Boulevard, Building 7, Suite 101  
Santa Clara, CA 95054  
Phone : +1-408-253-9640  
Fax : +1-408-253-9641  
<http://www.hirose.com/us/>

**THE NETHERLANDS:**

**HIROSE ELECTRIC EUROPE B.V.**

Hogehillweg #8 1101 CC Amsterdam Z-O  
Phone : +31-20-6557460  
Fax : +31-20-6557469  
<http://www.hirose.com/eu/>

**UNITED KINGDOM:**

**HIROSE ELECTRIC EUROPE BV (UK BRANCH)**

4 Newton Court, Kelvin Drive, Knowlhill,  
Milton Keynes, MK5 8NH  
Phone : +44-1908 202050  
Fax : +44-1908 202058  
<http://www.hirose.com/eu/>

**CHINA:**

**HIROSE ELECTRIC TECHNOLOGIES (SHENZHEN) CO., LTD.**

Room 09-13, 19/F, Office Tower Shun Hing Square, Di Wang Commercial Centre,  
5002 Shen Nan Dong Road, Shenzhen City, Guangdong Province, 518008  
Phone : +86-755-8207-0851  
Fax : +86-755-8207-0873  
<http://www.hirose.com/cn/>

**KOREA:**

**HIROSE KOREA CO., LTD.**

1261-10, Jeoungwhang-Dong, Shihung-City,  
Kyunggi-Do 429-450  
Phone : +82-31-496-7000,7124  
Fax : +82-31-496-7100  
<http://www.hirose.co.kr/>

**INDIA:**

**HIROSE ELECTRIC SINGAPORE PTE. LTD. BANGALORE LIAISON OFFICE**

Unit No.03, Ground Floor, Explorer Building International Tech  
Park Whitefield Road, Bangalore 560066 Karnataka, India  
Phone : +91-80-4120 1907  
Fax : +91-80-4120 9908  
<http://www.hirose.com/sg/>

**USA:**

**HIROSE ELECTRIC (U.S.A.), INC. CHICAGO OFFICE**

580 Waters Edge Lane, Suite 205 Lombard IL  
60148  
Phone : +1-630-282-6706  
Mail : [inquiries@hirose.com](mailto:inquiries@hirose.com)  
<http://www.hirose.com/us/>

**GERMANY:**

**HIROSE ELECTRIC EUROPE B.V. GERMAN BRANCH**

Herzog-Carl-Strasse 4 D-73760 Ostfildern  
(Scharnhäuser Park)  
Phone : +49-711-4560-02-1  
Fax : +49-711-4560-02-299  
<http://www.hirose.com/eu/>

**CHINA:**

**HIROSE ELECTRIC (SHANGHAI) CO., LTD.**

1601, Henderson Metropolitan, NO.300, East Nanjing  
Road, Huangpu District, Shanghai, China 200001  
Phone : +86-21-6391-3355  
Fax : +86-21-6391-3335  
<http://www.hirose.com/cn/>

**HONG KONG:**

**HIROSE ELECTRIC HONGKONG TRADING CO., LTD.**

Room 1001, West Wing, Tsim Sha Tsui Centre, 66  
Mody Road, Tsim Sha Tsui East, Kowloon, Hong Kong  
Phone : +852-2803-5338  
Fax : +852-2591-6560  
<http://www.hirose.com/hk/>

**SINGAPORE:**

**HIROSE ELECTRIC SINGAPORE PTE. LTD.**

10 Anson Road #26-1, International Plaza  
079903, Singapore  
Phone : +65-6324-6113  
Fax : +65-6324-6123  
<http://www.hirose.com/sg/>

**MALAYSIA:**

**HIROSE ELECTRIC SINGAPORE PTE. LTD. (REPRESENTATIVE OFFICE)**

1-10-07, Suntech @ Penang Cybercity (1164), Lintang  
Mayang Pasir 3,11950, Bayan Baru, Penang, Malaysia.  
Phone : +604-619-2564  
Fax : +604-619-2574  
<http://www.hirose.com/sg/>



## HIROSE ELECTRIC CO.,LTD.

2-6-3,Nakagawa Chuoh,Tsuzuki-Ku,Yokohama-Shi 224-8540,JAPAN  
TEL: +81-45-620-3526 Fax: +81-45-591-3726  
<http://www.hirose.com>  
<http://www.hirose-connectors.com>

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Hirose Electric:

[HR11-9BP-6P\(73\)](#) [HR11-9BR-6S\(73\)](#) [HR11-9BJB-4S\(73\)](#) [HR11-9BJB-6P\(73\)](#) [HR11-9BJB-6S\(73\)](#) [HR11-9BP-4P\(73\)](#) [HR11-9BP-4S\(73\)](#) [HR11-9BP-6S\(73\)](#) [HR11-9BPB-4P\(73\)](#) [HR11-9BPB-4S\(73\)](#) [HR11-9BPB-6P\(73\)](#) [HR11-9BPB-6S\(73\)](#) [HR11-9BR-4P\(73\)](#) [HR11-9BR-4S\(73\)](#) [HR11-9BR-6P\(73\)](#)