

# Multiphase PWM Regulator for AMD Fusion™ Desktop CPUs Using SVI 2.0

### **ISL6377**

The ISL6377 is fully compliant with AMD Fusion™ SVI 2.0 and provides a complete solution for microprocessor and graphics processor core power. The ISL6377 controller supports two Voltage Regulators (VRs) with three integrated gate drivers and three optional external drivers for maximum flexibility. The Core VR can be configured for 4-, 3-, 2-, or 1-phase operation while the Northbridge VR supports 2- or 1-phase configurations. The two VRs share a serial control bus to communicate with the AMD CPU and achieve lower cost and smaller board area compared with two-chip solutions.

The PWM modulator is based on Intersil's Robust Ripple Regulator R3 Technology™. Compared to traditional modulators, the R3 modulator can automatically change switching frequency for faster transient settling time during load transients and improved light load efficiency.

The ISL6377 has several other key features. Both outputs support DCR current sensing with single NTC thermistor for DCR temperature compensation or accurate resistor current sensing. Both outputs utilize remote voltage sense, adjustable switching frequency, OC protection and power good.

# **Applications**

- AMD Fusion CPU/GPU Core Power
- Desktop Computers

## **Features**

- Supports AMD SVI 2.0 Serial Data Bus Interface
- Dual Output Controller with Integrated Drivers
- Two Dedicated Core Drivers
- One Programmable Driver for Either Core or Northbridge
- Precision Voltage Regulation
  - 0.5% System Accuracy Over-Temperature
  - 0.5V to 1.55V in 6.25mV Steps
  - Enhanced Load Line Accuracy
- Supports Multiple Current Sensing Methods
- Lossless Inductor DCR Current Sensing
- Precision Resistor Current Sensing
- Programmable 1-, 2-, 3- or 4-Phase for the Core Output and 1- or 2-Phase for the Northbridge Output
- Adaptive Body Diode Conduction Time Reduction
- Superior Noise Immunity and Transient Response
- · Output Current and Voltage Telemetry
- · Differential Remote Voltage Sensing
- · High Efficiency Across Entire Load Range
- Programmable Slew Rate
- · Programmable VID Offset and Droop on Both Outputs
- . Programmable Switching Frequency for Both Outputs
- Excellent Dynamic Current Balance Between Phases
- Protection: OCP/WOC, OVP, PGOOD, and Thermal Monitor
- Small Footprint 48 Ld 6x6 QFN Package
  - Pb-Free (RoHS Compliant)

# **Core Performance**

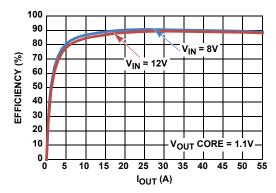


FIGURE 1. EFFICIENCY vs LOAD

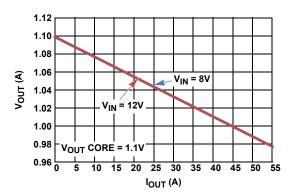


FIGURE 2. V<sub>OUT</sub> vs LOAD

# **Simplified Application Circuit for High Power CPU Core**

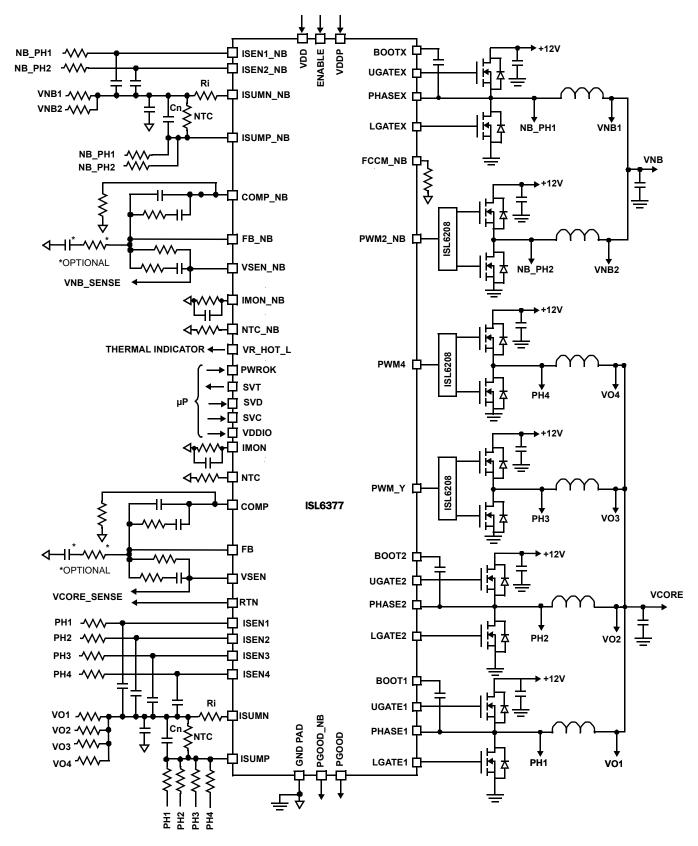


FIGURE 3. TYPICAL APPLICATION CIRCUIT USING INDUCTOR DCR SENSING

# Simplified Application Circuit with 3 Internal Drivers Used for Core

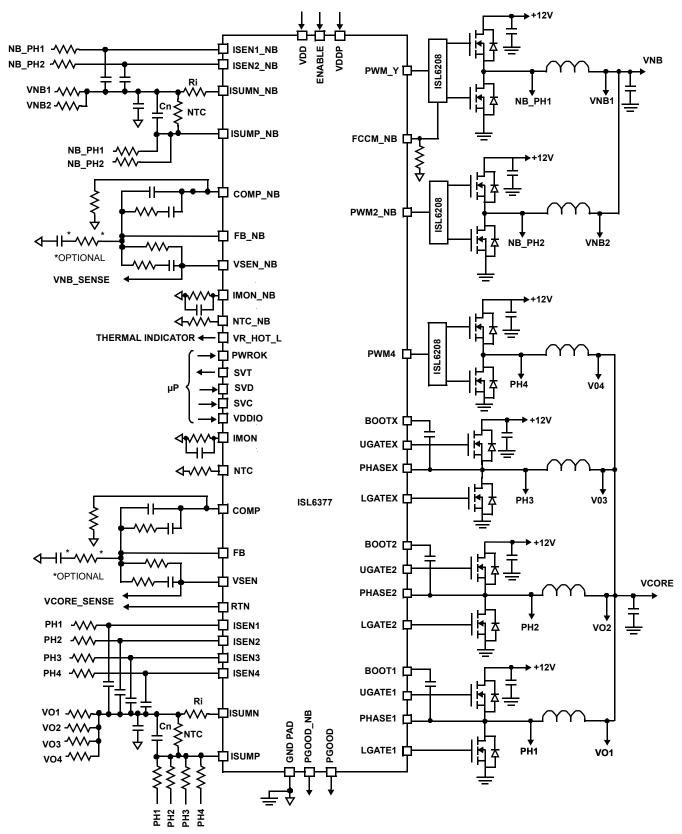


FIGURE 4. TYPICAL APPLICATION CIRCUIT USING INDUCTOR DCR SENSING

# **Simplified Application Circuit for Mid-Power CPUs [3+1 Configuration]**


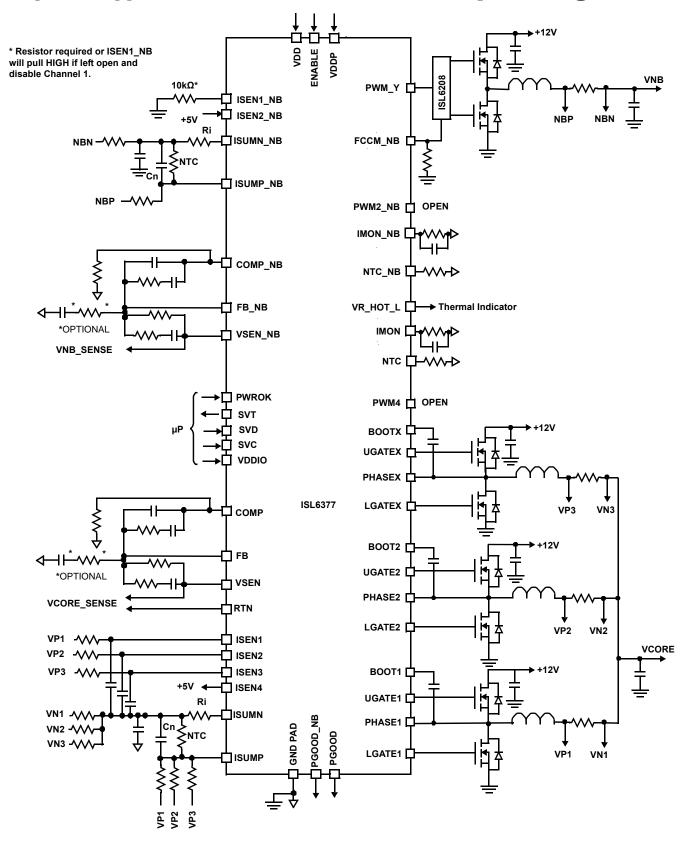



FIGURE 5. TYPICAL APPLICATION CIRCUIT USING RESISTOR SENSING

# **Block Diagram**

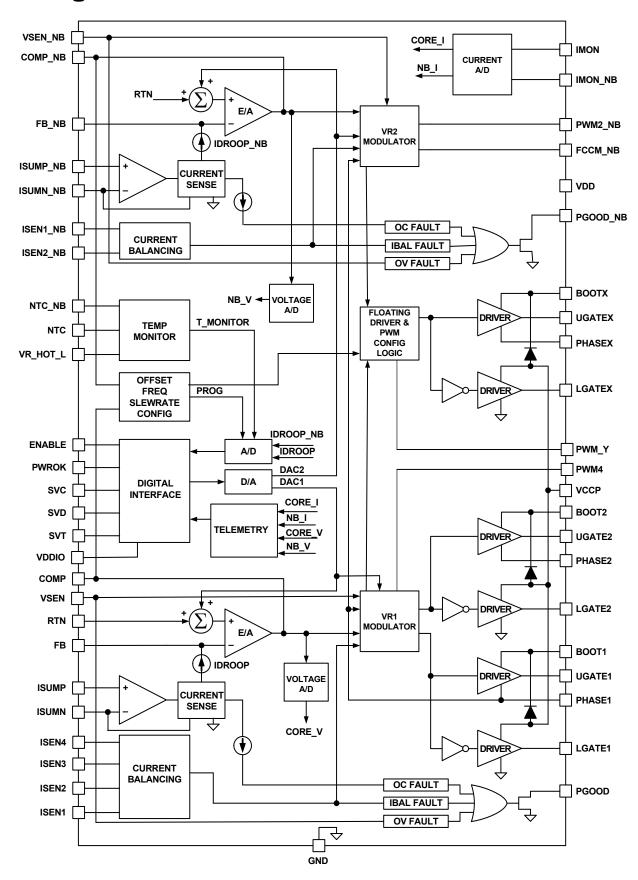

# **Pin Configuration**

ISL6377 (48 LD QFN) TOP VIEW

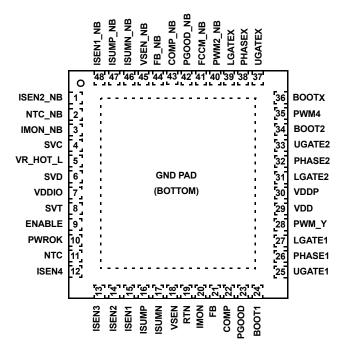

# **Pin Descriptions**

PIN NUMBER	SYMBOL	DESCRIPTION
1	ISEN2_NB	Individual current sensing for Channel 2 of the Northbridge VR. When ISEN2_NB is pulled to +5V, the controller will disable Channel 2 and the Northbridge VR will run single-phase.
2	NTC_NB	Thermistor input to VR_HOT_L circuit to monitor Northbridge VR temperature.
3	IMON_NB	Northbridge output current monitor. A current proportional to the Northbridge VR output current is sourced from this pin.
4	SVC	Serial VID clock input from the CPU processor master device.
5	VR_HOT_L	Thermal indicator signal to AMD CPU. Thermal overload open drain output indicator active LOW.
6	SVD	Serial VID data bidirectional signal from the CPU processor master device to the VR.
7	VDDIO	VDDIO is the processor memory interface power rail and this pin serves as the reference to the controller IC for this processor I/O signal level.
8	SVT	Serial VID Telemetry (SVT) data line input to the CPU from the controller IC. Telemetry and VID-on-the-fly complete signal provided from this pin.
9	ENABLE	Enable input. A high level logic on this pin enables both VRs.
10	PWROK	System power-good input. When this pin is high, the SVI 2 interface is active and the I <sup>2</sup> C protocol is running. While this pin is low, the SVC and SVD input states determine the pre-PWROK metal VID. This pin must be low prior to the ISL6377 PGOOD output going high per the AMD SVI 2.0 Controller Guidelines.
11	NTC	Thermistor input to VR_HOT_L circuit to monitor Core VR temperature.
12	ISEN4	ISEN4 is the individual current sensing for Channel 4. When ISEN4 is pulled to +5V, the controller disables Channel 4, and the Core VR runs in three-phase mode.
13	ISEN3	ISEN3 is the individual current sensing for Channel 3. When ISEN3 is pulled to +5V, the controller disables Channel 3, and the Core VR runs in two-phase mode.
14	ISEN2	Individual current sensing for Channel 2 of the Core VR. When ISEN2 is pulled to +5V, the controller disables Channel 2, and the Core VR runs in single-phase mode.

# Pin Descriptions (Continued)

PIN NUMBER	SYMBOL	DESCRIPTION
15	ISEN1	Individual current sensing for Channel 1 of the Core VR. If ISEN2 is tied to +5V, this pin cannot be left open and must be tied to GND with a $10k\Omega$ resistor. If ISEN1 is tied to +5V, the Core portion of the IC is shut down.
16	ISUMP	Non-inverting input of the transconductance amplifier for current monitor and load line of Core output.
17	ISUMN	Inverting input of the transconductance amplifier for current monitor and load line of Core output.
18	VSEN	Output voltage sense pin for the Core controller. Connect to the +sense pin of the microprocessor die.
19	RTN	Output voltage sense return pin for both Core VR and Northbridge VR. Connect to the -sense pin of the microprocessor die.
20	IMON	Core output current monitor. A current proportional to the Core VR output current is sourced from this pin.
21	FB	Output voltage feedback to the inverting input of the Core controller error amplifier.
22	COMP	Core controller error amplifier output. A resistor from COMP to GND sets the Core VR offset voltage.
23	PGOOD	Open-drain output to indicate the Core portion of the IC is ready to supply regulated voltage. Pull up externally to VDD or 3.3V through a resistor.
24	B00T1	Connect an MLCC capacitor across the BOOT1 and the PHASE1 pins. The boot capacitor is charged, through an internal boot diode connected from the VDDP pin to the BOOT1 pin, each time the PHASE1 pin drops below VDDP minus the voltage dropped across the internal boot diode.
25	UGATE1	Output of the Phase 1 high-side MOSFET gate driver of the Core VR. Connect the UGATE1 pin to the gate of the Phase 1 high-side MOSFET(s).
26	PHASE1	Current return path for the Phase 1 high-side MOSFET gate driver of VR1. Connect the PHASE1 pin to the node consisting of the high-side MOSFET source, the low-side MOSFET drain, and the output inductor of Phase 1.
27	LGATE1	Output of the Phase 1 low-side MOSFET gate driver of the Core VR. Connect the LGATE1 pin to the gate of the Phase 1 low-side MOSFET(s).
28	PWM_Y	Floating PWM output used for either Channel 3 of the Core VR or Channel 1 of the Northbridge VR depending on the FCCM_NB resistor connected between FCCM_NB and GND.
29	VDD	5V bias power. A resistor [2 $\Omega$ ] and a decoupling capacitor should be used from the +5V supply. A high quality, X7R dielectric MLCC capacitor is recommended.
30	VDDP	Input voltage bias for the internal gate drivers. Connect +5V to the VDDP pin. Decouple with at least $1\mu F$ of capacitance to GND. A high quality, X7R dielectric MLCC capacitor is recommended.
31	LGATE2	Output of the Phase 2 low-side MOSFET gate driver of the Core VR. Connect the LGATE2 pin to the gate of the Phase 2 low-side MOSFET(s).
32	PHASE2	Current return path for the Phase 2 high-side MOSFET gate driver of the Core VR. Connect the PHASE2 pin to the node consisting of the high-side MOSFET source, the low-side MOSFET drain, and the output inductor of Phase 2.
33	UGATE2	Output of the Phase 2 high-side MOSFET gate driver of the Core VR. Connect the UGATE2 pin to the gate of the Phase 2 high-side MOSFET(s).
34	ВООТ2	Connect an MLCC capacitor across the BOOT2 and PHASE2 pins. The boot capacitor is charged, through an internal boot diode connected from the VDDP pin to the BOOT2 pin, each time the PHASE2 pin drops below VDDP minus the voltage dropped across the internal boot diode.
35	PWM4	PWM output of Channel 4 of the Core VR. Disabled if ISEN4 is tied to +5V.
36	воотх	Boot connection of the programmable internal driver used for either Channel 3 of the Core VR or Channel 1 of the Northbridge VR based on the configuration state selected by the FCCM_NB resistor. Connect an MLCC capacitor across the BOOT1X and the PHASEX pins. The boot capacitor is charged, through an internal boot diode connected from the VDDP pin to the BOOTX pin, each time the PHASEX pin drops below VDDP minus the voltage dropped across the internal boot diode.
37	UGATEX	High-side MOSFET gate driver portion of the programmable internal driver used for either Channel 3 of the Core VR or Channel 1 of the Northbridge VR based on the configuration state selected by the FCCM_NB resistor. Connect the UGATEX pin to the gate of the high-side MOSFET(s) for either Phase 3 of the Core VR or Phase 1 of the Northbridge VR based on the configuration state selected.

# Pin Descriptions (Continued)

PIN NUMBER	SYMBOL	DESCRIPTION
38	PHASEX	Phase connection of the programmable internal driver used for either Channel 3 of the Core VR or Channel 1 of the Northbridge VR based on the configuration state selected by the FCCM_NB resistor. Current return path for the high-side MOSFET gate driver of the floating internal driver. Connect the PHASEX pin to the node consisting of the high-side MOSFET source, the low-side MOSFET drain, and the output inductor of either Phase 3 of the Core VR or Phase 1 of the Northbridge VR based on the configuration state selected.
39	LGATEX	Low-side MOSFET gate driver portion of floating internal driver used for either Channel 3 of the Core VR or Channel 1 of the Northbridge VR based on the configuration state selected by the FCCM_NB resistor. Connect the LGATEX pin to the gate of the low-side MOSFET(s) for either Phase 3 of the Core VR or Phase 1 of the Northbridge VR based on the configuration state selected.
40	PWM2_NB	PWM output for Channel 2 of the Northbridge VR. Disabled when ISEN2_NB is tied to +5V.
41	FCCM_NB	Diode emulation control signal for Intersil MOSFET Drivers. When FCCM_NB is LOW, diode emulation at the driver this pin connects to is allowed. A resistor from FCCM_NB pin to GND configures the PWM_Y and floating internal gate driver [BOOTX, UGATEX, PHASEX, LGATEX pins] to support Phase 3 of the Core VR and Phase 1 of the Northbridge VR. The FCCM_NB resistor value also is used to set the slew rate for the Core VR and Northbridge VR.
42	PGOOD_NB	Open-drain output to indicate the Northbridge portion of the IC is ready to supply regulated voltage. Pull-up externally to VDDP or 3.3V through a resistor.
43	COMP_NB	Northbridge VR error amplifier output. A resistor from COMP_NB to GND sets the Northbridge VR offset voltage and is used to set the switching frequency for the Core VR and Northbridge VR.
44	FB_NB	Output voltage feedback to the inverting input of the Northbridge controller error amplifier.
45	VSEN_NB	Output voltage sense pin for the Northbridge controller. Connect to the +sense pin of the microprocessor die.
46	ISUMN_NB	Inverting input of the transconductance amplifier for current monitor and load line of the Northbridge VR.
47	ISUMP_NB	Non-inverting input of the transconductance amplifier for current monitor and load line of the Northbridge VR.
48	ISEN1_NB	Individual current sensing for Channel 1 of the Northbridge VR. If ISEN2_NB is tied to +5V, this pin cannot be left open and must be tied to GND with a $10k\Omega$ resistor. If ISEN1_NB is tied to +5V, the Northbridge portion of the IC is shutdown.
	GND (Bottom Pad)	Signal common of the IC. Unless otherwise stated, signals are referenced to the GND pin.

# **Ordering Information**

PART NUMBER (Notes 1, 2, 3)	PART MARKING	TEMP. RANGE (°C)	PACKAGE (Pb-free)	PKG. DWG. #
ISL6377HRZ	ISL6377 HRZ	-10 to +100	48 Ld 6x6 QFN	L48.6x6B
ISL6377IRZ	ISL6377 IRZ	-40 to +85	48 Ld 6x6 QFN	L48.6x6B

#### NOTES:

- 1. Add "-T\*" suffix for tape and reel. Please refer to TB347 for details on reel specifications.
- 2. Intersil Pb-free plus anneal products employ special Pb-free material sets; molding compounds/die attach materials and 100% matte tin plate termination finish, which are RoHS compliant and compatible with both SnPb and Pb-free soldering operations. Intersil Pb-free products are MSL classified at Pb-free peak reflow temperatures that meet or exceed the Pb-free requirements of IPC/JEDEC J STD-020.
- 3. For Moisture Sensitivity Level (MSL), please see device information page for ISL6377. For more information on MSL please see tech brief TB363.

# **ISL6377**

# **Table of Contents**

Absolute Maximum Ratings	. 10
Thermal Information	. 10
Recommended Operating Conditions	. 10
Electrical Specifications	. 10
Gate Driver Timing Diagram	12
Theory of Operation.	
Multiphase R3™ Modulator	
Diode Emulation and Period Stretching	
Channel Configuration	
Power-On Reset	
Voltage Regulation and Load Line Implementation	
Differential Sensing	
Phase Current Balancing	
Modes of Operation	
Adaptive Body Diode Conduction Time Reduction	
Resistor Configuration Options	
VR Offset Programming	
Floating DriverX and PWM_Y Configuration	
VID-on-the-Fly Slew Rate Selection	
CCM Switching Frequency	
AMD Serial VID Interface 2.0	
Pre-PWROK Metal VIDSVI Interface Active	
VID-on-the-Fly Transition	
SVI Data Communication Protocol	
SVI Bus Protocol	
Power States	
Dynamic Load Line Slope Trim	
Telemetry	
·	
Protection Features  Overcurrent	
Current-Balance	
Undervoltage	
Overvoltage	
Thermal Monitor [NTC, NTC_NB]	
Fault Recovery	
Key Component Selection	
Inductor DCR Current-Sensing Network	
Resistor Current-Sensing Network	
Overcurrent Protection	
Load Line Slope	
Compensator	
Thermal Monitor Component Selection	
Layout Guidelines	
PCB Layout Considerations	
Revision History	
Products	
Package Outline Drawing	. 36

## **Absolute Maximum Ratings**

Supply Voltage, V <sub>DD.</sub> V <sub>DDP</sub> 0.3V to +7V
Boot Voltage (BOOT)0.3V to +33V
Boot to Phase Voltage (BOOT-PHASE)0.3V to +7V(DC)
-0.3V to +9V (<10ns)
Phase Voltage (PHASE)
UGATE Voltage (UGATE)
(<20ns Pulse Width, 10µJ) to BOOT LGATE Voltage
-2.5V (<20ns Pulse Width, 5µJ) to VDD + 0.3V
All Other Pins0.3V to (VDD + 0.3V)
Open Drain Outputs, PGOOD, PGOOD NB, VR HOT L0.3V to +7V

### **Thermal Information**

Thermal Resistance (Typical)	$\theta_{JA}$ (° C/W)	$\theta_{JC}$ (°C/W)
48 Ld QFN Package (Notes 4, 5)	29	3.5
Maximum Junction Temperature		+150°C
Maximum Storage Temperature Range	6	5°C to +150°C
Maximum Junction Temperature (Plastic Pac	kage)	+150°C
Storage Temperature Range	6!	5°C to +150°C
Pb-Free Reflow Profile		see link below
http://www.intersil.com/pbfree/Pb-FreeRe	eflow.asp	

## **Recommended Operating Conditions**

Supply Voltage, V <sub>DD</sub>		+5V ±5%
Input Supply Voltage, V <sub>IN</sub> .		10V to 12.6V
Ambient Temperature	HRZ	10°C to +100°C
	IRZ	40°C to +85°C
Junction Temperature		10°C to +125°C

CAUTION: Do not operate at or near the maximum ratings listed for extended periods of time. Exposure to such conditions may adversely impact product reliability and result in failures not covered by warranty.

#### NOTES:

- 4. θ<sub>JA</sub> is measured in free air with the component mounted on a high effective thermal conductivity test board with "direct attach" features. See Tech Brief TB379.
- 5. For  $\theta_{\text{JC}}$ , the "case temp" location is the center of the exposed metal pad on the package underside.

**Electrical Specifications** Operating Conditions:  $V_{DD} = 5V$ ,  $T_A = -10^{\circ}$ C to  $+100^{\circ}$ C (HRZ),  $T_A = -40^{\circ}$ C to  $+85^{\circ}$ C (IRZ),  $f_{SW} = 300$ kHz, unless otherwise noted. **Boldface limits apply over the operating temperature range, -40^{\circ}C to +100^{\circ}C.** 

PARAMETER	SYMBOL	TEST CONDITIONS	MIN (Note 6)	TYP	MAX (Note 6)	UNITS
INPUT POWER SUPPLY			<u> </u>		l.	
+5V Supply Current	I <sub>VDD</sub>	ENABLE = 1V		8	11	mA
		ENABLE = 0V			1	μΑ
POWER-ON-RESET THRESHOLDS						
VDD POR Threshold	VDD_POR <sub>r</sub>	V <sub>DD</sub> rising		4.35	4.5	V
	VDD_POR <sub>f</sub>	V <sub>DD</sub> falling	4.00	4.15		V
SYSTEM AND REFERENCES						
System Accuracy	HRZ %Error (V <sub>OUT)</sub>	No load; closed loop, active mode range, VID = 0.75V to 1.55V	-0.5		+0.5	%
		VID = 0.25V to 0.74375V	-10		+10	mV
	IRZ %Error (V <sub>OUT</sub> )	No load; closed loop, active mode range, VID = 0.75V to 1.55V	-0.8		+0.8	%
		VID = 0.25V to 0.74375V	-12		+12	mV
Maximum Output Voltage	V <sub>OUT(max)</sub>	VID = [00000000]		1.55		V
Minimum Output Voltage	V <sub>OUT(min)</sub>	VID = [11111111]		0.0		V
CHANNEL FREQUENCY						
Nominal Channel Frequency	f <sub>SW(nom)</sub>		280	300	320	kHz
Adjustment Range			300		450	kHz
AMPLIFIERS						
Current-Sense Amplifier Input Offset	HRZ	I <sub>FB</sub> = OA	-0.15		+0.15	mV
	IRZ	I <sub>FB</sub> = 0A	-0.20		+0.20	mV
Error Amp DC Gain	A <sub>v0</sub>			119		dB
Error Amp Gain-Bandwidth Product	GBW	C <sub>L</sub> = 20pF		17		MHz
ISEN			•	*		
Input Bias Current				20		nA

# **ISL6377**

**Electrical Specifications** Operating Conditions:  $V_{DD} = 5V$ ,  $T_A = -10 \,^{\circ}$ C to  $+100 \,^{\circ}$ C (HRZ),  $T_A = -40 \,^{\circ}$ C to  $+85 \,^{\circ}$ C (IRZ),  $f_{SW} = 300$ kHz, unless otherwise noted. **Boldface limits apply over the operating temperature range, -40 \,^{\circ}C to +100 \,^{\circ}C. (Continued)** 


PARAMETER	SYMBOL	TEST CONDITIONS	MIN (Note 6)	TYP	MAX (Note 6)	UNITS
POWER-GOOD (PGOOD & PGOOD_NE	B) AND PROTECTION	MONITORS				
PGOOD Low Voltage	V <sub>OL</sub>	I <sub>PGOOD</sub> = 4mA			0.4	V
PGOOD Leakage Current	Іон	PGOOD = 3.3V	-1		1	μΑ
PWROK High Threshold				750		m۷
VR_HOT_L Pull-down				11		Ω
PWROK Leakage Current					1	μΑ
VR_HOT_L Leakage Current					1	μΑ
GATE DRIVER	- 1					
UGATE Pull-Up Resistance	R <sub>UGPU</sub>	200mA Source Current		1.0	1.5	Ω
UGATE Source Current	lugsrc	UGATE - PHASE = 2.5V		2.0		Α
UGATE Sink Resistance	R <sub>UGPD</sub>	250mA Sink Current		1.0	1.5	Ω
UGATE Sink Current	lugsnk	UGATE - PHASE = 2.5V		2.0		Α
LGATE Pull-Up Resistance	R <sub>LGPU</sub>	250mA Source Current		1.0	1.5	Ω
LGATE Source Current	I <sub>LGSRC</sub>	LGATE - VSSP = 2.5V		2.0		Α
LGATE Sink Resistance	R <sub>LGPD</sub>	250mA Sink Current		0.5	0.9	Ω
LGATE Sink Current	ILGSNK	LGATE - VSSP = 2.5V		4.0		Α
UGATE to LGATE Deadtime	tugflgr	UGATE falling to LGATE rising, no load		23		ns
LGATE to UGATE Deadtime	tLGFUGR	LGATE falling to UGATE rising, no load		28		ns
PROTECTION	Laroak					
Overvoltage Threshold	ov <sub>H</sub>	VSEN rising above setpoint for >1µs	275	325	375	mV
Undervoltage Threshold	ov <sub>H</sub>	VSEN falls below setpoint for >1µs	275	325	375	mV
Current Imbalance Threshold	отн	One ISEN above another ISEN for >1.2ms		9	0.0	mV
Way Overcurrent Trip Threshold [IMONx Current Based Detection]	IMONx <sub>WOC</sub>	All states, $I_{DROOP} = 60\mu A$ , $R_{IMON} = 135k\Omega$		15		μA
Overcurrent Trip Threshold [IMONx Voltage Based Detection]	V <sub>IMONx_OCP</sub>	All states, $I_{DROOP} = 45\mu A$ , $I_{IMONx} = 11.25\mu A$ , $R_{IMON} = 135k\Omega$	1.485	1.51	1.535	V
LOGIC THRESHOLDS	- II.			1	1.	I
ENABLE Input Low	$V_{IL}$				1	V
ENABLE Input High	V <sub>IH</sub>	HRZ	1.6			V
	V <sub>IH</sub>	IRZ	1.65			V
ENABLE Leakage Current	I <sub>ENABLE</sub>	ENABLE = OV	-1	0	1	μΑ
		ENABLE = 1V		18	35	μΑ
SVT Impedance				50		Ω
SVC, SVD Input Low	V <sub>IL</sub>	% of VDDIO			30	%
SVC, SVD Input High	V <sub>IH</sub>	% of VDDIO	70			%
SVC, SVD Leakage		ENABLE = OV, SVC, SVD = OV and 1V	-1		1	μA
		ENABLE = 1V, SVC, SVD = 1V	-5		1	μA
		ENABLE = 1V, SVC, SVD = 0V	-35	-20	-5	μA
PWM	1			1	<u> </u>	1
PWM Output Low	V <sub>OL</sub>	Sinking 5mA			1.0	V
PWM Output High	V <sub>OH</sub>	Sourcing 5mA	3.5			V
PWM Tri-State Leakage	5/1	PWM = 2.5V			0.5	μΑ
THERMAL MONITOR	1			1	<u> </u>	
NTC Source Current		NTC = 0.6V	27	30	33	μA
NTC Thermal Warning Voltage				1		

**Electrical Specifications** Operating Conditions:  $V_{DD} = 5V$ ,  $T_A = -10 \,^{\circ}$ C to  $+100 \,^{\circ}$ C (HRZ),  $T_A = -40 \,^{\circ}$ C to  $+85 \,^{\circ}$ C (IRZ),  $f_{SW} = 300$ kHz, unless otherwise noted. **Boldface limits apply over the operating temperature range, -40 \,^{\circ}C to +100 \,^{\circ}C. (Continued)** 

PARAMETER	SYMBOL	TEST CONDITIONS	MIN (Note 6)	TYP	MAX (Note 6)	UNITS
NTC Thermal Warning Voltage Hysteresis				20		mV
NTC Thermal Shutdown Voltage			530	580	630	mV
SLEW RATE						
VID-on-the-Fly Slew Rate		Maximum Programmed	16	20	24	mV/μs
		Minimum Programmed	8	10	12	mV/μs

#### NOTE:

# **Gate Driver Timing Diagram**

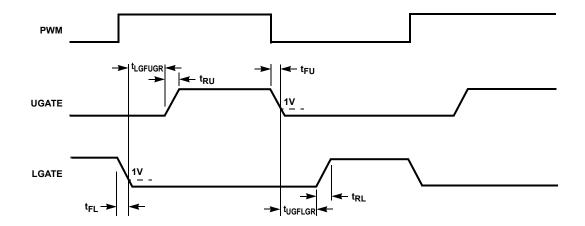

<sup>6.</sup> Compliance to datasheet limits is assured by one or more methods: production test, characterization and/or design.

# **Theory of Operation**

# Multiphase R<sup>3™</sup> Modulator

The ISL6377 is a multiphase regulator implementing two voltage regulators, CORE VR and Northbridge (NB) VR, on one chip controlled by AMD's  $^{\text{TM}}$  SVI2  $^{\text{TM}}$  protocol. The CORE VR can be programmed for 1-, 2-, 3- or 4-phase operation. The Northbridge VR can be configured for 1- or 2-phase operation. Both regulators use the Intersil patented R $^{3_{\text{TM}}}$  (Robust Ripple Regulator) modulator. The R $^{3_{\text{TM}}}$  modulator combines the best features of fixed frequency PWM and hysteretic PWM while eliminating many of their shortcomings. Figure 6 conceptually shows the multiphase R $^{3_{\text{TM}}}$  modulator circuit, and Figure 7 shows the operation principles.

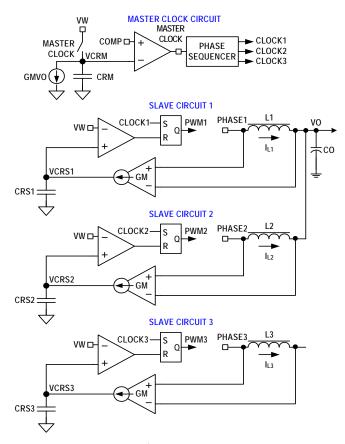


FIGURE 6. R<sup>3™</sup> MODULATOR CIRCUIT

Inside the IC, the modulator uses the master clock circuit to generate the clocks for the slave circuits. The modulator discharges the ripple capacitor  $C_{rm}$  with a current source equal to  $g_m V_0$ , where  $g_m$  is a gain factor.  $C_{rm}$  voltage  $V_{CRM}$  is a sawtooth waveform traversing between the VW and COMP voltages. It resets to VW when it hits COMP, and generates a one-shot master clock signal. A phase sequencer distributes the master clock signal to the slave circuits. If the CORE VR is in 3-phase mode, the master clock signal is distributed to the three phases, and the Clock 1~3 signals will be 120° out-of-phase. If the Core VR is in 2-phase mode, the master clock signal is distributed to Phases 1 and 2, and the Clock1 and Clock2 signals will be 180° out-of-phase. If the Core VR is in 1-phase mode, the master clock signal will be distributed to Phase 1 only and be the Clock1 signal.

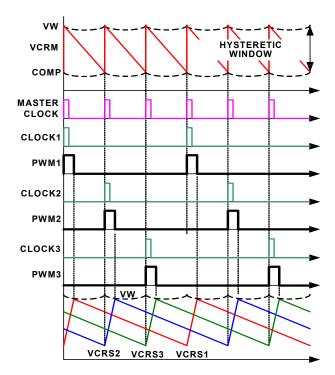


FIGURE 7. R<sup>3™</sup> MODULATOR OPERATION PRINCIPLES IN STEADY STATE

Each slave circuit has its own ripple capacitor  $C_{rs}$ , whose voltage mimics the inductor ripple current. A  $g_m$  amplifier converts the inductor voltage into a current source to charge and discharge  $C_{rs}$ . The slave circuit turns on its PWM pulse upon receiving the clock signal, and the current source charges  $C_{rs}$ . When  $C_{rs}$  voltage  $V_{Crs}$  hits VW, the slave circuit turns off the PWM pulse, and the current source discharges  $C_{rs}$ .

Since the controller works with  $V_{\text{crs}}$ , which are large amplitude and noise-free synthesized signals, it achieves lower phase jitter than conventional hysteretic mode and fixed PWM mode controllers. Unlike conventional hysteretic mode converters, the error amplifier allows the ISL6377 to maintain a 0.5% output voltage accuracy.

Figure 8 shows the operation principles during load insertion response. The COMP voltage rises during load insertion, generating the master clock signal more quickly, so the PWM pulses turn on earlier, increasing the effective switching frequency. This allows for higher control loop bandwidth than conventional fixed frequency PWM controllers. The VW voltage rises as the COMP voltage rises, making the PWM pulses wider. During load release response, the COMP voltage falls. It takes the master clock circuit longer to generate the next master clock signal so the PWM pulse is held off until needed. The VW voltage falls as the COMP voltage falls, reducing the current PWM pulse width. This kind of behavior gives the ISL6377 excellent response speed.

The fact that all the phases share the same VW window voltage also ensures excellent dynamic current balance among phases.

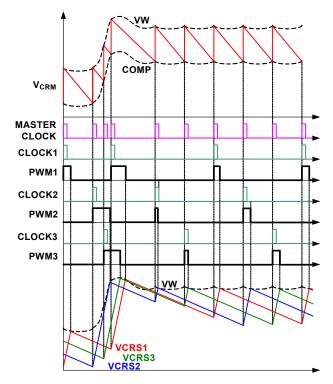


FIGURE 8. R<sup>3™</sup> MODULATOR OPERATION PRINCIPLES IN LOAD INSERTION RESPONSE

### **Diode Emulation and Period Stretching**

The ISL6377 can operate in diode emulation (DE) mode to improve light-load efficiency. In DE mode, the low-side MOSFET conducts when the current is flowing from source to drain and does not allow reverse current, thus emulating a diode. As Figure 9 shows, when LGATE is on, the low-side MOSFET carries current, creating negative voltage on the phase node due to the voltage drop across the on-resistance. The ISL6377 monitors the current by monitoring the phase node voltage. It turns off LGATE when the phase node voltage reaches zero to prevent the inductor current from reversing the direction and creating unnecessary power loss.

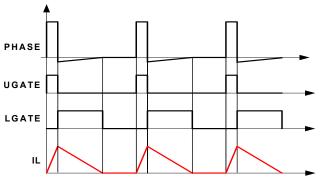


FIGURE 9. DIODE EMULATION

If the load current is light enough, as Figure 9 shows, the inductor current reaches and stays at zero before the next phase node pulse, and the regulator is in discontinuous conduction mode (DCM). If the load current is heavy enough, the inductor current will never reach OA, and the regulator is in CCM, although the controller is in DE mode.

Figure 10 shows the operation principle in diode emulation mode at light load. The load gets incrementally lighter in the three cases from top to bottom. The PWM on-time is determined by the VW window size and therefore is the same, making the inductor current triangle the same in the three cases. The ISL6377 clamps the ripple capacitor voltage  $V_{CRS}$  in DE mode to make it mimic the inductor current. It takes the COMP voltage longer to hit  $V_{CRS}$ , naturally stretching the switching period. The inductor current triangles move farther apart, such that the inductor current average value is equal to the load current. The reduced switching frequency helps increase light-load efficiency.

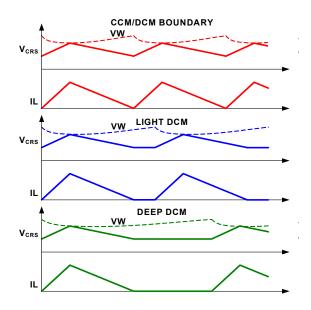


FIGURE 10. PERIOD STRETCHING


### **Channel Configuration**

Individual PWM channels of either VR can be disabled by connecting the ISENx pin of the channel not required to +5V. For example, placing the controller in a 3+1 configuration, as shown in Figure 5, requires ISEN4 of the Core VR and ISEN2 of the Northbridge VR to be tied to +5V. This disables Channel 4 of the Core VR and Channel 2 of the Northbridge VR. ISEN1\_NB must be tied through a  $10\text{k}\Omega$  resistor to GND to prevent this pin from pulling high and disabling the channel.

Connecting ISEN1 or ISEN1\_NB to +5V will disable the corresponding VR output. This feature allows debug of individual VR outputs.

#### **Power-On Reset**

Before the controller has sufficient bias to guarantee proper operation, the ISL6377 requires a +5V input supply tied to VDD and VDDP to exceed the VDD rising power-on reset (POR) threshold. Once this threshold is reached or exceeded, the ISL6377 has enough bias to check the state of the SVI inputs once ENABLE is taken high. Hysteresis between the rising and the falling thresholds assure the ISL6377 does not inadvertently turn off unless the bias voltage drops substantially (see "Electrical Specifications" on page 10). Note that VIN must be present for the controller to drive the output voltage.

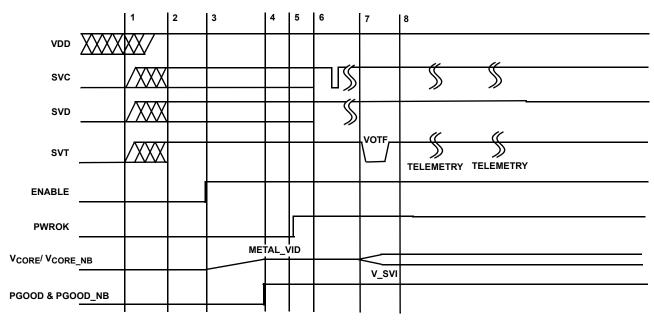

Interval 1 to 2: ISL6377 waits to POR.

Interval 2 to 3: SVC and SVD are externally set to pre-Metal VID code.

Interval 3 to 4: ENABLE locks pre-Metal VID code. Both outputs soft-start to this level.

Interval 4 to 5: PGOOD signal goes HIGH, indicating proper operation.

Interval 5 to 6: PGOOD and PGOOD\_NB high is detected and PWROK is taken high. The ISL6377 is prepared for SVI commands.

Interval 6 to 7: SVC and SVD data lines communicate change in VID code.

Interval 7 to 8: ISL6377 responds to VID-ON-THE-FLY code change and issues a VOTF for positive VID changes.

Post 8: Telemetry is clocked out of the ISL6377.

FIGURE 11. SVI INTERFACE TIMING DIAGRAM: TYPICAL PRE-PWROK METAL VID START-UP

### **Start-up Timing**

With VDD above the POR threshold, the controller start-up sequence begins when ENABLE exceeds the logic high threshold. Figure 12 shows the typical soft-start timing of the Core and Northbridge VRs. Once the controller registers ENABLE as a high, the controller checks that state of a few programming pins during the typical 8ms delay prior to beginning soft-starting the Core and Northbridge outputs. The pre-PWROK Metal VID is read from the state of the SVC and SVD pins and programs the DAC, the programming resistors on COMP, COMP\_NB, and FCCM\_NB are read to configure internal drivers, switching frequency, slew rate, output offsets. These programming resistors are discussed in subsequent sections. The ISL6377 use a digital soft-start to ramp up the DAC to the Metal VID level programmed. The soft-start slew rate is programmed by the FCCM\_NB resistor which is used to set the VID-on-the-Fly slew rate as well. See the VID-on-the-Fly Slew Rate Selection section for more details on selecting the FCCM\_NB resistor. PGOOD is asserted high at the end of the soft-start ramp.

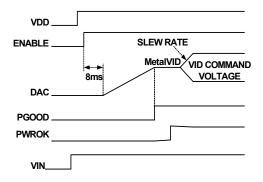


FIGURE 12. TYPICAL SOFT-START WAVEFORMS

# Voltage Regulation and Load Line Implementation

After the soft-start sequence, the ISL6377 regulates the output voltages to the pre-PWROK metal VID programmed, see Table 6. The ISL6377 controls the no-load output voltage to an accuracy of  $\pm 0.5\%$  over the range of 0.75V to 1.55V. A differential amplifier allows voltage sensing for precise voltage regulation at the microprocessor die.

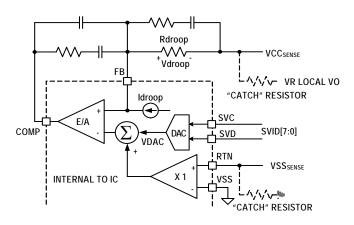


FIGURE 13. DIFFERENTIAL SENSING AND LOAD LINE IMPLEMENTATION

As the load current increases from zero, the output voltage droops from the VID programmed value by an amount proportional to the load current, to achieve the load line. The ISL6377 can sense the inductor current through the intrinsic DC Resistance (DCR) of the inductors, as shown in Figures 3 and 4, or through resistors in series with the inductors as shown in Figure 5. In both methods, capacitor  $\boldsymbol{C}_n$  voltage represents the total inductor current. An internal amplifier converts  $\boldsymbol{C}_n$  voltage into an internal current source,  $\boldsymbol{I}_{sum}$ , with the gain set by resistor  $\boldsymbol{R}_i$ , see Equation 1.

$$I_{sum} = \frac{V_{Cn}}{R_i}$$
 (EQ. 1)

The  $I_{\mbox{sum}}$  current is used for load line implementation, current monitoring on the IMON pins and overcurrent protection.

Figure 13 shows the load-line implementation. The ISL6377 drives a current source ( $I_{droop}$ ) out of the FB pin which is a ratio of the  $I_{sum}$  current, as described by Equation 2.

$$I_{droop} = \frac{5}{4} \times I_{sum} = \frac{5}{4} \times \frac{V_{Cn}}{R_i}$$
 (EQ. 2)

When using inductor DCR current sensing, a single NTC element is used to compensate the positive temperature coefficient of the copper winding, thus sustaining the load-line accuracy with reduced cost.

 $I_{droop}$  flows through resistor  $R_{droop}$  and creates a voltage drop as shown in Equation 3.

$$V_{droop} = R_{droop} \times I_{droop}$$
 (EQ. 3)

 $V_{droop}$  is the droop voltage required to implement load line. Changing  $R_{droop}$  or scaling  $I_{droop}$  can change the load line slope. Since  $I_{sum}$  sets the overcurrent protection level, it is recommended to first scale  $I_{sum}$  based on OCP requirement, then select an appropriate  $R_{droop}$  value to obtain the desired load line slope.

### **Differential Sensing**

Figure 13 also shows the differential voltage sensing scheme. VCC<sub>SENSE</sub> and VSS<sub>SENSE</sub> are the remote voltage sensing signals from the processor die. A unity gain differential amplifier senses the VSS<sub>SENSE</sub> voltage and adds it to the DAC output. The error

amplifier regulates the inverting and non-inverting input voltages to be equal as shown in Equation 4:

$$VCC_{SENSE} + V_{droop} = V_{DAC} + VSS_{SENSE}$$
 (EQ. 4)

Rewriting Equation 4 and substituting Equation 3 gives Equation 5 the exact equation required for load-line implementation.

$$VCC_{SENSE} - VSS_{SENSE} = V_{DAC} - R_{droop} \times I_{droop}$$
 (EQ. 5)

The VCC<sub>SENSE</sub> and VSS<sub>SENSE</sub> signals come from the processor die. The feedback is open circuit in the absence of the processor. As Figure 13 shows, it is recommended to add a "catch" resistor to feed the VR local output voltage back to the compensator, and to add another "catch" resistor to connect the VR local output ground to the RTN pin. These resistors, typically  $100^{-100\Omega}$ , provide voltage feedback if the system is powered up without a processor installed.

### **Phase Current Balancing**

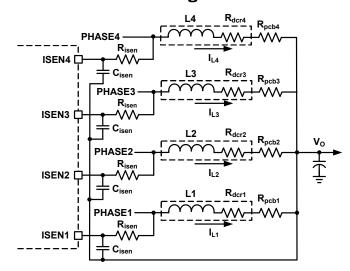


FIGURE 14. CURRENT BALANCING CIRCUIT

The ISL6377 monitors individual phase average current by monitoring the ISEN1, ISEN2, ISEN3, and ISEN4 voltages. Figure 14 shows the recommended current balancing circuit for DCR sensing. Each phase node voltage is averaged by a low-pass filter consisting of  $R_{\rm isen}$  and  $C_{\rm isen}$ , and is presented to the corresponding ISEN pin.  $R_{\rm isen}$  should be routed to the inductor phase-node pad in order to eliminate the effect of phase node parasitic PCB DCR. Equations 6 through 9 give the ISEN pin voltages:

$$V_{ISEN1} = (R_{dcr1} + R_{pcb1}) \times I_{L1}$$
 (EQ. 6)

$$V_{ISEN2} = (R_{dcr2} + R_{pcb2}) \times I_{L2}$$
 (EQ. 7)

$$V_{ISEN3} = (R_{dcr3} + R_{pcb3}) \times I_{L3}$$
 (EQ. 8)

$$V_{ISEN4} = (R_{dcr4} + R_{pcb4}) \times I_{L4}$$
 (EQ. 9)

where R<sub>dcr1</sub>, R<sub>dcr2</sub>, R<sub>dcr3</sub> and R<sub>dcr4</sub> are inductor DCR; R<sub>pcb1</sub>, R<sub>pcb2</sub>, R<sub>pcb3</sub> and R<sub>pcb4</sub> are parasitic PCB DCR between the inductor output side pad and the output voltage rail; and I<sub>L1</sub>, I<sub>L2</sub>, I<sub>L3</sub> and I<sub>L4</sub> are inductor average currents.

The ISL6377 will adjust the phase pulse-width relative to the other phases to make  $V_{ISEN1} = V_{ISEN2} = V_{ISEN3} = V_{ISEN4}$ , thus to achieve  $I_{L1} = I_{L2} = I_{L3} = I_{L4}$ , when  $R_{dcr1} = R_{dcr2} = R_{dcr3} = R_{dcr4}$  and  $R_{pcb1} = R_{pcb2} = R_{pcb3} = R_{pcb4}$ .

Using the same components for L1, L2, L3 and L4 provides a good match of  $R_{dcr1},\,R_{dcr2},\,R_{dcr3}$  and  $R_{dcr4}.$  Board layout determines  $R_{pcb1},\,R_{pcb2},\,R_{pcb3}$  and  $R_{pcb4}.$  It is recommended to have a symmetrical layout for the power delivery path between each inductor and the output voltage rail, such that

 $R_{pcb1} = R_{pcb2} = R_{pcb3} = R_{pcb4}$ 

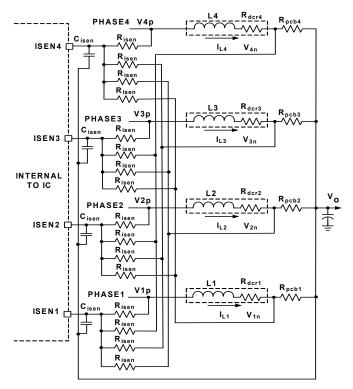


FIGURE 15. DIFFERENTIAL-SENSING CURRENT BALANCING CIRCUIT

Sometimes, it is difficult to implement symmetrical layout. For the circuit shown in Figure 14, asymmetric layout causes different  $R_{pcb1},\,R_{pcb2},\,R_{pcb3}$  and  $R_{pcb4}$  values, thus creating a current imbalance. Figure 15 shows a differential sensing current balancing circuit recommended for ISL6377. The current sensing traces should be routed to the inductor pads so they only pick up the inductor DCR voltage. Each ISEN pin sees the average voltage of three sources: its own, phase inductor phase-node pad, and the other two phase inductor output side pads. Equations 10 through 13 give the ISEN pin voltages:

$$V_{ISFN1} = V_{1p} + V_{2p} + V_{3p} + V_{4p}$$
 (EQ. 10)

$$V_{ISFN2} = V_{1n} + V_{2n} + V_{3n} + V_{4n}$$
 (EQ. 11)

$$V_{ISEN3} = V_{1n} + V_{2n} + V_{3n} + V_{4n}$$
 (EQ. 12)

$$V_{ISEN4} = V_{1n} + V_{2n} + V_{3n} + V_{4p}$$
 (EQ. 13)

The ISL6377 will make  $V_{ISEN1} = V_{ISEN2} = V_{ISEN3} = V_{ISEN4}$  as shown in Equations 14 and 16:

$$V_{1p} + V_{2n} + V_{3n} + V_{4n} = V_{1n} + V_{2p} + V_{3n} + V_{4n}$$
 (EQ. 14)

$$V_{1n} + V_{2p} + V_{3n} + V_{4n} = V_{1n} + V_{2n} + V_{3p} + V_{4n}$$
 (EQ. 15)

$$V_{1n} + V_{2n} + V_{3p} + V_{4n} = V_{1n} + V_{2n} + V_{3n} + V_{4p}$$
 (EQ. 16)

Rewriting Equation 14 gives Equation 17:

$$V_{1p} - V_{1n} = V_{2p} - V_{2n}$$
 (EQ. 17)

Rewriting Equation 15 gives Equation 18:

$$V_{2p} - V_{2n} = V_{3p} - V_{3n}$$
 (EQ. 18)

Rewriting Equation 16 gives Equation 19:

$$V_{3p} - V_{3n} = V_{4p} - V_{4n}$$
 (EQ. 19)

Combining Equations 17 through 19 gives:

$$V_{1p} - V_{1n} = V_{2p} - V_{2n} = V_{3p} - V_{3n} = V_{4p} - V_{4n}$$
 (EQ. 20)

Therefore:

$$R_{dcr1} \times I_{L1} = R_{dcr2} \times I_{L2} = R_{dcr3} \times I_{L3} = R_{dcr4} \times I_{L4}$$
 (EQ. 21)

Current balancing ( $I_{L1} = I_{L2} = I_{L3} = I_{L4}$ ) is achieved when  $R_{dcr1} = R_{dcr2} = R_{dcr3} = R_{dcr4}$ .  $R_{pcb1}$ ,  $R_{pcb2}$ ,  $R_{pcb3}$  and  $R_{pcb4}$  do not have any effect.

Since the slave ripple capacitor voltages mimic the inductor currents, the R<sup>3<sub>TM</sub></sup> modulator can naturally achieve excellent current balancing during steady state and dynamic operations. Figure 16 shows the current balancing performance of a three phase evaluation board with load transient of 12A/51A at different rep rates. The inductor currents follow the load current dynamic change with the output capacitors supplying the difference. The inductor currents can track the load current well at a low repetition rate, but cannot keep up when the repetition rate gets into the hundred-kHz range, where it is out of the control loop bandwidth. The controller achieves excellent current balancing in all cases installed.



FIGURE 16. CURRENT BALANCING DURING DYNAMIC OPERATION. CH1: I<sub>L1</sub>, CH2: I<sub>L0AD</sub>, CH3: I<sub>L2</sub>, CH4: I<sub>L3</sub>

### **Modes of Operation**

**TABLE 1. CORE VR MODES OF OPERATION** 

CONFIG.	ISEN4	ISEN3	ISEN2	PSIO_L & PSI1_L	MODE					
4-phase	4-phase To Power To Power To Power	To Power	11	4-phase CCM						
Core VR Config.	Stage	Stage	Stage	01	2-phase CCM					
Comig.				00	1-phase DE					
3-phase	Tied to 5V		To Power	11	3-phase CCM					
Core VR	re VR Stage Sta nfig.	Stage	01	2-phase CCM						
Comig.				00	1-phase DE					
2-phase	Tied to 5V	Tied to 5V	To Power	11	2-phase CCM					
Core VR Config.							Stage	Stage	01	1-phase CCM
Comig.				00	1-phase DE					
1-phase	Tied to 5V	Tied to 5V	Tied to 5V	11	1-phase CCM					
Core VR Config.				01	1-phase CCM					
comig.				00	1-phase DE					

The Core VR can be configured for 4-, 3-, 2- or 1-phase operation. Table 1 shows Core VR configurations and operational modes, programmed by the ISEN4, ISEN3 and ISEN2 pin status and the PSI0\_L & PSI1\_L commands via the SVI 2 interface. The SVI 2 interface description of these bits is outlined in Table 9.

The ISENx pins disable the channel which they are related. For example, to setup a 3-phase configuration the ISEN4 pin is tied to 5V. This disables Channel 4 of the controller on the Core side.

In a 3-phase configuration, the Core VR operates in 3-phase CCM, with PSIO\_L and PSI\_L both high. If PSIO\_L is taken low via the SVI 2 interface, the Core VR sheds Phase 3. The Core VR then operates 2-Phase and remains in CCM. When both PSIO\_L and PSI1\_L are taken low, the Core VR sheds Phase 2 and the Core VR enters 1-Phase Diode Emulation (DE) mode.

For 2-phase configurations, the Core VR operates in 2-phase CCM with PSIO\_L and PSI\_L both high. If PSIO\_L is taken low via the SVI 2 interface, the Core VR sheds Phase 2 and the Core VR operates in 1-phase and remains in CCM. When both PSIO\_L and PSI1\_L are taken low, the Core VR operates in 1-phase DE mode.

In a 1-phase configuration, the Core VR operates in 1-phase CCM and remains in this mode when PSIO\_L is taken low. When both PSIO\_I and PSI1\_L are taken low, the controller enters DE mode.

The Core VR can be disabled completely by connecting ISEN1 to +5V.

ISL6377 Northbridge VR can be configured for 2- or 1-phase operation. Table 2 shows the Northbridge VR configurations and operational modes, which are programmed by the ISEN2\_NB pin status and the PSI0\_L and PSI1\_L bits of the SVI 2 command.

**TABLE 2. NORTHBRIDGE VR MODES OF OPERATION** 

CONFIG.	ISEN2_NB	PSIO_L & PSI1_L	MODE
2-phase NB VR Config.	To Power Stage	11	2-phase CCM
		01	1-phase CCM
		00	1-phase DE
1-phase NB VR Config.	Tied to 5V	11	1-phase CCM
		01	1-phase CCM
		00	1-phase DE

In a 1-phase configuration, the ISEN2\_NB pin is tied to +5V. The Northbridge VR operates in 1-phase CCM when both PSI0\_L and PSI1\_L are high and continues in this mode when PSI0\_L is taken low. The controller enters 1-phase DE mode when both PSI0\_L and PSI1\_L are low.

The Northbridge VR can be disabled completely by tieing ISEN1\_NB to 5V.

#### **Dynamic Operation**

Core and Northbridge VRs behave the same during dynamic operation. The controller responds to VID-on-the-fly changes by slewing to the new voltage at the slew rate programmed, see Table 4. During negative VID transitions, the output voltage decays to the lower VID value at the slew rate determined by the load

The  $R^{3_{TM}}$  modulator intrinsically has voltage feed-forward. The output voltage is insensitive to a fast slew rate input voltage change.

# Adaptive Body Diode Conduction Time Reduction

In DCM, the controller turns off the low-side MOSFET when the inductor current approaches zero. During on-time of the low-side MOSFET, phase voltage is negative, and the amount is the MOSFET r<sub>DS(ON)</sub> voltage drop, which is proportional to the inductor current. A phase comparator inside the controller monitors the phase voltage during on-time of the low-side MOSFET and compares it with a threshold to determine the zero crossing point of the inductor current. If the inductor current has not reached zero when the low-side MOSFET turns off, it will flow through the low-side MOSFET body diode, causing the phase node to have a larger voltage drop until it decays to zero. If the inductor current has crossed zero and reversed the direction when the low-side MOSFET turns off, it will flow through the high-side MOSFET body diode, causing the phase node to have a spike until it decays to zero. The controller continues monitoring the phase voltage after turning off the low-side MOSFET. To minimize the body diode-related loss, the controller also adjusts the phase comparator threshold voltage accordingly in iterative steps such that the low-side MOSFET body diode conducts for approximately 40ns.

# **Resistor Configuration Options**

The ISL6377 uses the COMP, COMP\_NB and FCCM\_NB pins to configure some functionality within the IC. Resistors from these pins to GND are read during the first portion of the soft-start sequence. The following sections outline how to select the resistor values for each of these pins to correctly program the output voltage offset of each output, the configuration of the floating DriverX and PWM\_Y output, VID-on-the-Fly slew rate, and switching frequency used for both VRs.

### **VR Offset Programming**

A positive or negative offset is programmed for the Core VR using a resistor to ground from the COMP pin and the Northbridge in a similar manner from the COMP\_NB pin. Table 3 provides the resistor value to select the desired output voltage offset. The 1% tolerance resistor value shown in the table must be used to

program the corresponding Core or NB output voltage offset. The MIN and MAX tolerance values provide margin to insure the 1% tolerance resistor will be read correctly.

TABLE 3. COMP & COMP\_NB OUTPUT VOLTAGE OFFSET SELECTION

R	ESISTOR VALUE [I	COMP	COMP_NB	
MIN TOLERANCE	1% TOLERANCE VALUE	MAX TOLERANCE	V <sub>CORE</sub> OFFSET [mV]	OFFSET [mV]
5.54	5.62	5.70	-43.75	18.75
7.76	7.87	7.98	-37.5	31.25
11.33	11.5	11.67	-31.25	43.76
16.65	16.9	17.15	-25	50
19.3	19.6	19.89	-18.75	37.5
24.53	24.9	25.27	-12.5	25
33.49	34.0	34.51	-6.25	12.5
40.58	41.2	41.81	6.25	0
51.52	52.3	53.08	18.75	18.75
72.10	73.2	74.29	31.25	31.25
93.87	95.3	96.72	43.76	43.76
119.19	121	112.81	50	50
151.69	154	156.31	37.5	37.5
179.27	182	184.73	25	25
206.85	210	213.15	12.5	12.5
	OPEN		0	0

### Floating DriverX and PWM\_Y Configuration

The ISL6377 allows for one internal driver and one PWM output to be configured to opposite VRs depending on the desired configuration of the Northbridge VR. Internal DriverX can be used as Channel 1 of the Northbridge VR with PWM\_Y used for Channel 3 of the Core VR. Using this partitioning, a 2+1 or 1+1 configured ISL6377 would not require an external driver.

If routing of the driver signals would be a cause of concern due to having an internal driver on the Northbridge VR, then the ISL6377 can be configured to use PWM\_Y as Channel 1 on the Northbridge VR. DriverX would then be used as Channel 3 of the Core VR. This allows the placement of the external drivers for the Northbridge VR to be closer to the output stage(s) depending on the number of active Phases, providing placement and layout flexibility to the Northbridge VR.

The floating internal driver and PWM output are configured based on the programming resistor from FCCM\_NB to GND. The FCCM\_NB programming resistor value also sets the slew rate and switching frequency of the Core and Northbridge VRs. These features are outlined in the following sections. Table 4 shows which resistor values sets the configuration and slew rate for the ISL6377. The resistor value shown in the table must be used and the resistor tolerance must be 1%. The MIN and MAX tolerance around each resistor value is the same as Table 3 and provides margin to insure the 1% tolerance resistor will be read correctly.

TABLE 4. FCCM\_NB RESISTOR SELECTION

RESISTOR VALUE [kΩ]	SLEW RATE FOR CORE AND NORTHBRIDGE [mV/µs]	DriverX	PWM_Y
5.62	20		
7.87	15		
11.5	12.5		
16.9	10	Core VR	NB VR Channel 1
19.6	20	Channel 3	
24.9	15		
34.0	12.5		
41.2	10		
52.3	20		
73.2	15		
95.3	12.5		
121	10	NB VR	Core VR
154	20	Channel 1	Channel 3
182	15		
210	12.5		
OPEN	10		

### **VID-on-the-Fly Slew Rate Selection**

The FCCM\_NB resistor is also used to select the slew rate for VID changes commanded by the processor. Once selected, the slew rate is locked in during soft-start and is not adjustable during operation. The lowest slew rate which can be selected is 10mV/µs which is above the minimum of 7.5mV/µs required by the SVI2 specification. The slew rate selected sets the slew rate for both Core and Northbridge VRs. The controller does not allow for independent selection of slew rate.

#### **CCM Switching Frequency**

The Core and Northbridge VR switching frequency is set by the programming resistors on COMP\_NB and FCCM\_NC. When the ISL6377 is in continuous conduction mode (CCM), the switching frequency is not absolutely constant due to the nature of the R<sup>3</sup>TM modulator. As explained in "Multiphase R3™ Modulator" on page 13, the effective switching frequency increases during load insertion and decreases during load release to achieve fast response. Thus, the switching frequency is relatively constant at steady state. Variation is expected when the power stage condition, such as input voltage, output voltage, load, etc. changes. The variation is usually less than 10% and does not have any significant effect on output voltage ripple magnitude. Table 5 defines the switching frequency based on the resistor values used to program the COMP\_NB and FCCM\_NB pins. Use the previous tables related to COMP\_NB and FCCM\_NB to determine the correct resistor value in these ranges to program the desired output offset, Slew Rate and DriverX/PWM\_Y configuration.

**TABLE 5. SWITCHING FREQUENCY SELECTION** 

FREQUENCY [kHz]	COMP_NB RANGE [kΩ]	FCCM_NB RANGE [kΩ]
300	57.6 to OPEN	19.1 to 41.2 or 154 to OPEN
350	5.62 to 41.2	19.1 to 41.2 or 154 to OPEN
400	57.6 to OPEN	5.62 to 16.9 or 57.6 to 121
450	5.62 to 41.2	5.62 to 16.9 or 57.6 to 121

The controller monitors SVI commands to determine when to enter power-saving mode, implement dynamic VID changes, and shut down individual outputs.

# **AMD Serial VID Interface 2.0**

The on-board Serial VID Interface 2.0 (SVI 2) circuitry allows the AMD processor to directly control the Core and Northbridge voltage reference levels within the ISL6377. Once the PWROK signal goes high, the IC begins monitoring the SVC and SVD pins for instructions. The ISL6377 uses a digital-to-analog converter (DAC) to generate a reference voltage based on the decoded SVI value. See Figure 11 for a simple SVI interface timing diagram.

#### **Pre-PWROK Metal VID**

Typical motherboard start-up begins with the controller decoding the SVC and SVD inputs to determine the pre-PWROK Metal VID setting (see Table 6). Once the ENABLE input exceeds the rising threshold, the ISL6377 decodes and locks the decoded value into an on-board hold register.

TABLE 6. PRE-PWROK METAL VID CODES

svc	SVD	OUTPUT VOLTAGE (V)
0	0	1.1
0	1	1.0
1	0	0.9
1	1	0.8

Once the programming pins are read, the internal DAC circuitry begins to ramp Core and Northbridge VRs to the decoded pre-PWROK Metal VID output level. The digital soft-start circuitry ramps the internal reference to the target gradually at a fixed rate of approximately 5mV/µs until the output voltage reaches ~250mV and then at the programmed slew rate. The controlled ramp of all output voltage planes reduces in-rush current during the soft-start interval. At the end of the soft-start interval, the PGOOD and PGOOD\_NB outputs transition high, indicating both output planes are within regulation limits.

If the ENABLE input falls below the enable falling threshold, the ISL6377 tri-states both outputs. PGOOD and PGOOD\_NB are pulled low with the loss of ENABLE. The Core and Northbridge VR output voltages decay, based on output capacitance and load leakage resistance. If bias to VDD falls below the POR level, the

ISL6377 responds in the manner previously described. Once VDD and ENABLE rise above their respective rising thresholds, the internal DAC circuitry re-acquires a pre-PWROK metal VID code, and the controller soft-starts.

#### **SVI Interface Active**

Once the Core and Northbridge VRs have successfully soft-started and PGOOD and PGOOD\_NB signals transition high, PWROK can be asserted externally to the ISL6377. Once PWROK is asserted to the IC, SVI instructions can begin as the controller actively monitors the SVI interface. Details of the SVI Bus protocol are provided in the "AMD Serial VID Interface 2.0 (SVI2) Specification". See AMD publication #48022.

Once a VID change command is received, the ISL6377 decodes the information to determine which VR is affected and the VID target is determined by the byte combinations in Table 7. The internal DAC circuitry steps the output voltage of the VR commanded to the new VID level. During this time, one or more of the VR outputs could be targeted. In the event either VR is commanded to power-off by serial VID commands, the PGOOD signal remains asserted.

If the PWROK input is de-asserted, then the controller steps both the Core and the Northbridge VRs back to the stored pre-PWROK metal VID level in the holding register from initial soft-start. No attempt is made to read the SVC and SVD inputs during this time. If PWROK is re-asserted, then the ISL6377 SVI interface waits for instructions.

If ENABLE goes low during normal operation, all external MOSFETs are tri-stated and both PGOOD and PGOOD\_NB are pulled low. This event clears the pre-PWROK metal VID code and forces the controller to check SVC and SVD upon restart, storing the pre-PWROK metal VID code found on restart.

A POR event on VCC during normal operation shuts down both regulators, and both PGOOD outputs are pulled low. The pre-PWROK metal VID code is not retained. Loss of VIN during operation will typically cause the controller to enter a fault condition on one or both outputs as the output voltage collapses. The controller will shutdown both Core and Northbridge VRs and latch off. The pre-PWROK metal VID code is not retained during the process of cycling ENABLE to reset the fault latch and restart the controller.

### **VID-on-the-Fly Transition**

Once PWROK is high, the ISL6377 detects this flag and begins monitoring the SVC and SVD pins for SVI instructions. The microprocessor follows the protocol outlined in the following sections to send instructions for VID-on-the-fly transitions. The ISL6377 decodes the instruction and acknowledges the new VID code. For VID codes higher than the current VID level, the ISL6377 begins stepping the commanded VR outputs to the new VID target at the fixed slew rate of 10mV/µs. Once the DAC ramps to the new VID code, a VID-on-the-Fly Complete (VOTFC) request is sent on the SVI lines.

When the VID codes are lower than the current VID level, the ISL6377 checks the state of power state bits in the SVI command. If power state bits are not active, the controller begins stepping the regulator output to the new VID target. If the power state bits are active, the controller allows the output voltage to decay and slowly steps the DAC down with the natural decay of the output. This allows the controller to quickly recover and move to a high VID code if commanded. The controller issues a VOTFC request on the SVI lines once the SVI command is decoded and prior to reaching the final output voltage.

VOTFC requests do not take priority over telemetry per the AMD SVI 2 specification.

#### **SVI Data Communication Protocol**

The SVI WIRE protocol is based on the I<sup>2</sup>C bus concept. Two wires [serial clock (SVC) and serial data (SVD)], carry information between the AMD processor (master) and VR controller (slave) on the bus. The master initiates and terminates SVI transactions and drives the clock, SVC, during a transaction. The AMD processor is always the master, and the voltage regulators are the slaves. The slave receives the SVI transactions and acts accordingly. Mobile SVI WIRE protocol timing is based on high-speed mode I<sup>2</sup>C. See AMD publication #48022 for additional details.

# **ISL6377**

### **TABLE 7. SERIAL VID CODES**

	IABLE 7. SERIAL VID CODES						
SVID[7:0]	VOLTAGE (V)	SVID[6:0]	VOLTAGE (V)	SVID[6:0]	VOLTAGE (V)	SVID[6:0]	VOLTAGE (V)
0000_0000	1.55000	0010_0000	1.35000	0100_0000	1.15000	0110_0000	0.95000
0000_0001	1.54375	0010_0001	1.34375	0100_0001	1.14375	0110_0001	0.94375
0000_0010	1.53750	0010_0010	1.33750	0100_0010	1.13750	0110_0010	0.93750
0000_0011	1.53125	0010_0011	1.33125	0100_0011	1.13125	0110_0011	0.93125
0000_0100	1.52500	0010_0100	1.32500	0100_0100	1.12500	0110_0100	0.92500
0000_0101	1.51875	0010_0101	1.31875	0100_0101	1.11875	0110_0101	0.91875
0000_0110	1.51250	0010_0110	1.31250	0100_0110	1.11250	0110_0110	0.91250
0000_0111	1.50625	0010_0111	1.30625	0100_0111	1.10625	0110_0111	0.90625
0000_1000	1.50000	0010_1000	1.30000	0100_1000	1.10000	0110_1000	0.90000
0000_1001	1.49375	0010_1001	1.29375	0100_1001	1.09375	0110_1001	0.89375
0000_1010	1.48750	0010_1010	1.28750	0100_1010	1.08750	0110_1010	0.88750
0000_1011	1.48125	0010_1011	1.28125	0100_1011	1.08125	0110_1011	0.88125
0000_1100	1.47500	0010_1100	1.27500	0100_1100	1.07500	0110_1100	0.87500
0000_1101	1.46875	0010_1101	1.26875	0100_1101	1.06875	0110_1101	0.86875
0000_1110	1.46250	0010_1110	1.26250	0100_1110	1.06250	0110_1110	0.86250
0000_1111	1.45625	0010_1111	1.25625	0100_1111	1.05625	0110_1111	0.85625
0001_0000	1.45000	0011_0000	1.25000	0101_0000	1.05000	0111_0000	0.85000
0001_0001	1.44375	0011_0001	1.24375	0101_0001	1.04375	0111_0001	0.84375
0001_0010	1.43750	0011_0010	1.23750	0101_0010	1.03750	0111_0010	0.83750
0001_0011	1.43125	0011_0011	1.23125	0101_0011	1.03125	0111_0011	0.83125
0001_0100	1.42500	0011_0100	1.22500	0101_0100	1.02500	0111_0100	0.82500
0001_0101	1.41875	0011_0101	1.21875	0101_0101	1.01875	0111_0101	0.81875
0001_0110	1.41250	0011_0110	1.21250	0101_0110	1.01250	0111_0110	0.81250
0001_0111	1.40625	0011_0111	1.20625	0101_0111	1.00625	0111_0111	0.80625
0001_1000	1.40000	0011_1000	1.20000	0101_1000	1.00000	0111_1000	0.80000
0001_1001	1.39375	0011_1001	1.19375	0101_1001	0.99375	0111_1001	0.79375
0001_1010	1.38750	0011_1010	1.18750	0101_1010	0.98750	0111_1010	0.78750
0001_1011	1.38125	0011_1011	1.18125	0101_1011	0.98125	0111_1011	0.78125
0001_1100	1.37500	0011_1100	1.17500	0101_1100	0.97500	0111_1100	0.77500
0001_1101	1.36875	0011_1101	1.16875	0101_1101	0.96875	0111_1101	0.76875
0001_1110	1.36250	0011_1110	1.16250	0101_1110	0.96250	0111_1110	0.76250
0001_1111	1.35625	0011_1111	1.15625	0101_1111	0.95625	0111_1111	0.75625
1000_0000	0.75000	1010_0000	0.55000*	1100_0000	0.35000*	1110_0000	0.15000*
1000_0001	0.74375	1010_0001	0.54375*	1100_0001	0.34375*	1110_0001	0.14375*
1000_0010	0.73750	1010_0010	0.53750*	1100_0010	0.33750*	1110_0010	0.13750*
1000_0011	0.73125	1010_0011	0.53125*	1100_0011	0.33125*	1110_0011	0.13125*
1000_0100	0.72500	1010_0100	0.52500*	1100_0100	0.32500*	1110_0100	0.12500*
1000_0101	0.71875	1010_0101	0.51875*	1100_0101	0.31875*	1110_0101	0.11875*
1000_0110	0.71250	1010_0110	0.51250*	1100_0110	0.31250*	1110_0110	0.11250*
1000_0111	0.70625	1010_0111	0.50625*	1100_0111	0.30625*	1110_0111	0.10625*

# **ISL6377**

TABLE 7. SERIAL VID CODES (Continued)

SVID[7:0]	VOLTAGE (V)	SVID[6:0]	VOLTAGE (V)	SVID[6:0]	VOLTAGE (V)	SVID[6:0]	VOLTAGE (V)
1000_1000	0.70000	1010_1000	0.50000*	1100_1000	0.30000*	1110_1000	0.10000*
1000_1001	0.69375	1010_1001	0.49375*	1100_1001	0.29375*	1110_1001	0.09375*
1000_1010	0.68750	1010_1010	0.48750*	1100_1010	0.28750*	1110_1010	0.08750*
1000_1011	0.68125	1010_1011	0.48125*	1100_1011	0.28125*	1110_1011	0.08125*
1000_1100	0.67500	1010_1100	0.47500*	1100_1100	0.27500*	1110_1100	0.07500*
1000_1101	0.66875	1010_1101	0.46875*	1100_1101	0.26875*	1110_1101	0.06875*
1000_1110	0.66250	1010_1110	0.46250*	1100_1110	0.26250*	1110_1110	0.06250*
1000_1111	0.65625	1010_1111	0.45625*	1100_1111	0.25625*	1110_1111	0.05625*
1001_0000	0.65000	1011_0000	0.45000*	1101_0000	0.25000*	1111_0000	0.05000*
1001_0001	0.64375	1011_0001	0.44375*	1101_0001	0.24375*	1111_0001	0.04375*
1001_0010	0.63750	1011_0010	0.43750*	1101_0010	0.23750*	1111_0010	0.03750*
1001_0011	0.63125	1011_0011	0.43125*	1101_0011	0.23125*	1111_0011	0.03125*
1001_0100	0.62500	1011_0100	0.42500*	1101_0100	0.22500*	1111_0100	0.02500*
1001_0101	0.61875	1011_0101	0.41875*	1101_0101	0.21875*	1111_0101	0.01875*
1001_0110	0.61250	1011_0110	0.41250*	1101_0110	0.21250*	1111_0110	0.01250*
1001_0111	0.60625	1011_0111	0.40625*	1101_0111*	0.20625*	1111_0111	0.00625*
1001_1000	0.60000*	1011_1000	0.40000*	1101_1000	0.20000*	1111_1000	OFF*
1001_1001	0.59375*	1011_1001	0.39375*	1101_1001	0.19375*	1111_1001	OFF*
1001_1010	0.58750*	1011_1010	0.38750*	1101_1010	0.18750*	1111_1010	OFF*
1001_1011	0.58125*	1011_1011	0.38125*	1101_1011	0.18125*	1111_1011	OFF*
1001_1100	0.57500*	1011_1100	0.37500*	1101_1100	0.17500*	1111_1100	OFF*
1001_1101	0.56875*	1011_1101	0.36875*	1101_1101	0.16875*	1111_1101	OFF*
1001_1110	0.56250*	1011_1110	0.36250*	1101_1110	0.16250*	1111_1110	OFF*
1001_1111	0.55625*	1011_1111	0.35625*	1101_1111	0.15625*	1111_1111	OFF*

NOTE: \*Indicates a VID not required for AMD Family 10h processors. Loosened AMD requirements at these levels.

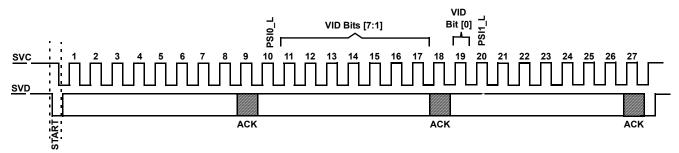


FIGURE 17. SVD PACKET STRUCTURE

#### **SVI Bus Protocol**

The AMD processor bus protocol is similar to SMBus send byte protocol for VID transactions. The AMD SVD packet structure is shown in Figure 17. The description of each bit of the three bytes that make up the SVI command are shown in Table 8. During a transaction, the processor sends the start sequence followed by each of the three bytes which end with an optional acknowledge bit. The ISL6377 does not drive the SVD line during the ACK bit. Finally, the processor sends the stop sequence. After the ISL6377 has detected the stop, it can then proceed with the commanded action from the transaction.

**TABLE 8. SVD DATA PACKET** 

BITS	DESCRIPTION
1:5	Always 11000b
6	Core domain selector bit, if set then the following data byte contains VID, power state, telemetry control, load line trim and offset trim apply to the Core VR.
7	Northbridge domain selector bit, if set then the following data byte contains VID, power state, telemetry control, load line trim and offset trim apply to the Northbridge VR.
8	Always 0b
9	Acknowledge Bit
10	PSIO_L
11:17	VID Code bits [7:1]
18	Acknowledge Bit
19	VID Code bit [0]
20	PSI1_L
21	TFN (Telemetry Functionality)
22:24	Load Line Slope Trim
25:26	Offset Trim [1:0]
27	Acknowledge Bit

#### **Power States**

SVI2 defines two power state indicator levels, see Table 9. As processor current consumption reduces the power state indicator level changes to improve VR efficiency under low power conditions.

For the Core VR operating in 4-phase mode, when PSIO\_L is asserted Channels 3 and 4 are tri-stated. The controller continues to operate in 2-phase CCM. The shedding of phases improves the efficiency of the VR at the light to moderate load levels of the CPU in this power state. When PSI1\_L is asserted the Core VR sheds Channel 2 and Channel 1 enters diode emulation mode to further boost light load efficiency in this power state.

For the Northbridge VR operating in 2-phase mode, when PSIO\_L is asserted Channel 2 is tri-stated and Channel 1 enters diode emulation mode to boost efficiency. When PSI1\_L is asserted the Core VR continues to operate in this fashion.

It is possible for the processor to assert or deassert PSIO\_L and PSI1\_L out of order. PSIO\_L takes priority over PSI1\_L. If PSIO\_L is deasserted while PSI1\_L is still asserted, the ISL6377 will return the selected VR back full channel CCM operation. For example, if the Core VR is configured for 4-Phase operation and both PSIO\_L and PSI1\_L are asserted low during a command, the VR will shed three phases and operate in 1-Phase DE mode. If an SVI command follows which takes PSIO\_L high, but leaves PSI1\_L low, the VR will exit power savings mode and being operation in 4-Phase CCM mode.

TABLE 9. PSIO\_L, PSI1\_L AND TFN DEFINITION

FUNCTION	BIT	DESCRIPTION
PSIO_L	10	Power State Indicate level 0. When this signal is asserted (active Low) the processor is in a low enough power state for the ISL6377 to take action to boost efficiency by dropping phases and entering 1-Phase DE.
PSI1_L	20	Power State Indicate level 1. When this signal is asserted (active Low) the processor is in a low enough power state for the ISL6377 to take action to boost efficiency by dropping phases and entering 1-Phase DE.

### **Dynamic Load Line Slope Trim**

The ISL6377 supports the SVI2 ability for the processor to manipulate the load line slope of the Core and Northbridge VRs independently using the serial VID interface. The slope manipulation applies to the initial load line slope. A load line slope trim will typically coincide with a VOTF change. See Table 10 for more information about the load line slope trim feature of the ISL6377. The Disable LL selection is not recommended unless operation without a LL is required and considered during the compensation of the VR.

**TABLE 10. LOAD LINE SLOPE TRIM DEFINITION** 

LOAD LINE SLOPE TRIM [2:0]	DESCRIPTION
000	Disable LL
001	-40% mΩ Change
010	-20% mΩ Change
011	No Change
100	+20% mΩ Change
101	+40% mΩ Change
110	+60% mΩ Change
111	+80% mΩ Change

### **Dynamic Offset Trim**

The ISL6377 supports the SVI2 ability for the processor to manipulate the output voltage offset of the Core and Northbridge VRs. This offset is in addition to any output voltage offset set via the COMP resistor reader. The dynamic offset trim can disable the COMP resistor programmed offset of either output when Disable All Offset' is selected.

**TABLE 11. OFFSET TRIM DEFINITION** 

OFFSET TRIM [1:0]	DESCRIPTION
00	Disable All Offset
01	-25mV Change
10	0mV Change
11	+25mV Change

### **Telemetry**

The ISL6377 can provide voltage and current information to the AMD CPU through the telemetry system outlined by the AMD SVI2 specification. The telemetry data is transmitted through the SVC and SVT lines of the SVI2 interface.

Current telemetry is based on a voltage generated across a 133k $\Omega$  resistor placed from the IMON pin to GND. The current flowing out of the IMON pin is proportional to the load current in the VR. The I<sub>sum</sub> current defined in "Voltage Regulation and Load Line Implementation" on page 15, provides the base conversion from the load current to the internal amplifier created I<sub>sum</sub> current. The I<sub>sum</sub> current is then divided down by a factor of 4 to create the IMON current which flows out of the IMON pin. The I<sub>sum</sub> current will measure 36 $\mu$ A when the load current is at full load based on a droop current designed for 45 $\mu$ A at the same load current. The difference between the I<sub>sum</sub> current and the

droop current is provided in Equation 2. The IMON current will measure  $11.25\mu A$  at full load current for the VR and the IMON voltage will be 1.2V. The load percentage which is reported by the IC is based on the this voltage. When the load is 25% of the full load, the voltage on the IMON pin will be 25% of 1.2V or 0.3V.

The SVI interface allows the selection of no telemetry, voltage only, or voltage and current telemetry on either or both of the VR outputs. The TFN bit along with the Core and Northbridge domain selector bits are used by the processor to change the functionality of telemetry, see Table 12 for more information.

**TABLE 12. TFN TRUTH TABLE** 

TFN, Core, NB BITS [21,6,7]	DESCRIPTION
1,0,1	Telemetry is in voltage and current mode. Therefore, voltage and current are sent for VDD and VDDNB domains by the controller.
1,0,0	Telemetry is in voltage mode only. Only the voltage of VDD and VDDNB domains is sent by the controller.
1,1,0	Telemetry is disabled.
1,1,1	Reserved

# **Protection Features**

Core VR and Northbridge VR both provide overcurrent, current-balance, undervoltage, and overvoltage fault protections. The controller also provides over-temperature protection. The following discussion is based on Core VR and also applies to the Northbridge VR.

#### **Overcurrent**

The IMON voltage provides a means of determining the load current at any moment in time. The overcurrent protection (OCP) circuitry monitors the IMON voltage to determine when a fault occurs. Based on the previous description in "Voltage Regulation and Load Line Implementation" on page 15, the current which flows out of the IMON pin is proportional to the I<sub>sum</sub> current. The I<sub>sum</sub> current is created from the sensed voltage across Cn which is a measure of the load current based upon the sensing element selected. The IMON current is generated internally and is 1/4 of the I<sub>sum</sub> current. The EDC or IDDspike current value for the AMD CPU load is used to set the maximum current level for droop and the IMON voltage of 1.2V which indicates 100% loading for telemetry. The I<sub>sum</sub> current level at maximum load, or IDDspike, is 36µA and this translates to an IMON current level of 9µA. The IMON resistor is  $133k\Omega$  and the  $9\mu$ A flowing through the IMON resistor results in a 1.2V level at maximum loading of the VR.

The overcurrent threshold is 1.5V on the IMON pin. Based on a 1.2V IMON voltage equating to 100% loading, the additional 0.3V provided above this level equates to a 25% increase in load current before an OCP fault is detected. The EDC or IDDspike current is used to set the 1.2V on IMON for full load current. So the OCP level is 1.25 times the EDC or IDDspike current level. This additional margin above the EDC or IDDspike current allows the AMD CPU to enter and exit the IDDspike performance mode without issue unless the load current is out of line with the IDDspike expectation, thus the need for overcurrent protection.

When the voltage on the IMON pin meets the overcurrent threshold of 1.5V, this triggers an OCP event. Within 2µs of detecting an OCP event, the controller asserts VR HOT L low to communicate to the AMD CPU to throttle back. A fault timer begins counting while IMON is at or above the 1.5V threshold. The fault timer lasts 7.5 \( \mu \) s to 11 \( \mu \) and then the controller takes action by tri-stating the active channels. This provides the CPU time to recover and reduce the load current. If the OCP conditions are relieved, then the fault timer is cleared and VR HOT L is taken high clearing the fault condition. If the load current is not reduced and the OCP condition is maintained, the output voltage will fall below the undervoltage threshold due to the lack of switching or a way-overcurrent fault could occur. Either of these fault conditions will cause the controller to drop PGOOD of that output. When PGOOD is taken low, a fault flag from this VR is sent to the other VR and it is shutdown within 10µs and PGOOD of the other output is taken low.

The ISL6377 also features a way-overcurrent [WOC] feature which immediately takes the controller into shutdown. This protection is also referred to as fast overcurrent protection for short-circuit protection. If the IMON current reaches 15 $\mu\text{A}$ , WOC is triggered. Active channels are tri-stated and the controller is placed in shutdown and PGOOD is pulled low. There is no fault timer on the WOC fault, the controller takes immediate action. The other controller output is also shutdown within 10 $\mu\text{s}$ .

#### **Current-Balance**

The controller monitors the ISENx pin voltages to determine current-balance protection. If the ISENx pin voltage difference is greater than 9mV for 1ms, the controller will declare a fault and latch off.

### **Undervoltage**

If the VSEN voltage falls below the output voltage VID value plus any programmed offsets by -325mV, the controller declares an undervoltage fault. The controller de-asserts PGOOD and tri-states the power MOSFETs.

#### **Overvoltage**

If the VSEN voltage exceeds the output voltage VID value plus any programmed offsets by +325mV, the controller declares an overvoltage fault. The controller de-asserts PGOOD and turns on the low-side power MOSFETs. The low-side power MOSFETs remain on until the output voltage is pulled down below the VID set value. Once the output voltage is below this level, the lower gate is tri-stated. If the output voltage rises above the overvoltage threshold again, the protection process is repeated. when all power MOSFETs are turned off. This behavior provides the maximum amount of protection against shorted high-side power MOSFETs while preventing output ringing below ground.

### Thermal Monitor [NTC, NTC\_NB]

The ISL6377 features two thermal monitors which use an external resistor network which includes an NTC thermistor to monitor motherboard temperature and alert the AMD CPU of a thermal issue. Figure 18 shows the basic thermal monitor circuit on the Core VR NTC pin. The Northbridge VR features the same thermal monitor. The controller drives a  $30\mu\text{A}$  current out of the NTC pin and monitors the voltage at the pin. The current flowing

out of the NTC pin creates a voltage that is compared to a warning threshold of 640mV. When the voltage at the NTC pin falls to this warning threshold or below, the controller asserts VR\_HOT\_L to alert the AMD CPU to throttle back load current to stabilize the motherboard temperature. A thermal fault counter begins counting toward a minimum shutdown time of 100 $\mu$ s. The thermal fault counter is an up/down counter, so if the voltage at the NTC pin rises above the warning threshold, it will count down and extend the time for a thermal fault to occur. The warning threshold does have 20mV of hysteresis.

If the voltage at the NTC pin continues to fall down to the shutdown threshold of 580mV or below, the controller goes into shutdown and triggers a thermal fault. The PGOOD pin is pulled low and tri-states the power MOSFETs. A fault on either side will shutdown both VRs.

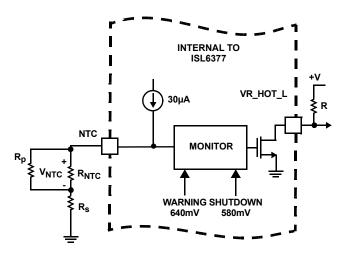


FIGURE 18. CIRCUITRY ASSOCIATED WITH THE THERMAL MONITOR
FEATURE OF THE ISL6377

As the board temperature rises, the NTC thermistor resistance decreases and the voltage at the NTC pin drops. When the voltage on the NTC pin drops below the over-temperature trip threshold, then VR\_HOT is pulled low. The VR\_HOT signal is used to change the CPU operation and decrease power consumption. With the reduction in power consumption by the CPU, the board temperature decreases and the NTC thermistor voltage rises. Once the over-temperature threshold is tripped and VR\_HOT is taken low, the over-temperature threshold changes to the reset level. The addition of hysteresis to the over-temperature threshold prevents nuisance trips. Once both pin voltages exceed the over-temperature reset threshold, the pull-down on VR\_HOT is released. The signal changes state and the CPU resumes normal operation. The over-temperature threshold returns to the trip level.

Table 13 summarizes the fault protections.

**TABLE 13. FAULT PROTECTION SUMMARY** 

FAULT TYPE	FAULT DURATION BEFORE PROTECTION	PROTECTION ACTION	FAULT RESET
Overcurrent	7.5µs to 11.5µs	PWM tri-state	
Phase Current Unbalance	1ms	PWM tri-state, PG00D	
Way-Overcurrent (1.5x0C)		latched low	ENABLE
Undervoltage -325mV	Immediately	PGOOD latched low. PWM tri-state.	toggle or VDD
Overvoltage +325mV		PGOOD latched low. Actively pulls the output voltage to below VID value, then tri-state.	toggle
NTC Thermal	100μs min	PGOOD latched low. PWM tri-state.	

#### **Fault Recovery**

All of the previously described fault conditions can be reset by bringing ENABLE low or by bringing VDD below the POR threshold. When ENABLE and VDD return to their high operating levels, the controller resets the faults and soft-start occurs.

### **Interface Pin Protection**

The SVC and SVD pins feature protection diodes which must be considered when removing power to VDD and VDDIO, but leaving it applied to these pins. Figure 19 shows the basic protection on the pins. If SVC and/or SVD are powered but VDD is not, leakage current will flow from these pins to VDD.

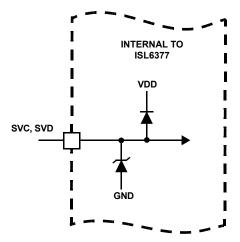


FIGURE 19. PROTECTION DEVICES ON THE SVC AND SVD PINS

# **Key Component Selection**

# **Inductor DCR Current-Sensing Network**

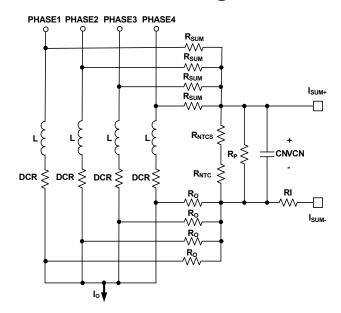


FIGURE 20. DCR CURRENT-SENSING NETWORK

Figure 20 shows the inductor DCR current-sensing network for a 4-phase solution. An inductor current flows through the DCR and creates a voltage drop. Each inductor has two resistors in  $R_{sum}$  and  $R_{o}$  connected to the pads to accurately sense the inductor current by sensing the DCR voltage drop. The  $R_{sum}$  and  $R_{o}$  resistors are connected in a summing network as shown, and feed the total current information to the NTC network (consisting of  $R_{ntcs}$ ,  $R_{ntc}$  and  $R_{p}$ ) and capacitor  $C_{n}$ .  $R_{ntc}$  is a negative temperature coefficient (NTC) thermistor, used to temperature compensate the inductor DCR change.

The inductor output side pads are electrically shorted in the schematic but have some parasitic impedance in actual board layout, which is why one cannot simply short them together for the current-sensing summing network. It is recommended to use  $1\Omega{\sim}10\Omega\,R_0$  to create quality signals. Since  $R_0$  value is much smaller than the rest of the current sensing circuit, the following analysis ignores it.

The summed inductor current information is presented to the capacitor  $C_n$ . Equations 22 thru 26 describe the frequency domain relationship between inductor total current  $I_0(s)$  and  $C_n$  voltage  $V_{Cn}(s)$ :

$$V_{Cn}(s) = \left(\frac{R_{ntcnet}}{R_{ntcnet} + \frac{R_{sum}}{N}} \times \frac{DCR}{N}\right) \times I_{o}(s) \times A_{cs}(s)$$
 (EQ. 22)

$$R_{ntcnet} = \frac{(R_{ntcs} + R_{ntc}) \times R_p}{R_{ntcs} + R_{ntc} + R_p}$$
 (EQ. 23)

$$A_{CS}(s) = \frac{1 + \frac{s}{\omega_L}}{1 + \frac{s}{\omega_{sns}}}$$
 (EQ. 24)

$$\omega_{L} = \frac{DCR}{L}$$
 (EQ. 25)

$$\omega_{\text{sns}} = \frac{1}{\frac{R_{\text{ntcnet}} \times \frac{R_{\text{sum}}}{N}}{R_{\text{ntcnet}} + \frac{R_{\text{sum}}}{N}} \times C_{n}}$$
(EQ. 26)

where N is the number of phases.

Transfer function  $A_{cs}(s)$  always has unity gain at DC. The inductor DCR value increases as the winding temperature increases, giving higher reading of the inductor DC current. The NTC  $R_{ntc}$  value decrease as its temperature decreases. Proper selection of  $R_{sum}$ ,  $R_{ntcs}$ ,  $R_p$  and  $R_{ntc}$  parameters ensures that  $V_{Cn}$  represents the inductor total DC current over the temperature range of interest.

There are many sets of parameters that can properly temperature-compensate the DCR change. Since the NTC network and the  $R_{sum}$  resistors form a voltage divider,  $V_{cn}$  is always a fraction of the inductor DCR voltage. It is recommended to have a higher ratio of  $V_{cn}$  to the inductor DCR voltage so the droop circuit has a higher signal level to work with.

A typical set of parameters that provide good temperature compensation are:  $R_{sum}$  = 3.65k $\Omega$ ,  $R_p$  = 11k $\Omega$ ,  $R_{ntcs}$  = 2.61k $\Omega$  and  $R_{ntc}$  = 10k $\Omega$  (ERT-J1VR103J). The NTC network parameters may need to be fine tuned on actual boards. One can apply full load DC current and record the output voltage reading immediately; then record the output voltage reading again when the board has reached the thermal steady state. A good NTC network can limit the output voltage drift to within 2mV. It is recommended to follow the Intersil evaluation board layout and current sensing network parameters to minimize engineering time.

 $V_{Cn}(s)$  also needs to represent real-time  $I_{o}(s)$  for the controller to achieve good transient response. Transfer function  $A_{cs}(s)$  has a pole  $w_{sns}$  and a zero  $w_L$ . One needs to match  $w_L$  and  $w_{sns}$  so  $A_{cs}(s)$  is unity gain at all frequencies. By forcing  $w_L$  equal to  $w_{sns}$  and solving for the solution, Equation 27 gives  $C_n$  value.

$$C_{n} = \frac{L}{\frac{R_{ntcnet} \times \frac{R_{sum}}{N}}{R_{ntcnet} + \frac{R_{sum}}{N}} \times DCR}$$
(EQ. 27)

For example, given N = 4, R<sub>sum</sub> = 3.65k $\Omega$ , R<sub>p</sub> = 11k $\Omega$ , R<sub>ntcs</sub> = 2.61k $\Omega$ , R<sub>ntc</sub> = 10k $\Omega$ , DCR = 0.88m $\Omega$  and L = 0.36 $\mu$ H, Equation 27 gives C<sub>n</sub> = 0.518 $\mu$ F.

Assuming the compensator design is correct, Figure 21 shows the expected load transient response waveforms if  $C_n$  is correctly selected. When the load current  $I_{core}$  has a square change, the output voltage  $V_{core}$  also has a square response.

If  $C_n$  value is too large or too small,  $V_{Cn}(s)$  does not accurately represent real-time  $I_0(s)$  and worsens the transient response. Figure 22 shows the load transient response when  $C_n$  is too small.  $V_{core}$  sags excessively upon load insertion and may create a system failure. Figure 23 shows the transient response when  $C_n$  is too large.  $V_{core}$  is sluggish in drooping to its final value.

There is excessive overshoot if load insertion occurs during this time, which may negatively affect the CPU reliability.

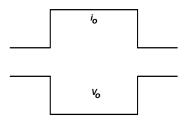


FIGURE 21. DESIRED LOAD TRANSIENT RESPONSE WAVEFORMS

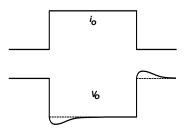


FIGURE 22. LOAD TRANSIENT RESPONSE WHEN C<sub>n</sub> IS TOO SMALL

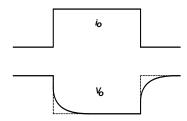


FIGURE 23. LOAD TRANSIENT RESPONSE WHEN C<sub>n</sub> IS TOO LARGE

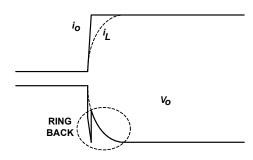


FIGURE 24. OUTPUT VOLTAGE RING-BACK PROBLEM

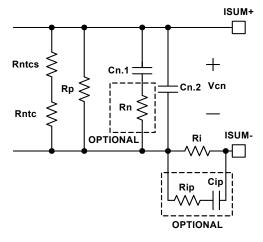


FIGURE 25. OPTIONAL CIRCUITS FOR RING-BACK REDUCTION

Figure 24 shows the output voltage ring-back problem during load transient response. The load current  $i_0$  has a fast step change, but the inductor current  $i_L$  cannot accurately follow. Instead,  $i_L$  responds in first-order system fashion due to the nature of the current loop. The ESR and ESL effect of the output capacitors makes the output voltage  $V_0$  dip quickly upon load current change. However, the controller regulates  $V_0$  according to the droop current  $i_{droop}$ , which is a real-time representation of  $i_L$ ; therefore, it pulls  $V_0$  back to the level dictated by  $i_L$ , causing the ring-back problem. This phenomenon is not observed when the output capacitor has very low ESR and ESL, as is the case with all ceramic capacitors.

Figure 25 shows two optional circuits for reduction of the ring-back. Cn is the capacitor used to match the inductor time constant. It usually takes the parallel of two (or more) capacitors to get the desired value. Figure 25 shows that two capacitors (C<sub>n 1</sub> and C<sub>n 2</sub>) are in parallel. Resistor R<sub>n</sub> is an optional component to reduce the Vo ring-back. At steady state, Cn.1 + C<sub>n,2</sub> provides the desired C<sub>n</sub> capacitance. At the beginning of i<sub>o</sub> change, the effective capacitance is less because R<sub>n</sub> increases the impedance of the C<sub>n,1</sub> branch. As Figure 22 shows, V<sub>o</sub> tends to dip when C<sub>n</sub> is too small, and this effect reduces the V<sub>o</sub> ring-back. This effect is more pronounced when  $C_{n,1}$  is much larger than  $C_{n,2}$ . It is also more pronounced when  $R_n$  is bigger. However, the presence of  $R_n$  increases the ripple of the  $V_n$  signal if  $C_{n,2}$  is too small. It is recommended to keep  $C_{n,2}$  greater than 2200pF. R<sub>n</sub> value usually is a few ohms. C<sub>n.1</sub>, C<sub>n.2</sub> and R<sub>n</sub> values should be determined through tuning the load transient response waveforms on an actual board.

 $R_{ip}$  and  $C_{ip}$  form an R-C branch in parallel with  $R_i$ , providing a lower impedance path than  $R_i$  at the beginning of  $i_o$  change.  $R_{ip}$  and  $C_{ip}$  do not have any effect at steady state. Through proper selection of  $R_{ip}$  and  $C_{ip}$  values,  $i_{droop}$  can resemble  $i_o$  rather than  $i_L$ , and  $V_o$  will not ring back. The recommended value for  $R_{ip}$  is  $100\Omega.$   $C_{ip}$  should be determined through tuning the load transient response waveforms on an actual board. The recommended range for  $C_{ip}$  is  $100pF{\sim}200pF$ . However, it should be noted that the  $R_{ip}$ - $C_{ip}$  branch may distort the  $i_{droop}$  waveform. Instead of being triangular as the real inductor current,  $i_{droop}$  may have sharp spikes, which may adversely affect  $i_{droop}$  average value detection and therefore may affect OCP accuracy. User discretion is advised.

### **Resistor Current-Sensing Network**

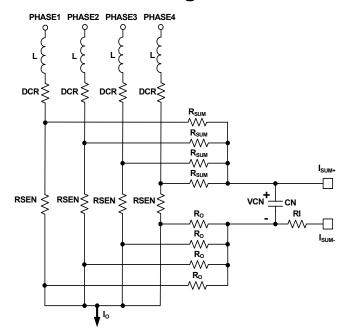


FIGURE 26. RESISTOR CURRENT-SENSING NETWORK

Figure 26 shows the resistor current-sensing network for a 4-phase solution. Each inductor has a series current sensing resistor,  $R_{sen}.$   $R_{sum}$  and  $R_{o}$  are connected to the  $R_{sen}$  pads to accurately capture the inductor current information. The  $R_{sum}$  and  $R_{o}$  resistors are connected to capacitor  $C_{n}.$   $R_{sum}$  and  $C_{n}$  form a filter for noise attenuation. Equations 28 thru 30 give the  $V_{Cn}(s)$  expression.

$$V_{Cn}(s) = \frac{R_{sen}}{N} \times I_{o}(s) \times A_{Rsen}(s)$$
 (EQ. 28)

$$A_{Rsen}(s) = \frac{1}{1 + \frac{s}{\omega_{sns}}}$$
 (EQ. 29)

$$\omega_{\text{Rsen}} = \frac{1}{\frac{R_{\text{sum}}}{N} \times C_{\text{n}}}$$
 (EQ. 30)

Transfer function  $A_{Rsen}(s)$  always has unity gain at DC. Current-sensing resistor  $R_{sen}$  value does not have significant variation over-temperature, so there is no need for the NTC network.

The recommended values are  $R_{sum} = 1k\Omega$  and  $C_n = 5600pF$ .

#### **Overcurrent Protection**

Refer to Equation 2 on page 16 and Figures 20, 24 and 26; resistor  $R_i$  sets the  $I_{sum}$  current which is proportional to droop current and IMON current. Tables 1 and 2 show the internal OCP threshold based on the IMON pin voltage. Since the  $R_i$  resistor impacts both the droop current and the IMON current, fine adjustments to  $I_{droop}$  will require changing the  $R_{comp}$  resistor.

For example, the OCP threshold is 1.5V on the IMON pin which equates to an IMON current of 11.25  $\mu A$  using a 133  $k\Omega$  IMON resistor. The corresponding  $I_{SUM}$  is 45  $\mu A$  which results in an

 $I_{droop}$  of 56.25μA. At full load current,  $I_{omax}$ , the  $I_{sum}$  current is 36μA and the resulting  $I_{droop}$  is 45μA. The ratio of  $I_{sum}$  at OCP relative to full load current is 1.25. Therefore, the OCP current trip level is 25% higher than the full load current.

For inductor DCR sensing, Equation 31 gives the DC relationship of  $V_{cn}(s)$  and  $I_{o}(s)$ :

$$V_{Cn} = \left(\frac{R_{ntcnet}}{R_{ntcnet} + \frac{R_{sum}}{N}} \times \frac{DCR}{N}\right) \times I_{o}$$
 (EQ. 31)

Substitution of Equation 31 into Equation 2 gives Equation 32:

$$I_{droop} = \frac{5}{4} \times \frac{1}{R_i} \times \frac{R_{ntcnet}}{R_{ntcnet} + \frac{R_{sum}}{N}} \times \frac{DCR}{N} \times I_0$$
 (EQ. 32)

Therefore:

$$R_{i} = \frac{5}{4} \times \frac{R_{ntcnet} \times DCR \times I_{o}}{N \times \left(R_{ntcnet} + \frac{R_{sum}}{N}\right) \times I_{droop}}$$
(EQ. 33)

Substitution of Equation 23 and application of the OCP condition in Equation 33 gives Equation 34:

$$R_{i} = \frac{5}{4} \times \frac{\frac{(R_{ntcs} + R_{ntc}) \times R_{p}}{R_{ntcs} + R_{ntc} + R_{p}} \times DCR \times I_{omax}}{N \times \left(\frac{(R_{ntcs} + R_{ntc}) \times R_{p}}{R_{ntcs} + R_{ntc} + R_{p}} + \frac{R_{sum}}{N}\right) \times I_{droopmax}}$$
(EQ. 34)

where  $I_{omax}$  is the full load current and  $I_{droopmax}$  is the corresponding droop current. For example, given N = 4,  $R_{sum}$  = 3.65k $\Omega$ ,  $R_p$  = 11k $\Omega$ ,  $R_{ntcs}$  = 2.61k $\Omega$ ,  $R_{ntc}$  = 10k $\Omega$ , DCR = 0.88m $\Omega$ ,  $I_{omax}$  = 100A and  $I_{droopmax}$  = 45 $\mu$ A. Equation 34 gives  $R_i$  = 529 $\Omega$ .

For resistor sensing, Equation 35 gives the DC relationship of  $V_{cn}(s)$  and  $I_{o}(s)$ .

$$V_{Cn} = \frac{R_{sen}}{N} \times I_{o}$$
 (EQ. 35)

Substitution of Equation 35 into Equation 2 gives Equation 36:

$$I_{droop} = \frac{5}{4} \times \frac{1}{R_i} \times \frac{R_{sen}}{N} \times I_o$$
 (EQ. 36)

Therefore:

$$R_{i} = \frac{5}{4} \times \frac{R_{sen} \times I_{o}}{N \times I_{droop}}$$
 (EQ. 37)

Substitution of Equation 37 and application of the OCP condition in Equation 33 gives Equation 38:

$$R_{i} = \frac{5}{4} \times \frac{R_{sen} \times I_{omax}}{N \times I_{droopmax}}$$
 (EQ. 38)

where  $l_{omax}$  is the full load current and  $l_{droopmax}$  is the corresponding droop current. For example, given N = 4,  $R_{sen}$  = 1mΩ,  $l_{omax}$  = 100A and  $l_{droopmax}$  = 45μA, Equation 38 gives  $R_i$  = 694Ω.

#### **Load Line Slope**

See Figure 13 for load-line implementation.

For inductor DCR sensing, substitution of Equation 32 into Equation 3 gives the load-line slope expression:

$$LL = \frac{V_{droop}}{I_o} = \frac{5}{4} \times \frac{R_{droop}}{R_i} \times \frac{R_{ntcnet}}{R_{ntcnet} + \frac{R_{sum}}{N}} \times \frac{DCR}{N}$$
 (EQ. 39)

For resistor sensing, substitution of Equation 36 into Equation 3 gives the load line slope expression:

$$LL = \frac{V_{droop}}{I_o} = \frac{5}{4} \times \frac{R_{sen} \times R_{droop}}{N \times R_i}$$
 (EQ. 40)

Substitution of Equation 33 and rewriting Equation 39, or substitution of Equation 37 and rewriting Equation 40, gives the same result as in Equation 41:

$$R_{droop} = \frac{I_o}{I_{droop}} \times LL$$
 (EQ. 41)

One can use the full-load condition to calculate  $R_{droop}.$  For example, given  $I_{omax}$  = 100A,  $I_{droopmax}$  = 45 $\mu A$  and LL = 2.1m $\Omega$ , Equation 41 gives  $R_{droop}$  = 4.67k $\Omega.$ 

It is recommended to start with the  $R_{droop}$  value calculated by Equation 41 and fine-tune it on the actual board to get accurate load-line slope. One should record the output voltage readings at no load and at full load for load-line slope calculation. Reading the output voltage at lighter load instead of full load will increase the measurement error.

#### Compensator

Figure 21 shows the desired load transient response waveforms. Figure 27 shows the equivalent circuit of a voltage regulator (VR) with the droop function. A VR is equivalent to a voltage source (= VID) and output impedance  $Z_{out}(s)$ . If  $Z_{out}(s)$  is equal to the load-line slope LL, i.e., a constant output impedance, then in the entire frequency range,  $V_{0}$  will have a square response when  $I_{0}$  has a square change.

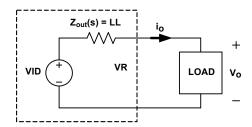


FIGURE 27. VOLTAGE REGULATOR EQUIVALENT CIRCUIT

Intersil provides a Microsoft Excel-based spreadsheet to help design the compensator and the current sensing network so that VR achieves constant output impedance as a stable system.

A VR with active droop function is a dual-loop system consisting of a voltage loop and a droop loop, which is a current loop. However, neither loop alone is sufficient to describe the entire system. The spreadsheet shows two loop gain transfer functions, T1(s) and

T2(s), that describe the entire system. Figure 28 conceptually shows T1(s) measurement set-up, and Figure 29 conceptually shows T2(s) measurement set-up. The VR senses the inductor current, multiplies it by a gain of the load-line slope, adds it on top of the sensed output voltage, and then feeds it to the compensator. T1 is measured after the summing node, and T2 is measured in the voltage loop before the summing node. The spreadsheet gives both T1(s) and T2(s) plots. However, only T2(s) can actually be measured on an ISL6377 regulator.

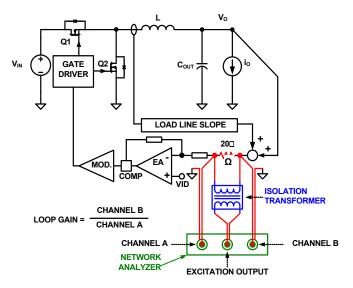


FIGURE 28. LOOP GAIN T1(s) MEASUREMENT SET-UP

T1(s) is the total loop gain of the voltage loop and the droop loop. It always has a higher crossover frequency than T2(s), therefore has a higher impact on system stability.

T2(s) is the voltage loop gain with closed droop loop, thus having a higher impact on output voltage response.

Design the compensator to get stable T1(s) and T2(s) with sufficient phase margin and an output impedance equal to or smaller than the load-line slope.

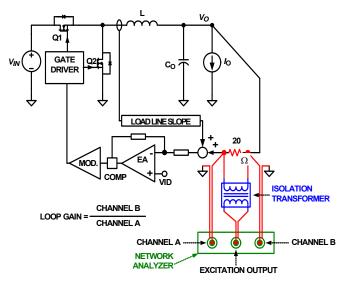


FIGURE 29. LOOP GAIN T2(s) MEASUREMENT SET-UP

### **Current Balancing**

Refer to Figures 14 through 20 for information on current balancing. The ISL6377 achieves current balancing through matching the ISEN pin voltages.  $R_{isen}$  and  $C_{isen}$  form filters to remove the switching ripple of the phase node voltages. It is recommended to use a rather long  $R_{isen}C_{isen}$  time constant such that the ISEN voltages have minimal ripple and represent the DC current flowing through the inductors. Recommended values are  $R_{s}$  = 10k $\Omega$  and  $C_{s}$  = 0.22  $\mu F$ .

### **Thermal Monitor Component Selection**

The ISL6377 features two pins, NTC and NTC\_NB, which are used to monitor motherboard temperature and alert the AMD CPU if a thermal issues arises. The basic function of this circuitry is outlined in the "Thermal Monitor [NTC, NTC\_NB]" section on page 26. Figure 30 shows the basic configuration of the NTC resistor, R<sub>NTC</sub>, and offset resistor, R<sub>S</sub>, used to generate the warning and shutdown voltages at the NTC pin.

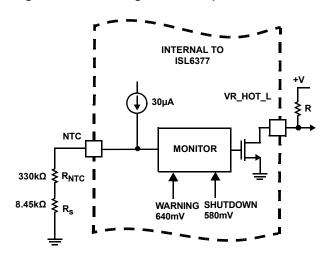


FIGURE 30. THERMAL MONITOR FEATURE OF THE ISL6377

As the board temperature rises, the NTC thermistor resistance decreases and the voltage at the NTC pin drops. When the voltage on the NTC pin drops below the thermal warning threshold of 0.640V, then VR\_HOT\_L is pulled low. When the AMD CPU detects VR\_HOT\_L has gone low, it will begin throttling back load current on both outputs to reduce the board temperature.

If the board temperature continues to rise, the NTC thermistor resistance will drop further and the voltage at the NTC pin could drop below the thermal shutdown threshold of 0.580V. Once this threshold is reached, the ISL6377 shuts down both Core and Northbridge VRs indicating a thermal fault has occurred prior to the thermal fault counter triggering a fault.

Selection of the NTC thermistor can vary depending on how the resistor network is configured. The equivalent resistance at the typical thermal warning threshold voltage of 0.64V is defined in Equation 42.

$$\frac{0.64V}{30\mu A}=21.3k\Omega \tag{EQ. 42}$$

The equivalent resistance at the typical thermal shutdown threshold voltage of 0.58V required to shutdown both outputs is defined in Equation 43.

$$\frac{0.58\text{V}}{30\mu\text{A}} = 19.3\text{k}\Omega \tag{EQ. 43}$$

The NTC thermistor value correlates to the resistance change between the warning and shutdown thresholds and the required temperature change. If the warning level is designed to occur at a board temperature of  $+100\,^{\circ}$ C and the thermal shutdown level at a board temperature of  $+105\,^{\circ}$ C, then the resistance change of the thermistor can be calculated. For example, a Panasonic NTC thermistor with B = 4700 has a resistance ratio of 0.03939 of its nominal value at  $+100\,^{\circ}$ C and 0.03308 of its nominal value at  $+105\,^{\circ}$ C. Taking the required resistance change between the thermal warning threshold and the shutdown threshold and dividing it by the change in resistance ratio of the NTC thermistor at the two temperatures of interest, the required resistance of the NTC is defined in Equation 44.

$$\frac{(21.3k\Omega - 19.3k\Omega)}{(0.03939 - 0.03308)} = 317k\Omega$$
 (EQ. 44)

The closest standard thermistor to the value calculated with B = 4700 is  $330 \text{k}\Omega$ . The NTC thermistor part number is ERTJ0EV334J. The actual resistance change of this standard thermistor value between the warning threshold and the shutdown threshold is calculated in Equation 45.

$$(330 k\Omega \cdot 0.03939) - (330 k\Omega \cdot 0.03308) = 2.082 k\Omega$$
 (EQ. 45)

Since the NTC thermistor resistance at +105°C is less than the required resistance from Equation 43, additional resistance in series with the thermistor is required to make up the difference. A standard resistor, 1% tolerance, added in series with the thermistor will increase the voltage seen at the NTC pin. The additional resistance required is calculated in Equation 46.

$$19.3k\Omega-10.916k\Omega\ =\ 8.384k\Omega \tag{EQ. 46}$$

The closest, standard 1% tolerance resistor is  $8.45k\Omega$ .

The NTC thermistor is placed in a hot spot on the board, typically near the upper MOSFET of Channel 1 of the respective output. The standard resistor is placed next to the controller.

# **Layout Guidelines**

# **PCB Layout Considerations**

#### **POWER AND SIGNAL LAYERS PLACEMENT ON THE PCB**

As a general rule, power layers should be close together, either on the top or bottom of the board, with the weak analog or logic signal layers on the opposite side of the board. The ground-plane layer should be adjacent to the signal layer to provide shielding.

#### **COMPONENT PLACEMENT**

There are two sets of critical components in a DC/DC converter; the power components and the small signal components. The power components are the most critical because they switch large amounts of energy. The small signal components connect to sensitive nodes or supply critical bypassing current and signal coupling.

The power components should be placed first and these include MOSFETs, input and output capacitors, and the inductor. It is important to have a symmetrical layout for each power train, preferably with the controller located equidistant from each power train. Symmetrical layout allows heat to be dissipated equally across all power trains. Keeping the distance between the power train and the control IC short helps keep the gate drive traces short. These drive signals include the LGATE, UGATE, PGND, PHASE and BOOT.

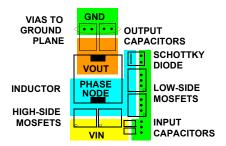


FIGURE 31. TYPICAL POWER COMPONENT PLACEMENT

When placing MOSFETs, try to keep the source of the upper MOSFETs and the drain of the lower MOSFETs as close as thermally possible (see Figure 31). Input high-frequency capacitors should be placed close to the drain of the upper MOSFETs and the source of the lower MOSFETs. Place the output inductor and output capacitors between the MOSFETs and the load. High-frequency output decoupling capacitors (ceramic) should be placed as close as possible to the decoupling target (microprocessor), making use of the shortest connection paths to any internal planes. Place the components in such a way that the area under the IC has less noise traces with high dV/dt and di/dt, such as gate signals and phase node signals.

Table 14 shows layout considerations for the ISL6377 controller by pin.

TABLE 14. LAYOUT CONSIDERATIONS FOR THE ISL6377 CONTROLLER

ISL6377 PIN	SYMBOL	LAYOUT GUIDELINES		
BOTTOM PAD	GND	Connect this ground pad to the ground plane through a low impedance path. A minimum of 5 vias are recommended to connect this pad to the internal ground plane layers of the PCB		
1	ISEN2_NB	Each ISEN pin has a capacitor (C <sub>isen</sub> ) decoupling it to VSUMN_NB, then through another capacitor (C <sub>vsumn_nb</sub> ) to GND. Place C <sub>isen</sub> capacitors as close as possible to the controller and keep the following loops small:  1. ISEN1_NB pin to ISEN2_NB pin 2. Any ISENx_NB pin to GND		
2	NTC_NB	The NTC thermistor must be placed close to the thermal source that is monitored to determine Northbridge thermal throttling. Placement at the hottest spot of the Northbridge VR is recommended. Additional standard resistors in the resistor network on this pin should be placed near the IC.		
3	IMON_NB	Place the IMON_NB resistor close to this pin and make keep a tight GND connection.		
4	svc	Use good signal integrity practices and follow AMD recommendations.		
5	VR_HOT_L	Follow AMD recommendations. Placement of the pull-up resistor near the IC is recommended.		
6	SVD	Use good signal integrity practices and follow AMD recommendations.		
7	VDDIO	Use good signal integrity practices and follow AMD recommendations.		
8	SVT	Use good signal integrity practices and follow AMD recommendations.		
9	ENABLE	No special considerations.		
10	PWROK	Use good signal integrity practices and follow AMD recommendations.		
11	NTC	The NTC thermistor must be placed close to the thermal source that is monitored to determine Core thermal throttling. Placement at the hottest spot of the Core VR is recommended. Additional standard resistors in the resistor network on this pin should be placed near the IC.		
12	ISEN4			
13	ISEN3	Each ISEN pin has a capacitor (C <sub>isen</sub> ) decoupling it to VSUMN and then through another capacitor (C <sub>vsumn</sub> ) to GND. Place		
14	ISEN2	C <sub>isen</sub> capacitors as close as possible to the controller and keep the following loops small:  1. Any ISEN pin to another ISEN pin		
15	ISEN1	2. Any ISEN pin to GND  The red traces in the following drawing show the loops to be minimized.   Phase1		
		ISEN3  Cisen  Phase1  Risen  Ro  Phase2  Risen  Ro  Risen  Ro  Risen  Ro  V  Risen  Ro  V  Risen  Ro  Cisen  Phase3  Risen  Ro  Cisen  Company  Cisen  Company  Compa		

# **ISL6377**

TABLE 14. LAYOUT CONSIDERATIONS FOR THE ISL6377 CONTROLLER (Continued)

ISL6377 PIN	SYMBOL	LAYOUT GUIDELINES
16 17	ISUMP	Place the current sensing circuit in general proximity of the controller.  Place capacitor Cn very close to the controller.  Place the NTC thermistor next to Core VR Channel 1 inductor so it senses the inductor temperature correctly.  Each phase of the power stage sends a pair of VSUMP and VSUMN signals to the controller. Run these two signals traces in parallel fashion with decent width (>20mil).  IMPORTANT: Sense the inductor current by routing the sensing circuit to the inductor pads. If possible, route the traces on a different layer from the inductor pad layer and use vias to connect the traces to the center of the pads. If no via is allowed on the pad, consider routing the traces into the pads from the inside of the inductor. The following drawings show the two preferred ways of routing current sensing traces.  INDUCTOR  INDUCTOR  INDUCTOR  INDUCTOR  INDUCTOR  INDUCTOR  INDUCTOR
18	VSEN	Place the filter on these pins in close proximity to the controller for good coupling.
19	RTN	
20	IMON	Place the IMON resistor close to this pin and make keep a tight GND connection.
21	FB	Place the compensation components in general proximity of the controller.
22	COMP	
23	PGOOD	No special consideration.
24	B00T1	Use a wide trace width (>30mil). Avoid routing any sensitive analog signal traces close to or crossing over this trace.
25	UGATE1	These two signals should be routed together in parallel. Each trace should have sufficient width (>30mil). Avoid routing
26	PHASE1	these signals near sensitive analog signal traces or crossing over them. Routing PHASE1 to the Core VR Channel 1 high- side MOSFET source pin instead of a general connection to PHASE1 copper is recommended for better performance.
27	LGATE1	Use sufficient trace width (>30mil). Avoid routing this signal near any sensitive analog signal traces or crossing over them.
28	PWM_Y	No special considerations.
29	VDD	A high quality, X7R dielectric MLCC capacitor is recommended to decouple this pin to GND. Place the capacitor in close proximity to the pin with the filter resistor nearby the IC.
30	VDDP	A high quality, X7R dielectric MLCC capacitor is recommended to decouple this pin to GND. Place the capacitor in close proximity to the pin.
31	LGATE2	Use sufficient trace width (>30mil). Avoid routing this signal near any sensitive analog signal traces or crossing over them.
32	PHASE2	These two signals should be routed together in parallel. Each trace should have sufficient width (>30mil). Avoid routing
33	UGATE2	these signals near sensitive analog signal traces or crossing over them. Routing PHASE2 to the Core VR Channel 2 high- side MOSFET source pin instead of a general connection to PHASE2 copper is recommended for better performance.
34	BOOT2	Use a wide trace width (>30mil). Avoid routing any sensitive analog signal traces close to or crossing over this trace.
35	PWM4	No special considerations.
36	воотх	Use a wide trace width (>30mil). Avoid routing any sensitive analog signal traces close to or crossing over this trace.
37 38	UGATEX PHASEX	These two signals should be routed together in parallel. Each trace should have sufficient width (>30mil). Avoid routing these signals near sensitive analog signal traces or crossing over them. Routing PHASEX to the high-side MOSFET source
		pin instead of a general connection to the PHASEX copper is recommended for better performance.
39	LGATEX	Use sufficient trace width (>30mil). Avoid routing this signal near any sensitive analog signal traces or crossing over them.
40	PWM2_NB	No special considerations.
41	FCCM_NB	No special considerations.
42	PGOOD_NB	No special consideration.

TABLE 14. LAYOUT CONSIDERATIONS FOR THE ISL6377 CONTROLLER (Continued)

ISL6377 PIN	SYMBOL	LAYOUT GUIDELINES		
43	COMP_NB	Place the compensation components in general proximity of the controller.		
44	FB_NB			
45	VSEN_NB	Place the filter on this pin in close proximity to the controller for good coupling.		
46	ISUMN_NB	Place the current sensing circuit in general proximity of the controller.		
47	ISUMP_NB	Place capacitor Cn very close to the controller.  Place the NTC thermistor next to Core VR Channel 1 inductor so it senses the inductor temperature correctly.  Each phase of the power stage sends a pair of VSUMP and VSUMN signals to the controller. Run these two signals traces in parallel fashion with decent width (>20mil).  IMPORTANT: Sense the inductor current by routing the sensing circuit to the inductor pads. If possible, route the traces on a different layer from the inductor pad layer and use vias to connect the traces to the center of the pads. If no via is allowed on the pad, consider routing the traces into the pads from the inside of the inductor. The following drawings show the two preferred ways of routing current sensing traces.  INDUCTOR  INDUCTOR		
48	ISEN1_NB	Each ISEN pin has a capacitor (C <sub>isen</sub> ) decoupling it to VSUMN_NB, then through another capacitor (C <sub>vsumn_nb</sub> ) to GND. Place C <sub>isen</sub> capacitors as close as possible to the controller and keep the following loops small:  1. ISEN1_NB pin to ISEN2_NB pin 2. Any ISENx_NB pin to GND		

# **Revision History**

The revision history provided is for informational purposes only and is believed to be accurate, but not warranted. Please go to web to make sure you have the latest revision.

DATE	REVISION	CHANGE
August 6, 2012	FN8336.0	Initial Release.

# **Products**

Intersil Corporation is a leader in the design and manufacture of high-performance analog semiconductors. The Company's products address some of the industry's fastest growing markets, such as, flat panel displays, cell phones, handheld products, and notebooks. Intersil's product families address power management and analog signal processing functions. Go to <a href="https://www.intersil.com/products">www.intersil.com/products</a> for a complete list of Intersil product families.

For a complete listing of Applications, Related Documentation and Related Parts, please see the respective product information page. Also, please check the product information page to ensure that you have the most updated datasheet: <a href="ISL6377">ISL6377</a>

To report errors or suggestions for this datasheet, please go to: www.intersil.com/askourstaff

FITs are available from our website at: <a href="http://rel.intersil.com/reports/search.php">http://rel.intersil.com/reports/search.php</a>

intersil

For additional products, see  $\underline{\text{www.intersil.com/product tree}}$ 

Intersil products are manufactured, assembled and tested utilizing ISO9000 quality systems as noted in the quality certifications found at <a href="https://www.intersil.com/design/quality">www.intersil.com/design/quality</a>


Intersil products are sold by description only. Intersil Corporation reserves the right to make changes in circuit design, software and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that data sheets are current before placing orders. Information furnished by Intersil is believed to be accurate and reliable. However, no responsibility is assumed by Intersil or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Intersil or its subsidiaries.


For information regarding Intersil Corporation and its products, see <a href="https://www.intersil.com">www.intersil.com</a>


# **Package Outline Drawing**

### L48.6x6B


48 LEAD QUAD FLAT NO-LEAD PLASTIC PACKAGE Rev 0, 9/09

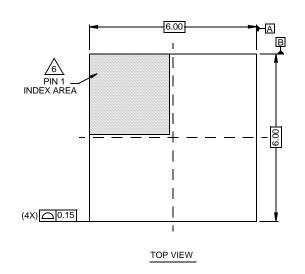


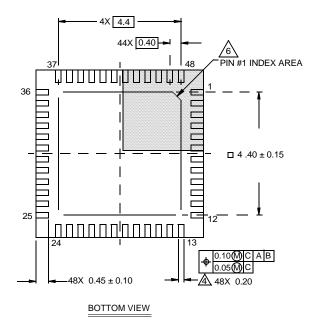

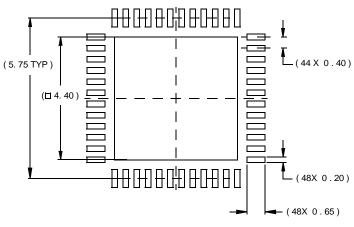

TYPICAL RECOMMENDED LAND PATTERN





DETAIL "X"

#### NOTES:

- Dimensions are in millimeters.
   Dimensions in ( ) for Reference Only.
- 2. Dimensioning and tolerancing conform to AMSE Y14.5m-1994.
- 3. Unless otherwise specified, tolerance : Decimal  $\pm 0.05$
- Dimension applies to the metallized terminal and is measured between 0.15mm and 0.30mm from the terminal tip.
- 5. Tiebar shown (if present) is a non-functional feature.
- 5. The configuration of the pin #1 identifier is optional, but must be located within the zone indicated. The pin #1 indentifier may be either a mold or mark feature.