G7L
Power Relay

A High-capacity, High-dielectric-strength Relay Compatible with Momentary Voltage Drops

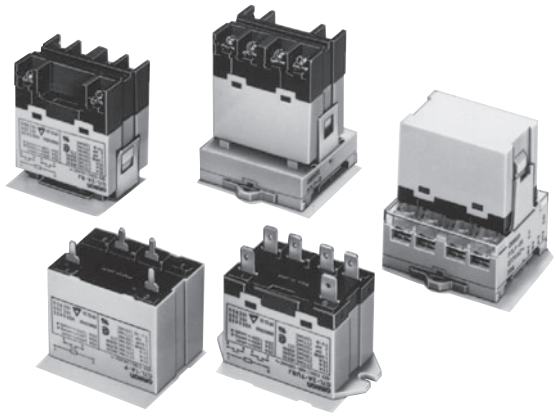

- No contact chattering for momentary voltage drops up to 50% of rated voltage.
- Wide-range AC-activated coil that handles 100 to 120 or 200 to 240 VAC at either 50 or 60 Hz.
- Miniature size for maximum switching power, particularly for inductive loads.
- Flame-resistance materials (UL94V-0-qualifying) used for all insulation material.
- Quick-connect, screw, and PCB terminals, and DIN track mounting available.
- Conforms to UL, CSA, TUV and meets IEC950.
- Safety design with contact gap of 3 mm.

RoHS Compliant

■Model Number Legend

G7L-□□-□□□
1 2 3 4 5

1. Number of Poles
1: 1 pole
2: 2 poles

2. Contact Form
A: □PST-NO

3. Terminal Shape
T: Quick connect terminals (#250)
B: Screw terminals
P: PCB terminals

4. Mounting Construction
Blank: E-bracket
UB : Upper bracket

5. Special Functions
J : With test button

■Application Examples

- Compressors for air conditioners and heater switching controllers.
- Switching controllers for power tools or motors.
- Power controllers for water heaters.
- Power controllers for dryers.
- Lamp controls, motor drivers, and power supply switching in copy machines, facsimile machines, and other office equipment.
- Lighting controllers.
- Power controllers for packers or food processing equipment.
- Magnetron control in microwaves.
- Power controllers for Uninterruptible Power Supply (UPS)

■Model Configuration

Classification		Terminal / Contact form	Quick-connect terminals	Screw terminals	PCB terminals
E-bracket mounting (E-bracket is sold separately)	–	SPST-NO	G7L-1A-T	G7L-1A-B	–
		DPST-NO	G7L-2A-T	G7L-2A-B	–
	With test button	SPST-NO	G7L-1A-TJ	G7L-1A-BJ	–
		DPST-NO	G7L-2A-TJ	G7L-2A-BJ	–
Upper bracket mounting	–	SPST-NO	G7L-1A-TUB	G7L-1A-BUB	–
		DPST-NO	G7L-2A-TUB	G7L-2A-BUB	–
	With test button	SPST-NO	G7L-1A-TUBJ	G7L-1A-BUBJ	–
		DPST-NO	G7L-2A-TUBJ	G7L-2A-BUBJ	–
PCB mounting	–	SPST-NO	–	–	G7L-1A-P
		DPST-NO	–	–	G7L-2A-P

■List of E-bracket Mounting Models

Terminal	Contact form	Model	Test button	Mounting: E-brackets	DIN Track Mounting Adapter	Front-connecting Socket
Quick-connect terminals	SPST-NO	G7L-1A-T	–	○	○	○
		G7L-1A-TJ	With test button	○	○	○
	DPST-NO	G7L-2A-T	–	○	○	○
		G7L-2A-TJ	With test button	○	○	○
Screw terminals	SPST-NO	G7L-1A-B	–	○	○	–
		G7L-1A-BJ	With test button	○	○	–
	DPST-NO	G7L-2A-B	–	○	○	–
		G7L-2A-BJ	With test button	○	○	–

Note. E-bracket (R99-07), adaptor (P7LF-D), surface connection socket (P7LF-06) are sold separately.

■Ordering Information

E-bracket/Adapter/Socket Mounting
Quick-connect Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-T**	AC: 12, 24, 100/120, 200/240	20 pcs./tray
		DC: 6, 12, 24, 48, 100	
2 poles	**G7L-2A-T**	AC: 12, 24, 50, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

Upper Bracket Mounting
Quick-connect Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-TUB**	AC: 12, 24, 100/120, 200/240	20 pcs./tray
		DC: 6, 12, 24, 48, 100	
2 poles	**G7L-2A-TUB**	AC: 12, 24, 50, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

E-bracket/Adapter Mounting
Screw Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-B**	AC: 12, 24, 100/120, 200/240	20 pcs./tray
		DC: 6, 12, 24, 48, 100	
2 poles	**G7L-2A-B**	AC: 12, 24, 100/120, 200/240	
		DC: 12, 24, 48, 100	

Upper Bracket Mounting
Screw Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-BUB**	AC: 24, 100/120, 200/240	20 pcs./tray
		DC: 6, 12, 24, 48, 100	
2 poles	**G7L-2A-BUB**	AC: 12, 24, 50, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

PCB Mounting

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-P**	AC: 100/120, 200/240	20 pcs./tray
		DC: 12, 24, 48, 100	
2 poles	**G7L-2A-P**	AC: 24, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

DIN Track Mounting Accessories

Applicable products	Name	Model	Minimum packing unit
Adaptor Surface Connection Socket	DIN Track	**PFP-100N**	10 pcs.
		PFP-50N	
		PFP-100N2	
	End plate	**PFP-M**	
	Spacer	**PFP-S**	

Note. Order the models above in increments of the minimum quantity packaged.

E-bracket/Adapter/Socket Mounting (with test button)
Quick-connect Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-TJ**	AC: 24, 100/120, 200/240	20 pcs./tray
		DC: 12, 24, 48, 100	
2 poles	**G7L-2A-TJ**	AC: 24, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

Upper Bracket Mounting (with test button)
Quick-connect Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-TUBJ**	AC: 24, 100/120, 200/240	20 pcs./tray
		DC: 6, 12, 24, 48, 100	
2 poles	**G7L-2A-TUBJ**	AC: 12, 24, 50, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

E-bracket/Adapter Mounting (with test button)
Screw Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-BJ**	AC: 12, 24, 100/120, 200/240	20 pcs./tray
		DC: 12, 24	
2 poles	**G7L-2A-BJ**	AC: 24, 100/120, 200/240	
		DC: 12, 24, 48, 100	

Upper Bracket Mounting (with test button)
Screw Terminal

Number of poles	Model	Rated coil voltage	Minimum packing unit
1 pole	**G7L-1A-BUBJ**	AC: 24, 100/120, 200/240	20 pcs./tray
		DC: 6, 12, 24, 48	
2 poles	**G7L-2A-BUBJ**	AC: 24, 100/120, 200/240	
		DC: 6, 12, 24, 48, 100	

Note 1. Please add the coil rated voltage (V) to the model number when ordering.
Example: G7L-1A-T AC12
In addition, the delivered product and its package will be marked with voltage specification as "□□ VDC".

Note 2. Refer to the precautions on **PCB Relays provided in General Information of the Relay Product Data Book**, and "w -□-3" for coil characteristics of AC operation.

E-bracket/Adaptor/Socket/Cover

Applicable Relay models	Name	Model	Minimum packing unit
G7L-1A-T G7L-1A-TJ G7L-1A-B G7L-1A-BJ G7L-2A-T G7L-2A-TJ G7L-2A-B G7L-2A-BJ	E-bracket	**R99-07**	10 pcs.
	Adapter	**P7LF-D**	1 pcs.
G7L-1A-T G7L-1A-TJ G7L-2A-T G7L-2A-TJ	Front-connecting Socket	**P7LF-06**	1 pcs.
G7L-1A-B G7L-1A-BJ G7L-1A-BUB G7L-1A-BUBJ G7L-2A-B G7L-2A-BJ G7L-2A-BUB G7L-2A-BUBJ	Cover	**P7LF-C**	1 pcs.

Note. Order the models above in increments of the minimum quantity packaged.

■Ratings

Coil

Item / Rated voltage	Rated current (mA)	Coil resistance (Ω)	Coil inductance (H) Armature ON	Coil inductance (H) Armature OFF	Must operate voltage	Must release voltage	Max. permissible voltage	Power consumption (VA-W)
					On the basis of rated voltage			
12 VAC	142				75% max.	15% min.	110%	Approx. 1.7 to 2.5
24 VAC	71							
50 VAC	34							
100 to 120 VAC	17.0 to 20.4				75 V	18 V	132 V	
200 to 240 VAC	8.5 to 10.2				150 V	36 V	264 V	
6 VDC	317	18.9	0.09	0.21	75% max.	15% min.	110%	Approx. 1.9
12 VDC	158	75	0.37	0.88				
24 VDC	79	303	1.42	3.54				
48 VDC	40	1220	6.1	15.3				
100 VDC	19	5260	21.3	60.0				

Note 1. The rated current and coil resistance are measured at a coil temperature of 23•C with tolerances of +15%/-20% for AC rated current and ±15% for DC coil resistance.
2. The inductances shown above are reference values.
3. Performance characteristic data are measured at a coil temperature of 23•C.
4. The maximum allowable coil voltage refers to the maximum value in a varying range of operating power voltage, measured at ambient temperature 23°C.
5. The "to" (for example "100 to 120") represents the range of rated voltages.

Contacts

Contact Form / load / Item	G7L-1A-T□ G7L-1A-B□ Resistive load	G7L-1A-T□ G7L-1A-B□ Inductive load (cosϕ = 0.4)	G7L-2A-T□ G7L-2A-B□ Resistive load	G7L-2A-T□ G7L-2A-B□ Inductive load (cosϕ = 0.4)	G7L-1A-P G7L-2A-P Resistive load	G7L-1A-P G7L-2A-P Inductive load (cosϕ = 0.4)
Contact type	Double break					
Contact material	Ag alloy					
Rated load	30 A at 220 VAC	25 A at 220 VAC	25 A at 220 VAC		20 A at 220 VAC	
Rated carry current	30 A		25 A		20 A	
Max. switching voltage	250 VAC					
Max. switching current	30 A		25 A		20 A	

Note. When using B-series (screw) products, since the screw diameter of the contact terminal is M4, be careful that the contact current should be 20 A or less according to JET standard (electrical appliance and material control law of Japan).

■Characteristics

Contact resistance *1		50 mΩ max.
Operate time *2		30 ms max.
Release time *3		30 ms max.
Max. operating frequency	Mechanical	1,800 operations/hr
	Rated load	1,800 operations/hr
Insulation resistance *3		100 MΩ min
Dielectric strength	Between coil and contacts	4,000 VAC min., 50/60 Hz for 1 min
	Between contacts of same polarity	2,000 VAC, 50/60 Hz for 1 min
	Between contacts of different polarity (DPST-NO model)	
Impulse withstand voltage		10,000 V between coil and contact *4
Vibration resistance	Destruction	10 to 55 to 10 Hz, 0.75 mm single amplitude (1.5 mm double amplitude)
	Malfunction	10 to 55 to 10 Hz, 0.75 mm single amplitude (1.5 mm double amplitude)
Shock resistance	Destruction	1,000 m/s²
	Malfunction	100 m/s²
Endurance	Mechanical	1,000,000 operations min. (at 1,800 operations/hr)
	Electrical *5	100,000 operations min. (at 1,800 operations/hr under rated load)
Failure rate (P level) (reference value *6)		100 mA at 5 VDC
Weight		Approx. 90 g: Quick-connect terminal models Approx. 100 g: PCB terminal models Approx. 120 g: Screw terminal models

Note. The values given above are initial values.
*1. Measurement conditions: 5 VDC, 1 A, voltage drop method.
*2. Measurement conditions: Rated operating voltage applied, not including contact bounce. Ambient temperature: 23°C
*3. Measurement conditions: The insulation resistance was measured with a 500-VDC megohmmeter at the same locations as the dielectric strength was measured.
*4. JEC-212 (1981) Standard Impulse Wave Type (1.2×50μs).
*5. Ambient temperature: 23°C
*6. This value was measured at a switching frequency of 60 operations/min.

Ambient operating temperature	-25•C to 60•C (with no icing or condensation)
Ambient operating humidity	5% to 85%

■Engineering Data

G7L-1A-T (TJ) (TUB) (TUBJ)
G7L-1A-B (BJ) (BUB) (BUBJ)
Maximum Switching Power

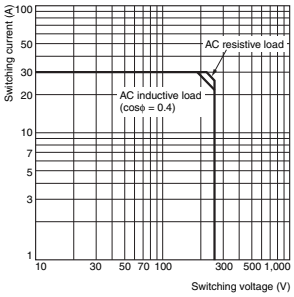

G7L-2A-T (TJ) (TUB) (TUBJ)
G7L-2A-B (BJ) (BUB) (BUBJ)
Maximum Switching Power

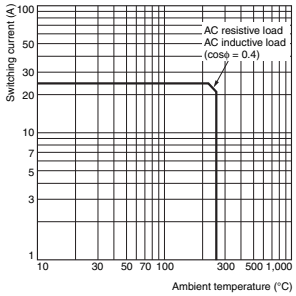

G7L-1A-P
G7L-2A-P
Maximum Switching Power

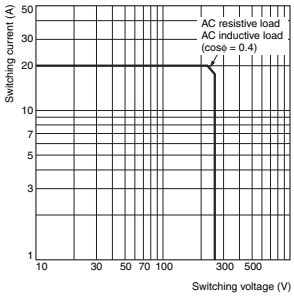

Ambient Temperature vs. Operate and Release Voltage
G7L-1A VAC (60 Hz)

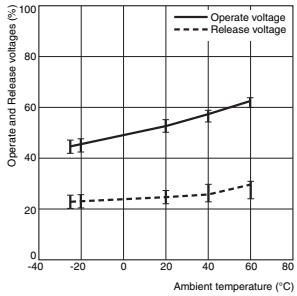

Endurance

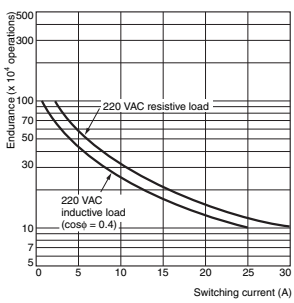

Endurance

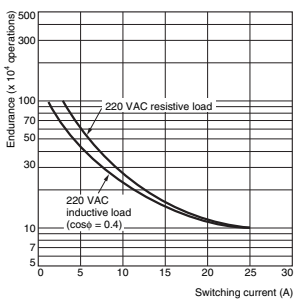

Endurance

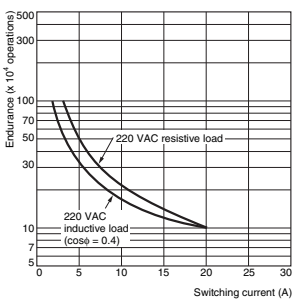

G7L-1A VDC

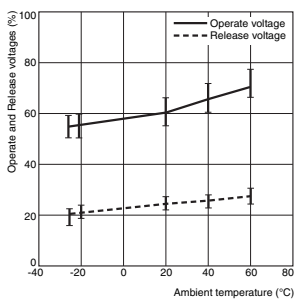

Ambient Temperature vs. Coil Temperature Rise

G7L-1A 120 VAC (50 Hz)

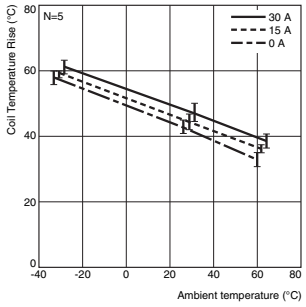

G7L-1A VDC

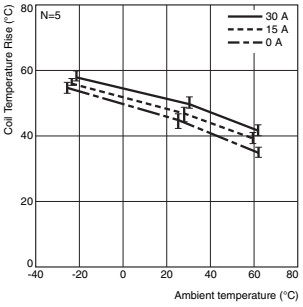

Shock Malfunction

G7L-2A-T (TUB) 100 to 120 VAC

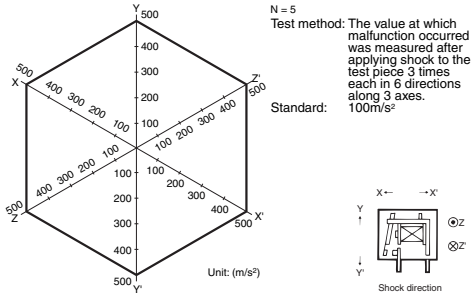

Momentary Voltage Drop Test

G7L-2A-T (TUB) 100 to 120 VAC

Test Circuit

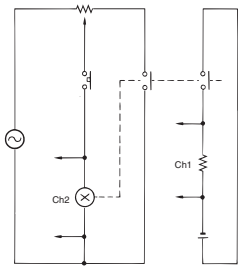

Wave resulted from test

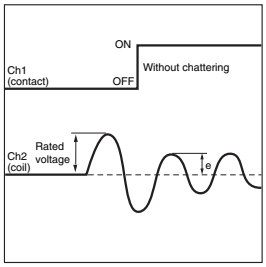

Voltage distribution of wave e which chattering does not occur.

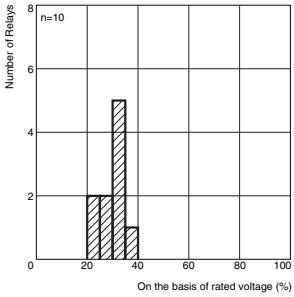

Characteristic variation resulted from different mounting directions

G7L-2A-T (TUB) 100 to 120 VAC

Operate time

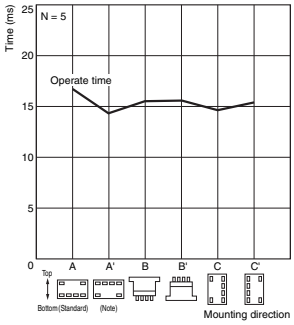

Release time

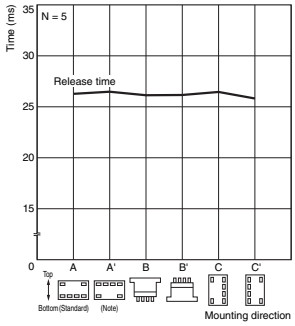

Operate voltage

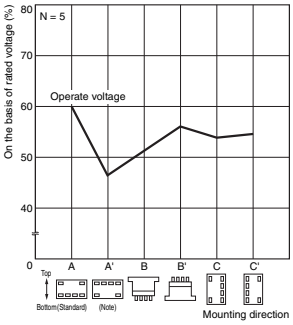

Release voltage

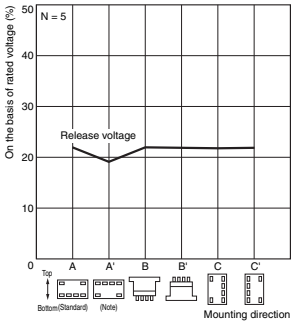

(Note.)The mounting direction A' deteriorates switching performance.

Actual Load Endurance Test

G7L-2A 100 to 200 VAC

Operate and Release voltages

N = 5

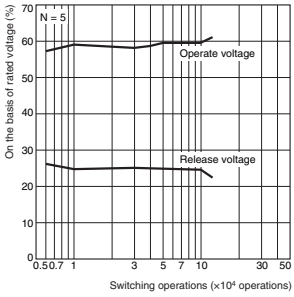

Contact resistance

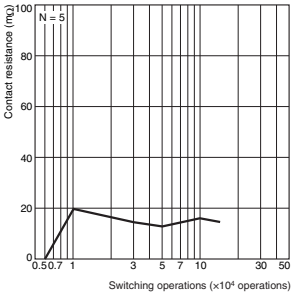

Load conditions

• **1 ϕ 220 VAC**

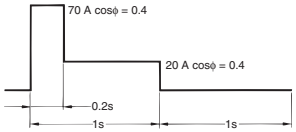

• Applied coil voltage: 100% of rated voltage

Operate and Release voltages

N = 5

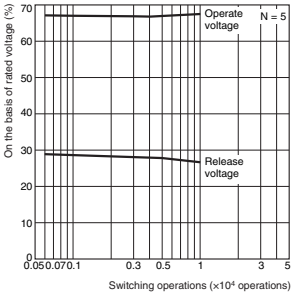

Contact resistance

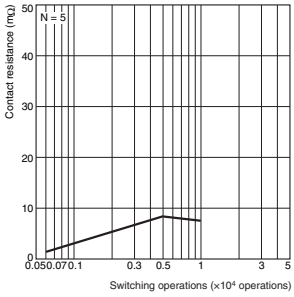

Load conditions

• **1 ϕ 220 VAC**

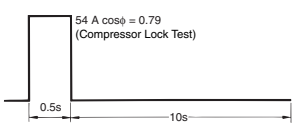

• Applied coil voltage: 100% of rated voltage

G7L-2A 100 to 200 VAC

Operate and Release voltages

N = 5

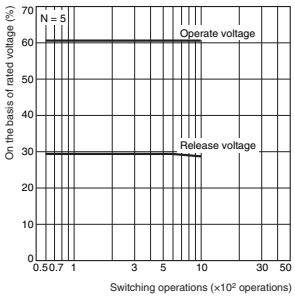

Contact resistance

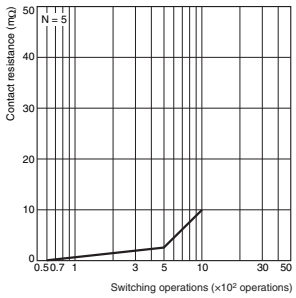

Load conditions

• **1 ϕ 220 VAC**



• Applied coil voltage: 75% of rated voltage

Operate and Release voltages

N = 5

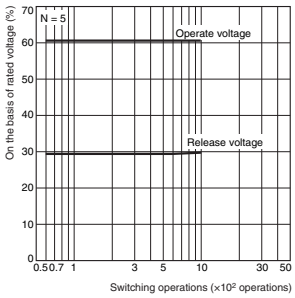

Contact resistance

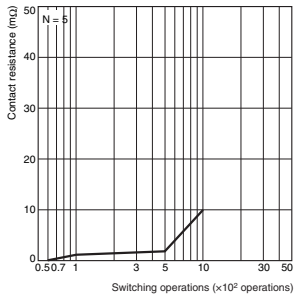

Load conditions

• **1 ϕ 220 VAC**

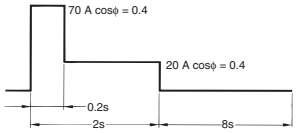

• Applied coil voltage: 75% of rated voltage

■Dimensions

● E-bracket Mounting

Quick-connect Terminals Note. E-brackets are sold separately.

G7L-1A-T

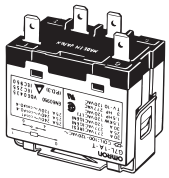

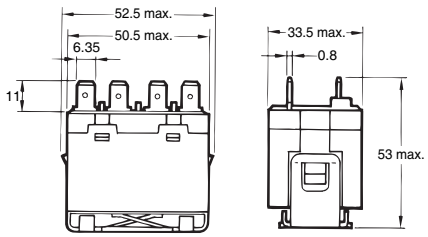

Terminal Arrangement/ Internal Connections
(Top View)



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-T

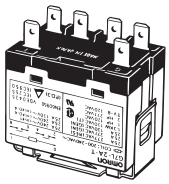

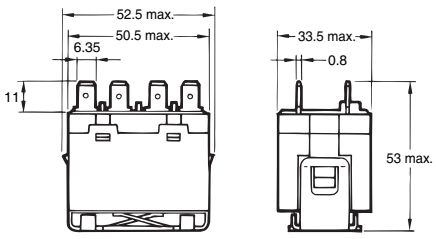



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-1A-TJ
(with Test Button)

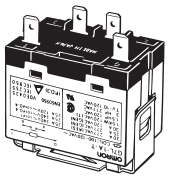

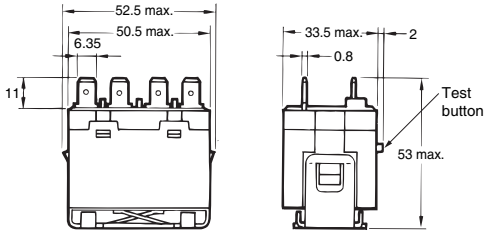



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-TJ
(with Test Button)

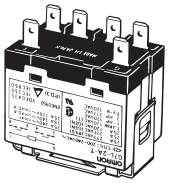

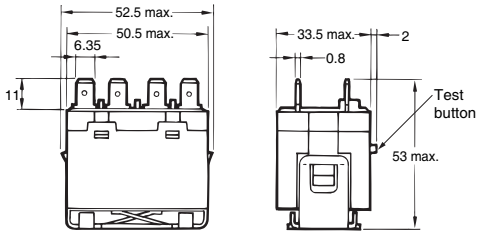



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

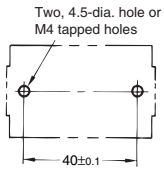

● Adapter Mounting Quick-connect Terminals

Note 1. The DIN Track Mounting Adapter and DIN tracks are sold separately.
2. The DIN Track Mounting Adapter can be track-mounted or screw-mounted.

G7L-1A-T

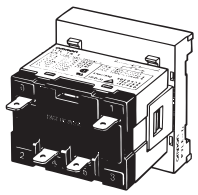

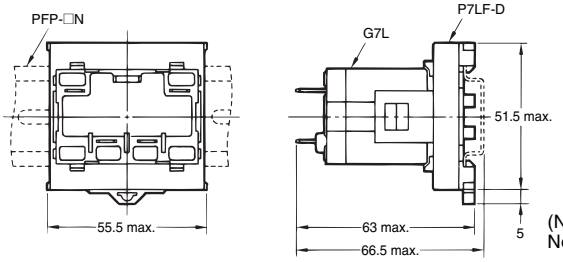

Terminal Arrangement/ Internal Connections
(Top View)

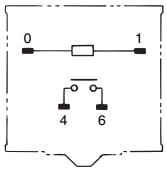

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-T

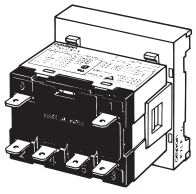

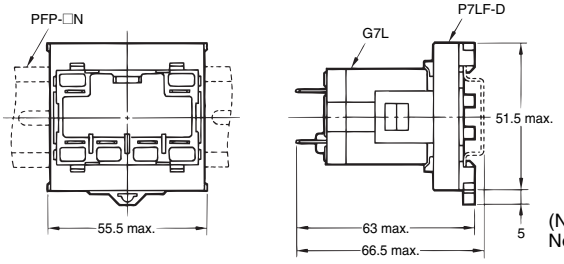

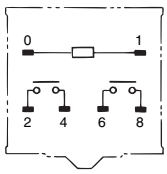

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

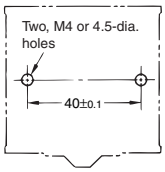

G7L-1A-TJ (with Test Button)

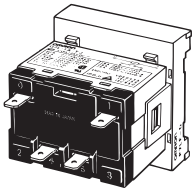

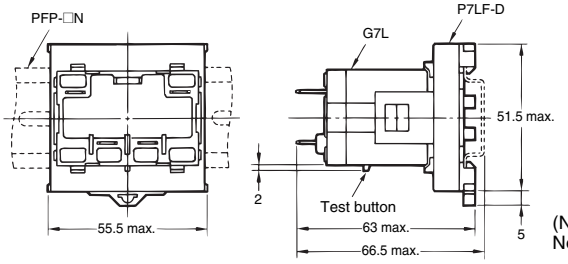

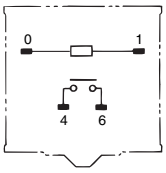

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-TJ (with Test Button)

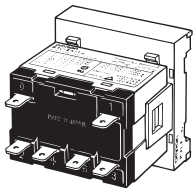

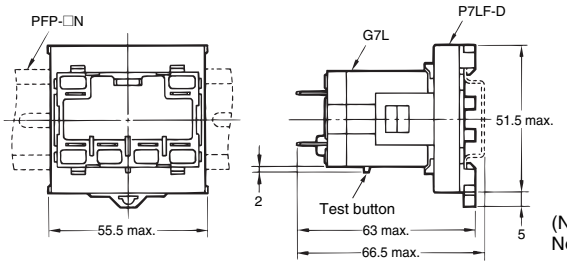

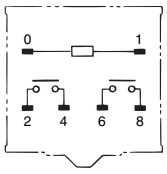

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

● Front-connecting Socket Mounting Quick-connect Terminals

Note 1. The Front-connecting Socket and DIN tracks are sold separately.
2. The Front-connecting Socket can be track-mounted or screw-mounted.

G7L-1A-T

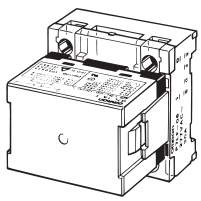

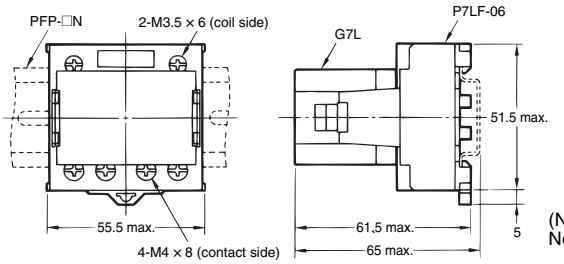

Terminal Arrangement/ Internal Connections
(Top View)

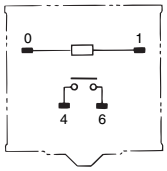

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

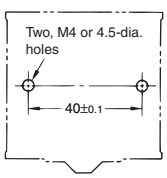

G7L-2A-T

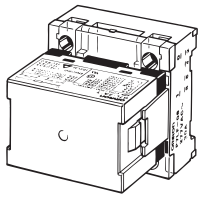

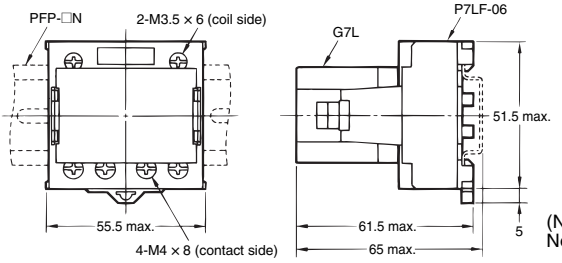

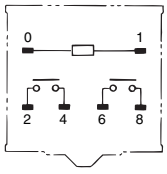

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G 7 L

G7L-1A-TJ (with Test Button)

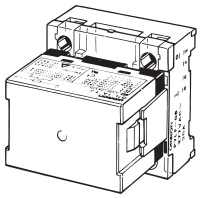

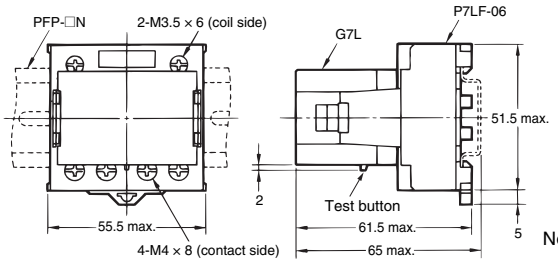

Terminal Arrangement/ Internal Connections (Top View)

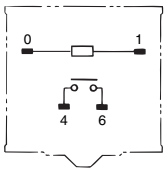

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

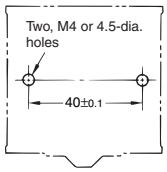

G7L-2A-TJ (with Test Button)

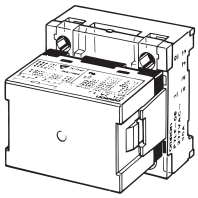

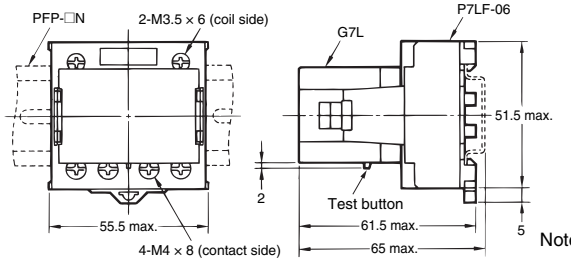

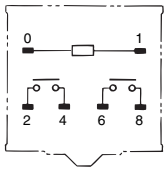

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

● Upper Bracket Mounting Quick-connect Terminals

G7L-1A-TUB

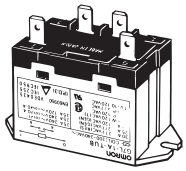

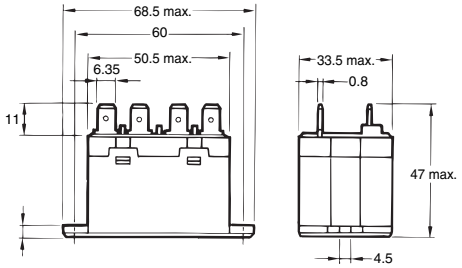

Terminal Arrangement/ Internal Connections (Top View)



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-TUB

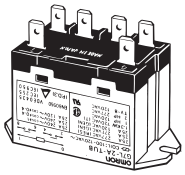

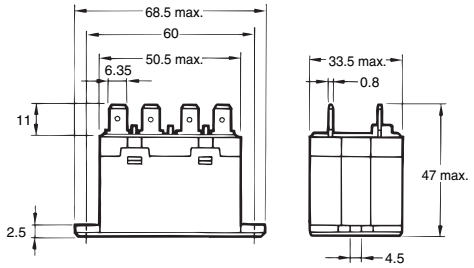



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

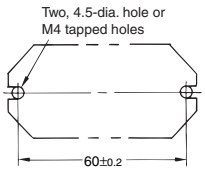

G7L-1A-TUBJ (with Test Button)

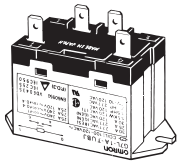

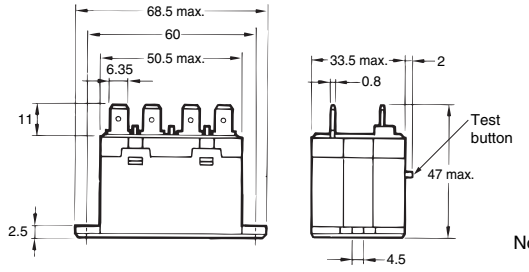



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-TUBJ (with Test Button)

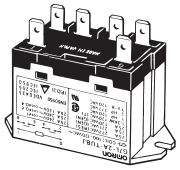

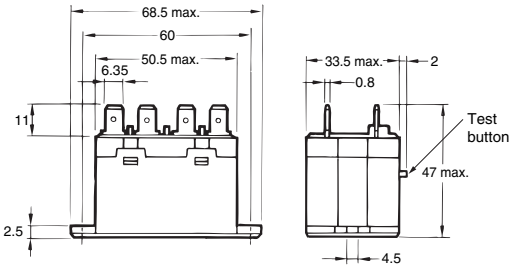



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

● E-bracket Mounting Screw Terminals

Note. E-brackets are sold separately.

G7L-1A-B

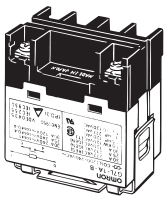

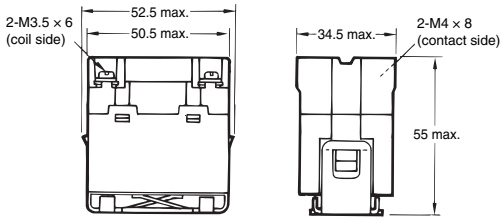

Terminal Arrangement/ Internal Connections
(Top View)



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-B

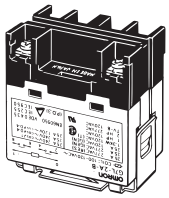

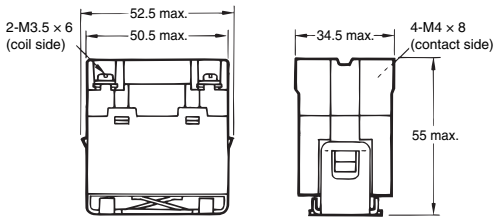



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-1A-BJ (with Test Button)

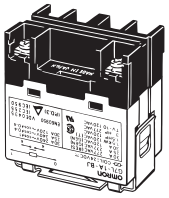

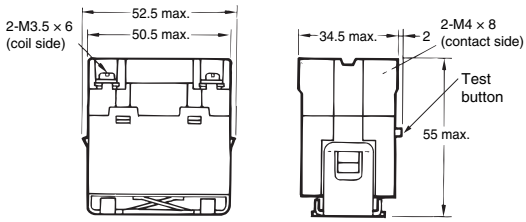



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-BJ (with Test Button)

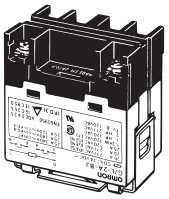

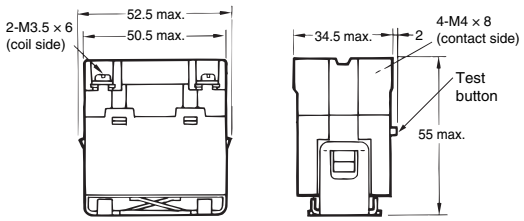



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

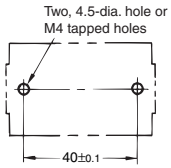

● Adapter Mounting Screw Terminals

Note 1. The DIN Track Mounting Adapter and DIN tracks are sold separately.
2. The DIN Track Mounting Adapter can be track-mounted or screw-mounted.

G7L-1A-B

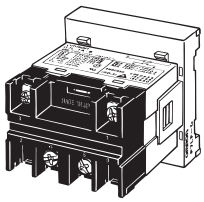

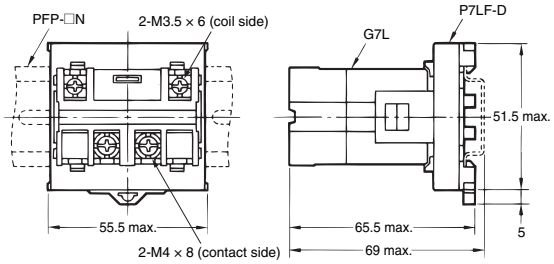

Terminal Arrangement/ Internal Connections
(Top View)

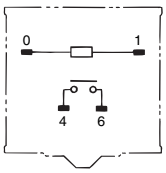

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-B

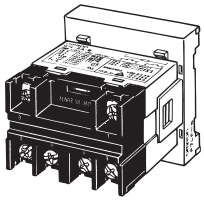

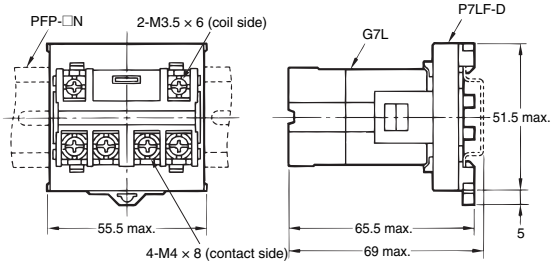

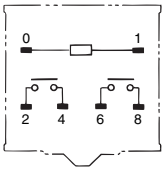

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

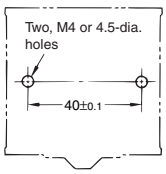

G7L-1A-BJ (with Test Button)

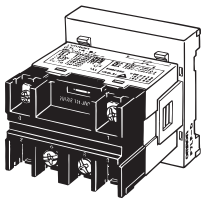

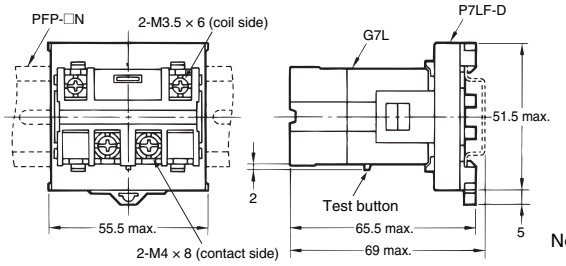

Terminal Arrangement/ Internal Connections (Top View)

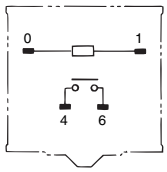

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

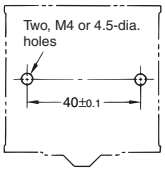

G7L-2A-BJ (with Test Button)

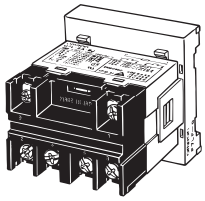

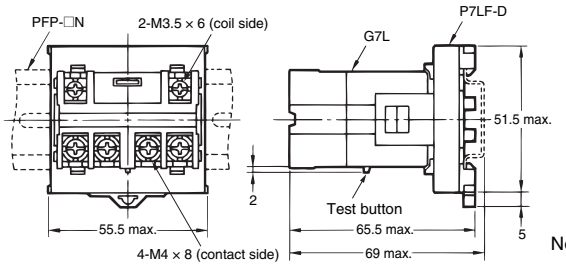

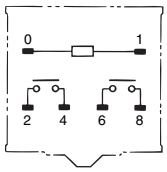

(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

● Upper Bracket Mounting Screw Terminals

G7L-1A-BUB

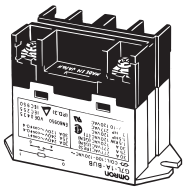

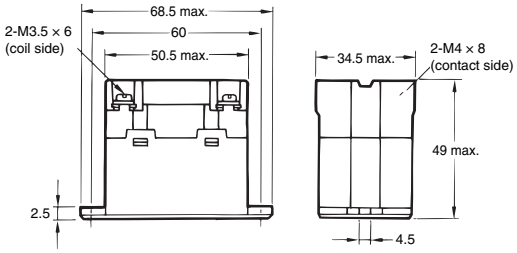

Terminal Arrangement/ Internal Connections (Top View)



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-BUB

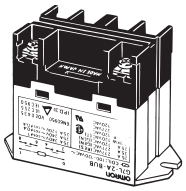

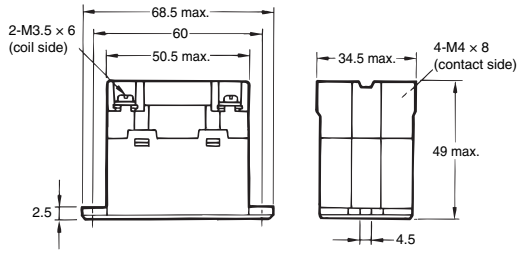



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

Mounting Holes

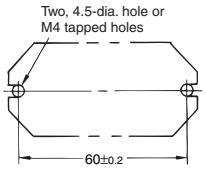

G7L-1A-BUBJ (with Test Button)

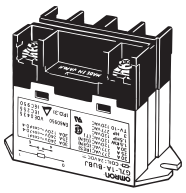

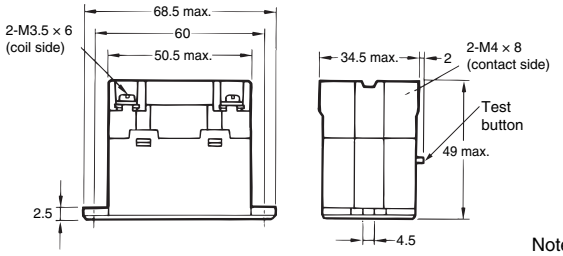



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

G7L-2A-BUBJ (with Test Button)

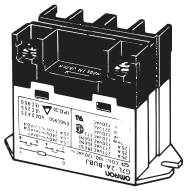

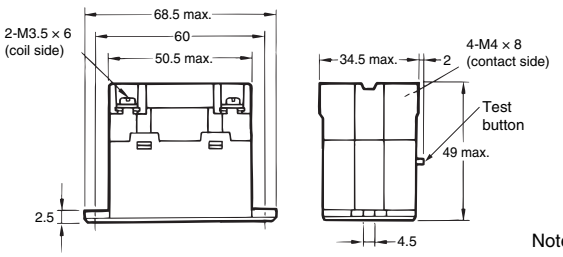



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

● PCB Mounting
PCB Terminals

G7L-1A-P

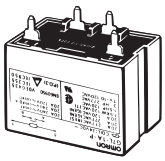

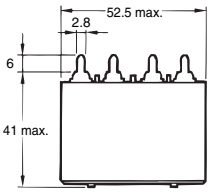

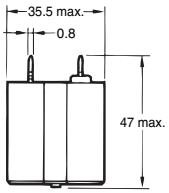

Terminal Arrangement/ Internal Connections
(Top View)



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

PCB Mounting Holes
(Bottom View)
Tolerance: ±0.1 mm

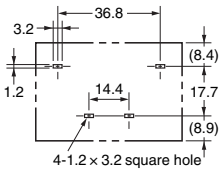

G7L-2A-P

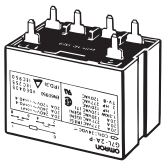

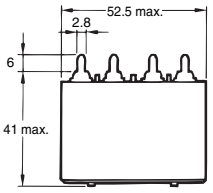

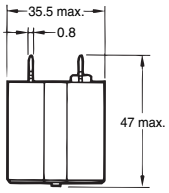

Terminal Arrangement/ Internal Connections
(Top View)



(No coil polarity)
Note. Refer to page 12 for the coil internal connection diagram

PCB Mounting Holes
(Bottom View)
Tolerance: ±0.1 mm

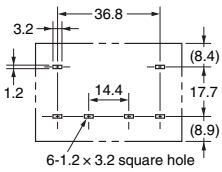

● E-bracket
R99-07 (E KANAGU)
FOR G7L



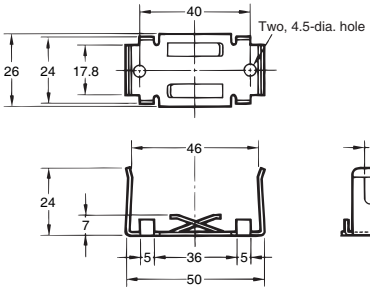

Mounting Holes



● Adapter
P7LF-D

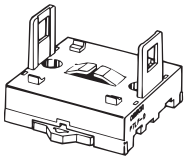

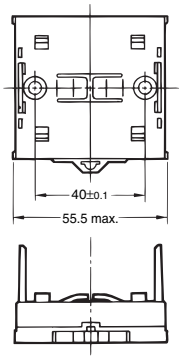

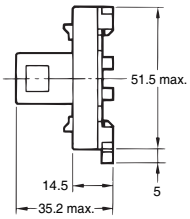

Mounting Holes

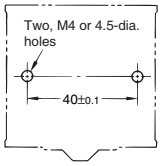

● Front-connecting Socket
P7LF-06

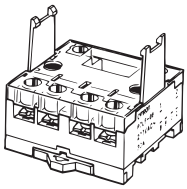

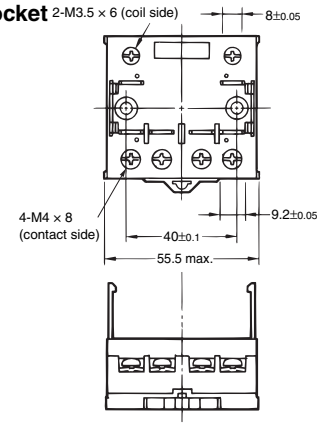

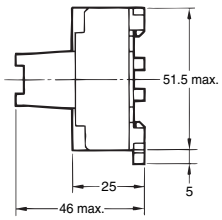

Mounting Holes

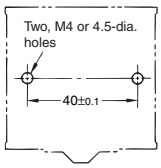

● Cover
P7LF-C

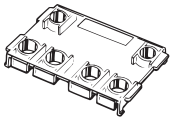

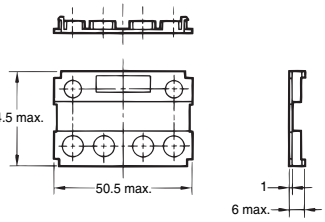

Put the P7LF-C cover onto the terminals in order to protect the user from electric shock.

Approved Standards

・A variety of Safety Standard approved products for standard models.

UL approval (File No. E41643)

Model	Coil ratings	Contact ratings	Number of test operations
		SPST-NO	
G7L-1A-T□ G7L-1A-B□ G7L-1A-P G7L-2A-T□ G7L-2A-B□ G7L-2A-P	12 to 240 VAC 6 to 220 VDC	30 A, 277 VAC (RES) 40°C	100,000
		1.5 kW, 120 VAC (T) 40°C	6,000
		1.5 HP, 120 VAC 40°C	1,000
		3 HP 277 VAC 40°C	100,000
		20 FLA/120 LRA, 120 VAC 40°C	30,000
		17 FLA/102 LRA, 277 VAC 40°C	
		TV-10, 120 VAC 40°C	25,000

CSA approval (File No. LR31928)

Model	Coil ratings	Contact ratings	Number of test operations
		SPST-NO	
G7L-1A-P	12 to 240 VAC 6 to 220 VDC	2.4 kW, 120 VAC (T) 40°C	6,000
		1.5 HP, 120 VAC (T) 40°C	1,000
		3 HP 277 VAC 40°C	
		20.5 FLA/105 LRA, 120 VAC 85°C	100,000
		TV-10, 120 VAC 40°C	25,000
G7L-1A-T□ G7L-1A-B□ G7L-2A-T□ G7L-2A-B□ G7L-2A-P	12 to 240 VAC 6 to 220 VDC	30 A, 277 VAC (RES) 40°C	100,000
		2.4 kW, 120 VAC (T) 40°C	6,000
		1.5 HP, 120 VAC 40°C	1,000
		3 HP 277 VAC 40°C	
		20.5 FLA/105 LRA, 120 VAC 85°C	100,000
		TV-10, 120 VAC 40°C	25,000

●Reference

UL Approved Type .....

UL508 Industrial Control Devices

UL1950 Information processing equipment (Including office equipment)

CSA Approved Type.....

CSA C22.2 No.1, 14 Industrial Control Devices

CSA C22.2 No.950 Information processing equipment (Including office equipment)

TÜV EN/IEC Standard Approved Type .....

EN61810-1 Relay

EN60950 Information processing equipment (Including office equipment)

IEC950 Information processing equipment (Including office equipment)

EN/IEC, TÜV Approval (File No. R50059083)

Model	Coil ratings	Contact ratings	Approved switching operations
		SPST-NO	
G7L-1A-B□	6, 12, 24, 48, 100, 110, 200, 220 VDC 12, 24, 50, 100 to 120, 200 to 240 VAC	30 A, 250 VAC ~ (cosϕ = 1) 60°C 25 A, 250 VAC ~ (cosϕ = 0.4) 60°C 30 A, 120 VAC ~ (cosϕ = 0.4) 60°C	50,000
		DPST-NO	
G7L-2A-B□		25 A, 277 VAC ~ (cosϕ = 1) 60°C 25 A, 277 VAC ~ (cosϕ = 0.4) 60°C	50,000
		SPST-NO	
G7L-1A-T□		25 A, 240 VAC ~ (cosϕ = 1) 60°C 25 A, 240 VAC ~ (cosϕ = 0.4) 60°C 25 A, 277 VAC ~ (cosϕ = 1) 60°C 25 A, 277 VAC ~ (cosϕ = 0.4) 60°C	50,000
		DPST-NO	
G7L-2A-T□		25 A, 240 VAC ~ (cosϕ = 1) 60°C 25 A, 240 VAC ~ (cosϕ = 0.4) 60°C 25 A, 277 VAC ~ (cosϕ = 1) 60°C 25 A, 277 VAC ~ (cosϕ = 0.4) 60°C	50,000
		SPST-NO	
G7L-1A-P		20 A, 240 VAC ~ (cosϕ = 1) 60°C 20 A, 240 VAC ~ (cosϕ = 0.4) 60°C 25 A, 277 VAC ~ (cosϕ = 1) 60°C 25 A, 277 VAC ~ (cosϕ = 0.4) 60°C	50,000
		DPST-NO	
G7L-2A-P		20 A, 240 VAC ~ (cosϕ = 1) 60°C 20 A, 240 VAC ~ (cosϕ = 0.4) 60°C 25 A, 277 VAC ~ (cosϕ = 1) 60°C 25 A, 277 VAC ~ (cosϕ = 0.4) 60°C	50,000

■Precautions

● Please refer to "PCB Relays Common Precautions" for general precautions.

Correct Use

● Installation

- Although there are not specific limits on the installation site, it should be as dry and dust-free as possible.
- Using in an atmosphere of high temperature, high humidity and corrosive gas may deteriorate its performance characteristic caused by condensation or corrosive products, resulting in failure or burn damage of the Relay.
- PCB Terminal-equipped Relays weigh approximately 100 g.
  Be sure that the PCB is strong enough to support them. We recommend dual-side through-hole PCBs to reduce solder cracking from heat stress.
- Relays with test buttons must be mounted facing down.
  Be careful not to touch the test button accidentally. Doing so may turn ON the contact.
- Be sure to use the test button for test purposes only (with test-button models). The test button is used for Relay circuit tests, such as circuit continuity tests. Do not attempt to switch the load with the test button.

● Micro Loads

- The G7L is used for switching power loads, such as motor, transformer, solenoid, lamp, and heater loads. Do not use the G7L for switching micro loads, such as signals.

● Soldering PCB Terminals

- Do not perform automatic soldering but solder manually.
- Do not wash down the entire Relay because it does not have an airtight construction.

● Connecting

- Refer to the following table when connecting a wire with a crimpstyle terminal to the G7L.

	Screw terminals	Front-connecting Socket
Coil		
Contact		

- Allow suitable slack on leads when wiring, and do not apply excessive force to the terminals.
- Tightening torque
  Coil: 0.78 to 1.18 N · m
  Contact: 0.98 to 1.37 N · m

When connecting with screws, if the screws are not sufficiently tightened, the lead wire can become detached and may lead to abnormal heating or fire caused by faulty contact.

- Mounting Torque
  0.98N · m
  Tighten with two M4 screws when mounting.
  (Top bracket type)
- Do not apply excessive force when mounting or dismounting the Faston receptacle.Insert and remove terminals carefully one at a time. Do not insert terminals at an angle, or insert/remove multiple terminals at the same time.
- Do not connect to the terminals by soldering

Type	Receptacle terminals*	Positive housing
#250 terminals (width: 6.35 mm)	AMP 170333-1 (170327-1) AMP 170334-1 (170328-1) AMP 170335-1 (170329-1)	AMP 172076-1 natural color AMP 172076-4 yellow AMP 172076-5 green AMP 172076-6 blue

* The numbers shown in parentheses are for air-feeding.
Note 1. The current should be 25 A when using receptacle terminals.
Note 2. Use receptacle terminals or positive housing for cable wiring.

● Reference Data

- The ratio of rated voltage between 100 to 120 VAC are values measured on the basis of 100 VAC.

● Operating Coil

(Coil internal connections diagram)

- AC Coil

- DC Coil

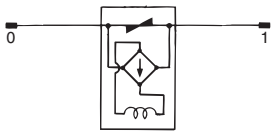

- If a transistor drives the G7L check the leakage current, and connect a bleeder resistor if necessary.
- The AC coil is provided with a built-in full-wave rectifier. If a triac, such as an SSR, drives the G7L, the G7L may not release. Be sure to perform a trial operation with the G7L and the triac before applying them to actual use.

● DIN Track Mounting Adapter and Front-connecting Socket

(DIN Track Mounting)

- The DIN Track Mounting Adapter and Front-connecting Socket can be mounted on the G7L with just one hand and dismounted with ease by using a screwdriver.
- To support the G7L mounted on a DIN Track Mounting Adapter or Front-connecting Socket, use the PFP-M End Plate. Put the End Plate onto the DIN Track Mounting Adapter or Front-connecting Socket so that the surface mark of the End Plate faces upwards. Then tighten the screw of the End Plate securely with a screwdriver.

(Screw Mounting)

- Screw-mount the DIN Track Mounting Adapter or Front-connecting Socket securely after opening screw mounting holes on them.
- When cutting or opening holes on the panel after the Front-connecting Socket is mounted, take proper measures so that the cutting chips will not fall onto the Relay terminals. When cutting or opening holes on the upper part of the panel, mask the Front-connecting Socket properly with a cover.

Application examples provided in this document are for reference only. In actual applications, confirm equipment functions and safety before using the product.
Consult your OMRON representative before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems or equipment that may have a serious influence on lives and property if used improperly. Make sure that the ratings and performance characteristics of the product provide a margin of safety for the system or equipment, and be sure to provide the system or equipment with double safety mechanisms.

Note: Do not use this document to operate the Unit.

OMRON Corporation
ELECTRONIC AND MECHANICAL COMPONENTS COMPANY **Contact: www.omron.com/ecb**

Cat. No. J055-E1-06
0513(0207)(O)