


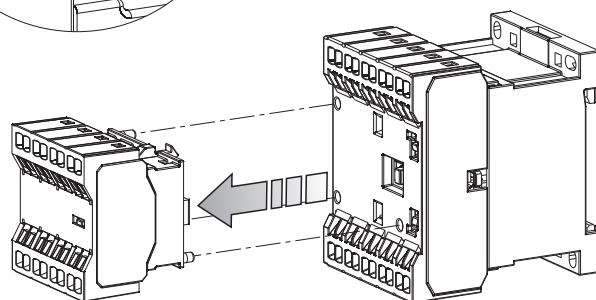
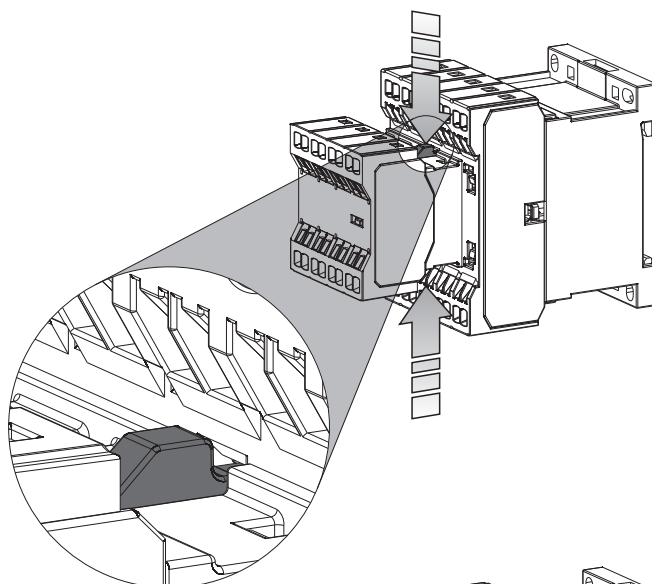
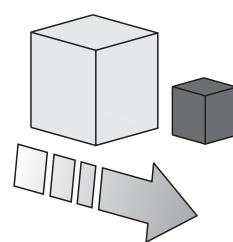
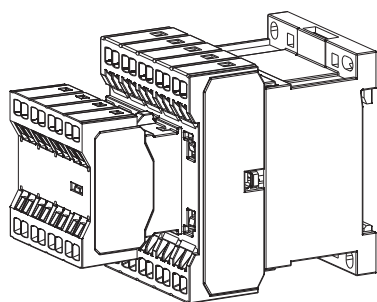


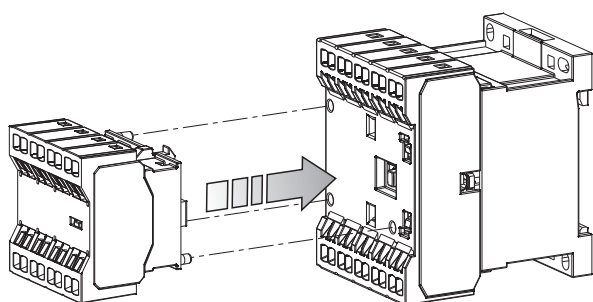



INSTRUÇÃO DE MONTAGEM - BLOCO DE CONTATO FRONTAL PARA CWC0 - TERMINAL MOLA
ASSEMBLY INSTRUCTION - FRONT CONTACT BLOCK FOR CWC0 - SPRING TERMINAL
INSTRUCTIVO DE MONTAJE - BLOQUE DE CONTACTO FRONTAL PARA CWC0 - TERMINAL RESORTE
MONTAGEANLEITUNG - HILFSSCHALTERBLOCK FÜR CWC0 - FEDERZUGKLEMME

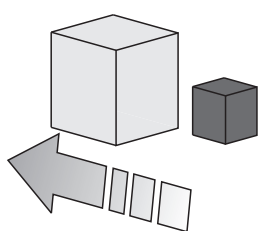

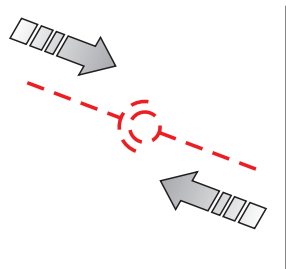

Auxiliary Contact Block
Bloques de Contactos Auxiliares
Blocos de Contatos Auxiliares
Hilfsschalterblöcke

A	B
2 X 0,5...1,5 22 -16 (mm ² / AWG)	7mm / 0,27" (mm / pol)

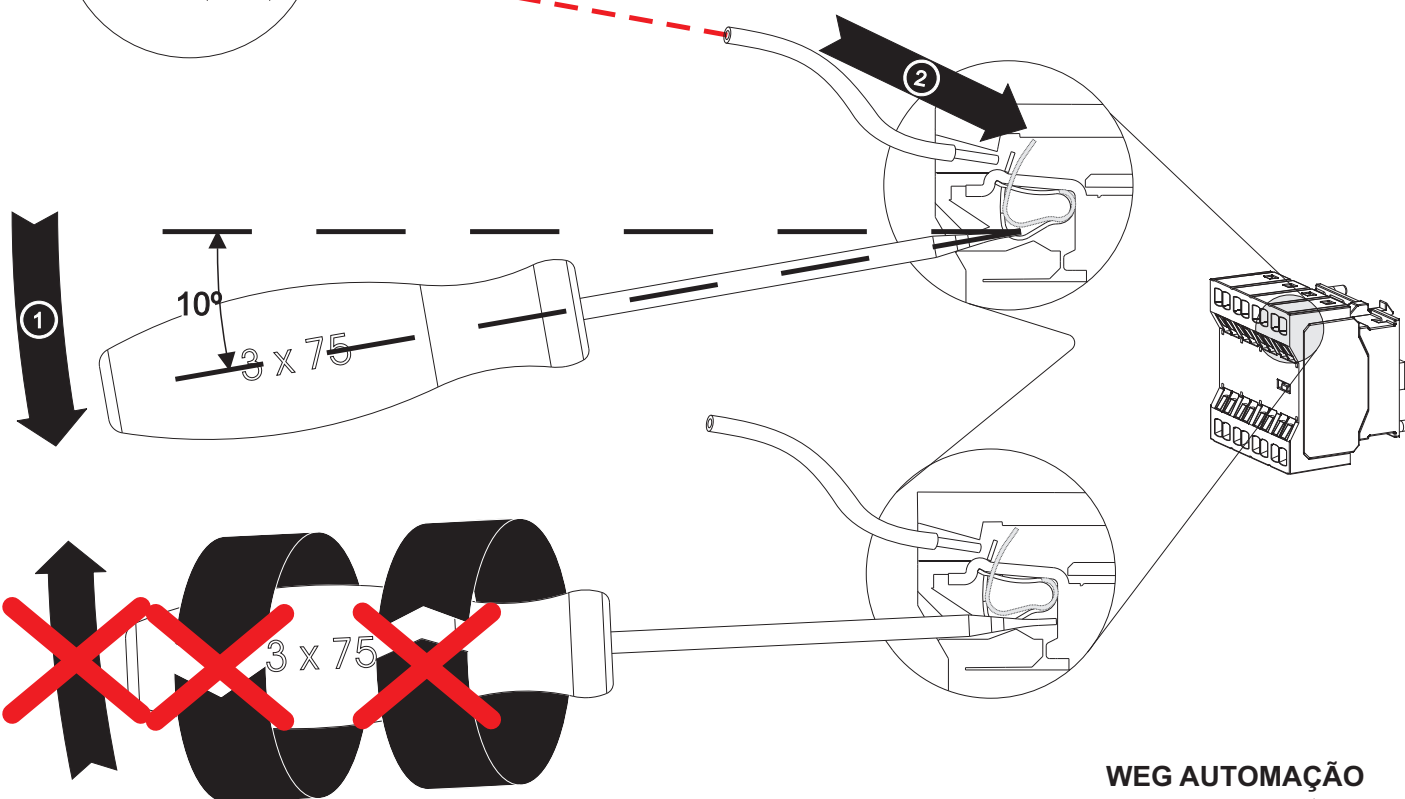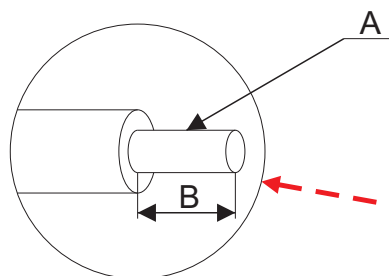

WEG AUTOMAÇÃO
www.weg.net