


TO INSTALL, JUST FACE THE FRONT FLANGE ONTO THE DESIRED SURFACE. USING A PENCIL, MARK THE FOUR POINTS USING THE HOLES IN THE FOUR CORNERS ON THE FLANGE. DRAW A LINE CONNECTING THE FOUR POINTS, AND CUT ON THE LINES.

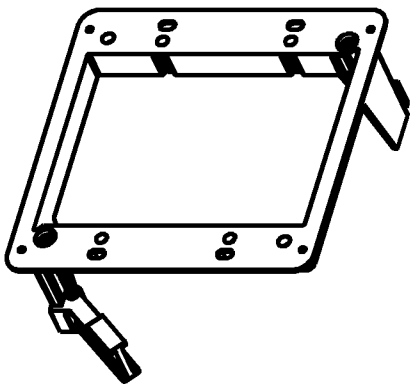

P/N SC200RR

GENERAL NOTES		<div>Thomas & Betts</div> <div>www.tnb.com</div>			
1. ALL DIMENSIONS ARE FOR REFERENCE ONLY. 2. DIMENSIONS IN BRACKETS [] ARE IN METRIC UNITS.					
REVISIONS		DESCRIPTION: 2 GANG LOW VOLTAGE BRACKET			
**	SEE ERN (****) FOR APPROVAL SIGNATURES & RELEASE DATE. PROJECT NO: ****	ORIGINAL PROJECT NO / (ERN NO) / ()	SHEET NO: 1 OF 1	REV. NO: C	DRAWING NO: WSD-AC04768

THIS DRAWING IS INTENDED FOR DESCRIPTIVE PURPOSES ONLY, AND THE RIGHT IS RESERVED TO DEVIATE FROM ANY OF THE DETAILS SHOWN HEREON.
©2008 Thomas & Betts - Proprietary, All Rights Reserved

WARNING:
FOR USE WITH LOW VOLTAGE CLASS 2 DEVICES ONLY.
DO NOT USE AS A SUBSTITUTE FOR A CONVENTIONAL SWITCH/OUTLET BOX.

NOTES:
1.) PRODUCT IS ORANGE W/ ORANGE FLIPPERS.
2.) INSTALLATION HOLE DIMENSIONS: 3.96 +.10 / -.00 x 3.65 +.15 / -.00