



PSoC® 3 DEVELOPMENT KIT QUICK START GUIDE

1

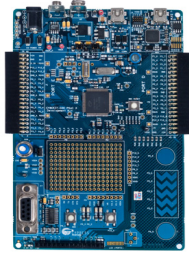


Remove the PSoC 3 Development Kit from the package.

2

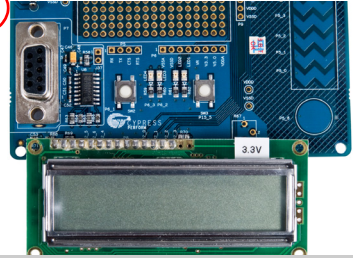


Plug the LCD Module into port P8.

3

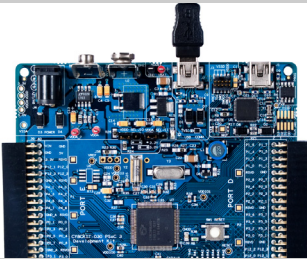

Plug the USB cable into your PC and the USB communications port (J2).

4

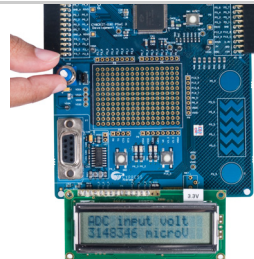


Vary the R56 potentiometer. The voltage is displayed with 16 bits of precision on the LCD module.

5




Insert the PSoC 3 Development Kit CD.
Install PSoC Creator and the kit software.

6

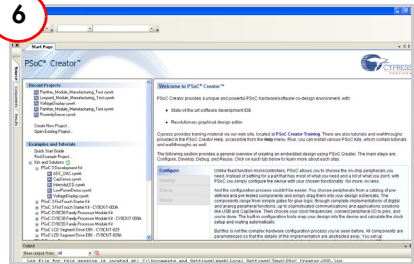

Launch PSoC Creator.
Open the code examples from the Start page.

PSoC 3 Development Kit Details

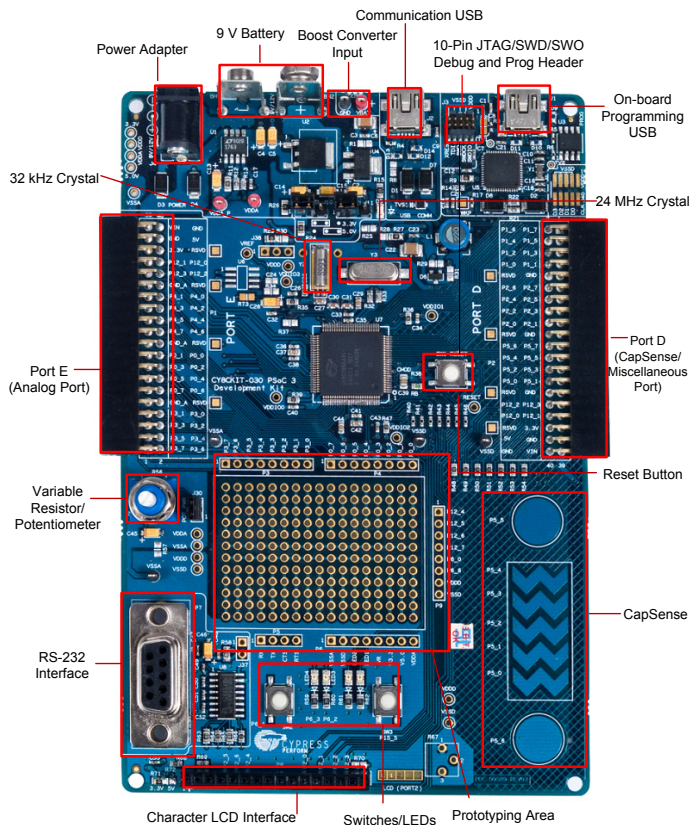

For the latest information about this kit, visit
<http://www.cypress.com/go/CY8CKIT-030>

