




INSTALLING THE
RASPBERRY PI INTO
THE 1593HAMPI
ENCLOSURE

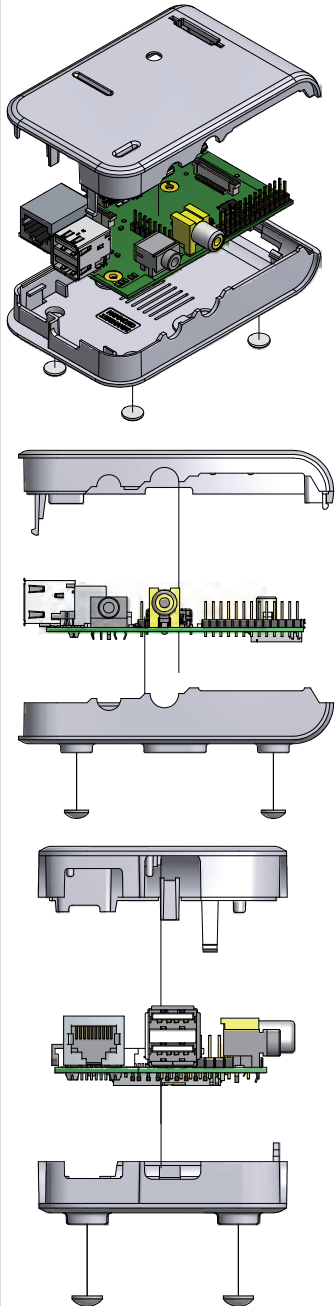


STEP 1
TAKE THE BOTTOM
PART OF THE
ENCLOSURE AND
INSERT THE
DEVELOPMENT BOARD
ON AN ANGLE AGAINST
THE STATIONARY
CLIPS.

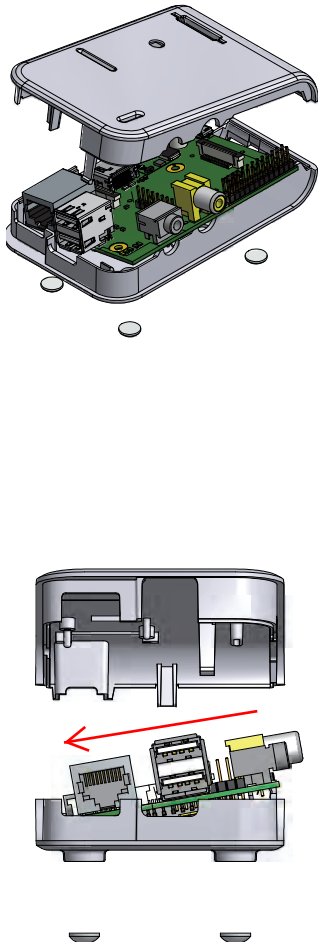

STEP 2
PUSH DOWN FIRMLY
ON THE RCA JACK
UNTIL YOU HEAR THE
BOARD CLICK IN
PLACE.

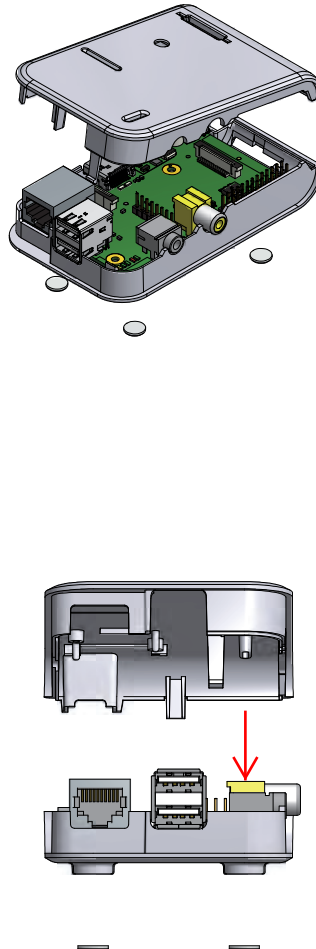


STEP 3
TAKE THE TOP
PART OF THE
ENCLOSURE AND
TOUCH THE TWO
ROUNDED ENDS
TOGETHER ON AN
ANGLE.

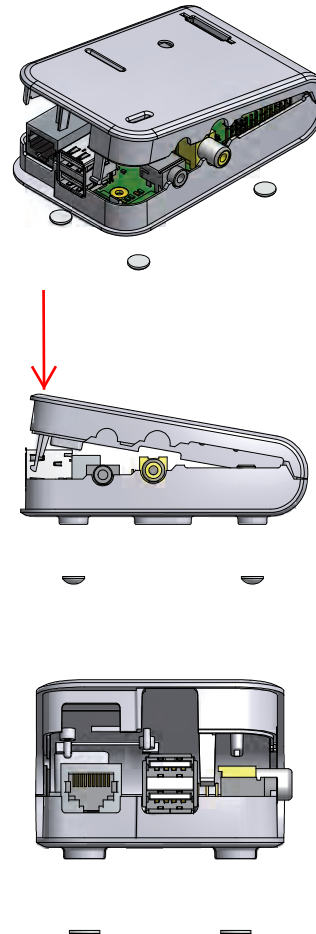

STEP 4
PUSH DOWN ON
THE OUTER TOP
EDGE OF THE
ENCLOSURE UNTIL
YOU HEAR A
SNAPPING SOUND.

PLACE RUBBER
ADHESIVE FEET IN
THE CIRCLES ON
THE BOTTOM OF
THE ENCLOSURE.

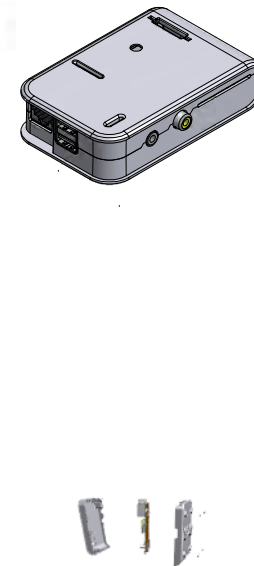

TO DISASSEMBLE,
PULL BACK CLIP
ON THE BOTTOM
AND SEPARATE
CASE

