


## Notes:

1. No tracks or vias in the shaded "KEEP OUT" AREA.
2. No other track or signal within 0.020" of any contact pad.
3. Do not allow solder paste on the contact pads. It is essential to eliminate any hole in the solder paste-mask (solder stencil) layer. If this is not possible make the contact pads thru-hole with finished hole size of 0.008" or less.
4. To avoid ordering confusion, please specify DNL in your BOM.

## FOOTPRINT FOR TC2050-IDC-NL PLUG OF NAILS<sup>(TM)</sup> CABLE

|     |                  |         |    |
|-----|------------------|---------|----|
| REV | TC2050-IDC-NL-FP | 12/2/10 | MS |
|-----|------------------|---------|----|

5. The TC2050-CLIP board can attach to the three alignment pins from underneath the PCB to temporarily retain the cable in place.




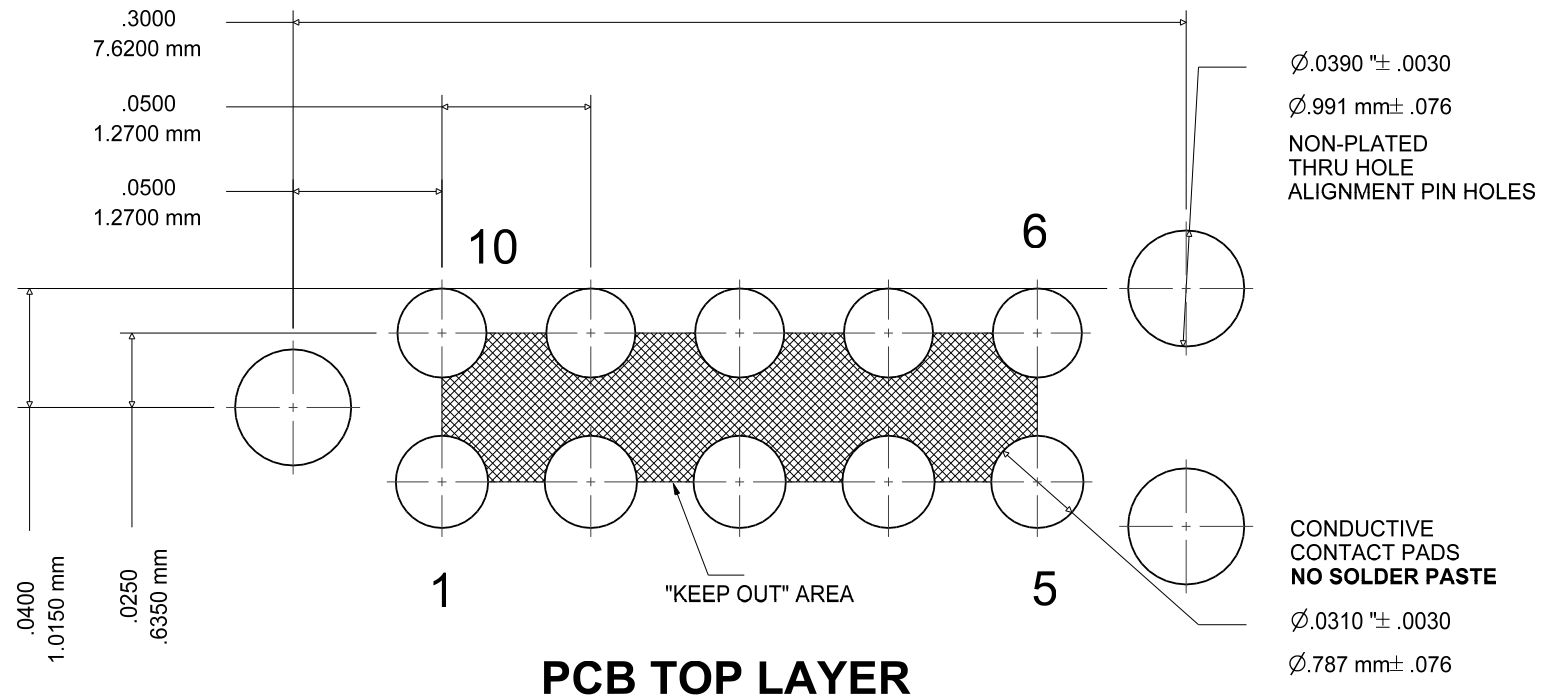


|                  |                     |                                                     |                 |
|------------------|---------------------|-----------------------------------------------------|-----------------|
| SIZE<br><b>A</b> | FSCM NO.            | DWG NO.<br><b>FOOTPRINT FOR<br/>TC2050-IDC-NLFP</b> | REV<br><b>A</b> |
| SCALE 10:1       | www.TAG-CONNECT.com | SHEET 1 of 3                                        |                 |


NOTE:  
Dimensions subject to change

# TC2050-IDC-NL PLUG-OFF-NAILS™ CABLE




| ZONE | REV | TC2050-IDC-NL | 12/2/10 | MS |
|------|-----|---------------|---------|----|
|------|-----|---------------|---------|----|

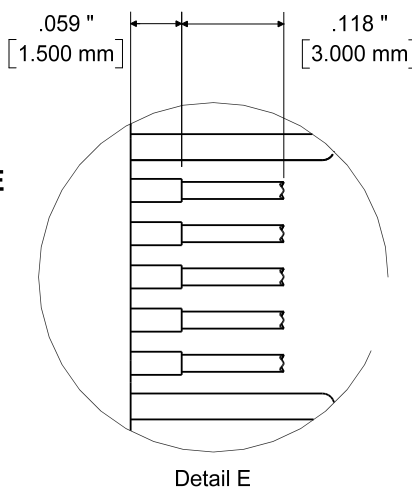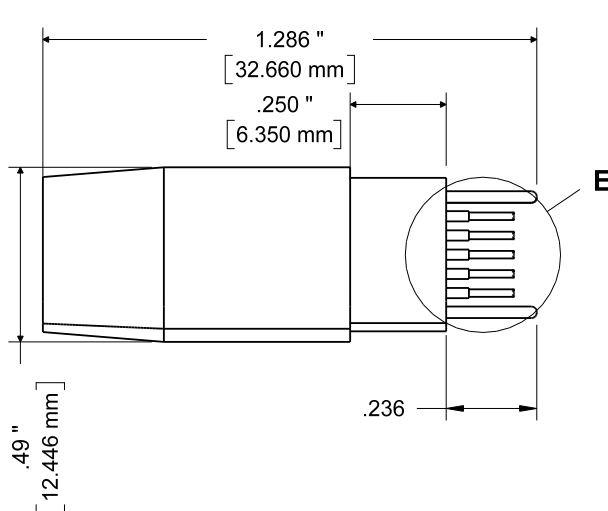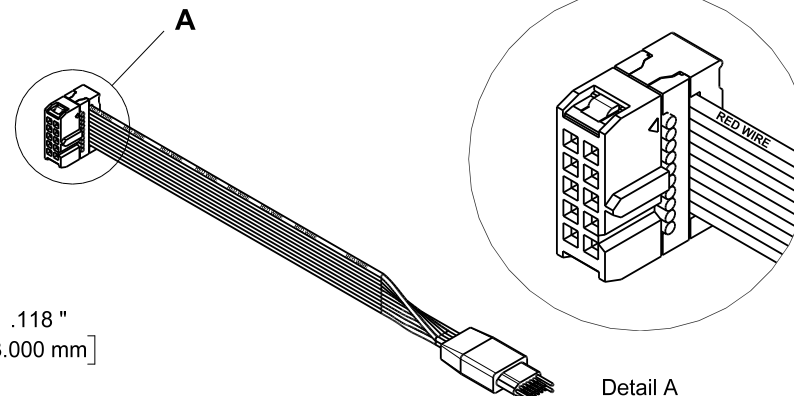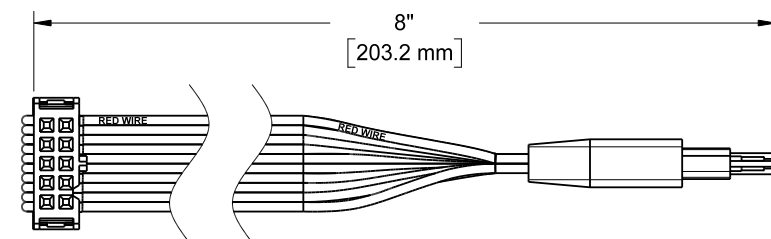

END VIEW  
2x5 .1" IDC CONNECTOR


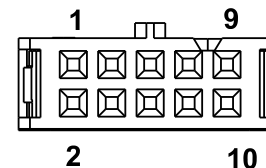


END VIEW  
10 PIN TAG-CONNECT

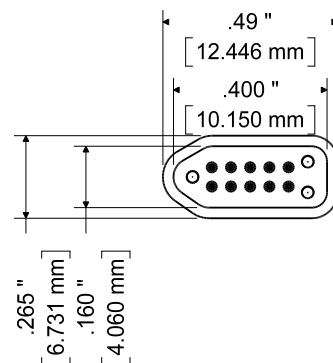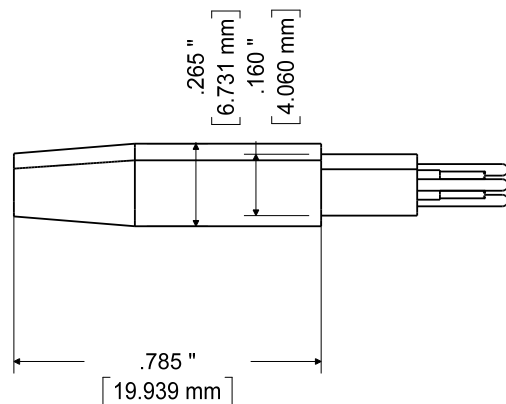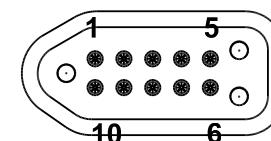



|                  |                                                              |                                 |                 |
|------------------|--------------------------------------------------------------|---------------------------------|-----------------|
| SIZE<br><b>A</b> | FSCM NO.                                                     | DWG NO.<br><b>TC2050-IDC-NL</b> | REV<br><b>A</b> |
| SCALE            | <a href="http://www.TAG-CONNECT.com">www.TAG-CONNECT.com</a> |                                 | SHEET 2 Of 3    |

# Layout Problems to Avoid

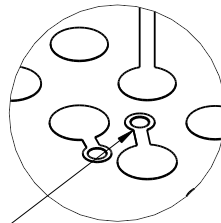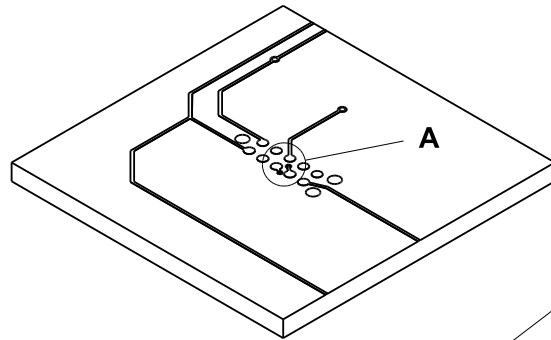



Detail A

Vias between  
contact pads

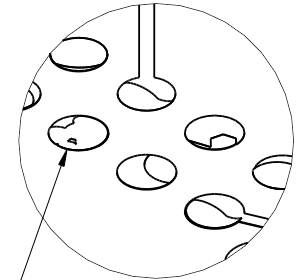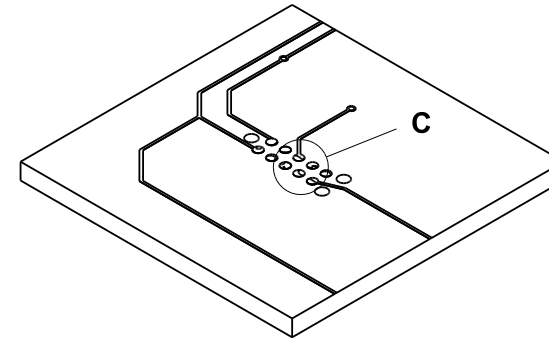

Detail C

Do not deposit solder paste on  
contact pads. View Solder Paste  
Mask (Solder Stencil) layer in  
pad-stack and eliminate any hole.

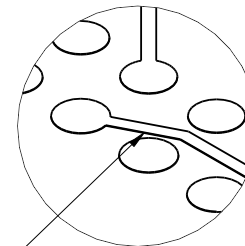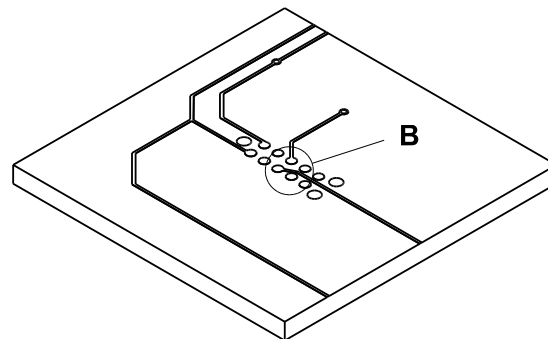

Detail B

Traces less than .02"  
away from contact pad  
or in "KEEP OUT" area