

8-CHANNEL ANALOGUE MULTIPLEXER/DEMULTIPLEXER



The HEF4051B is an 8-channel analogue multiplexer/demultiplexer with three address inputs (A_0 to A_2), an active LOW enable input ($\bar{E}$), eight independent inputs/outputs (Y_0 to Y_7) and a common input/output (Z).

The device contains eight bidirectional analogue switches, each with one side connected to an independent input/output (Y_0 to Y_7) and the other side connected to a common input/output (Z).

With $\bar{E}$ LOW, one of the eight switches is selected (low impedance ON-state) by A_0 to A_2 . With $\bar{E}$ HIGH, all switches are in the high impedance OFF-state, independent of A_0 to A_2 .


V_{DD} and V_{SS} are the supply voltage connections for the digital control inputs (A_0 to A_2 , and $\bar{E}$). The V_{DD} to V_{SS} range is 3 to 15 V. The analogue inputs/outputs (Y_0 to Y_7 , and Z) can swing between V_{DD} as a positive limit and V_{EE} as a negative limit. $V_{DD}-V_{EE}$ may not exceed 15 V.

For operation as a digital multiplexer/demultiplexer, V_{EE} is connected to V_{SS} (typically ground).

Fig. 1 Functional diagram.

FAMILY DATA

I_{DD} LIMITS category MSI
see Family Specifications

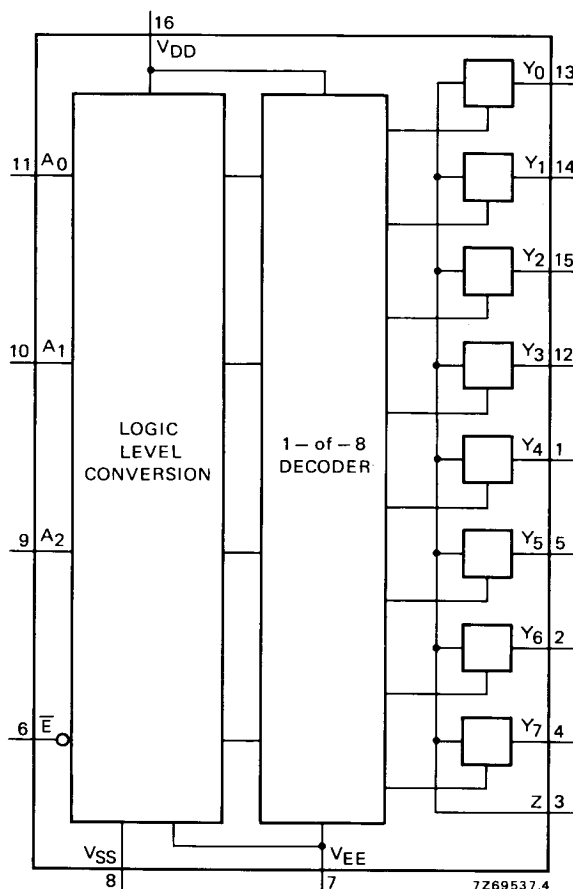

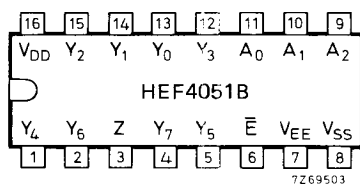


Fig. 2 Pinning diagram.

HEF4051BP : 16-lead DIL; plastic (SOT-38Z).


HEF4051BD : 16-lead DIL; ceramic (cerdip) (SOT-74).

HEF4051BT : 16-lead mini-pack; plastic (SO-16; SOT-109A).

PINNING

Y₀ to Y₇ independent inputs/outputs
 A₀ to A₂ address inputs
 E enable input (active LOW)
 Z common input/output

Fig. 3 Schematic diagram (one switch).

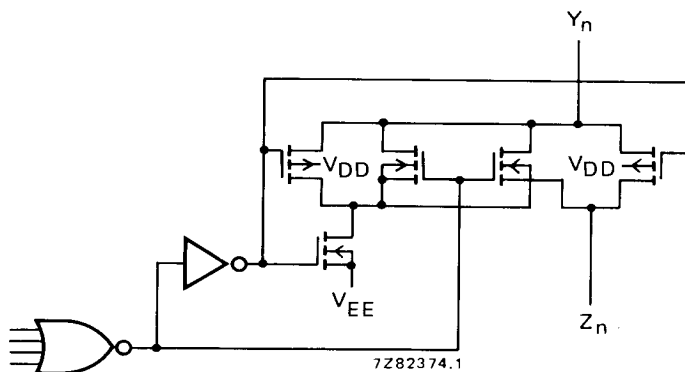**FUNCTION TABLE**

inputs				channel ON
E	A ₂	A ₁	A ₀	
L	L	L	L	Y ₀ -Z
L	L	L	H	Y ₁ -Z
L	L	H	L	Y ₂ -Z
L	L	H	H	Y ₃ -Z
L	H	L	L	Y ₄ -Z
L	H	L	H	Y ₅ -Z
L	H	H	L	Y ₆ -Z
L	H	H	H	Y ₇ -Z
H	X	X	X	none

H = HIGH state (the more positive voltage)

L = LOW state (the less positive voltage)

X = state is immaterial

RATINGS

Limiting values in accordance with the Absolute Maximum System (IEC 134)

Supply voltage (with reference to V_{DD})V_{EE} -18 to +0,5 V**NOTE**

To avoid drawing V_{DD} current out of terminal Z, when switch current flows into terminals Y, the voltage drop across the bidirectional switch must not exceed 0,4 V. If the switch current flows into terminal Z, no V_{DD} current will flow out of terminals Y, in this case there is no limit for the voltage drop across the switch, but the voltages at Y and Z may not exceed V_{DD} or V_{EE}.

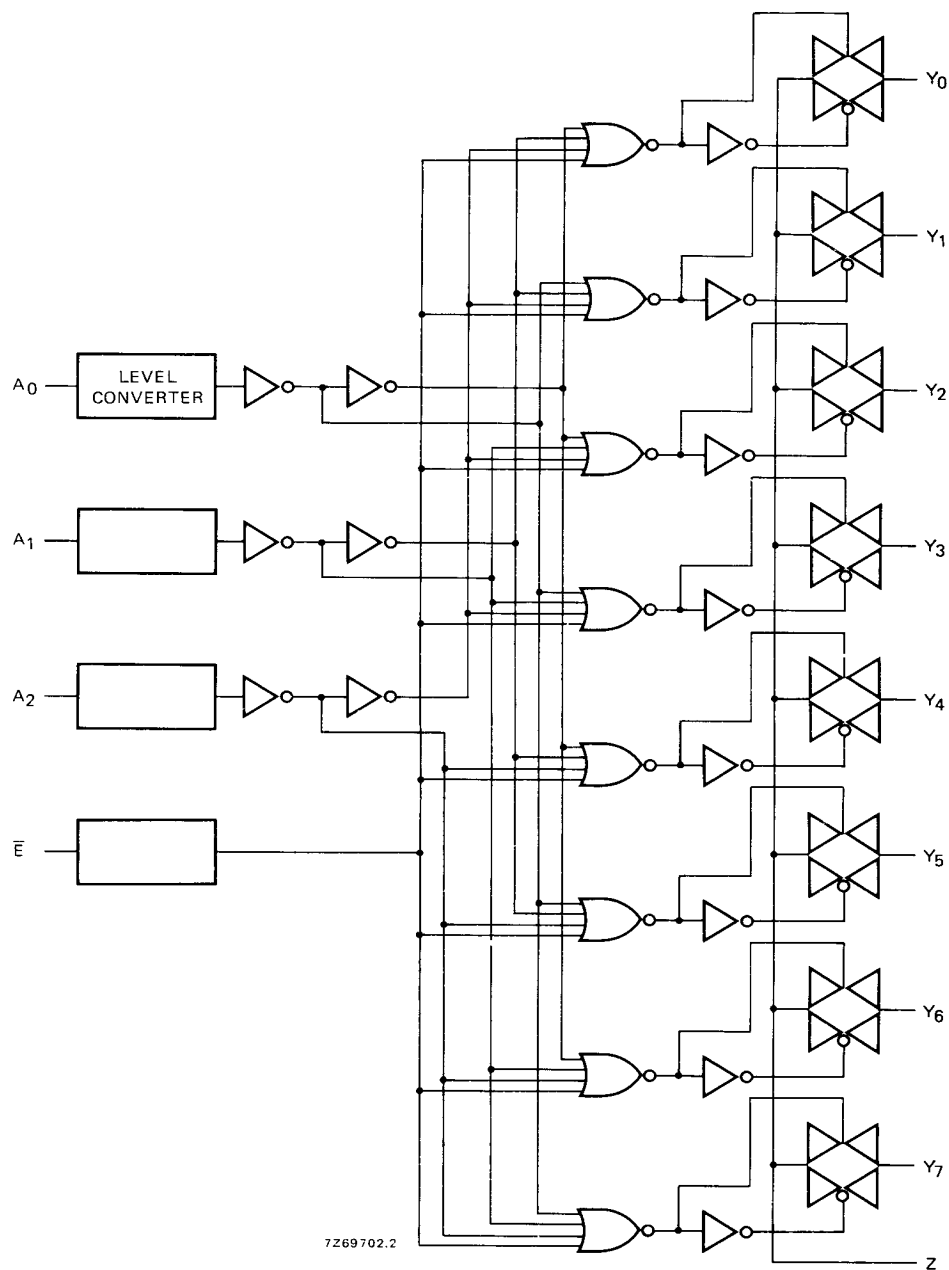


Fig. 4 Logic diagram.

D.C. CHARACTERISTICS

 $T_{amb} = 25^{\circ}\text{C}$

	$V_{DD}-V_{EE}$ V	symbol	typ.	max.	conditions
ON resistance	5	R_{ON}	350	2500 Ω	} $V_{is} = 0$ to $V_{DD}-V_{EE}$ see Fig. 6
	10		80	245 Ω	
	15		60	175 Ω	
ON resistance	5	R_{ON}	115	340 Ω	} $V_{is} = 0$ see Fig. 6
	10		50	160 Ω	
	15		40	115 Ω	
ON resistance	5	R_{ON}	120	365 Ω	} $V_{is} = V_{DD}-V_{EE}$ see Fig. 6
	10		65	200 Ω	
	15		50	155 Ω	
' Δ ' ON resistance between any two channels	5	ΔR_{ON}	25	— Ω	} $V_{is} = 0$ to $V_{DD}-V_{EE}$ see Fig. 6
	10		10	— Ω	
	15		5	— Ω	
OFF-state leakage current, all channels OFF	5	I_{OZZ}	—	— nA	} $\bar{E}$ at V_{DD} $V_{SS} = V_{EE}$
	10		—	— nA	
	15		—	1000 nA	
OFF-state leakage current, any channel	5	I_{OZY}	—	— nA	} $\bar{E}$ at V_{SS} $V_{SS} = V_{EE}$
	10		—	— nA	
	15		—	200 nA	

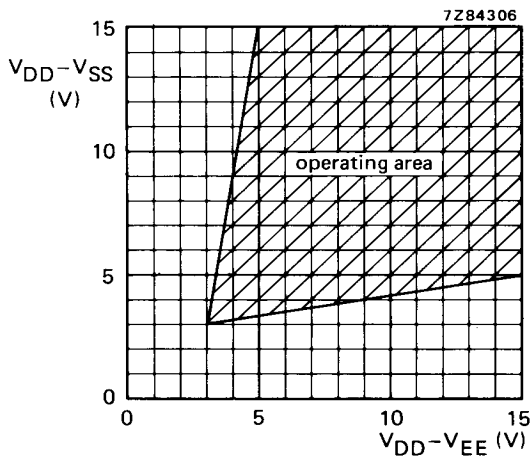
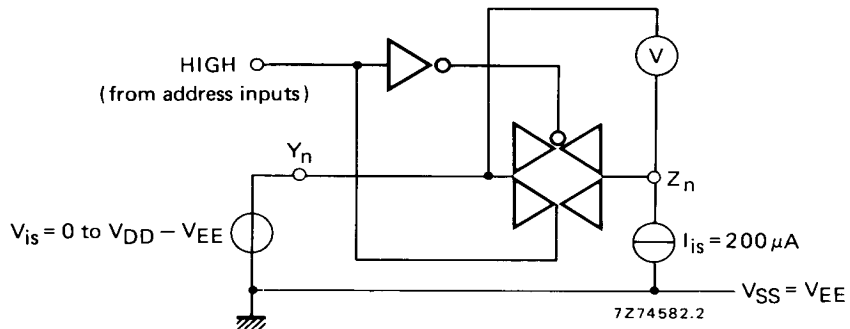
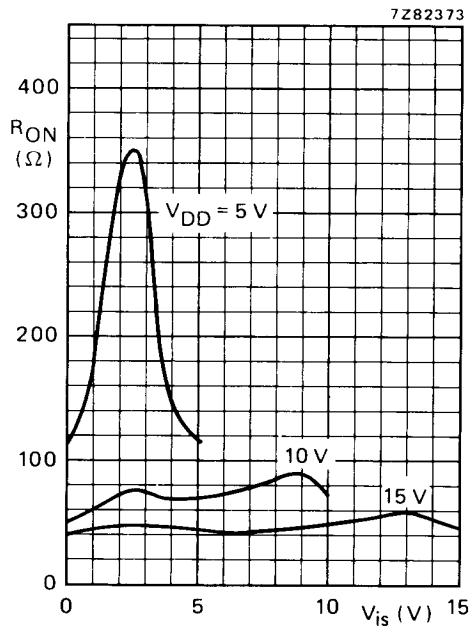


Fig. 5 Operating area as a function of the supply voltages.

Fig. 6 Test set-up for measuring R_{ON} .Fig. 7 Typical R_{ON} as a function of input voltage.

$I_{is} = 200 \mu\text{A}$
 $V_{SS} = V_{EE} = 0 \text{ V}$

A.C. CHARACTERISTICS
 $V_{EE} = V_{SS} = 0\text{ V}$; $T_{amb} = 25\text{ }^{\circ}\text{C}$; input transition times $\leq 20\text{ ns}$

	V_{DD} V	typical formula for P (μW)	where f_i = input freq. (MHz) f_o = output freq. (MHz) C_L = load capacitance (pF) $\Sigma(f_o C_L)$ = sum of outputs V_{DD} = supply voltage (V)
Dynamic power dissipation per package (P)	5	$1\,000\, f_i + \Sigma(f_o C_L) \times V_{DD}^2$	
	10	$5\,500\, f_i + \Sigma(f_o C_L) \times V_{DD}^2$	
	15	$15\,000\, f_i + \Sigma(f_o C_L) \times V_{DD}^2$	

A.C. CHARACTERISTICS
 $V_{EE} = V_{SS} = 0\text{ V}$; $T_{amb} = 25\text{ }^{\circ}\text{C}$; input transition times $\leq 20\text{ ns}$

	V_{DD} V	symbol	typ.	max.	
Propagation delays $V_{is} \rightarrow V_{os}$ HIGH to LOW	5	tPHL	15	30	ns } note 1
	10		5	10	
	15		5	10	
LOW to HIGH	5	tPLH	15	30	ns } note 1
	10		5	10	
	15		5	10	
$A_n \rightarrow V_{os}$ HIGH to LOW	5	tPHL	150	300	ns } note 2
	10		60	120	
	15		45	90	
LOW to HIGH	5	tPLH	150	300	ns } note 2
	10		65	130	
	15		45	90	
Output disable times $\bar{E} \rightarrow V_{os}$ HIGH	5	tPHZ	120	240	ns } note 3
	10		90	180	
	15		85	170	
LOW	5	tPLZ	145	290	ns } note 3
	10		120	240	
	15		115	230	
Output enable times $\bar{E} \rightarrow V_{os}$ HIGH	5	tpZH	140	280	ns } note 3
	10		55	110	
	15		40	80	
LOW	5	tpZL	140	280	ns } note 3
	10		55	110	
	15		40	80	

A.C. CHARACTERISTICS

$V_{EE} = V_{SS} = 0\text{ V}$; $T_{amb} = 25\text{ }^{\circ}\text{C}$; input transition times $\leq 20\text{ ns}$

	V_{DD} V	symbol	typ.	max.	
Distortion, sine-wave response	5		0,25	%	} note 4
	10		0,04	%	
	15		0,04	%	
Crosstalk between any two channels	5		—	MHz	} note 5
	10		1	MHz	
	15		—	MHz	
Crosstalk; enable or address input to output	5		—	mV	} note 6
	10		50	mV	
	15		—	mV	
OFF-state feed-through	5		—	MHz	} note 7
	10		1	MHz	
	15		—	MHz	
ON-state frequency response	5		13	MHz	} note 8
	10		40	MHz	
	15		70	MHz	

NOTES

V_{is} is the input voltage at a Y or Z terminal, whichever is assigned as input.

V_{os} is the output voltage at a Y or Z terminal, whichever is assigned as output.

- $R_L = 10\text{ k}\Omega$ to V_{EE} ; $C_L = 50\text{ pF}$ to V_{EE} ; $\bar{E} = V_{SS}$; $V_{is} = V_{DD}$ (square-wave); see Fig. 8.
- $R_L = 10\text{ k}\Omega$; $C_L = 50\text{ pF}$ to V_{EE} ; $\bar{E} = V_{SS}$; $A_n = V_{DD}$ (square-wave); $V_{is} = V_{DD}$ and R_L to V_{EE} for t_{pLH} ; $V_{is} = V_{EE}$ and R_L to V_{DD} for t_{pHL} ; see Fig. 8.
- $R_L = 10\text{ k}\Omega$; $C_L = 50\text{ pF}$ to V_{EE} ; $\bar{E} = V_{DD}$ (square-wave); $V_{is} = V_{DD}$ and R_L to V_{EE} for t_{pHZ} and t_{pZH} ; $V_{is} = V_{EE}$ and R_L to V_{DD} for t_{pLZ} and t_{pZL} ; see Fig. 8.
- $R_L = 10\text{ k}\Omega$; $C_L = 15\text{ pF}$; channel ON; $V_{is} = \frac{1}{2} V_{DD(p-p)}$ (sine-wave, symmetrical about $\frac{1}{2} V_{DD}$); $f_{is} = 1\text{ kHz}$; see Fig. 9.
- $R_L = 1\text{ k}\Omega$; $V_{is} = \frac{1}{2} V_{DD(p-p)}$ (sine-wave, symmetrical about $\frac{1}{2} V_{DD}$); $20 \log \frac{V_{os}}{V_{is}} = -50\text{ dB}$; see Fig. 10.
- $R_L = 10\text{ k}\Omega$ to V_{EE} ; $C_L = 15\text{ pF}$ to V_{EE} ; $\bar{E}$ or $A_n = V_{DD}$ (square-wave); crosstalk is $|V_{os}|$ (peak value); see Fig. 8.
- $R_L = 1\text{ k}\Omega$; $C_L = 5\text{ pF}$; channel OFF; $V_{is} = \frac{1}{2} V_{DD(p-p)}$ (sine-wave, symmetrical about $\frac{1}{2} V_{DD}$); $20 \log \frac{V_{os}}{V_{is}} = -50\text{ dB}$; see Fig. 9.
- $R_L = 1\text{ k}\Omega$; $C_L = 5\text{ pF}$; channel ON; $V_{is} = \frac{1}{2} V_{DD(p-p)}$ (sine-wave, symmetrical about $\frac{1}{2} V_{DD}$); $20 \log \frac{V_{os}}{V_{is}} = -3\text{ dB}$; see Fig. 9.

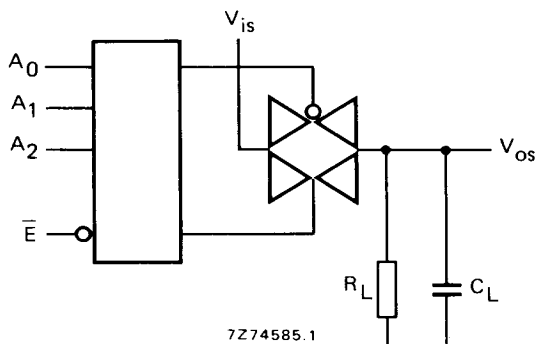


Fig. 8.

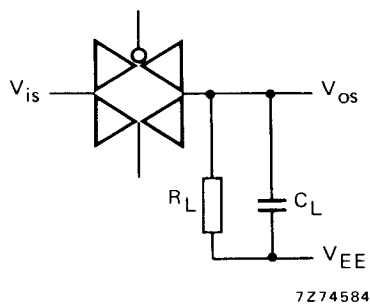


Fig. 9.

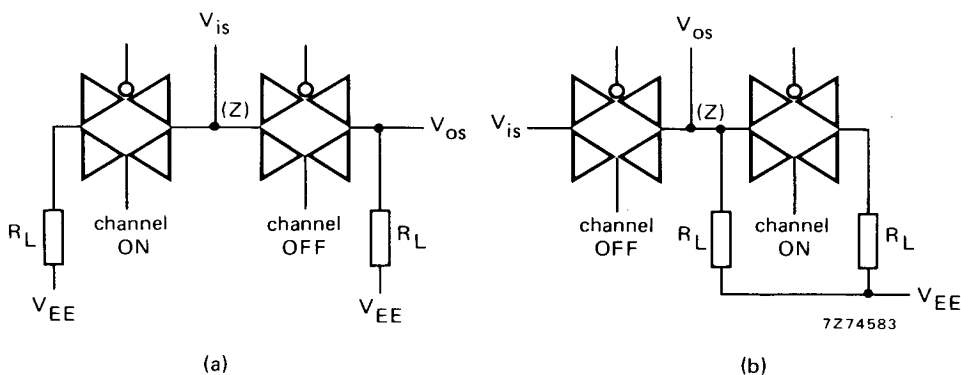


Fig. 10.

APPLICATION INFORMATION

Some examples of applications for the HEF4051B are:

- Analogue multiplexing and demultiplexing.
- Digital multiplexing and demultiplexing.
- Signal gating.

NOTE

If break before make is needed, then it is necessary to use the enable input.