

REV.	DATE	BY-CHKD	REVISIONS		PANEL THICKNESS		B	L	SCREW PROJECTION		T	PART NUMBER
					"A"MIN.	"A"MAX.			P-1	P-2		
A	31OCT97	MDM	PRN : 47-272									
B	19MAR98	MDM	PRN : 47-299									
					.058	.125	.023	.07	.06	.24	.75	47-WO-2X2-Y2
									.12	.31	.81	47-W1-2X2-Y2
									.16	.35	.87	47-W2-2X2-Y2
									.24	.43	.94	47-W3-2X2-Y2

MATERIAL AND FINISH




KNOB: 6262 ALUMINUM, NATURAL OR BLACK ORGANIC COATING.
SCREW: 1008 CASE HARDENED STEEL, ZINC PLATE CHROMATE PLUS SEALER OR BLACK ORGANIC COATING.
FERRULE: 6061 ALUMINUM, NATURAL.
SPRING: 302 STAINLESS STEEL, PASSIVATED.
RATCHET MECHANISM: HARDENED STEEL, BLACK OXIDE.

The diagram illustrates three specifications for a knob and screw assembly, each with a corresponding arrow pointing to a specific part of the assembly:

- W* THREAD**
1 - 6-32
- X* SCREW RECESS**
0 - SLOTTED
2 - PHILLIPS
4 - TORX®
- Y* FINISH ON KNOB & SCREW**
2 - NATURAL (BRIGHT)
6 - BLACK

INSTALLATION INSTRUCTIONS




1. PREPARE HOLE WITH COUNTERSINK ACCORDING TO THE REQUIRED "B" DIMENSION. RECOMMENDED MIN. DISTANCE FROM EDGE OF PANEL TO THE CENTERLINE OF THE HOLE IS .47.
2. INSERT FASTENER AND FLARE INTO COUNTERSUNK HOLE WITH INSTALLATION TOOL PART No. 47-106 OR 29-47-101-10.
3. HAND TIGHTEN FIRMLY TO ENGAGE THE RATCHET MECHANISM

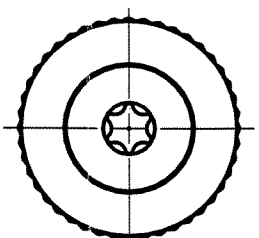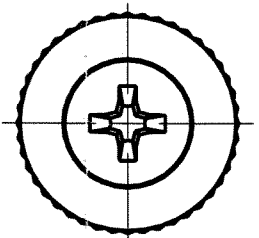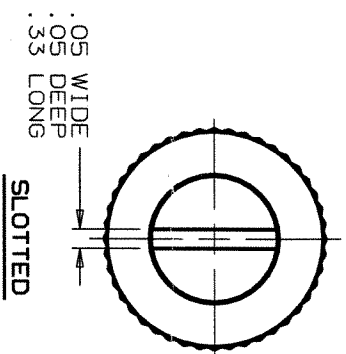

No.2 PHILLIPS

T-15 TORX®

SCREW RECESS STYLES

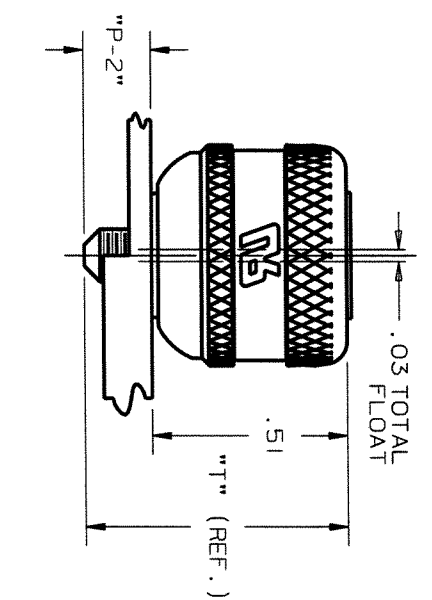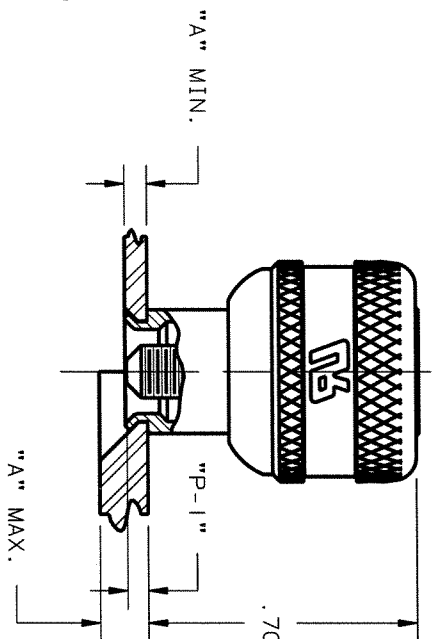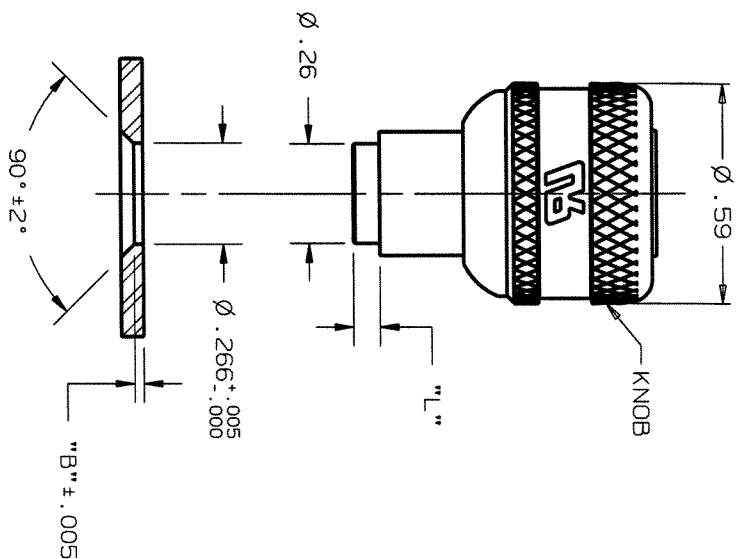

PANEL PREPARATION

UNFASTENED

FASTENED