# MALE PCB PINS

## SOLDER TERMINAL TURRETS

### 2111

**2111-X-00-XX-00-00-07-0**

Swage mount in .033 hole




| Basic Part Number | Board Thickness | Length V |
|---|---|---|
| 2111-1 | .031 | .053 |
| 2111-2 | .062 | .084 |
| 2111-3 | .094 | .115 |

### 2113

**2113-X-00-XX-00-00-07-0**

Swage mount in .043 hole

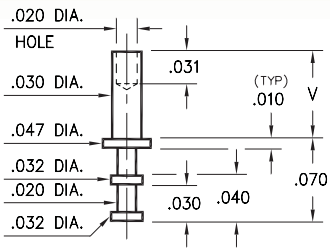


| Basic Part Number | Board Thickness | Length V |
|---|---|---|
| 2113-1 | .031 | .053 |
| 2113-2 | .062 | .084 |
| 2113-3 | .094 | .115 |
| 2113-4 | .125 | .147 |

### 2108

**2108-X-00-XX-00-00-07-0**

Swage mount in .043 hole

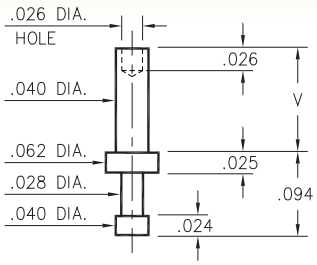


| Basic Part Number | Board Thickness | Length V |
|---|---|---|
| 2108-1 | .031 | .053 |
| 2108-2 | .062 | .084 |
| 2108-3 | .094 | .115 |
| 2108-4 | .125 | .147 |

### 2102

**2102-X-00-XX-00-00-07-0**

Swage mount in .052 hole

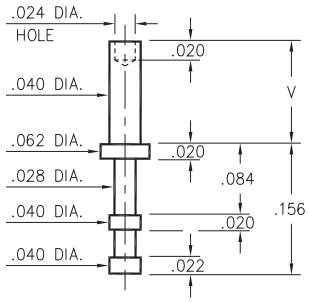


| Basic Part Number | Board Thickness | Length V |
|---|---|---|
| 2102-5 | .016 | .035 |
| 2102-1 | .031 | .054 |
| 2102-2 | .062 | .084 |
| 2102-3 | .094 | .115 |
| 2102-4 | .125 | .147 |

### 2109

**2109-X-00-XX-00-00-07-0**

Swage mount in .052 hole

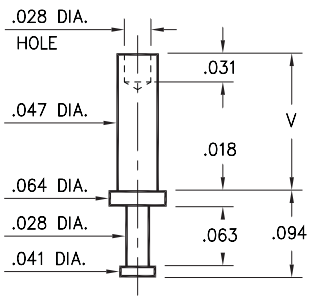


| Basic Part Number | Board Thickness | Length V |
|---|---|---|
| 2109-1 | .031 | .052 |
| 2109-2 | .062 | .085 |

### 2324

**2324-2-00-XX-00-00-07-0**

Swage mount in .052 hole
For a .062 thick board

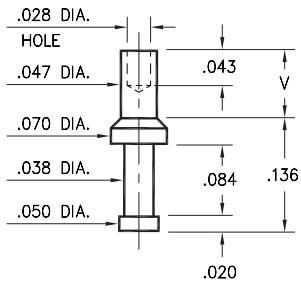


### SPECIFICATIONS:

**Pin Material:** Brass Alloy 360, 1/2 Hard
( Swage pins are annealed )

**Dimensions:** Inches

**Tolerances On:** Lengths: ± .005
Diameters: ± .002
Angles: ± 2 °

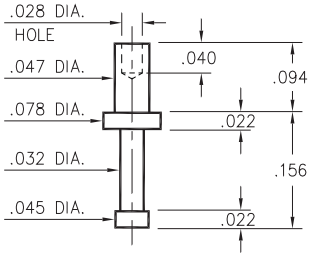RoHS-2 2011/65/EU

**ORDER CODE:** XXXX - X - 00 - XX - 00 - 00 - 07 - 0

**BASIC PART #**

**SPECIFY PIN FINISH:**

- **01** 200 µ" TIN/LEAD OVER NICKEL
- ◆ **80** 200 µ" TIN OVER NICKEL (RoHS)
- ◆ **44** 300 µ" SILVER OVER COPPER (RoHS)
- **50** 300 µ" ELECTRO-SOLDER (60/40 SnPb)